


Airwell

Just feel well

Service Manual

MIDDLE STATIC PRESSURE DUCT AIR CONDITIONER
DFMD R410A ON OFF
English Manual

DFMD-100N-01M25 / YFAD-100R-01M25
DFMD-100N-01T35 / YFAD-100R-01T35
DFMD-140N-01M25 / YFAD-140R-01T35
DFMD-160N-01M25 / YFAD-160R-01T35

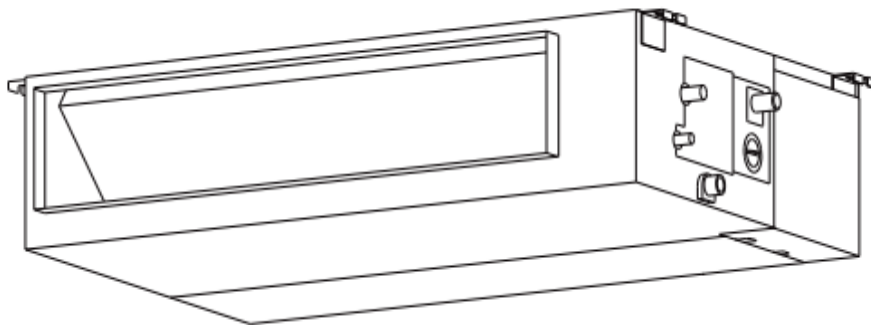

IMPORTANT NOTE:

Read this manual carefully before installing or operating your new air conditioning unit. Make sure to save this manual for future reference.

21.AW.DFMD.100-160.R410A.SM.EN.1115.V01

Part 1 General Information.....	1
Part 2 Indoor Units.....	6
Part 3 Outdoor Units.....	37
Part 4 Installation.....	52
Part 5 Electrical Control System.....	94

※The specifications, designs, and information in this book are subject to change without notice for product improvement.

Part 1

General Information

1. Model Lists.....	2
2. External Appearance.....	4
2.1 Indoor Units.....	4
2.2 Outdoor Units.....	5

1. Model Lists

1.1 Indoor Units

R410A		Capacity multiplied by 1000Btu/h							
Type	Function	09	12	18	24	30	36	48	60
Four-way cassette(compact)	Cooling only		●	●					
	Cooling and heating		●	●					
Super-slim 4-way cassette	Cooling only			●	●	●	●	●	●
	Cooling and heating			●	●		●	●	●
A5 middle static pressure duct	Cooling only	●	●	●	●	●	●	●	●
	Cooling and heating		●	●	●			●	●
A6 middle static pressure duct	Cooling and heating			●	●	●	●	●	●
	Cooling only			●	●	●	●	●	●
High static pressure duct	Cooling and heating				●		●	●	●
Ceiling & Floor	Cooling only			●	●	●	●	●	●
	Cooling and heating		●	●	●	●	●	●	●
GA Floor-standing	Cooling only			●	●			●	●
	Cooling and heating				●				
M Floor-standing	Cooling only				●			●	●
	Cooling and heating				●				
J2 Floor-standing	Cooling and heating				●				
S2 Floor-standing	Cooling only				●			●	
S4 Floor-standing	Cooling and heating				●			●	
	Cooling only				●			●	
E2 Floor-standing	Cooling and heating								●

1.2 Outdoor Units


YFAD-100R-01M25	ROTARY	GMCC	DFMD-100N-01M25 FFMD-100N-01M25
YFAD-100R-01T35	ROTARY	GMCC	FFMD-100N-01T25 DFMD-100N-01T35
YFAD-140R-01T35	SCROLL	Panasonic	DFMD-140N-01M25 FFMD-140N-01M25
YFAD-160R-01T35	SCROLL	Panasonic	FFMD-160N-01M25 DFMD-160N-01M25

Note:*1,*2 outdoor units have different compressor or condenser.

2. External Appearance

2.1 Indoor Units

A6 Middle static pressure duct

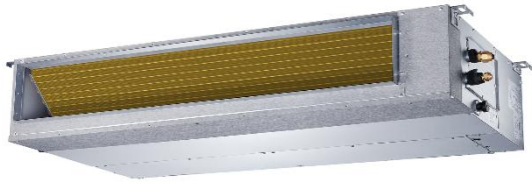

Ceiling & floor type



2.2 Outdoor Units



Single fan outdoor unit



Double fan outdoor unit

Part 2 Indoor Units

A6 Duct Type.....7

Ceiling & Floor Type..... 25


A6 Duct Type

1. Features.....	8
2. Dimensions.....	10
3. Service Space.....	11
4. Wiring Diagrams.....	12
5. Static Pressure.....	16
6. Electric Characteristics.....	18
7. Sound Levels.....	19
8. Accessories.....	20
9. The Specification of Power.....	21
10. Field Wiring.....	23

1. Features


1.1 Slim Design

- The industry Lowest height is designed to be fitted into tight roof spaces.
- *18K unit - 210mm, 24K/30K unit - 249mm, 36K unit -300mm

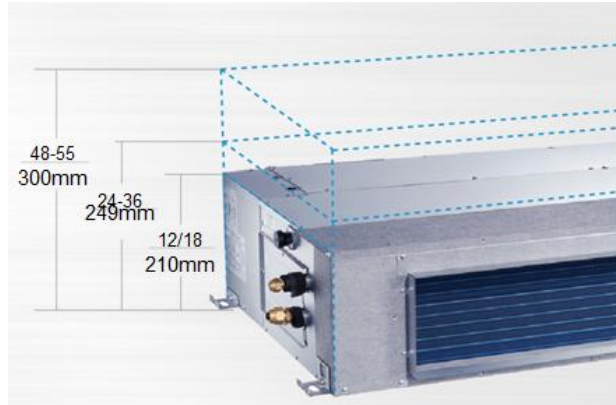

1.3 Flexible Air Intake Way (Bottom side or Rear side)

- The frame size of air inlet in rear and bottom is the same. It's very easy to switch to match different application.

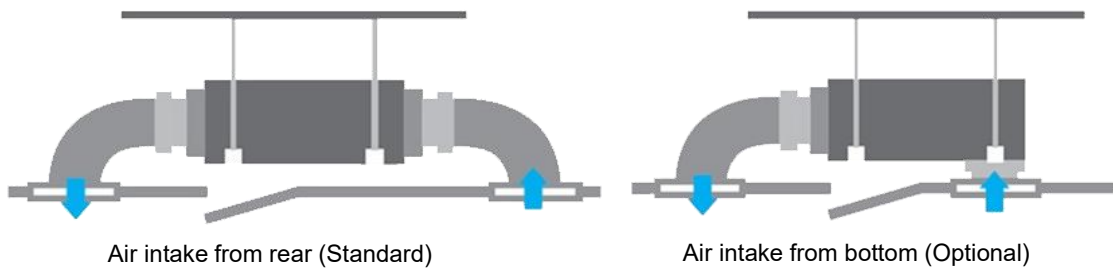


1.4 Easy Clean

- With a larger window design, once the motor and the blower wheels have been detached, heat exchanger and water receiver tray in behind can be seen very clearly. Dust can be easily removed from the inside by vacuum




1.6 Built-in drain pump (Optional)

- Built-in drain pump can lift the water to 750mm upmost, which widens the drainage piping range.

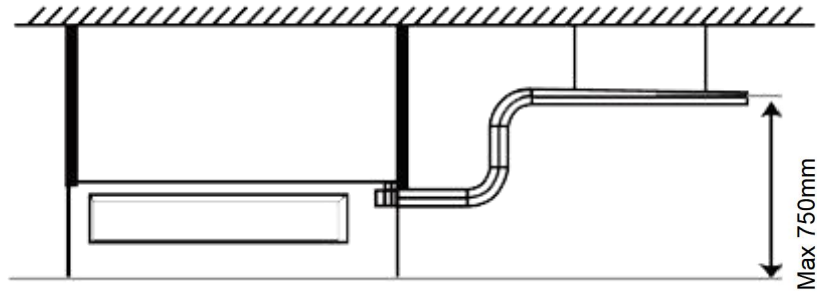

2. Dimensions

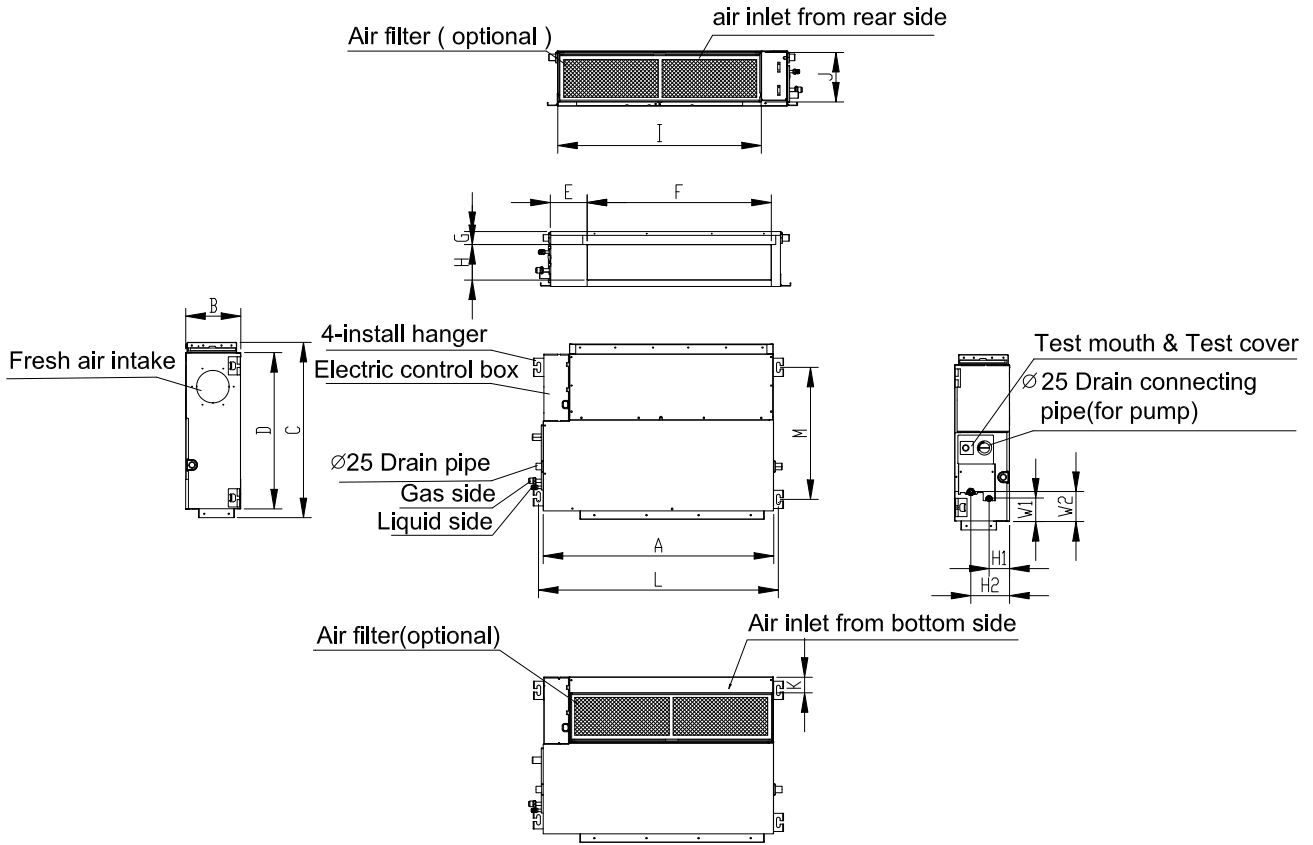


Note: standard product without filter

Unit: mm

Model	Outline dimension(mm)				Air outlet opening size				Air return opening size			Size of install hanger		Size of refrigerant pipe			
	A	B	C	D	E	F	G	H	I	J	K	L	M	H1	H2	W1	W2
18K	880	210	674	600	140	706	50	136	782	190	40	920	508	78	148	88	112
24K~36K	1100	249	774	700	140	926	50	175	1001	228	5	1140	598	80	150	130	155
48K~60K	1200	300	874	800	123	1044	50	227	1101	280	5	1240	697	80	150	185	210


3. Service Space

Ensure enough space required for installation and maintenance.

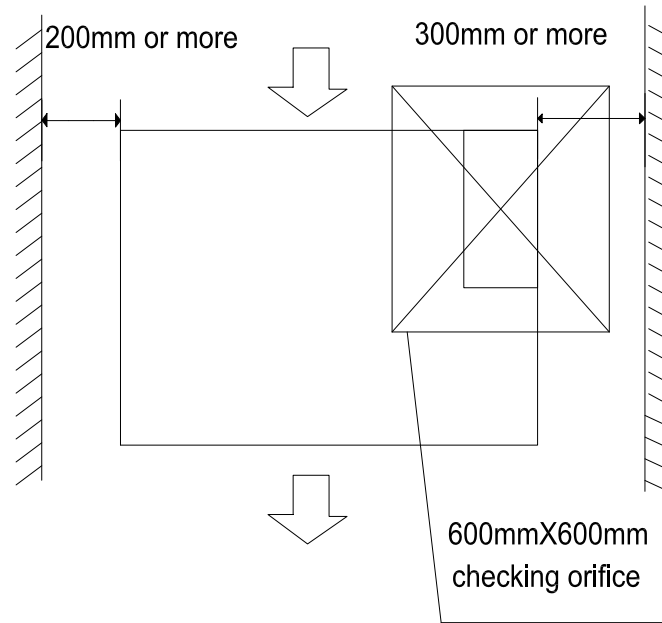


There is enough space for installation and maintenance. The ceiling is horizontal, and its structure can endure the weight of the indoor unit. The outlet and the inlet are not impeded, and the influence of external air is the least. The air flow can reach throughout the room. The connecting pipe and drainpipe could be extracted out easily. There is no direct radiation from heater.


DFMD-100N-01M25

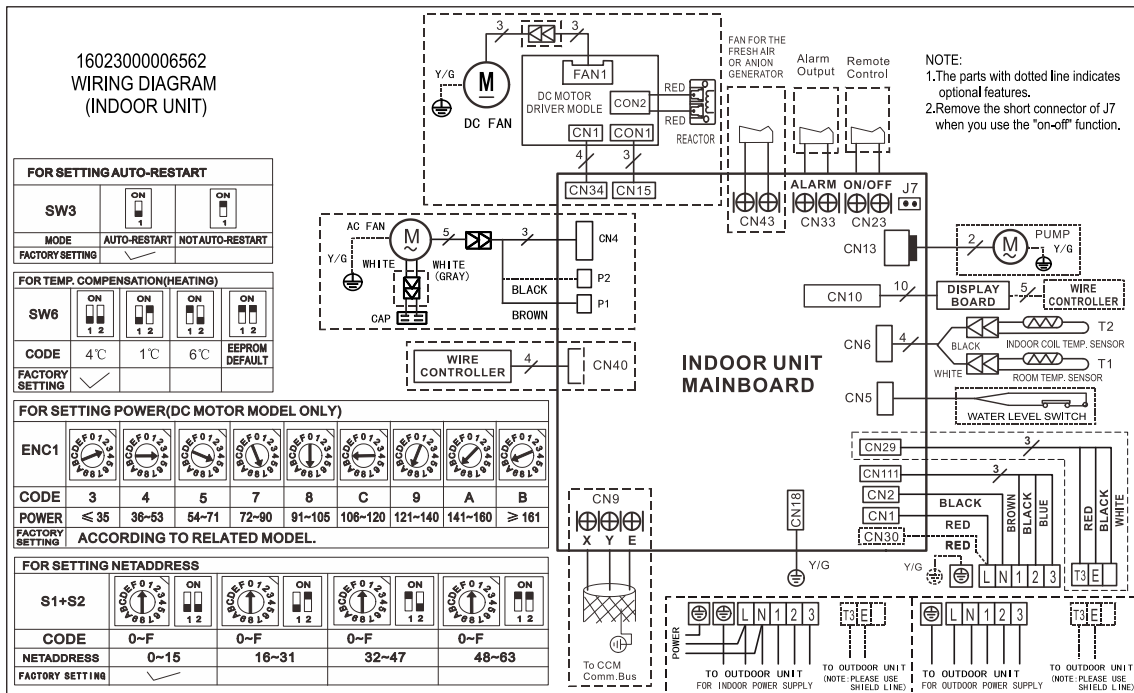


DFMD-100N-01T25

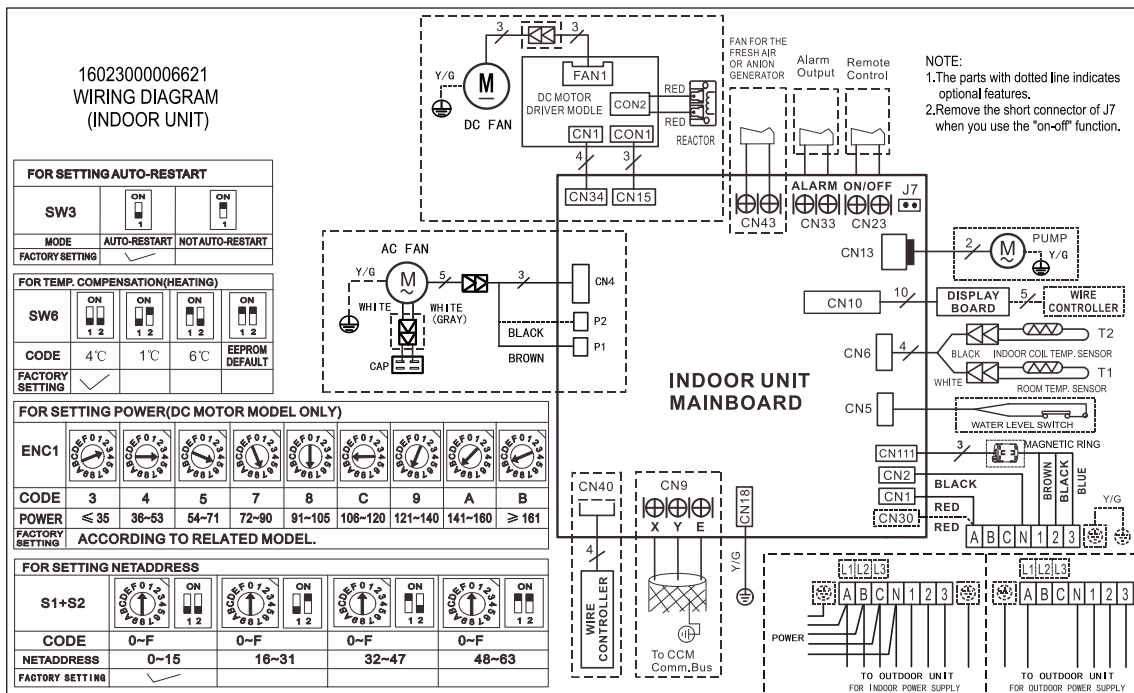


DFMD-140N-01M25

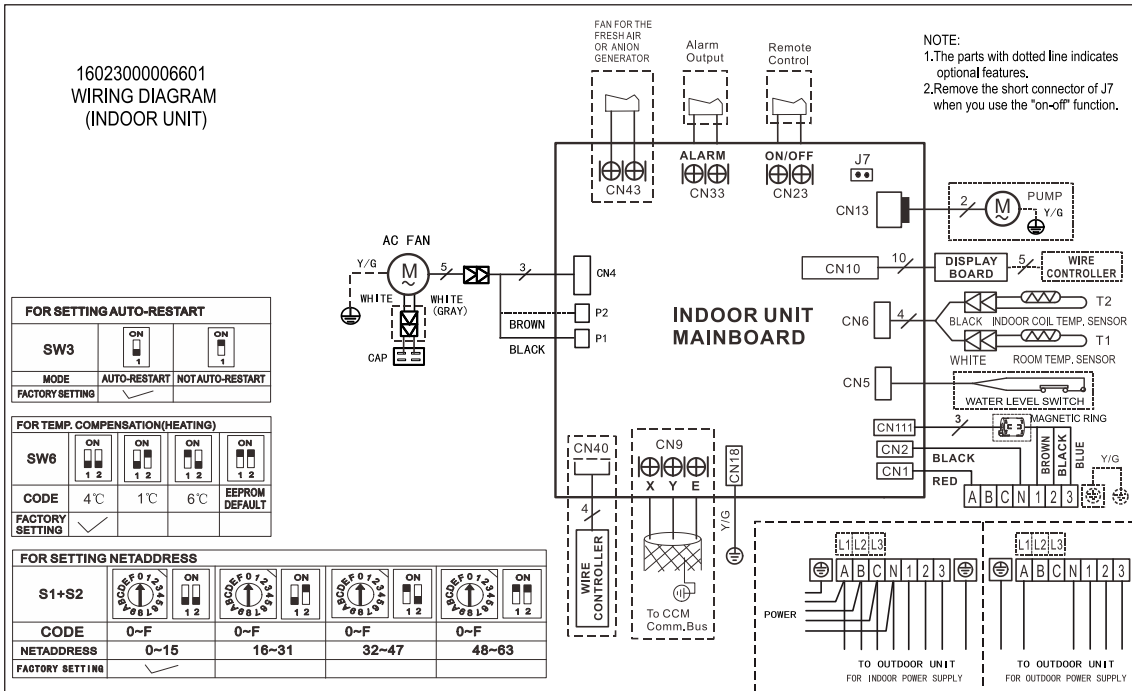


DFMD-160N-01M25

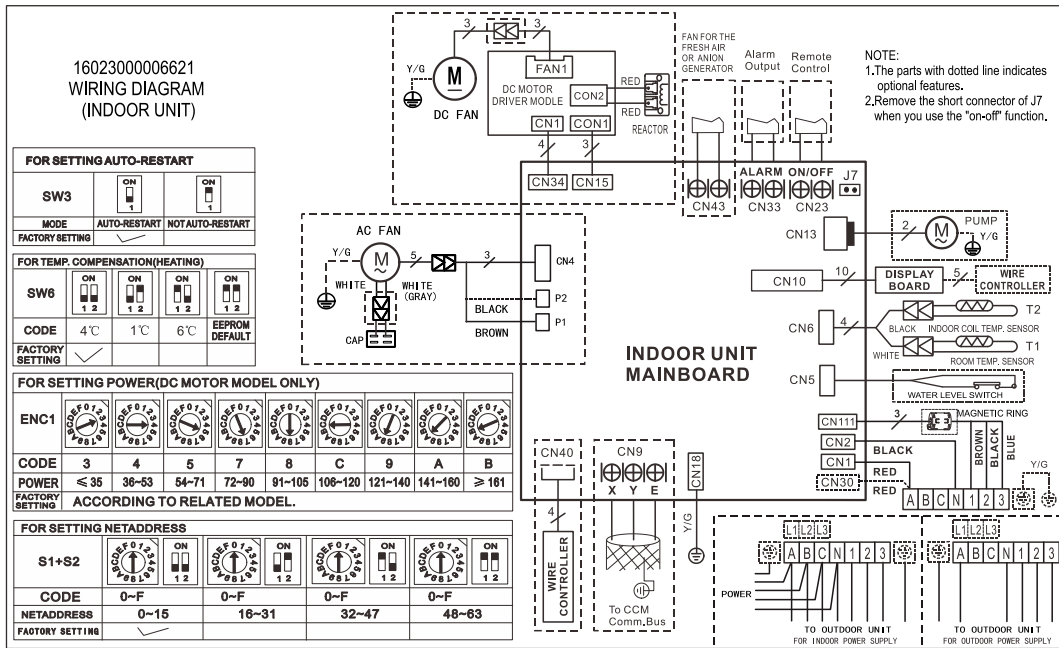

DFMD-100N-01T35,DFMD-160N-01M25

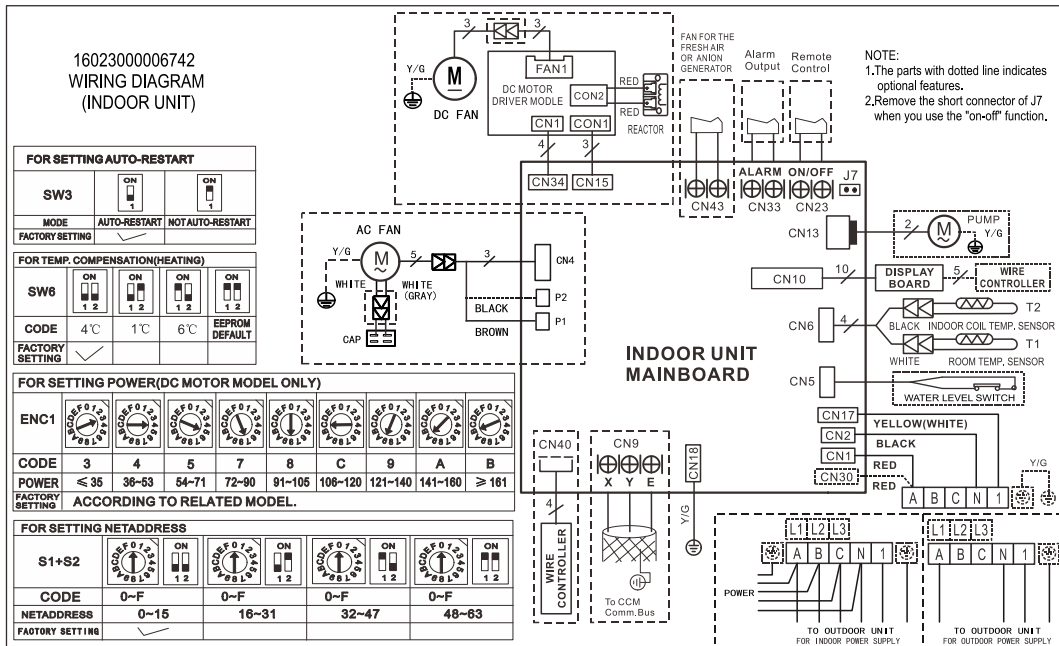


DFMD-140N-01M25

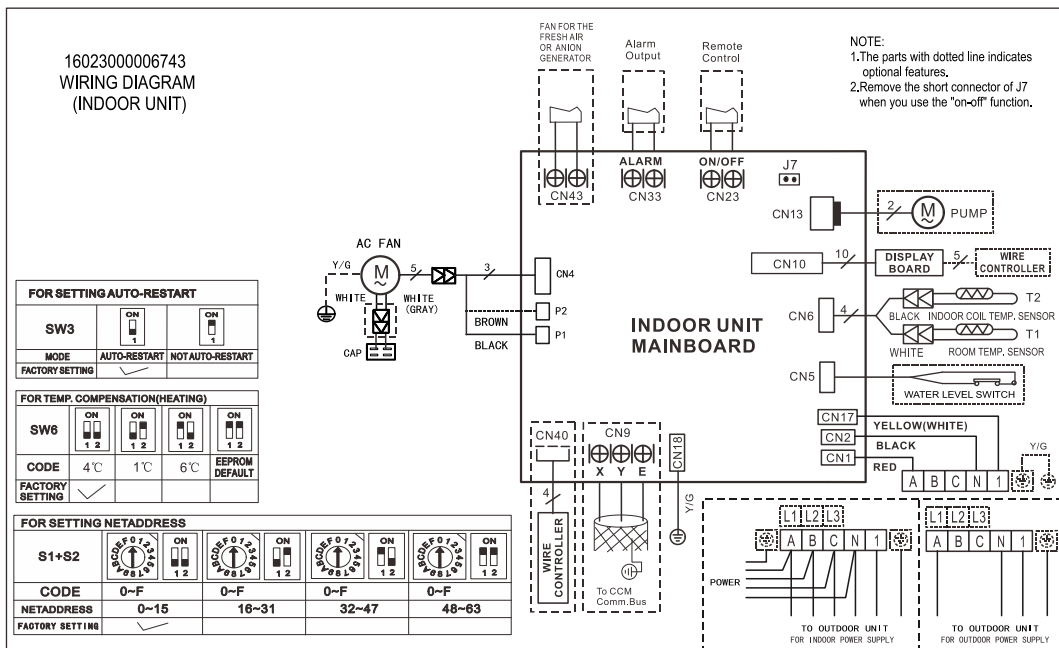


5. Static Pressure


18K

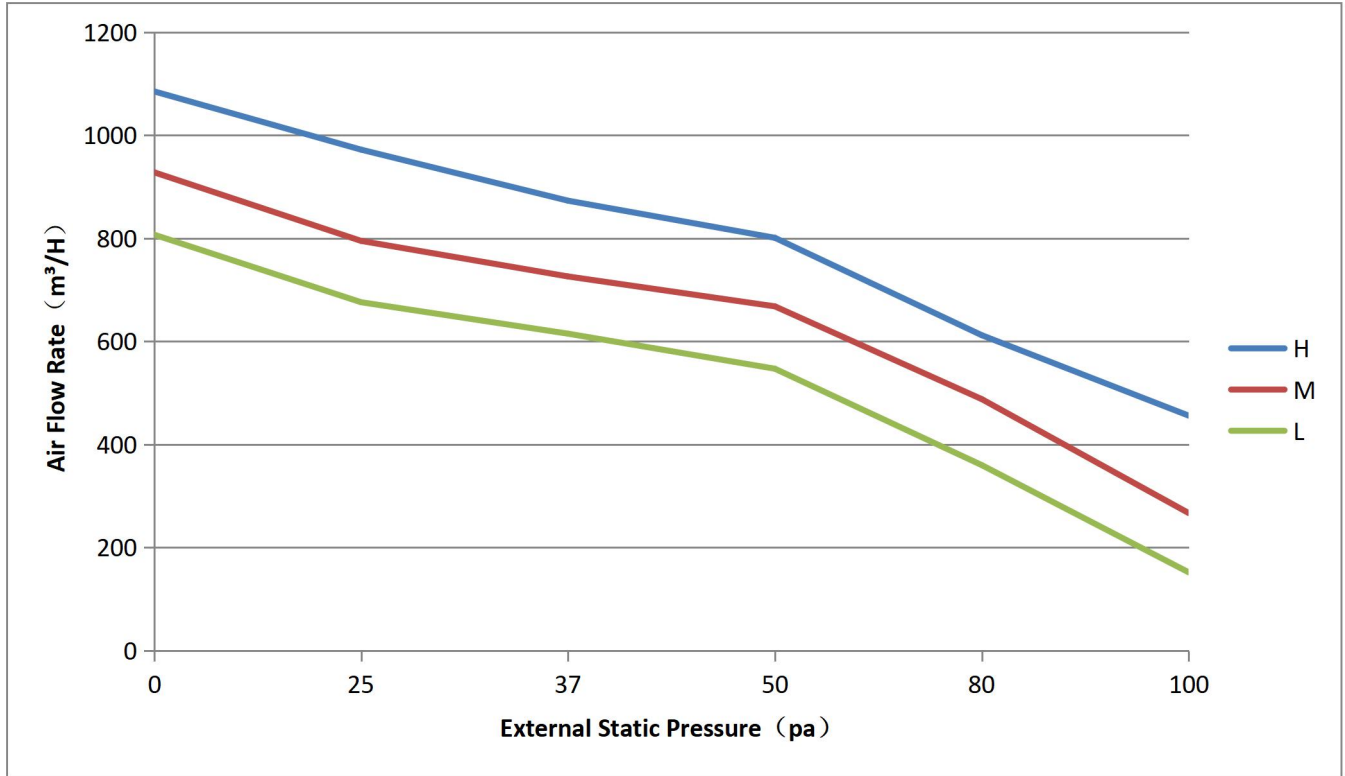


24K

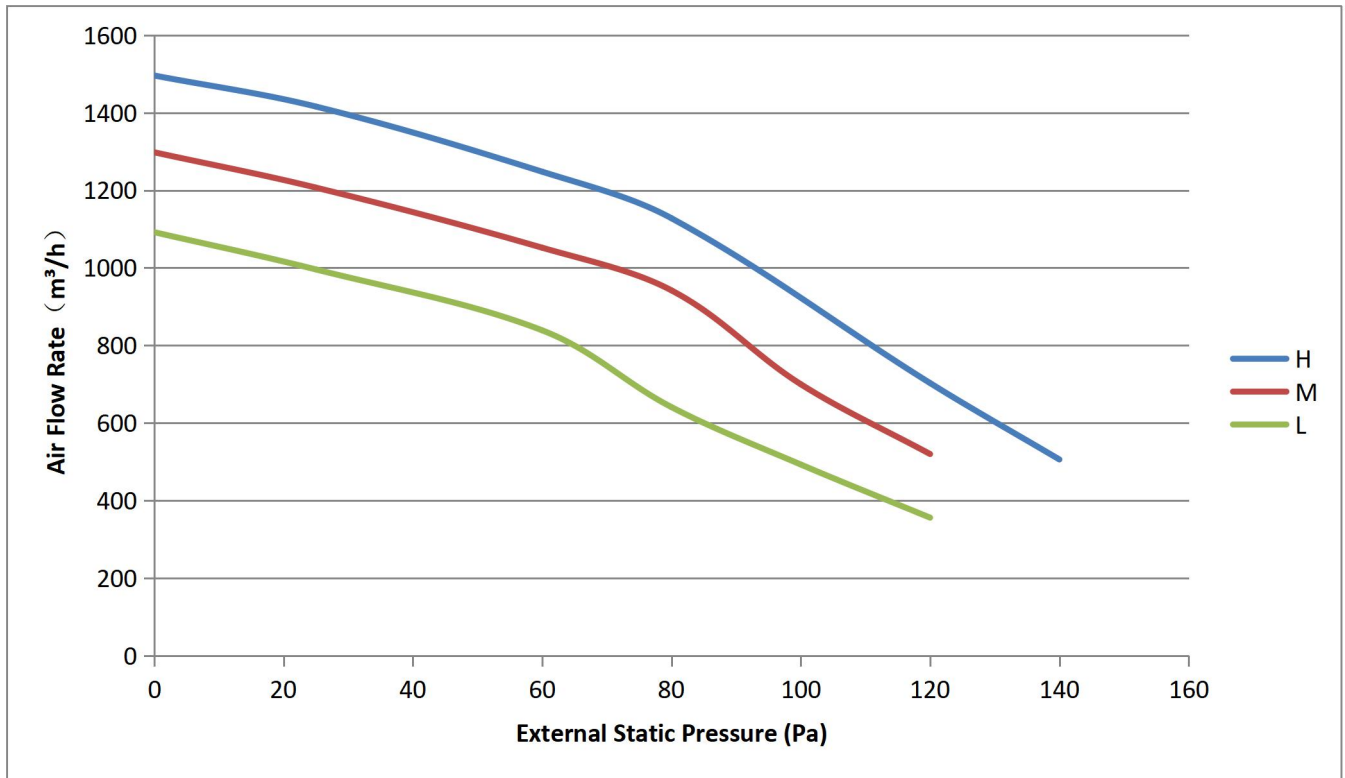

30K,36K

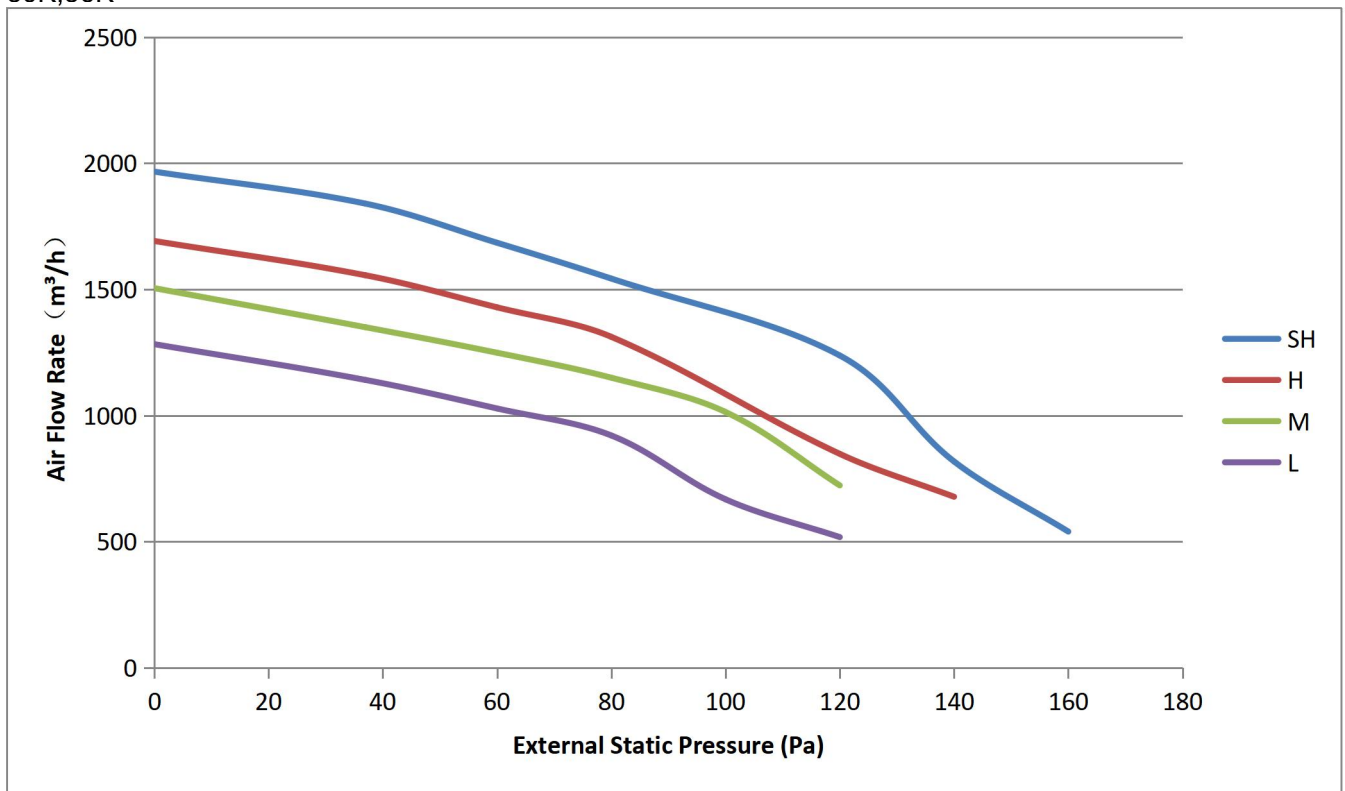

48K, 60K

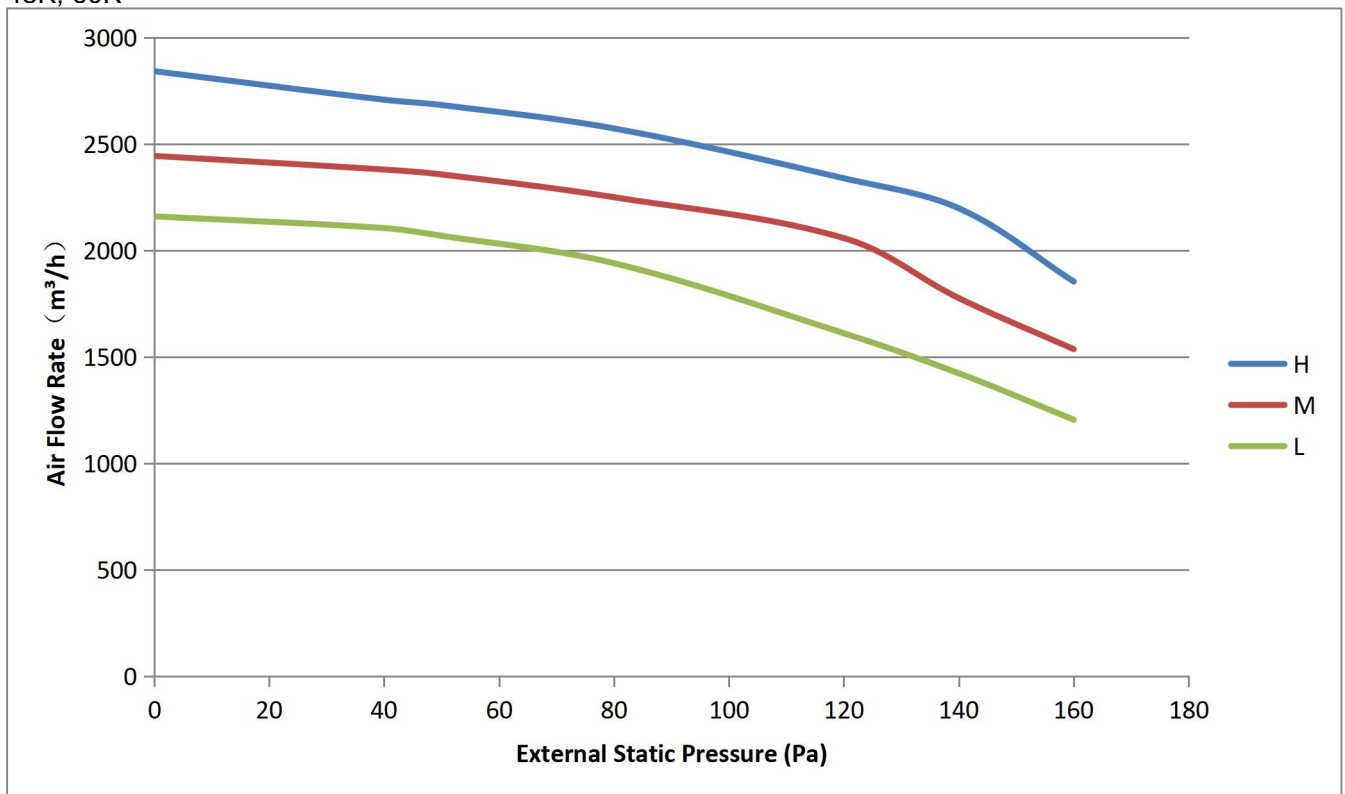


6. Electric Characteristics

Model	Indoor Units				Power Supply
	Hz	Voltage	Min.	Max.	MFA
DFMD-100N-01M25	50	220-240V	198V	254V	/
DFMD-100N-01T35	50	220-240V	198V	254V	/
DFMD-140N-01M25	50	380-415V	198V	254V	25
DFMD-160N-01M25	50	380-415V	198V	254V	25

Note:




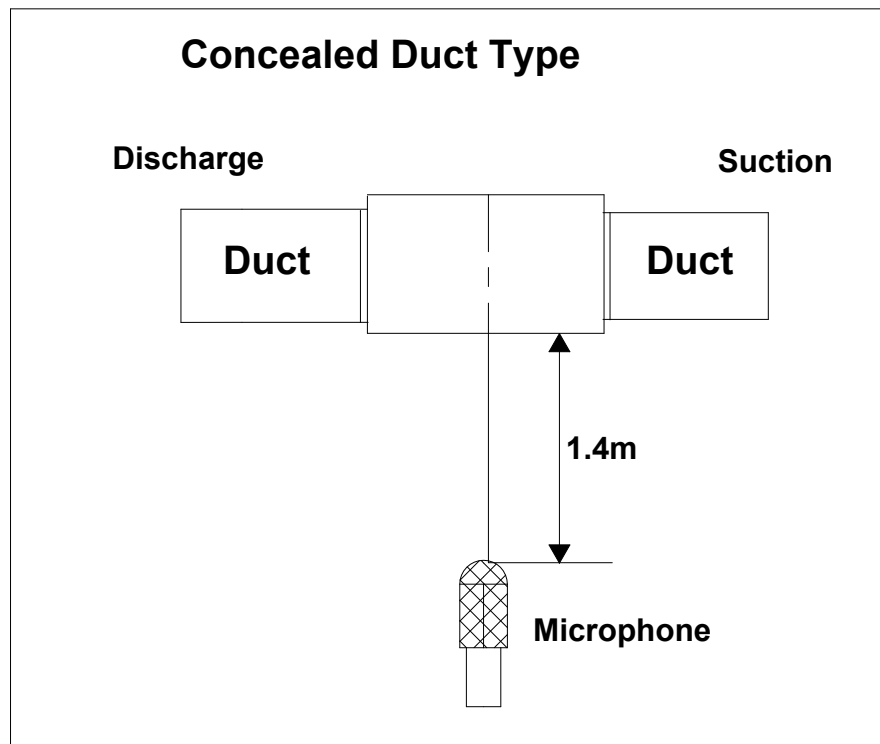




MFA: Max. Fuse Amps. (A)

 7. Sound Levels



Model	Noise level dB(A)		
	H	M	L
DFMD-100N-01M25	49	43	40
DFMD-100N-01T35	47	41	38
DFMD-140N-01M25	48	45	42
DFMD-160N-01M25	52	47	44

   8. Accessories

	Name	Shape	Quantity
Tubing & Fittings	Soundproof/insulation sheath		2
	Binding tape		1
	Seal sponge		1
Drainpipe Fittings (for cooling & heating units)	Drain joint		1
	Seal ring		1
Wire controller	Wire controller		1
others	Owner's manual		1
	Installation manual		1

9. The Specification of Power

Heating pump:


Model(KBtu/h)		18	24	30-36
Power	Phase	1-phase	1-phase	1-phase
	Frequency and Voltage	220-240V, 50Hz		
Circuit Breaker/ Fuse (A)		25/20	32/25	50/40
Indoor Unit Power Wiring (mm ²)		3×2.5	3×2.5	————
Indoor/Outdoor Connecting Wiring (mm ²)	Ground Wiring	2.5	2.5	4.0
	Outdoor Unit Power Wiring	3×2.5	3×2.5	3×4.0
	Strong Electric Signal	2×1.0	3×1.0	3×1.0/ 3×1.5
	Weak Electric Signal	(2×0.75/2×0.5)	(2×0.2)	(2×0.2)

Model(KBtu/h)		36	48/ 60(22023011004254)	60 (22023011003041)
Power	Phase	3-phase	3-phase	3-phase
	Frequency and Voltage	380-415V, 50Hz		
Circuit Breaker/ Fuse (A)		25/20	32/25	32/25
Indoor Unit Power Wiring (mm ²)		————	5×2.5	————
Indoor/Outdoor Connecting Wiring (mm ²)	Ground Wiring	2.5	2.5	2.5
	Outdoor Unit Power Wiring	5×2.5	5×2.5	5×2.5
	Strong Electric Signal	3×1.0/ 3×1.5	3×1.0	3×1.0/ 3×1.5
	Weak Electric Signal	————	————	————

18K

Air Condition Link-Circuit


16022500000894

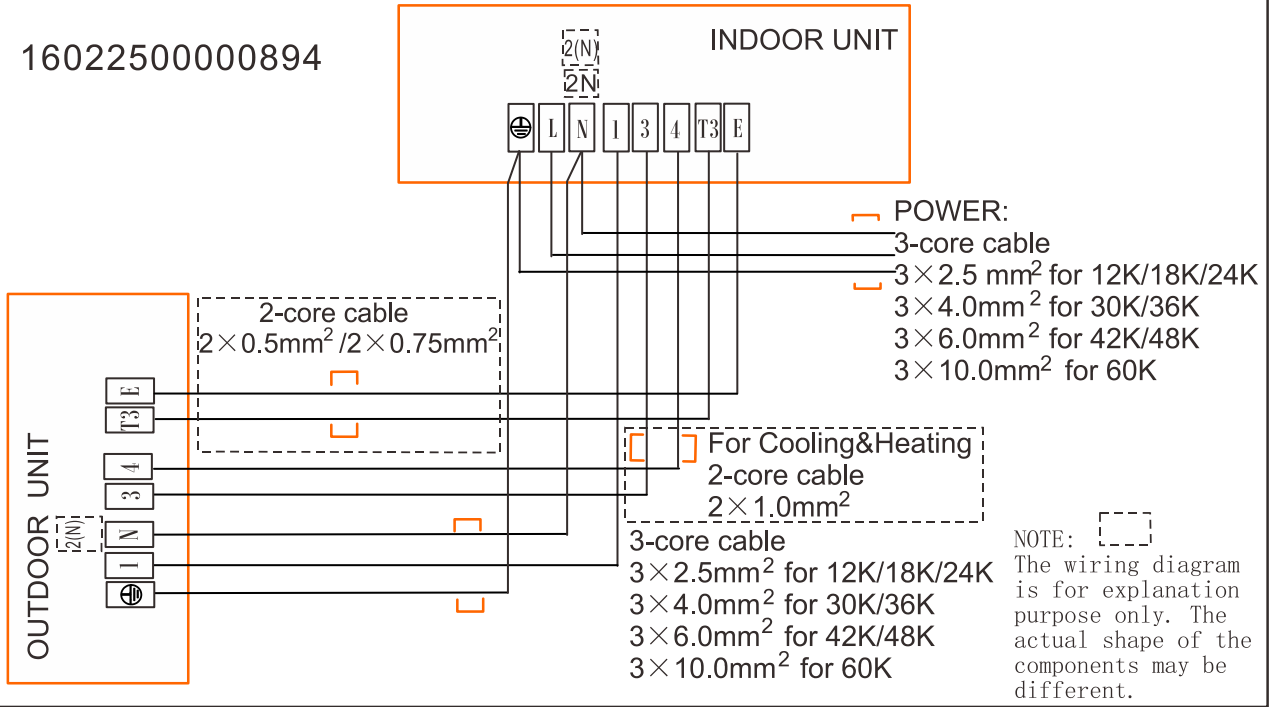


24K

Air Condition Link-Circuit

16023000000503

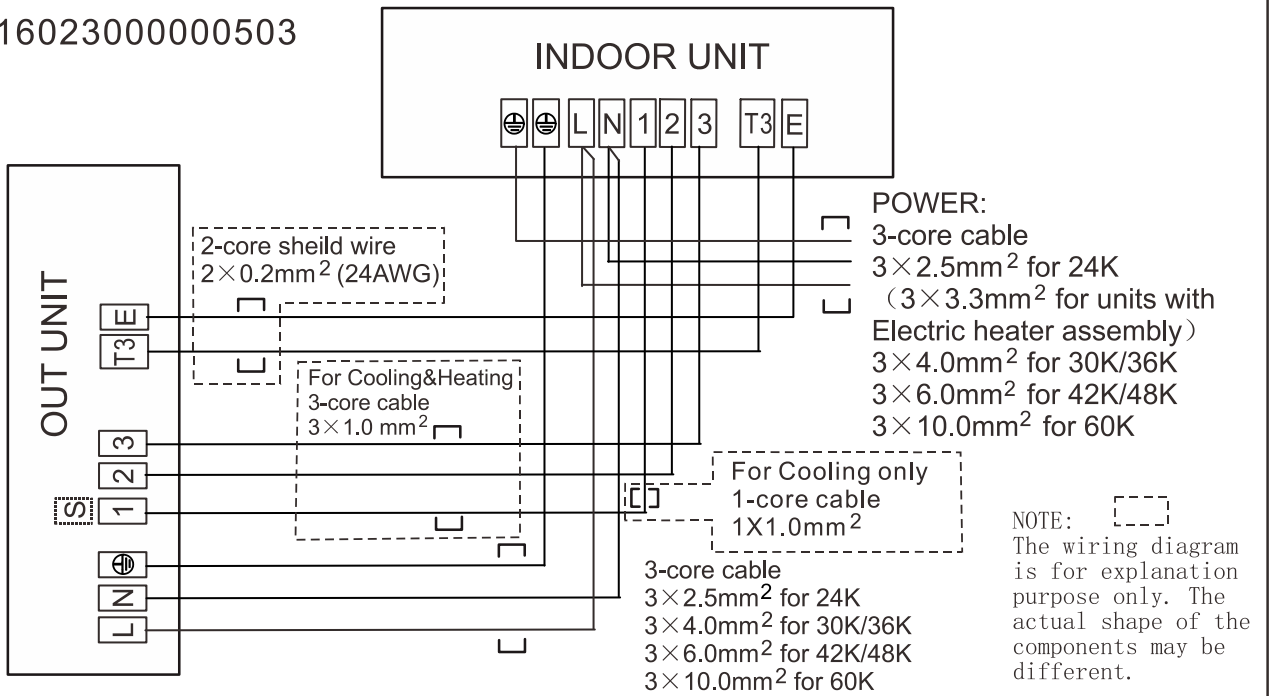


DFMD-100N-01M25M,DFMD-160N-01M25

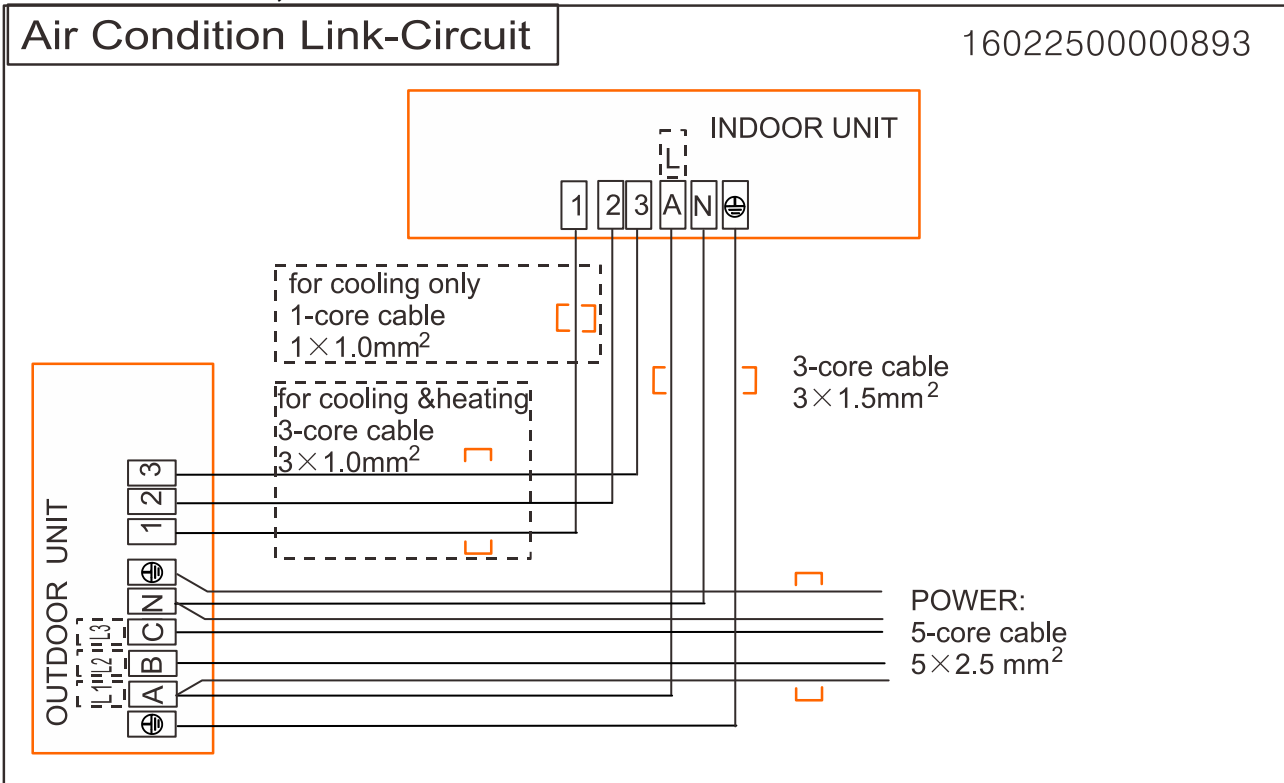

DFMD-140N-01M25,DFMD-160N-01M25

Air Condition Link-Circuit

16022500000890

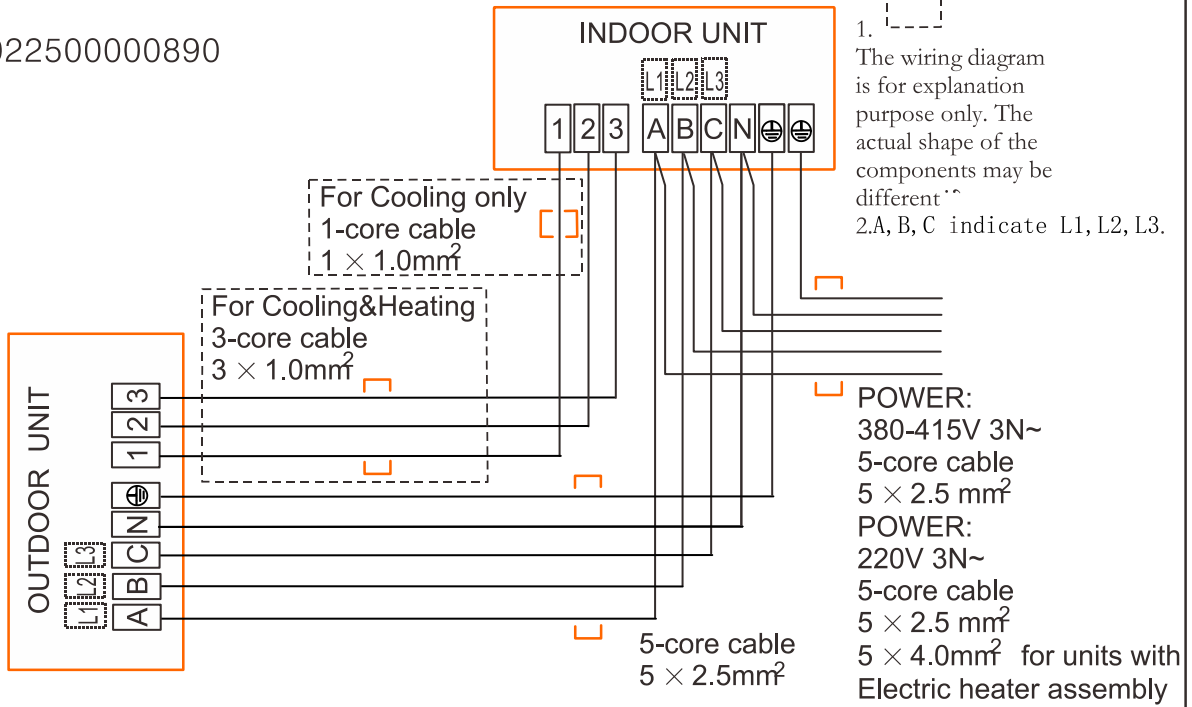

Ceiling & Floor Type

- 1. Features.....26**
- 2. Dimensions..... 27**
- 3. Service Space..... 28**
- 4. Wiring Diagram..... 29**
- 5. Electric Characteristics.....31**
- 6. Sound Levels..... 32**
- 7. Accessories..... 33**
- 8. The Specification of Power..... 34**
- 9. Field Wiring.....35**

1. Features

1.1. New design, more modern and elegant appearance.




1.2. Convenient installation

- The ceiling type can be easily installed into a corner of the ceiling even if the ceiling is very narrow
- It is especially useful when installation of an air conditioner in the center of the ceiling is impossible due to a structure such as one lighting.

1.3. Two direction auto swing (vertical & horizontal) and wide angle air flow,

- Air flow directional control minimizes the air resistance and produces wider air flow to vertical direction.
- The range of horizontal air discharge is widened which secures wider air flow distribution to provide more comfortable air circulation no matter where the unit is set up

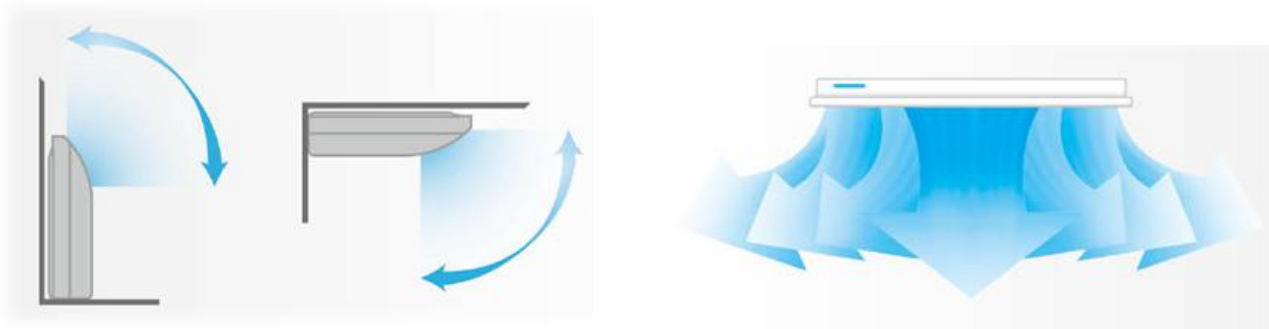

1.4. Three level fan speed, more humanism design, meets different air-supply requirement.


1.5. New foam drain pan with plastic-spraying inner surface



1.6. Easy operation.


1.7. Remote control and optional wired control method.

2. Dimensions

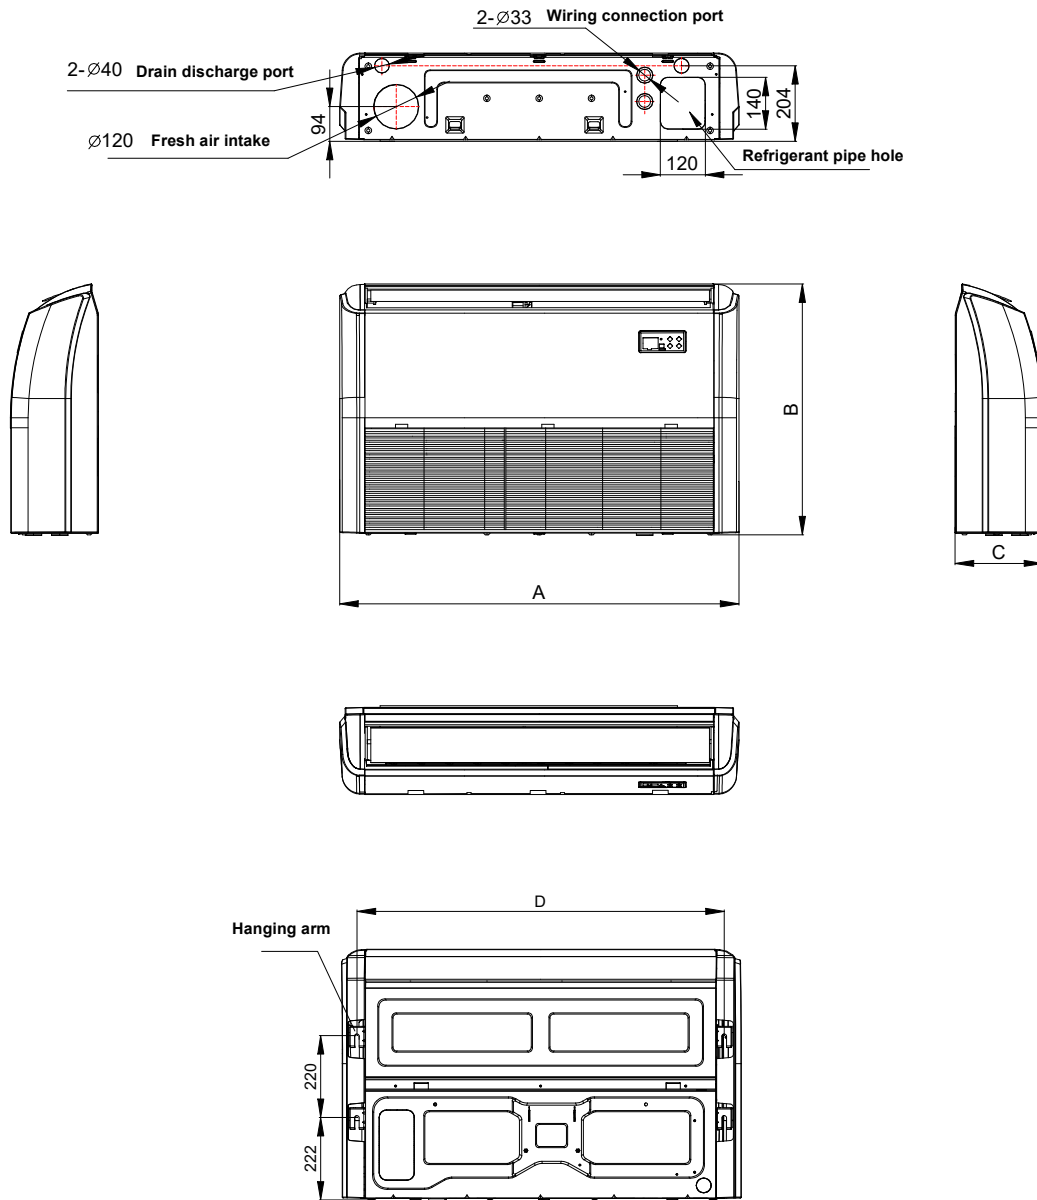


Capacity (Btu/h)	A	B	C	D
12~24K	1068	675	235	983
30~36K	1285	675	235	1200
48~60K	1650	675	235	1565

3. Service Space

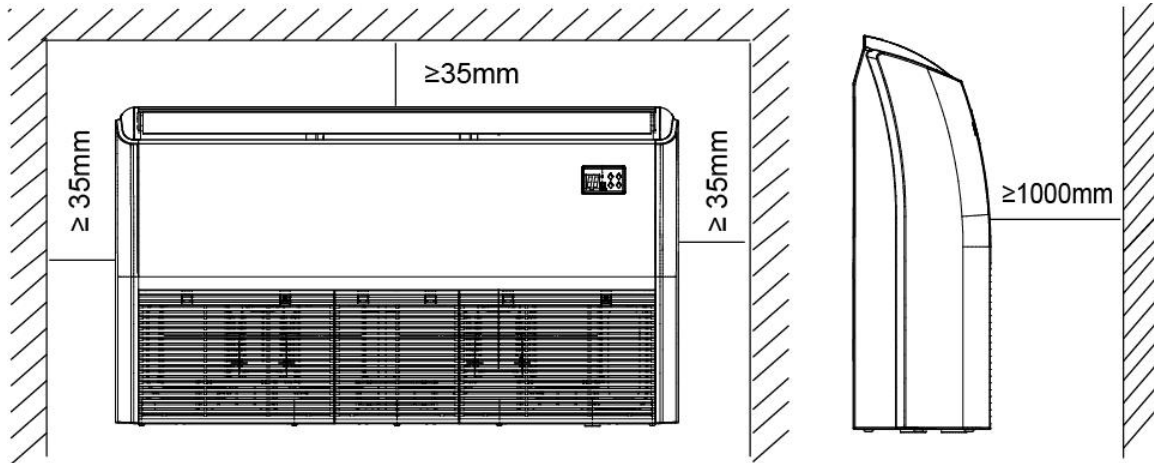


4. Wiring Diagram


FFMD-100N-01T25

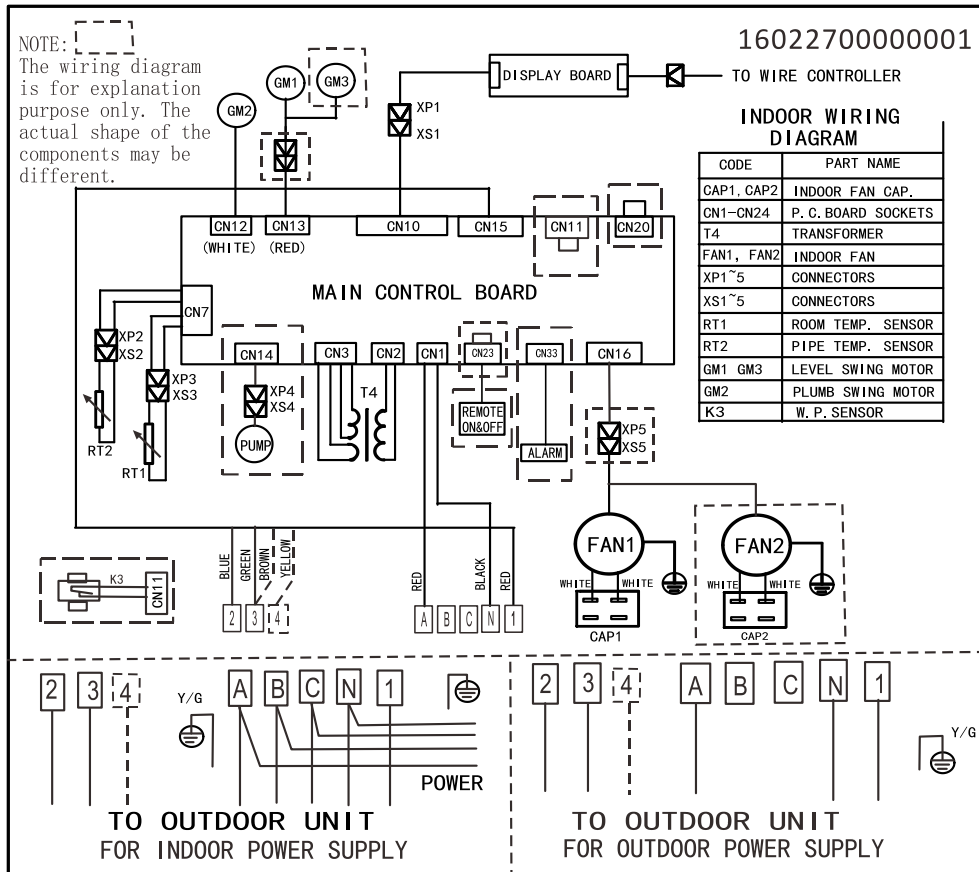

FFMD-100N-01M25

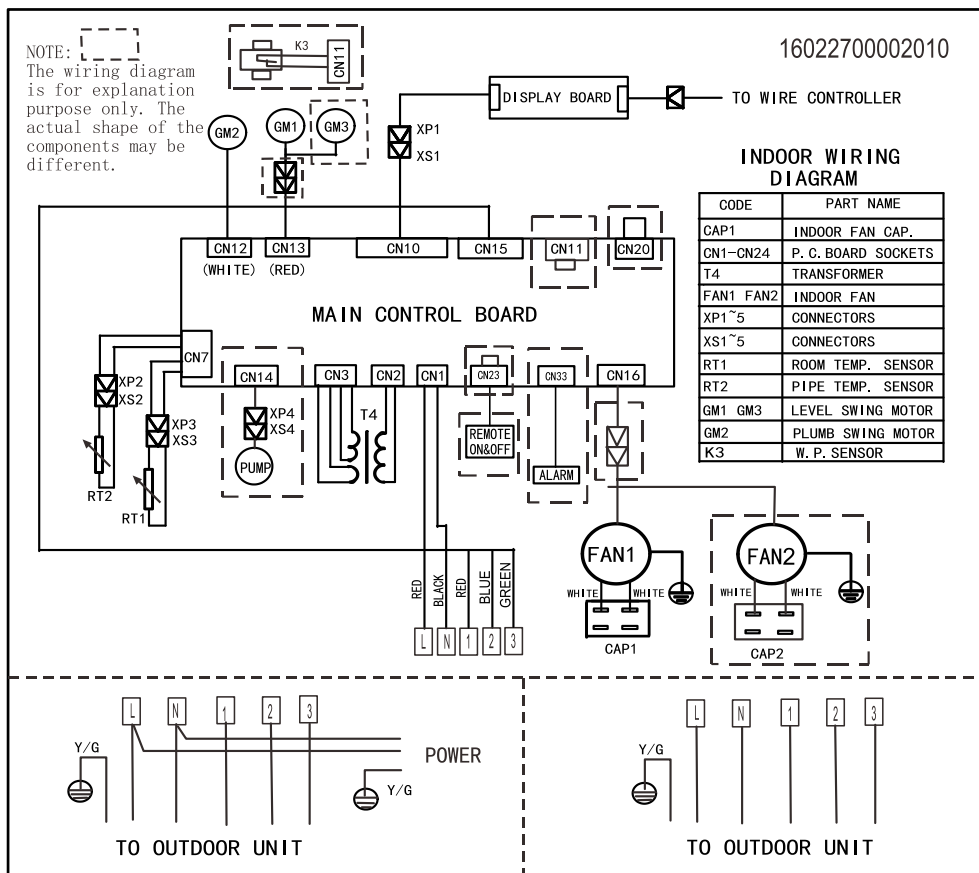

FFMD-140N-01M25 FFMD-160N-01M25

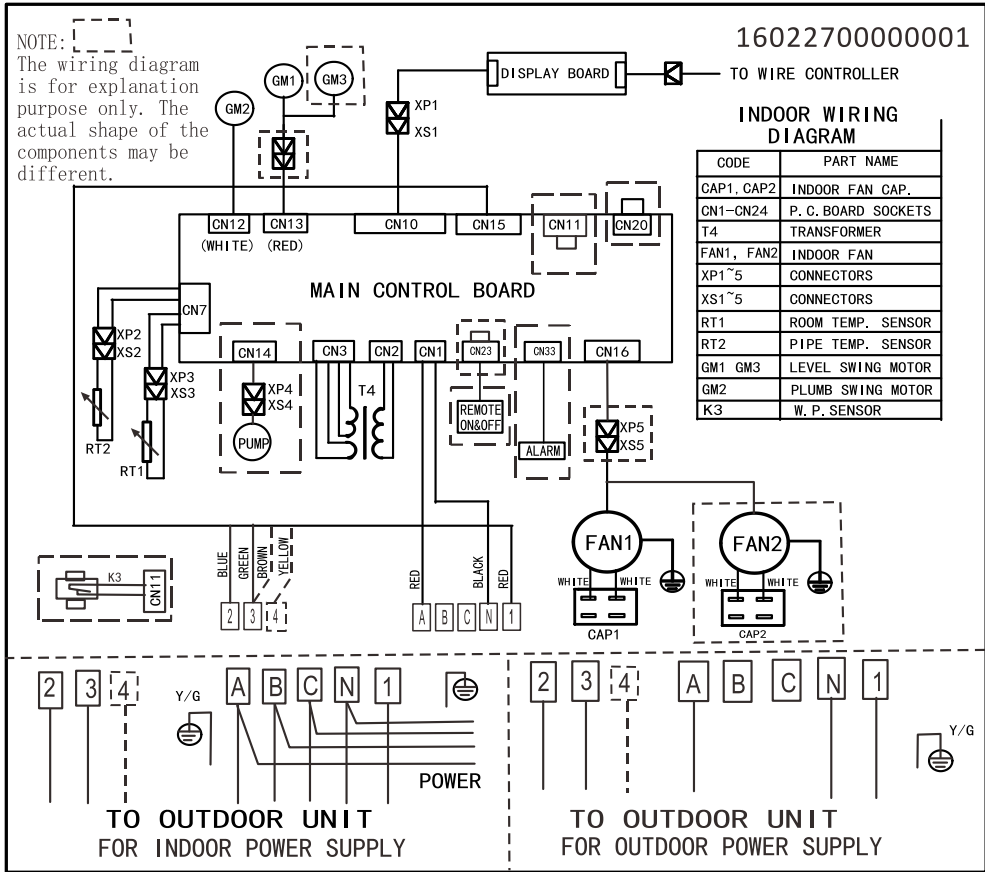


5. Electric Characteristics

Model	Indoor Units				Power Supply
	Hz	Voltage	Min.	Max.	MFA
FFMD-100N-01M25	50	220-240V	198V	242V	/
FFMD-100N-01T25	50	220-240V	198V	242V	/
FFMD-140N-01M25	50	380-415V	342V	436V	25
FFMD-160N-01M25	50	380-415V	342V	436V	25


Remark:

MFA: Max. Fuse Amps. (A)

6. Sound Levels

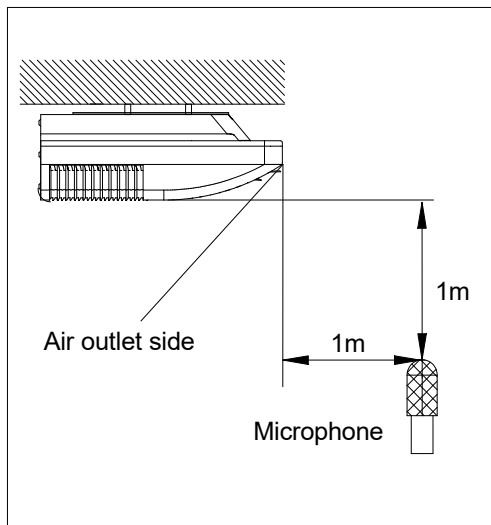



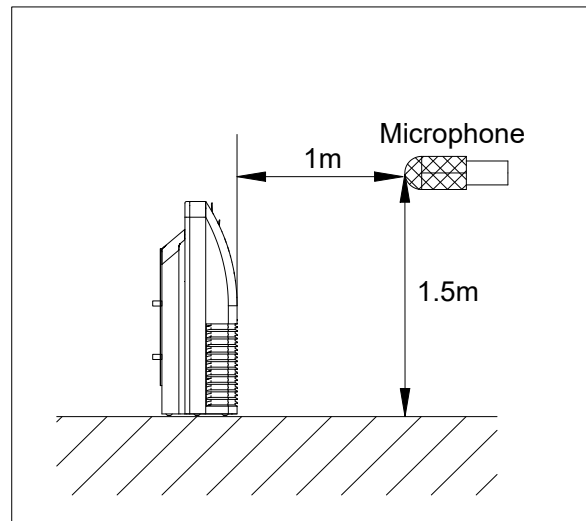




Ceiling



Floor

Model	Noise level dB(A)		
	H	M	L
FFMD-100N-01M25	54	49	46
FFMD-100N-01T25	54	50	47
FFMD-140N-01M25	54	49	46
FFMD-160N-01M25	55	51	48

7. Accessories

Remote controller & Its holder	1. Remote controller		1
	2. Remote controller holder		1
	3. Mounting screw (ST2.9×10-C-H)		2
	4. Alkaline dry batteries (AM4)		2
Others	5. Owner's manual		1
	6. Installation manual		1
	7. Remote controller manual		1


8. The Specification of Power


Model		FFMD-100N-01M25
Power	Phase	1-phase
	Frequency and Voltage	220-240V, 50Hz
Circuit Breaker/ Fuse (A)		50/40
Indoor Unit Power Wiring (mm ²)		—————
Indoor/Outdoor Connecting Wiring (mm ²)	Ground Wiring	4.0
	Outdoor Unit Power Wiring	3×4.0
	Strong Electric Signal	1×1.0/3×1.5
	Weak Electric Signal	(2×0.2)

Heating pump:

Model (KBtu/h)		18	24	30-36	36	48-60
Power	Phase	1-phase	1-phase	1-phase	3-phase	3-phase
	Frequency and Voltage	220-240V, 50Hz			380-415V, 50Hz	
Circuit Breaker/ Fuse (A)		25/20	32/25	50/40	25/20	32/25
Indoor Unit Power Wiring (mm ²)		3×2.5	3×2.5	—————	—————	5×2.5
Indoor/Outdoor Connecting Wiring (mm ²)	Ground Wiring	2.5	2.5	4.0	2.5	2.5
	Outdoor Unit Power Wiring	3×2.5	3×2.5	3×4.0	5×2.5	5×2.5
	Strong Electric Signal	2×1.0	3×1.0	3×1.0/3×1.5	3×1.0/3×1.5	3×1.0
	Weak Electric Signal	(2×0.75/ 2×0.5)	(2×0.2)	(2×0.2)	—————	—————

FFMD-100N-01T25

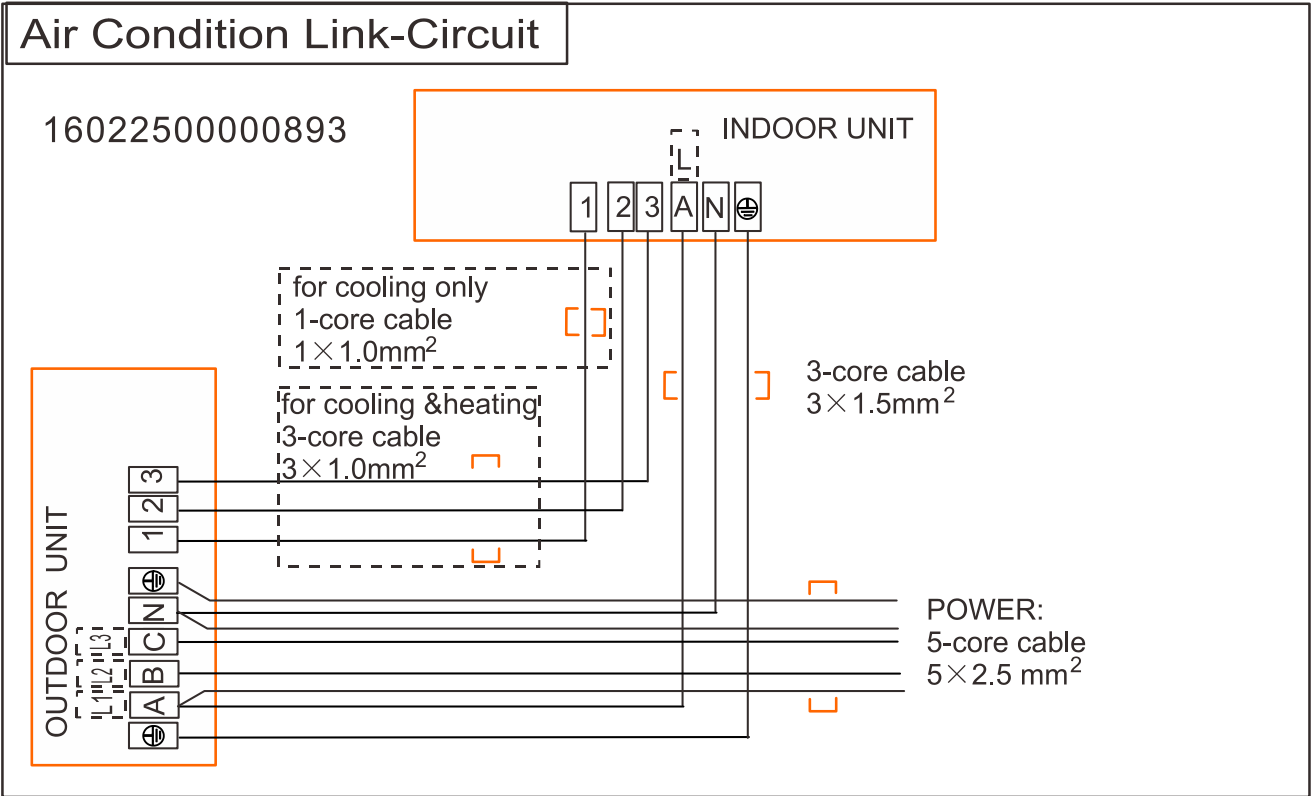

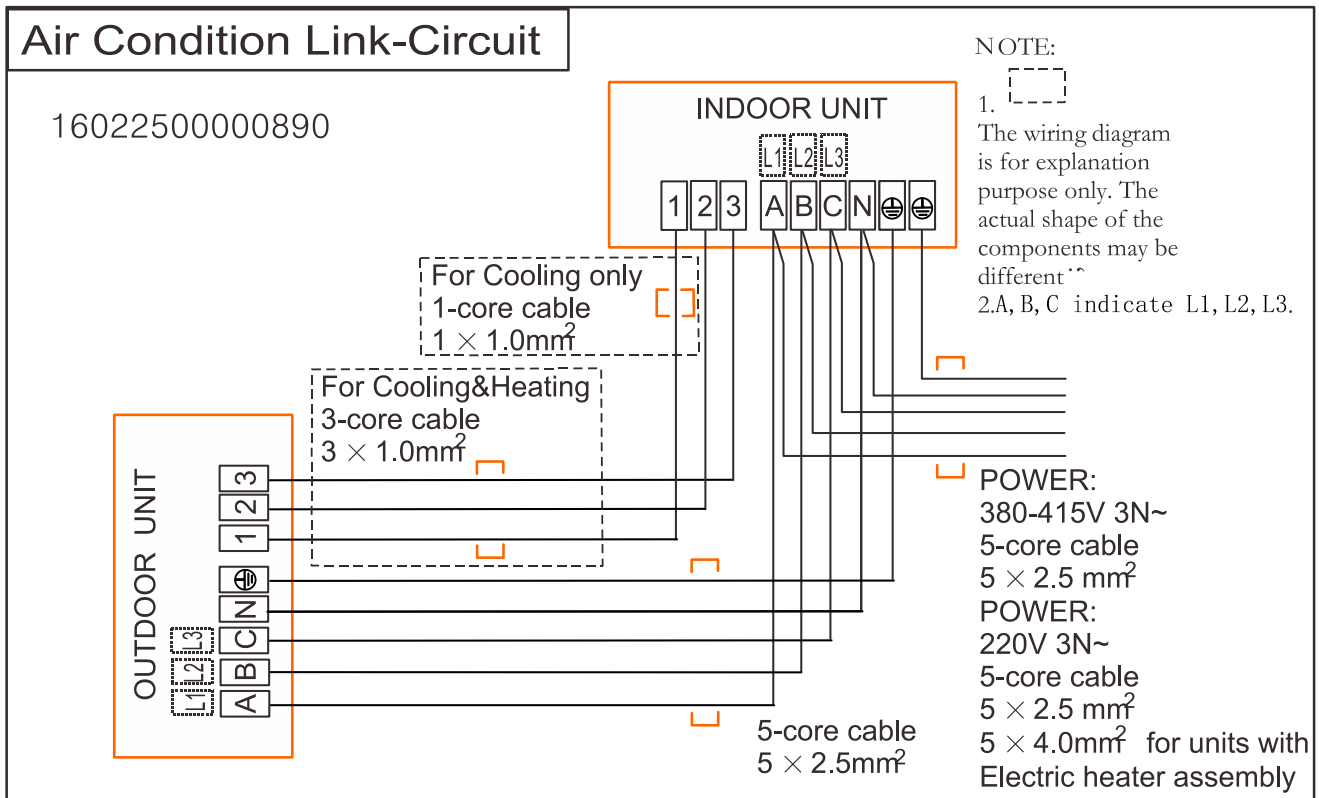


Part 3

Outdoor Units


1. Dimensions.....	38
2. Service Space.....	40
3. Piping Diagrams.....	42
4. Wiring Diagrams.....	44
5. Electric Characteristics.....	49
6. Operation Limits.....	50
7. Sound Levels.....	51

1. Dimensions

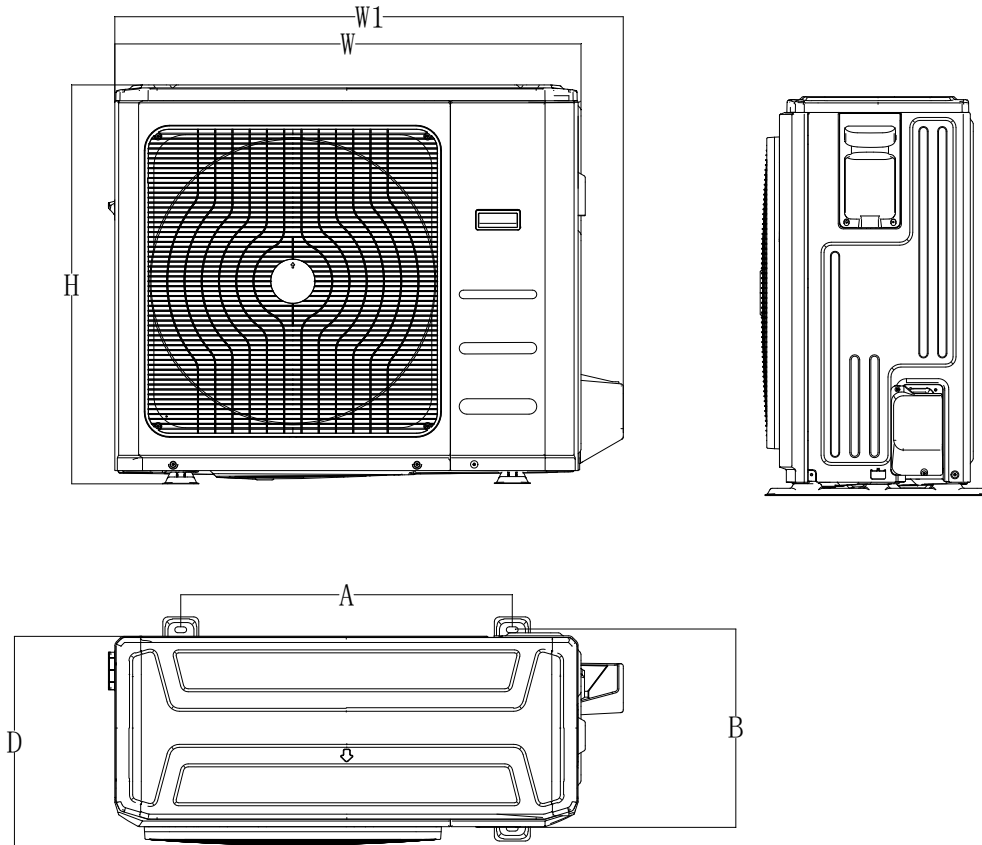


Model	Unit: mm					
	W	D	H	W1	A	B
YFAD-100R-01M25	946	410	810	1030	673	403
YFAD-100R-01T35						

Dimensions

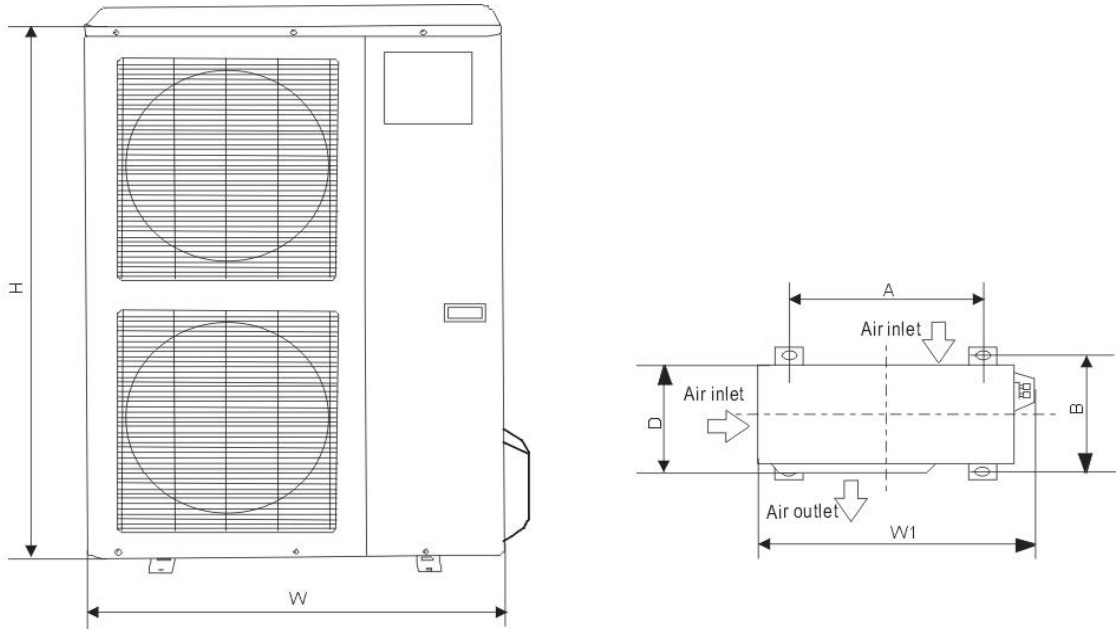


Model	Unit: mm					
	W	D	H	W1	A	B
YFAD-140R-01T35	900	350	1170	985	590	378
YFAD-160R-01T35	900	350	1170	985	590	378

2. Service Space

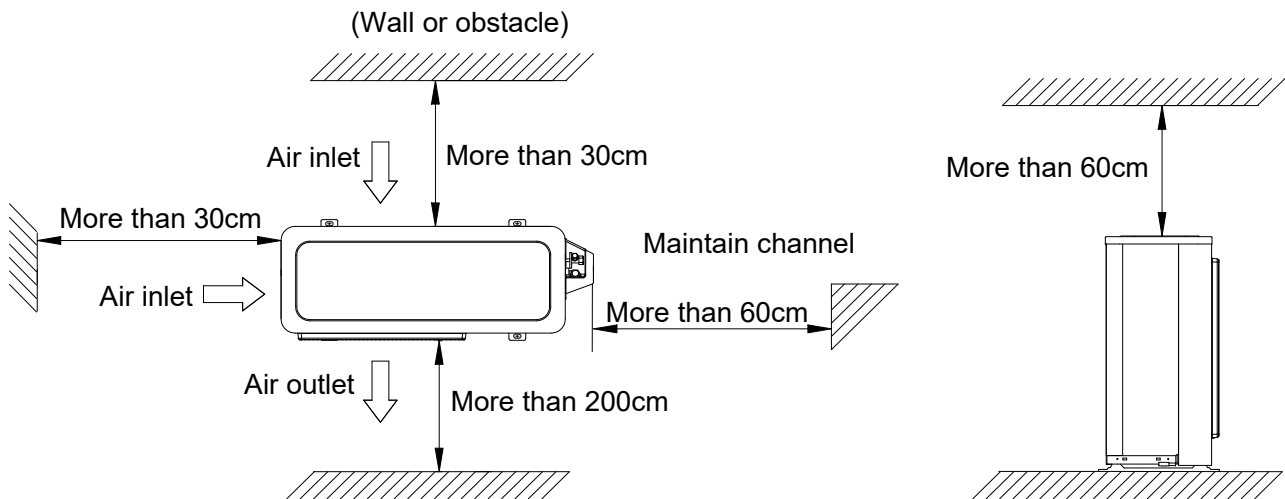


3.Piping Diagrams


18K

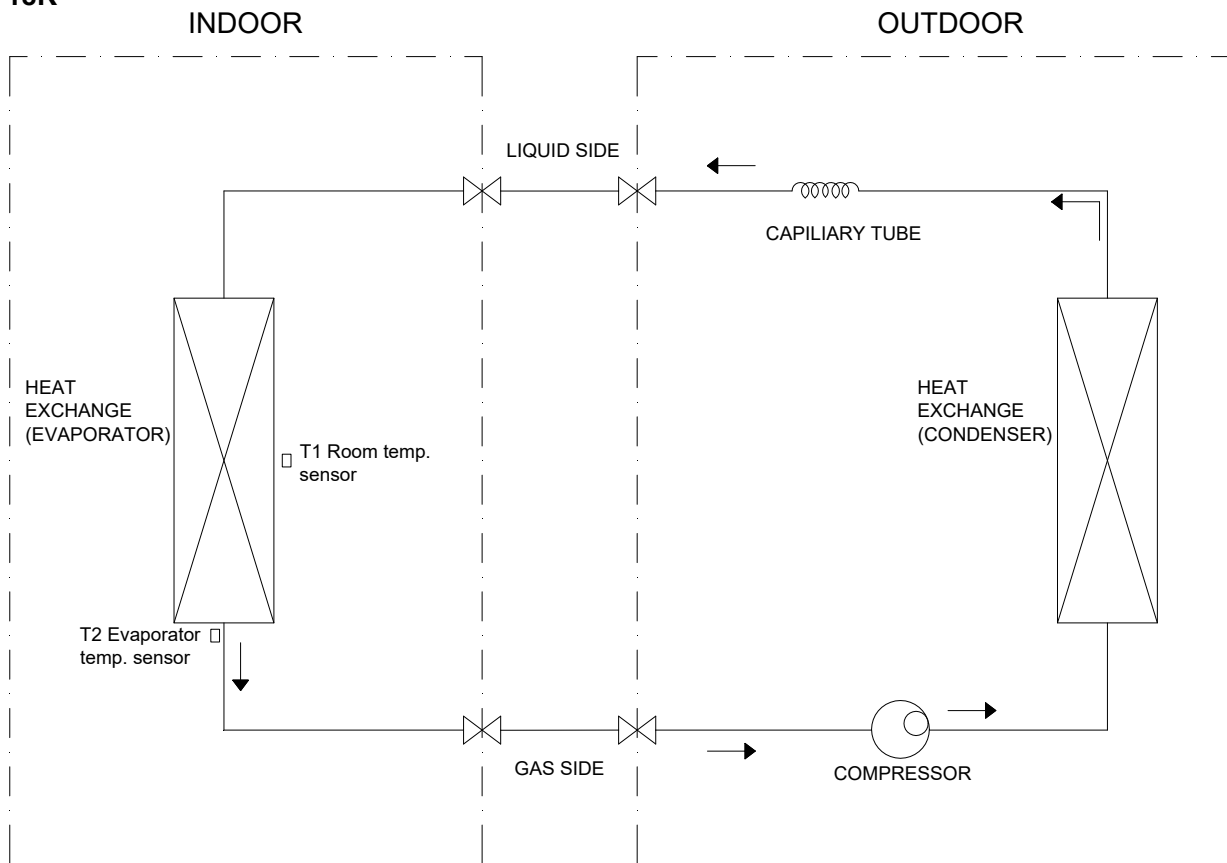


30K

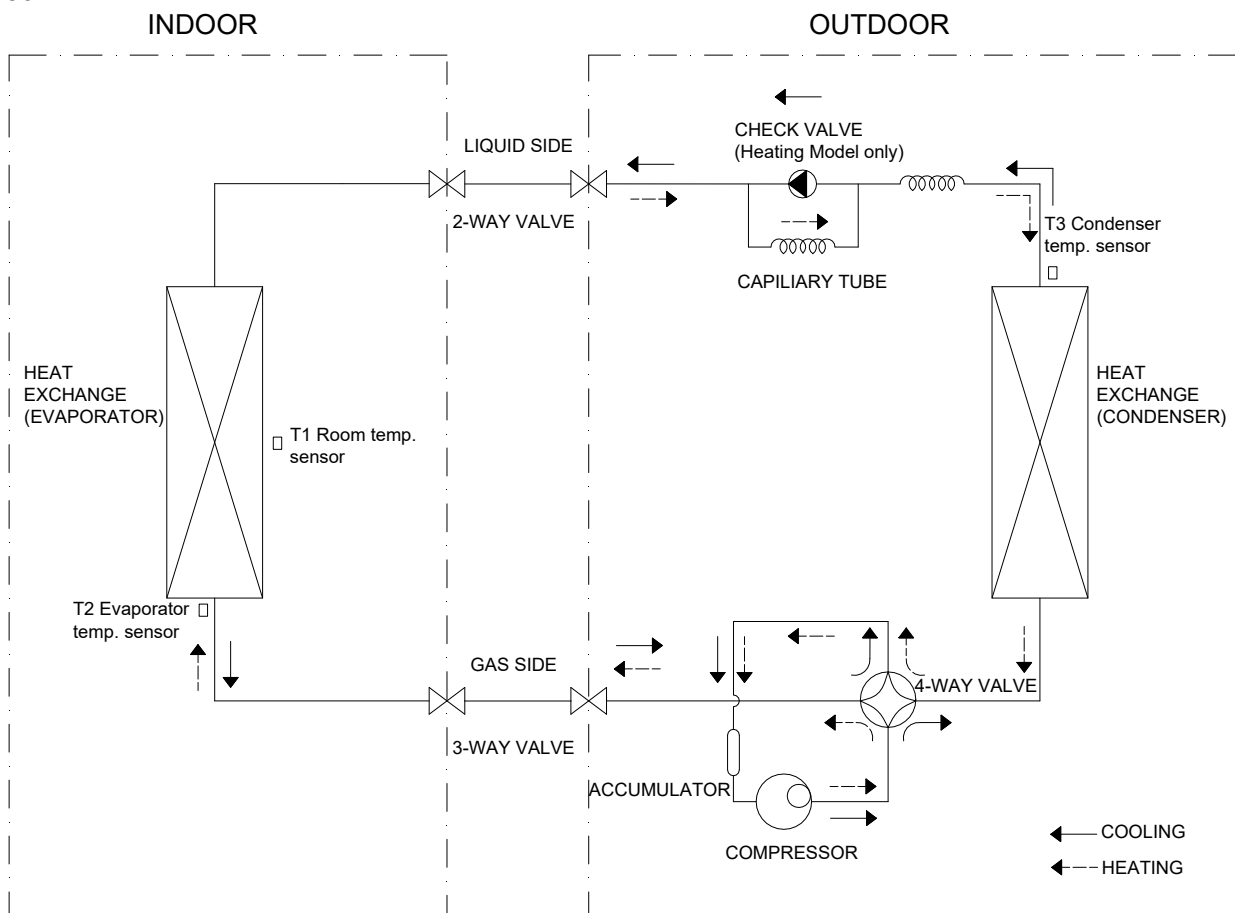


YFAD-100R-01M25

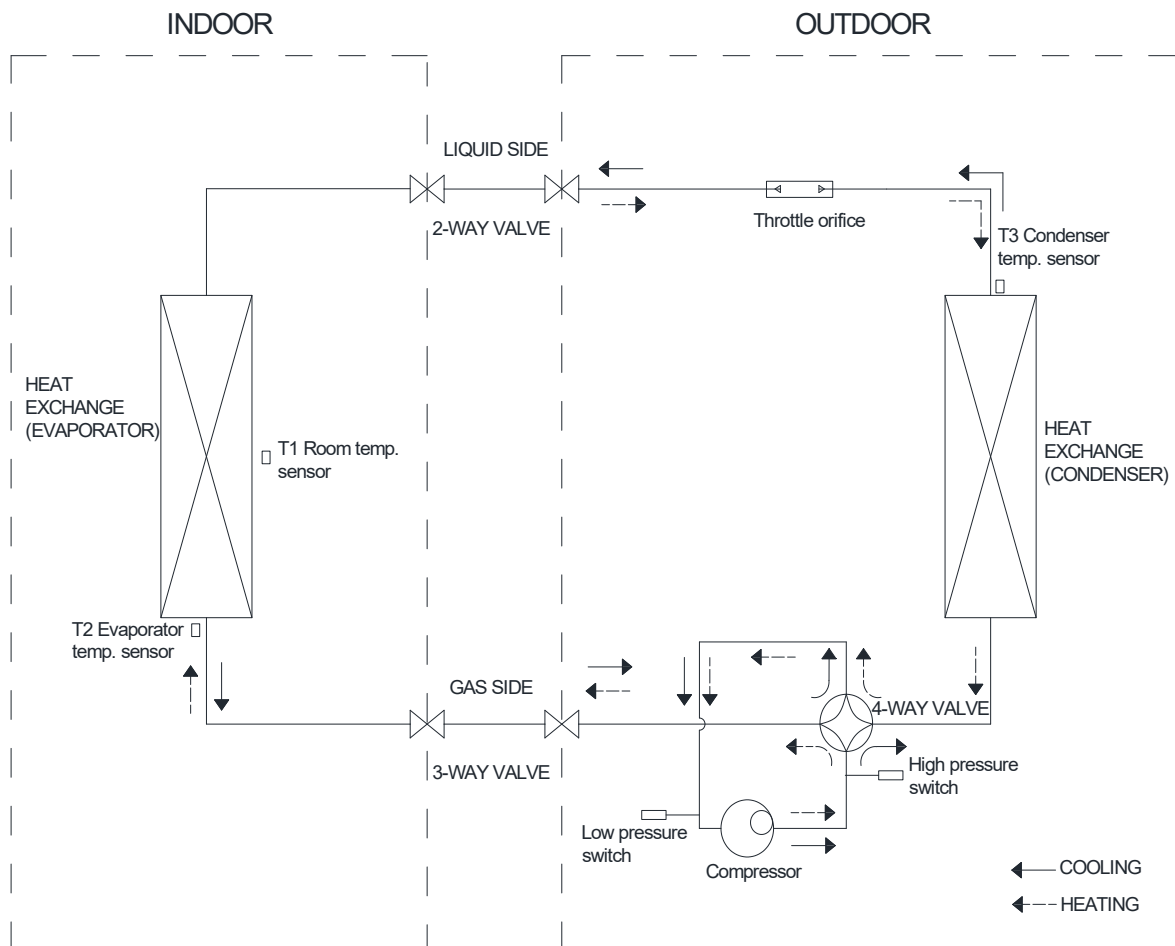

YFAD-100R-01T35 YFAD-140R-01T35

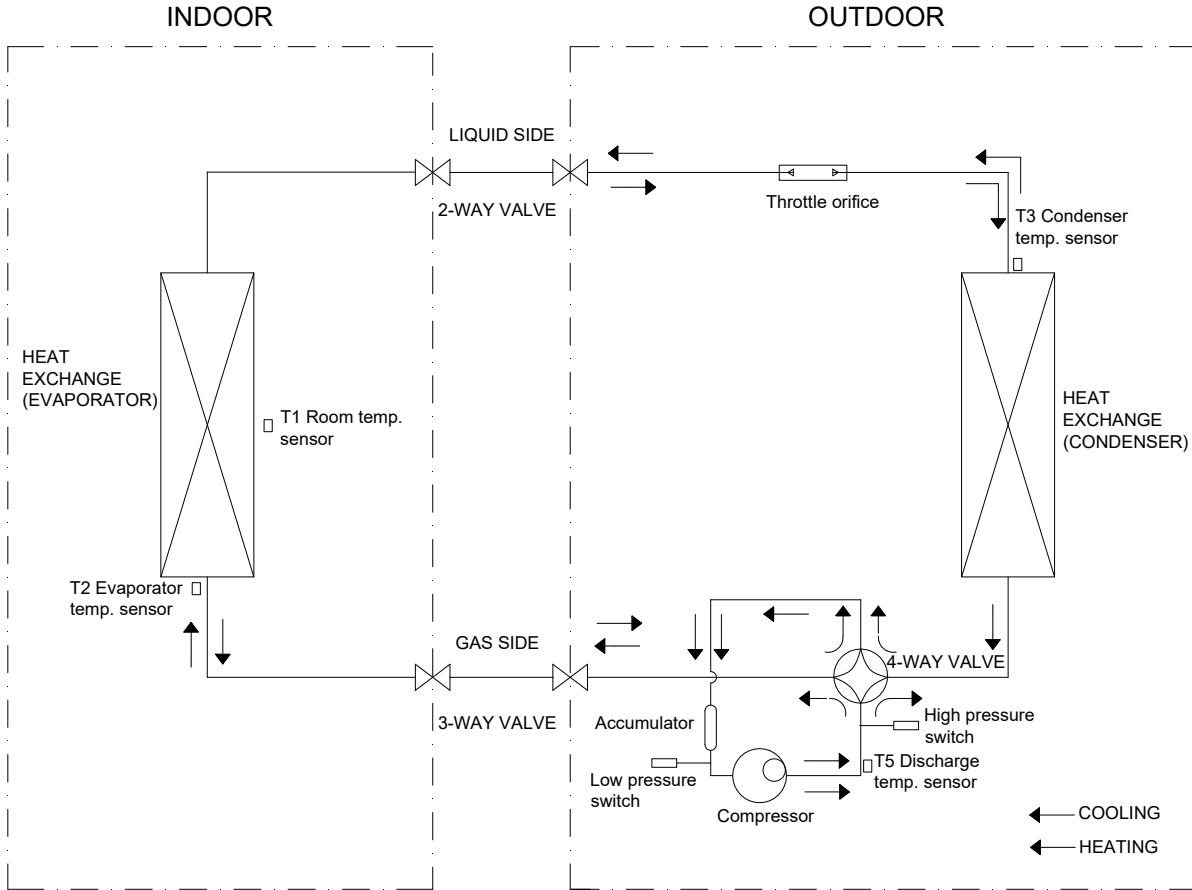


YFAD-160R-01T35

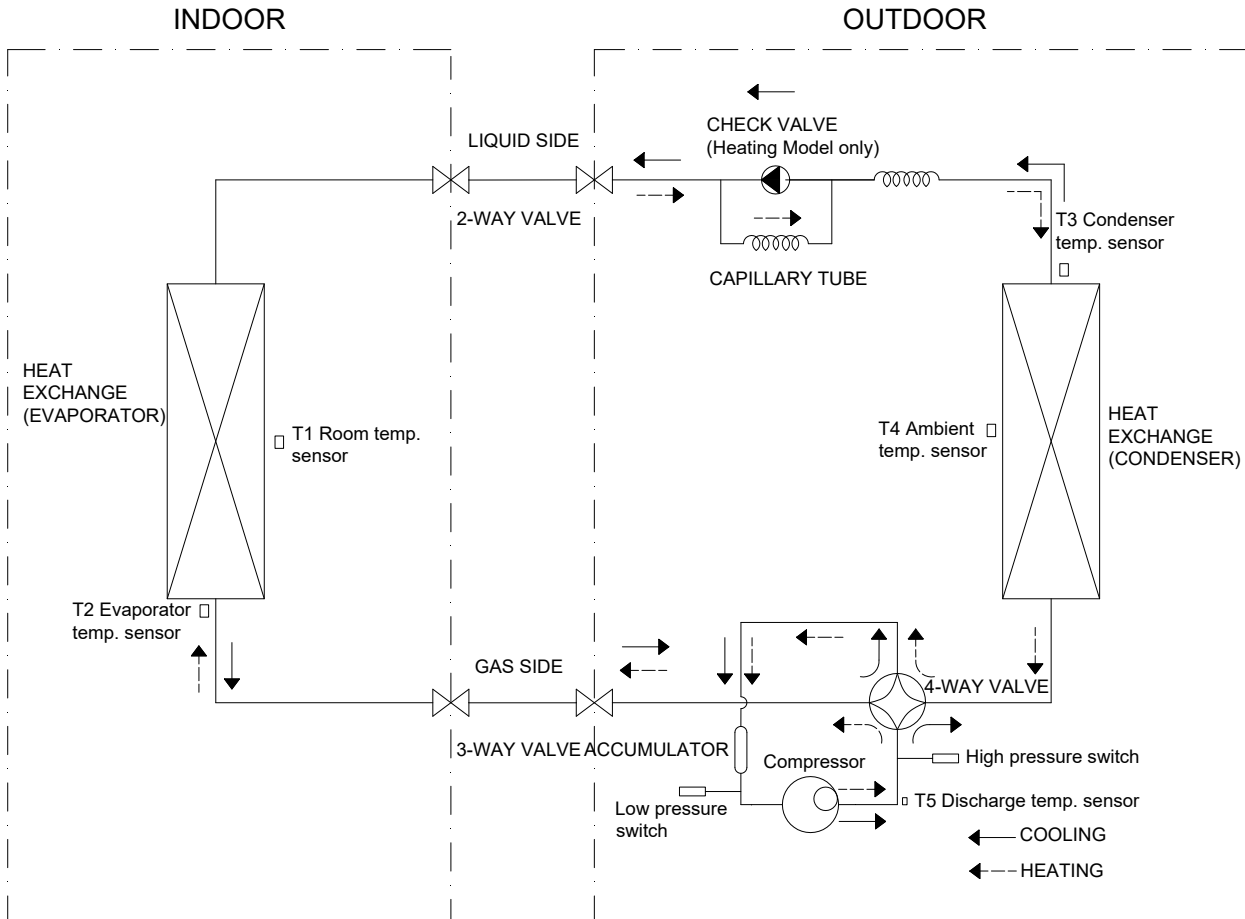


4. Wiring Diagrams


12k,18K

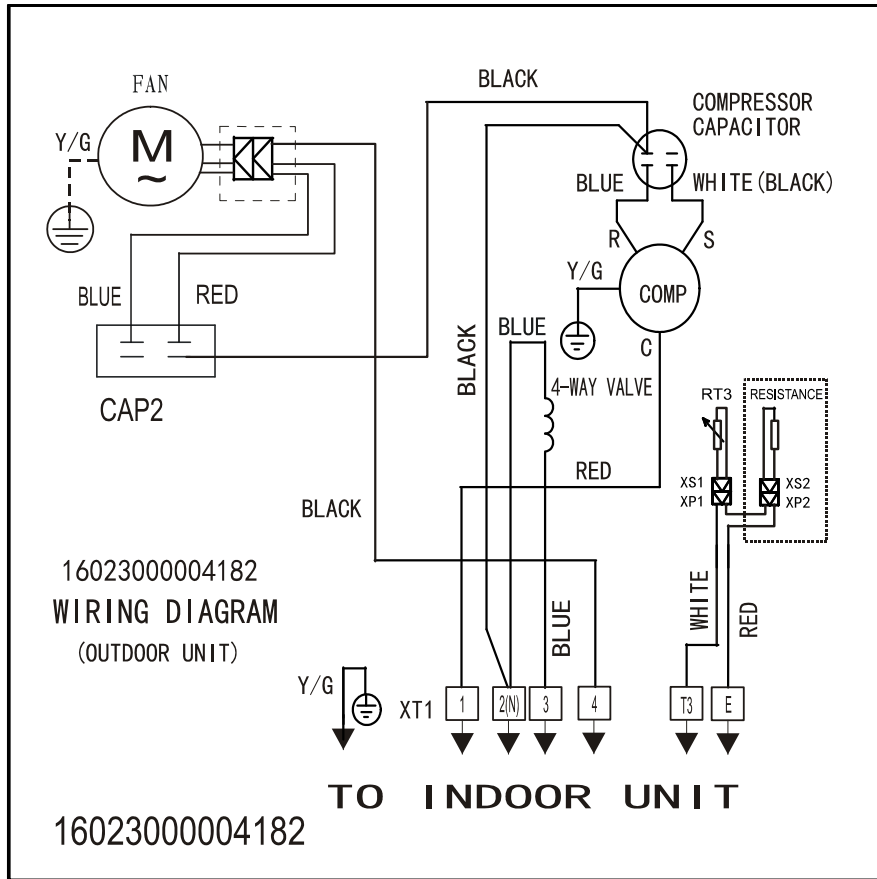


24K

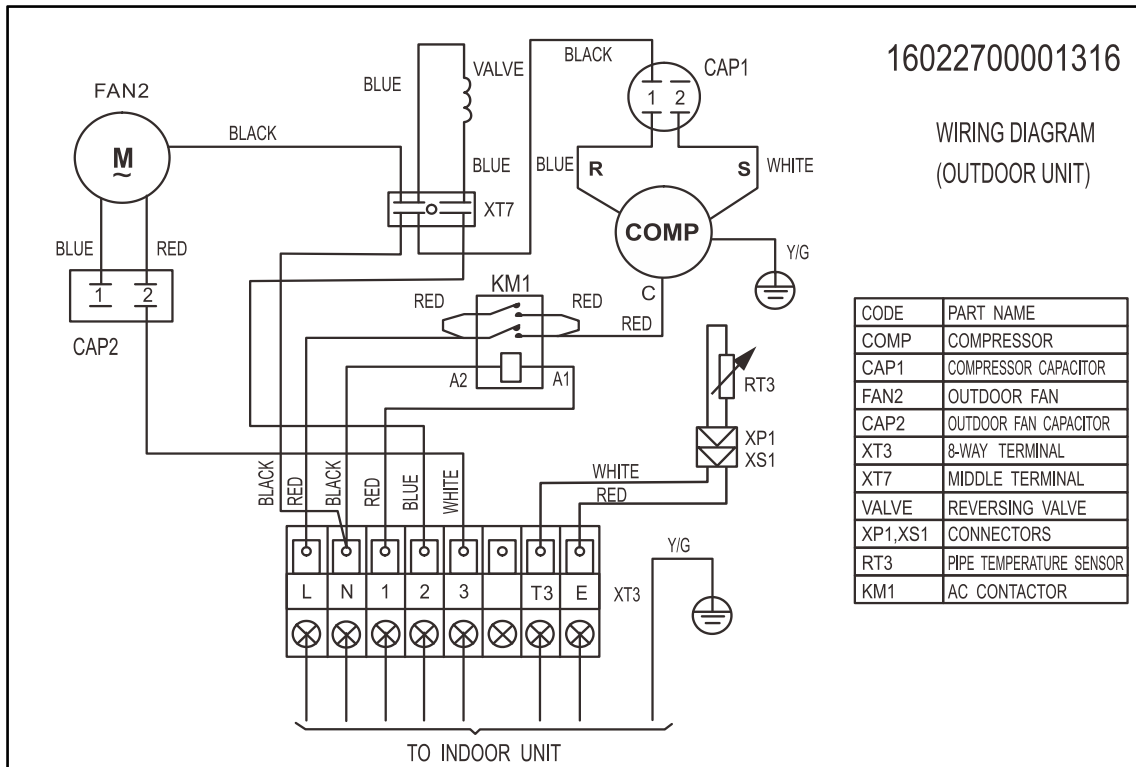


YFAD-100R-01M25

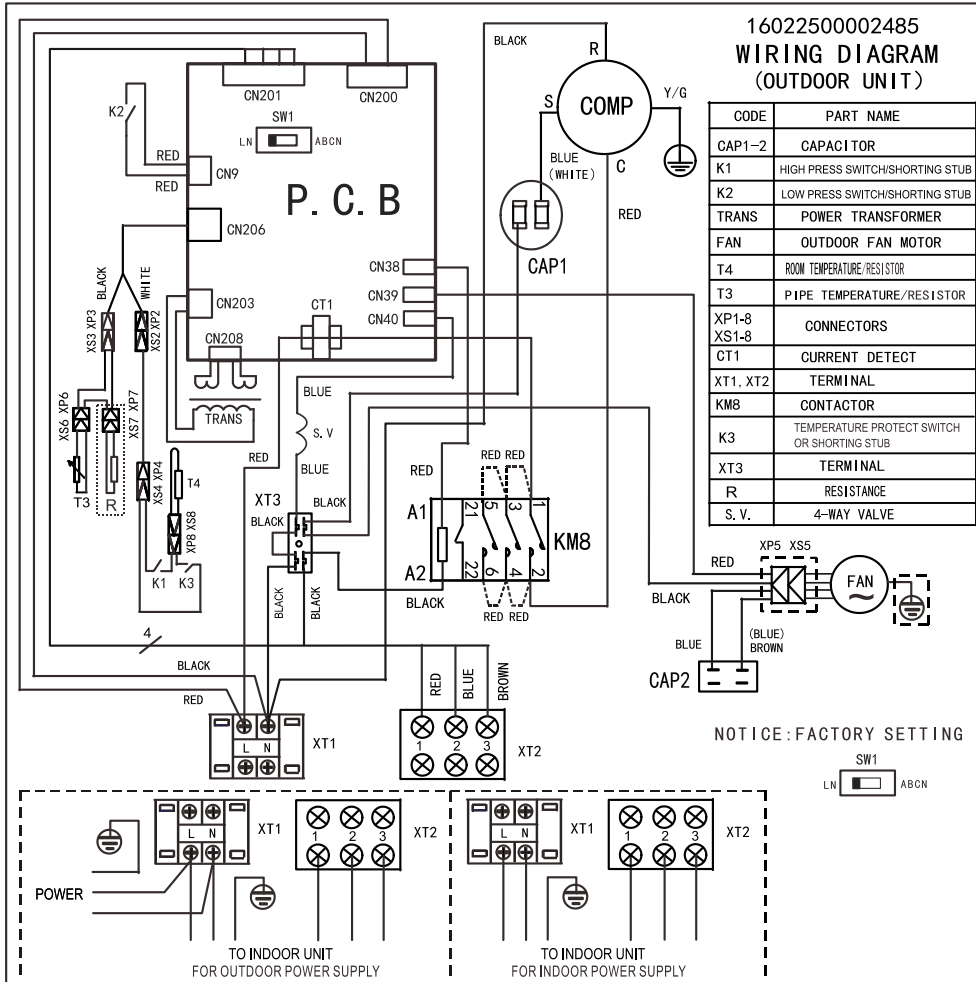


YFAD-100R-01T35

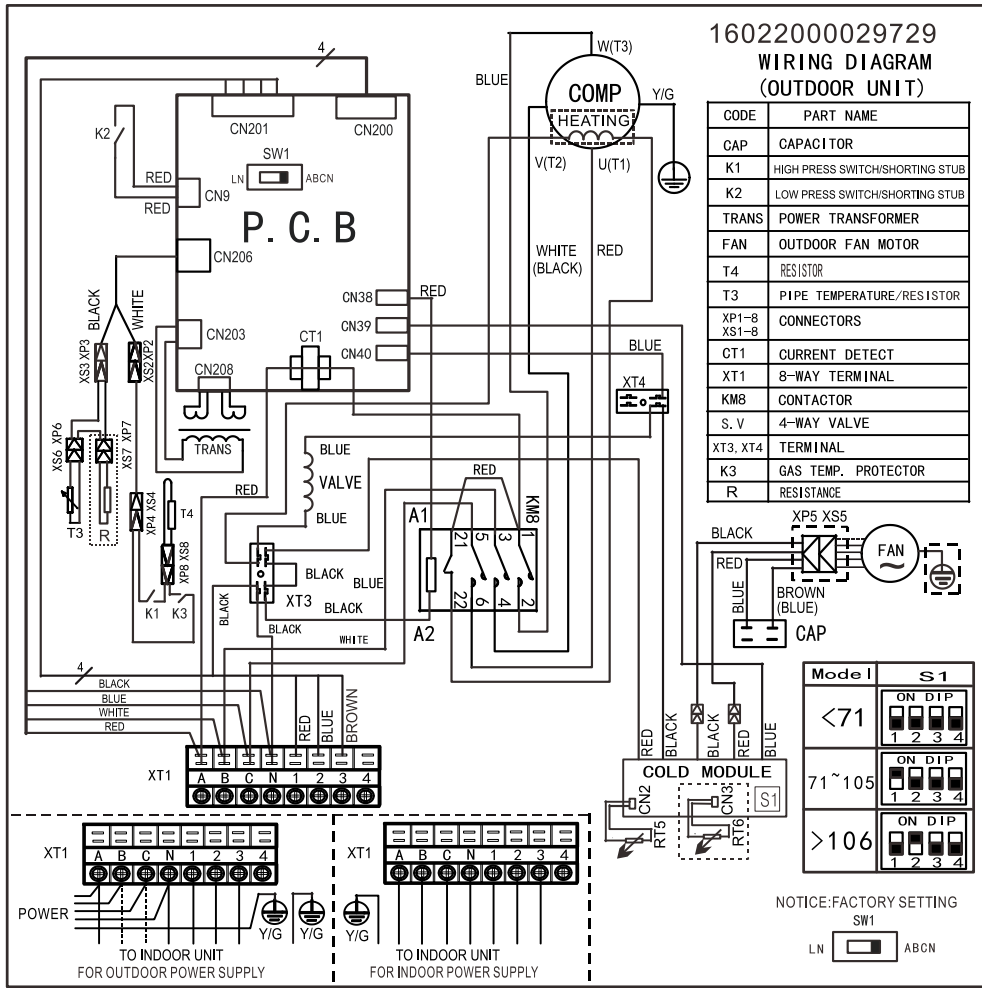

YFAD-140R-01T35

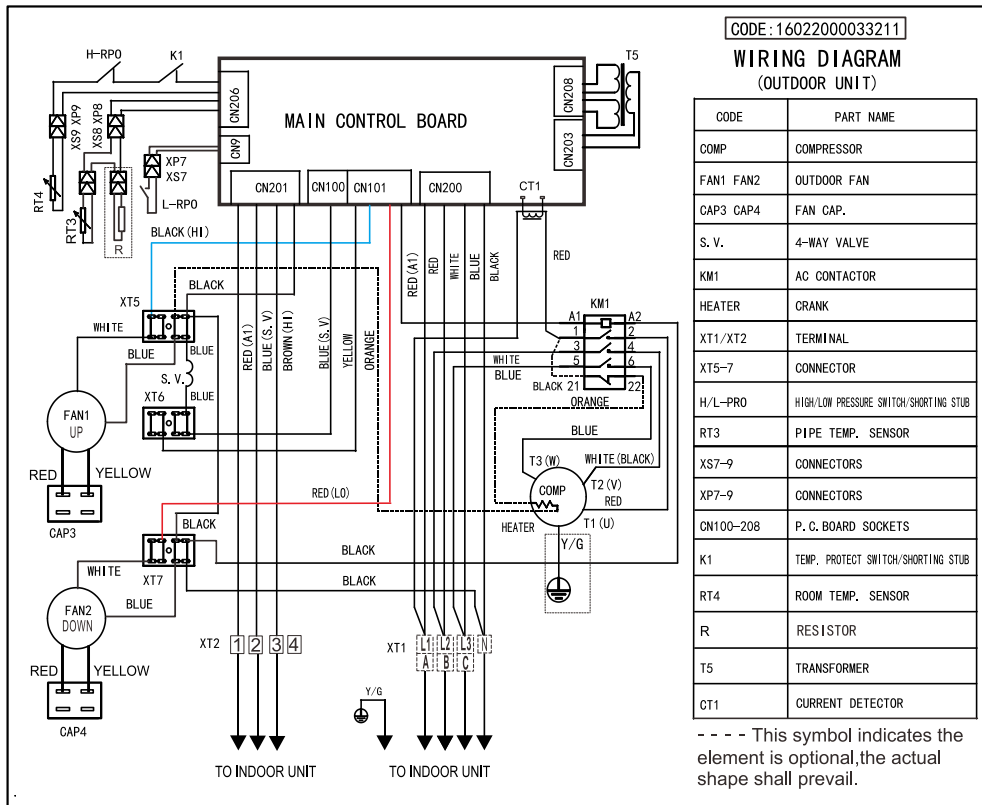

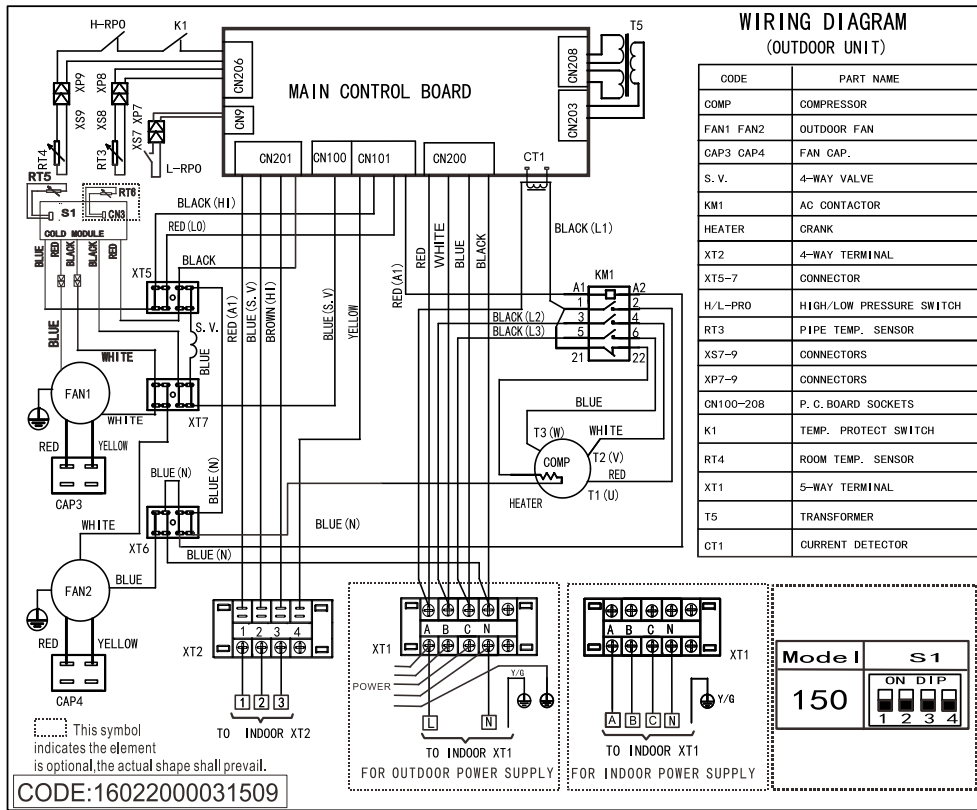

5. Electric Characteristics



Model	Outdoor Unit				Power Supply
	Hz	Voltage	Min.	Max.	MFA
YFAD-100R-01M25	50	220~240V	198V	254V	/
YFAD-100R-01T35	50	380~415V	342V	436V	/
YFAD-140R-01T35	50	380~415V	342V	436V	/
YFAD-160R-01T35	50	380~415V	342V	436V	25

Notes:

MFA: Max. Fuse Amps. (A)


6.Operation Limits

Mode \ Temperature	Cooling operation	Heating operation
Room temperature	17°C~32°C	0°C~30°C
Outdoor temperature	18°C~43°C	-7°C~24°C
	(-7°C~43°C: For the models with low temperature cooling system)	

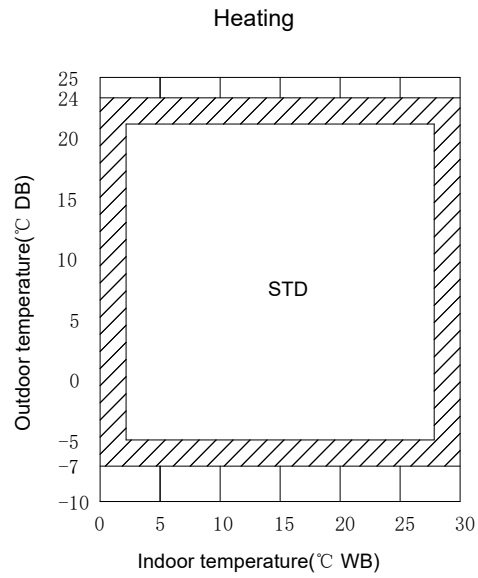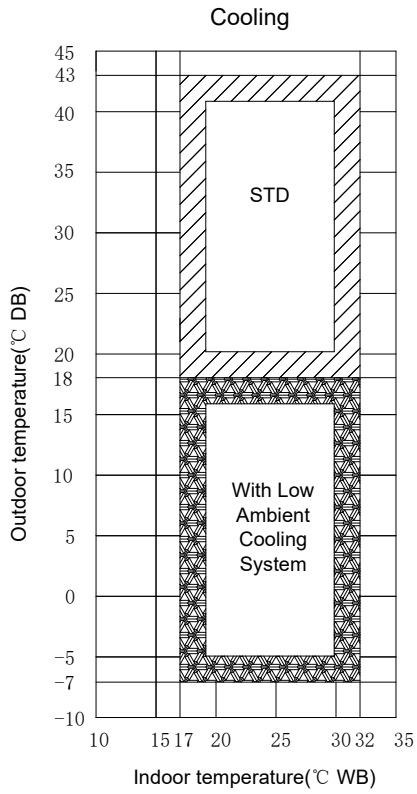

7.Sound Levels

Outdoor Unit

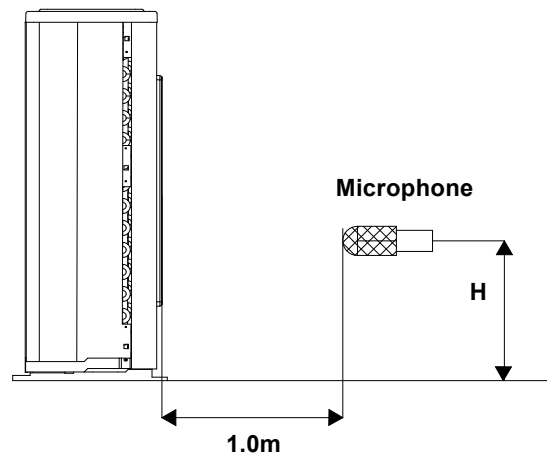

Note: $H = 0.5 \times$ height of outdoor unit


Model	Noise level dB(A)
YFAD-100R-01M25	63
YFAD-100R-01T35	64
YFAD-140R-01T35	63
YFAD-160R-01T35	63

Part 4

Installation

1. Installation Procedure.....	53
2. Location selection.....	54
3. Indoor unit installation.....	55
4. Outdoor unit installation (Side Discharge Unit).....	84
5. Refrigerant pipe installation.....	85
6. Drainage pipe installation.....	86
7. Vacuum Drying and Leakage Checking.....	90
8. Additional refrigerant charge.....	91
9. Engineering of insulation.....	91
10. Engineering of electrical wiring.....	92
11. Test operation.....	93

1. Installation Procedure

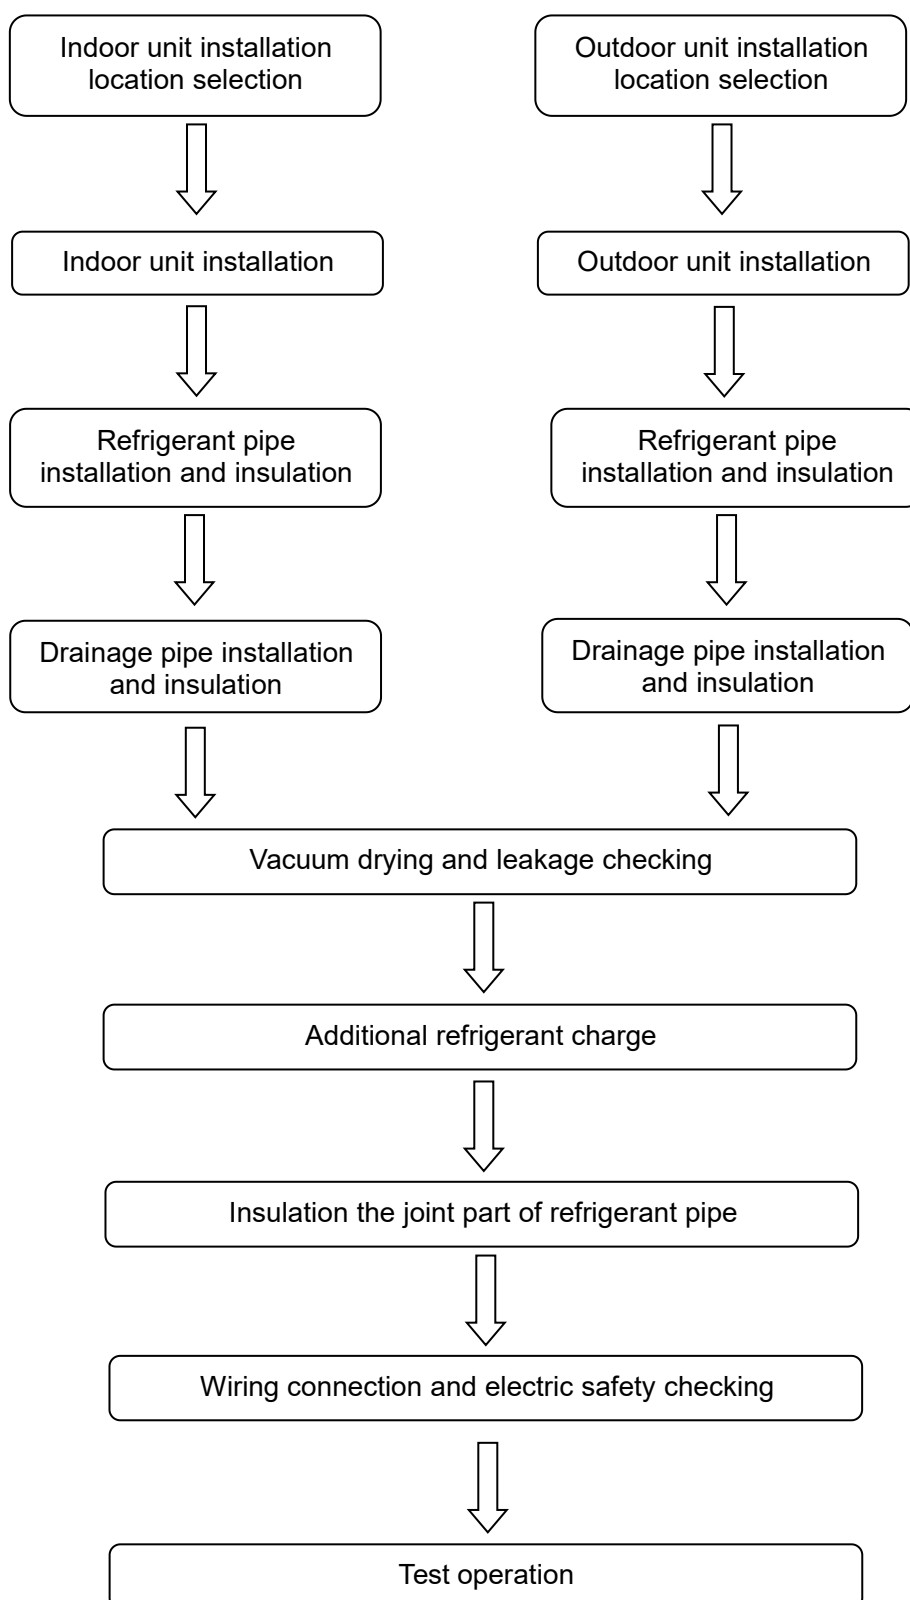


2. Location selection

2.1 Indoor unit location selection

- The place shall easily support the indoor unit's weight.
- The place can ensure the indoor unit installation and inspection.
- The place can ensure the indoor unit horizontally installed.
- The place shall allow easy water drainage.
- The place shall easily connect with the outdoor unit.
- The place where air circulation in the room should be good.
- There should not be any heat source or steam near the unit.
- There should not be any oil gas near the unit
- There should not be any corrosive gas near the unit
- There should not be any salty air near the unit
- There should not be strong electromagnetic wave near the unit
- There should not be inflammable materials or gas near the unit
- There should not be strong voltage vibration.

2.2 Outdoor unit location selection



- The place shall easily support the outdoor unit's weight.
- Locate the outdoor unit as close to indoor unit as possible
- The piping length and height drop can not exceed the allowable value.
- The place where the noise, vibration and outlet air do not disturb the neighbors.
- There is enough room for installation and maintenance.
- The air outlet and the air inlet are not impeded, and not face the strong wind.
- It is easy to install the connecting pipes and cables.
- There is no danger of fire due to leakage of inflammable gas.
- It should be a dry and well ventilation place
- The support should be flat and horizontal
- Do not install the outdoor unit in a dirty or severely polluted place, so as to avoid blockage of the heat exchanger in the outdoor unit.
- If is built over the unit to prevent direct sunlight, rain exposure, direct strong wind, snow and other scraps accumulation, make sure that heat radiation from the condenser is not restricted.

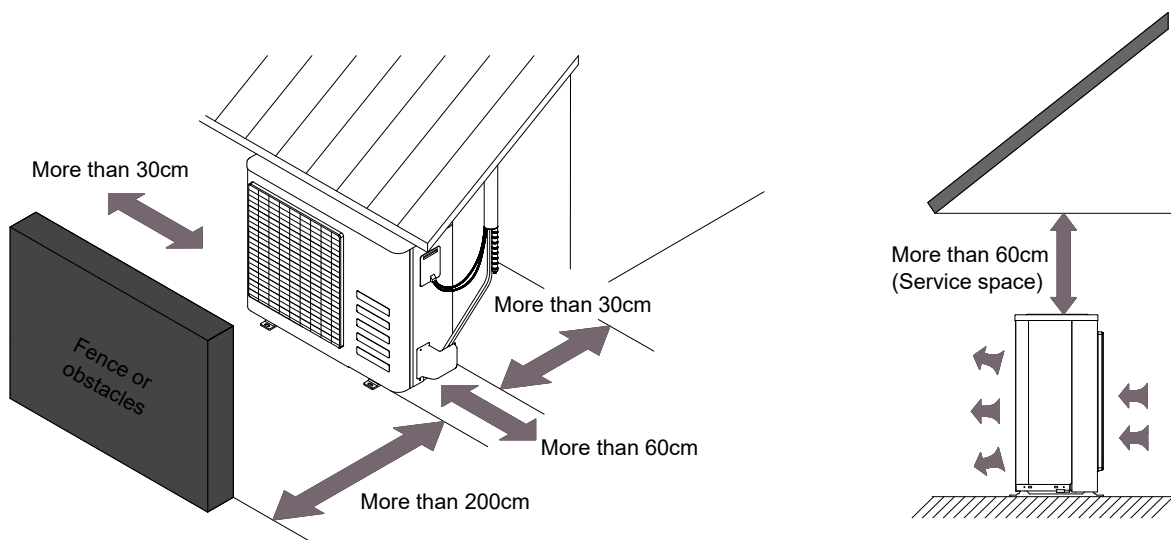


3. Indoor unit installation

3.1 Compact cassette indoor unit installation

3.1.1 Service space for indoor unit

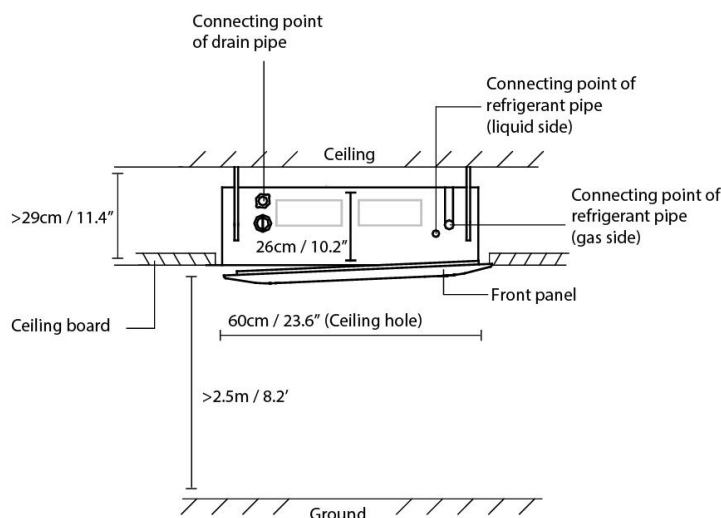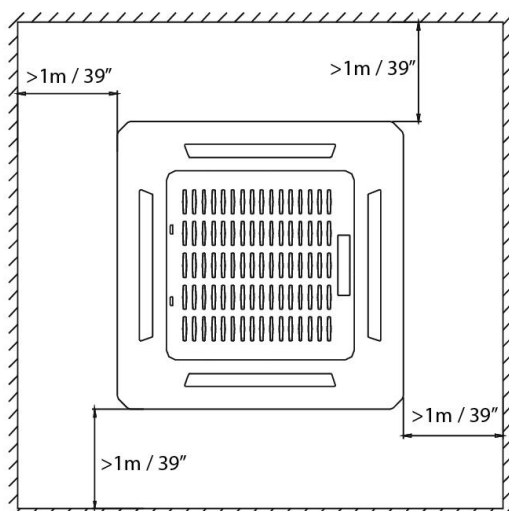

3.1.2 Bolt pitch

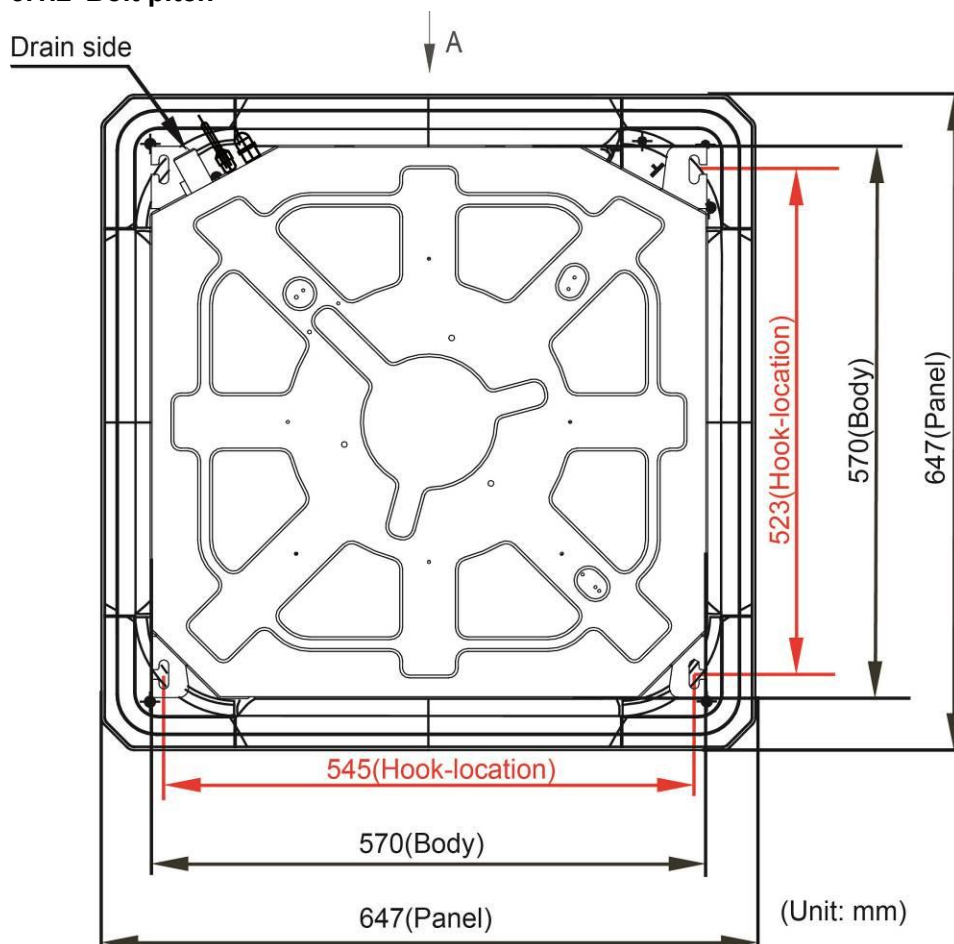

3.1.3 Install the pendant bolt

Select the position of installation hooks according to the hook holes positions showed in upper picture. Drill four holes of $\text{Ø}12\text{mm}$, 45~50mm deep at the selected positions on the ceiling. Then embed the expansible hooks (fittings).




Face the concave side of the installation hooks toward the expansible hooks. Determine the length of the installation hooks from the height of ceiling, then cut off the unnecessary part.


If the ceiling is extremely high, please determine the length of the installation hook depending on the real situation.

3.1.4 Install the main body

Make the 4 suspender through the 4 hanger of the main body to suspend it. Adjust the hexangular nuts on the four installation hooks evenly, to ensure the balance of the body. Use a leveling instrument to make sure the levelness of the main body is within $\pm 1^\circ$.

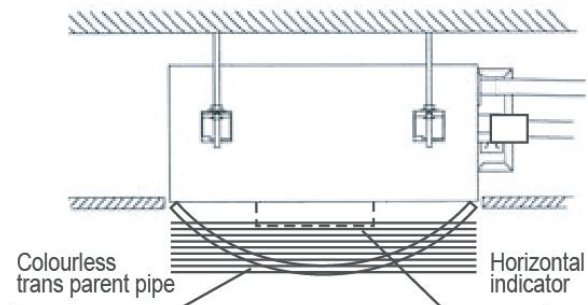

Adjust the position to ensure the gaps between the body and the four sides of ceiling are even. The body's lower part should sink into the ceiling for 10~12 mm. In general, L is half of the screw length of the installation hook.

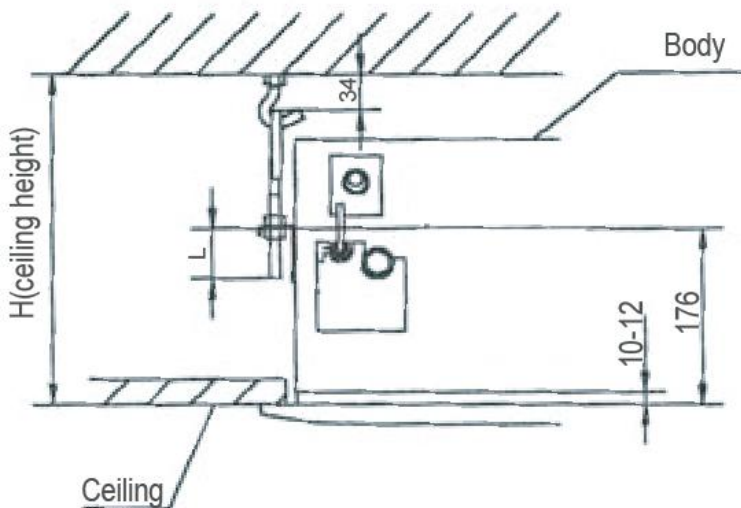


Locate the air conditioner firmly by wrenching the nuts after having adjusted the body's position well.




3.1.5 Install the panel



Remove the grille

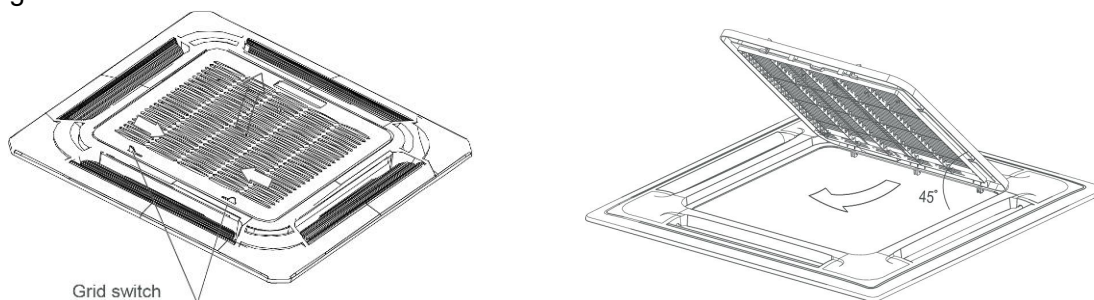

Hang the panel to the hooks on the mainbody.

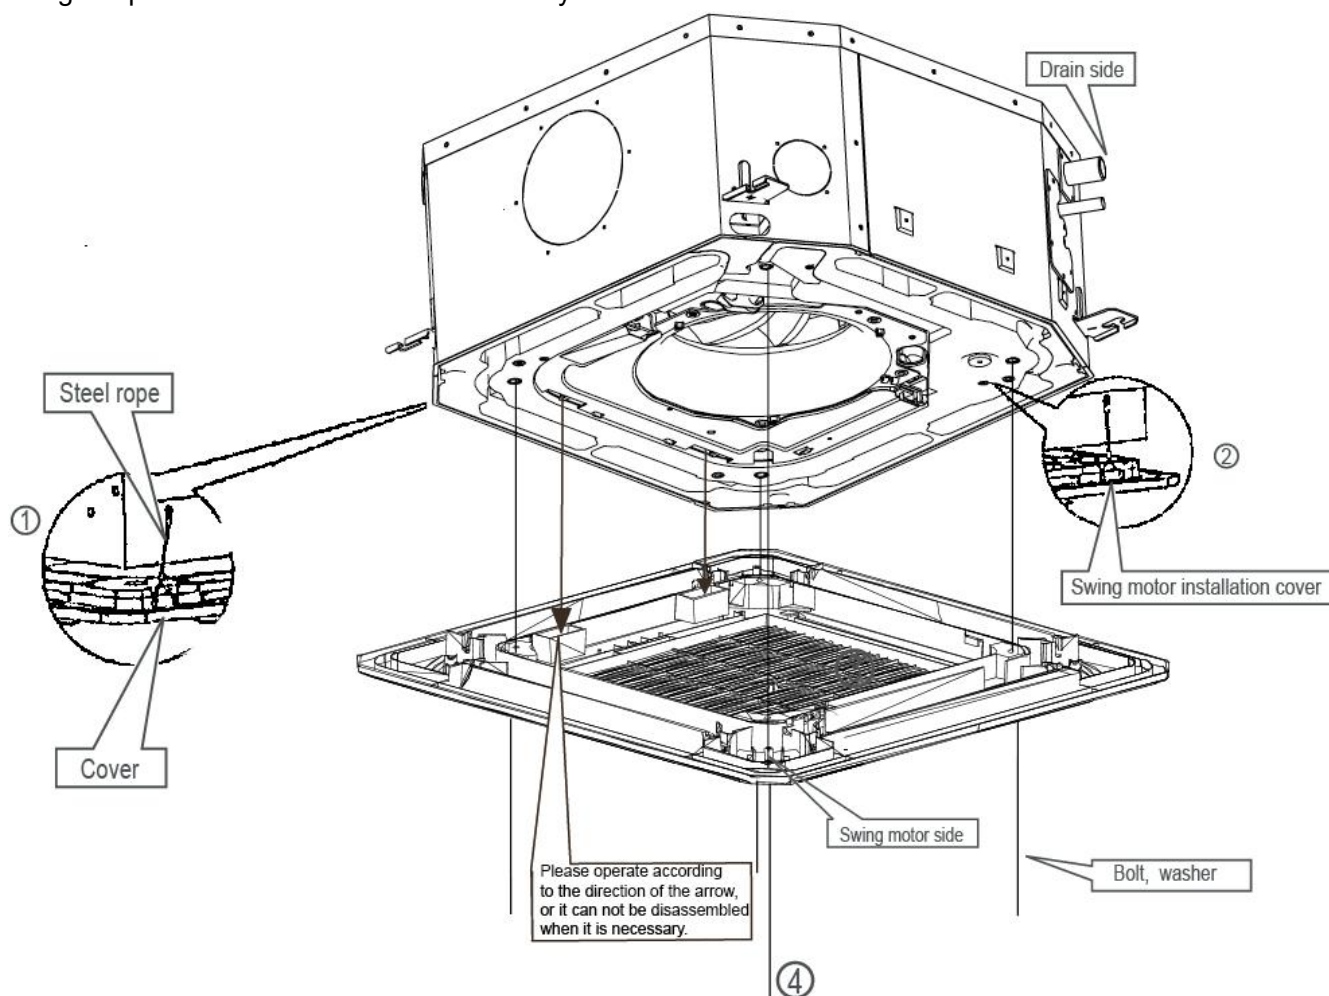

Tighten the screws under the panel hooks till the panel closely stick on the ceiling to avoid condensate water.

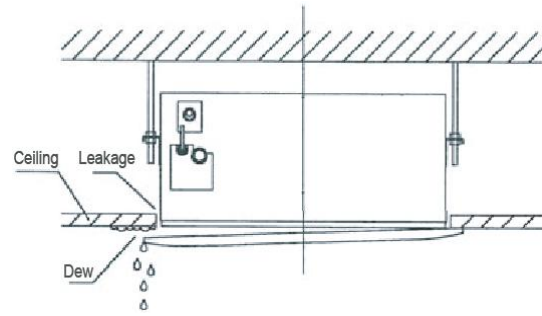
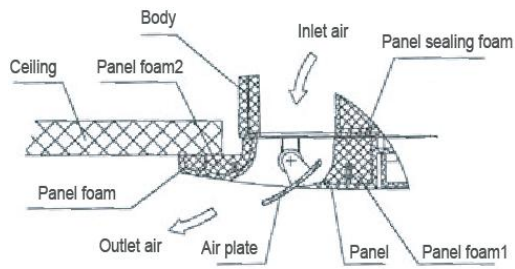


Hang the air-in grill to the panel, then connect the lead terminator of the swing motor and that of the control box with corresponding terminators on the body respectively.

Note: The panel shall be installed after the wiring connected.


3.2 Super-slim cassette indoor unit installation

3.2.1 Service space for indoor unit

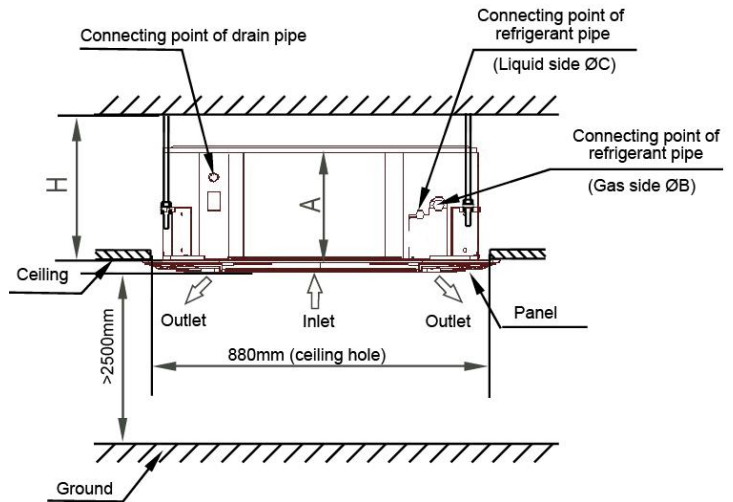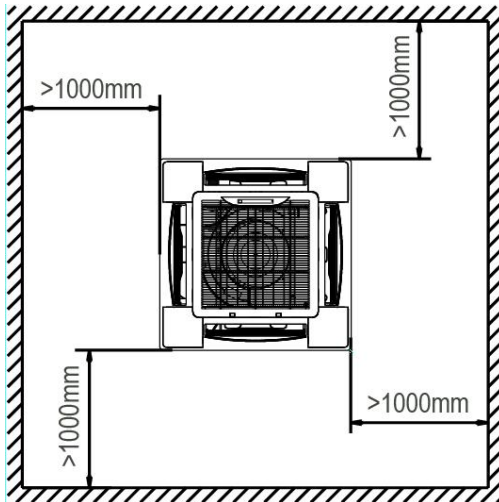

Model	A	H	Remark
18/24	205	>235	Cooling / Cooling & Heating
30~48	245	>275	Cooling / Cooling & Heating
60	287	>317	Cooling / Cooling & Heating

3.2.2 Bolt pitch

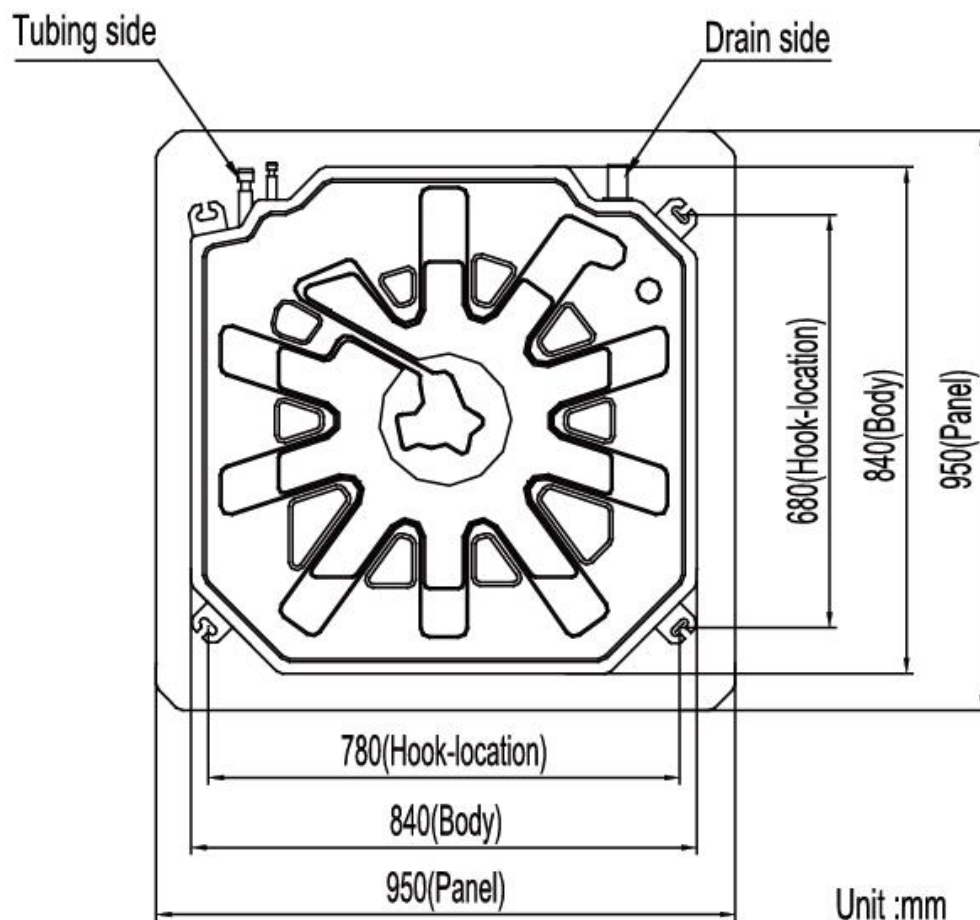

3.2.3 Install the pendant bolt

Select the position of installation hooks according to the hook holes positions showed in upper picture. Drill four holes of $\varnothing 12\text{mm}$, 45~50mm deep at the selected positions on the ceiling. Then embed the expansible hooks (fittings).




3.2.4 Install the main body


Make the 4 suspender through the 4 hanger of the main body to suspend it. Adjust the hexangular nuts on the four installation hooks evenly, to ensure the balance of the body. Use a leveling instrument to make sure the levelness of the main body is within $\pm 1^\circ$.



Adjust the position to ensure the gaps between the body and the four sides of ceiling are even. The body's lower part should sink into the ceiling for 10~12 mm. In general, L is half of the screw length of the installation hook.


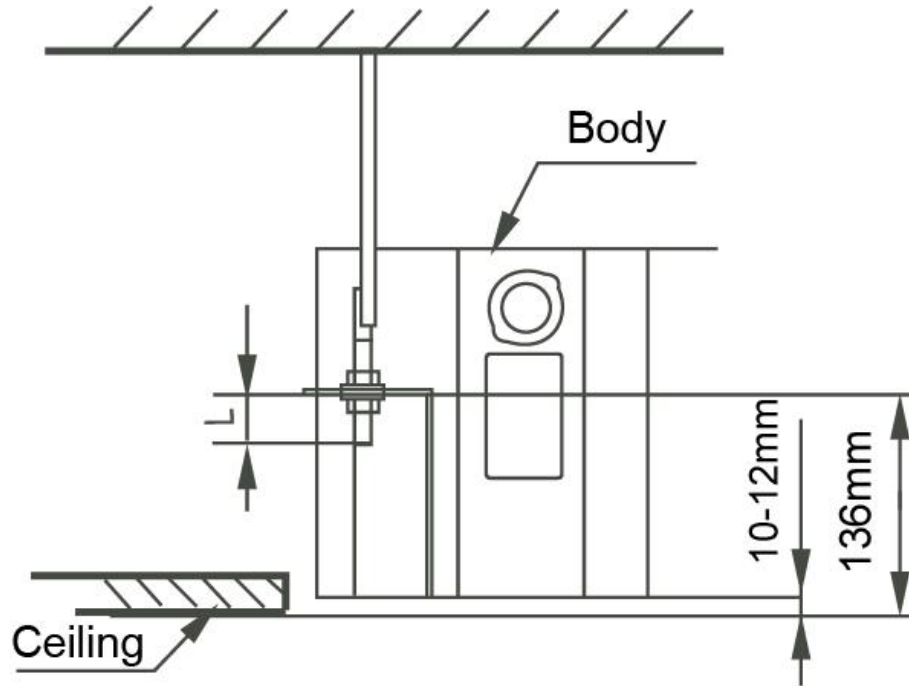


Locate the air conditioner firmly by wrenching the nuts after having adjusted the body's position well.

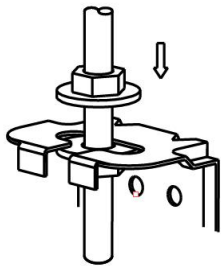


3.2.5 Install the panel


Remove the grille

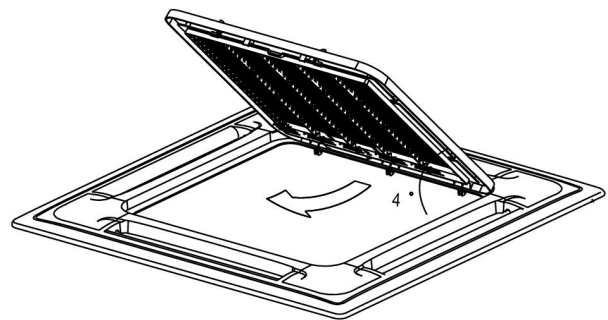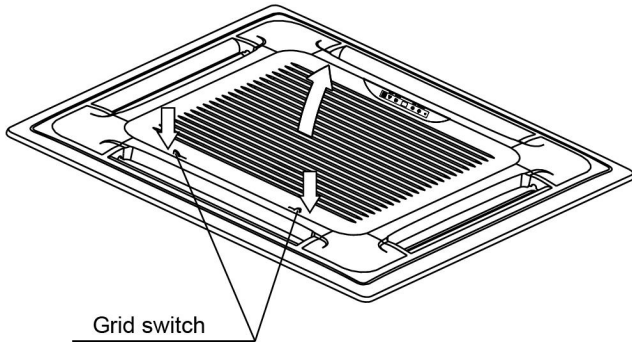


Remove the 4 corner covers.

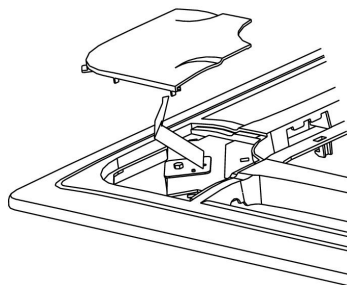


Hang the panel to the hooks on the mainbody. If the panel is with auto-lift grille, please watch the ropes lifting the grille, DO NOT make the ropes entwined or blocked.

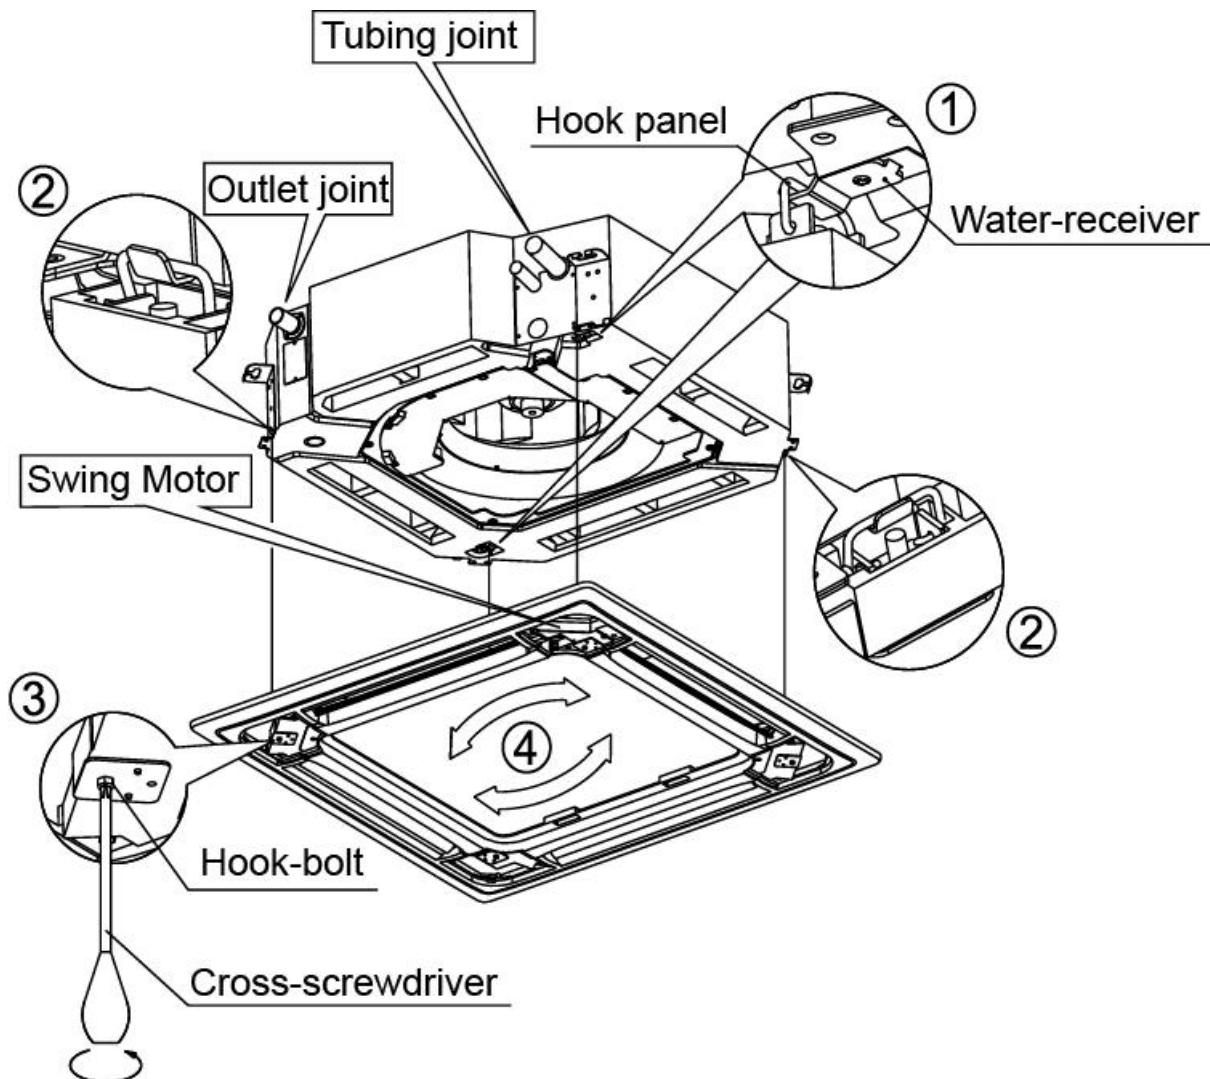


Tighten the screws under the panel hooks till the panel closely stick on the ceiling to avoid condensate water.

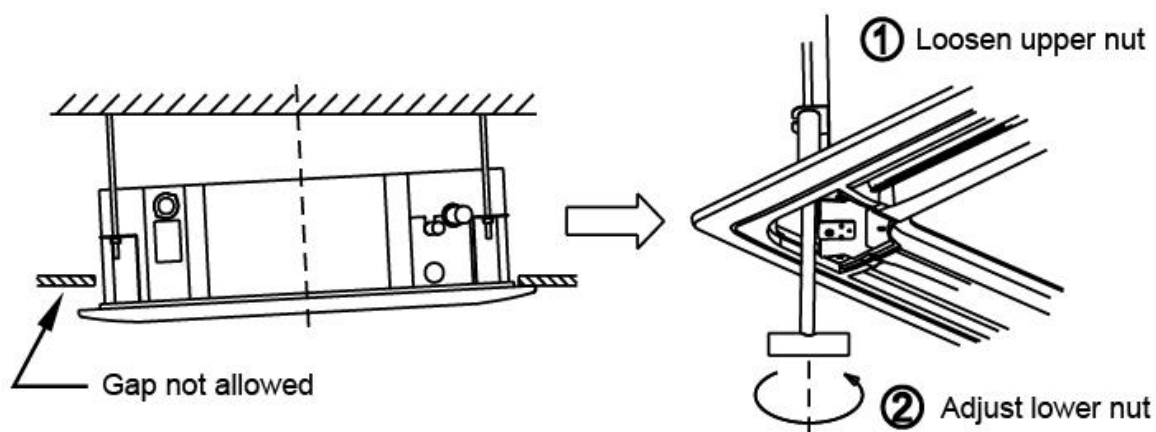

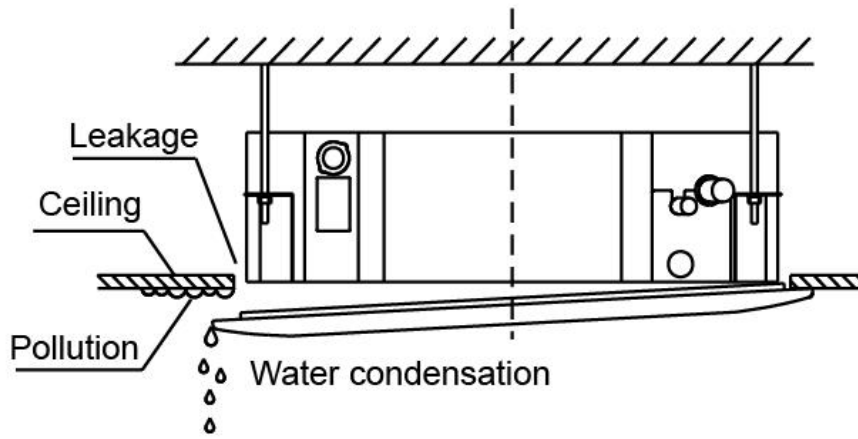

Hang the air-in grill to the panel, then connect the lead terminator of the swing motor and that of the control box with corresponding terminators on the body respectively.


Install the 4 corner covers back.

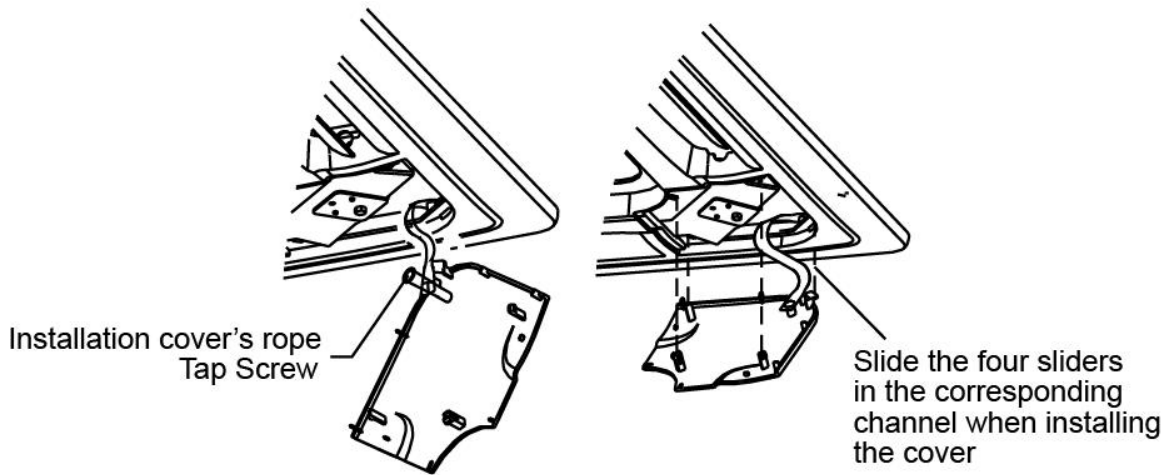


Note: The panel shall be installed after the wiring connected.

3.3 A5 duct indoor unit installation

3.3.1 Service space for indoor unit

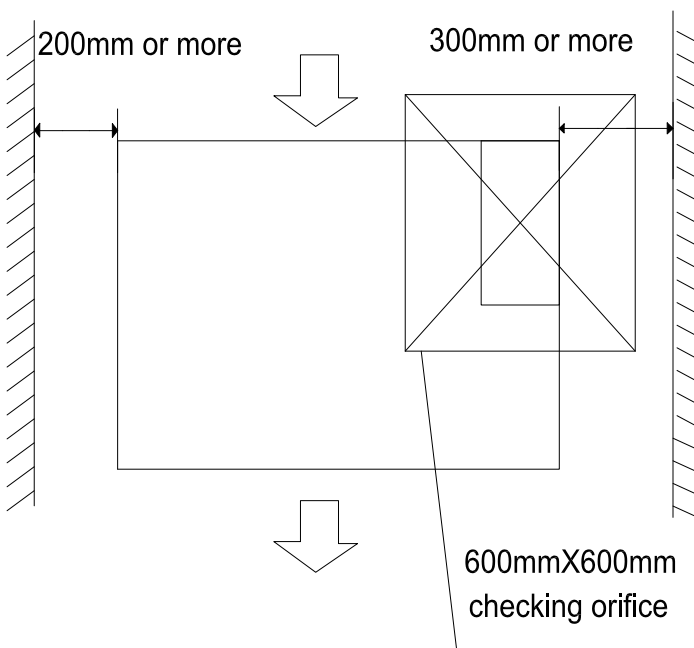

3.3.2 Bolt pitch

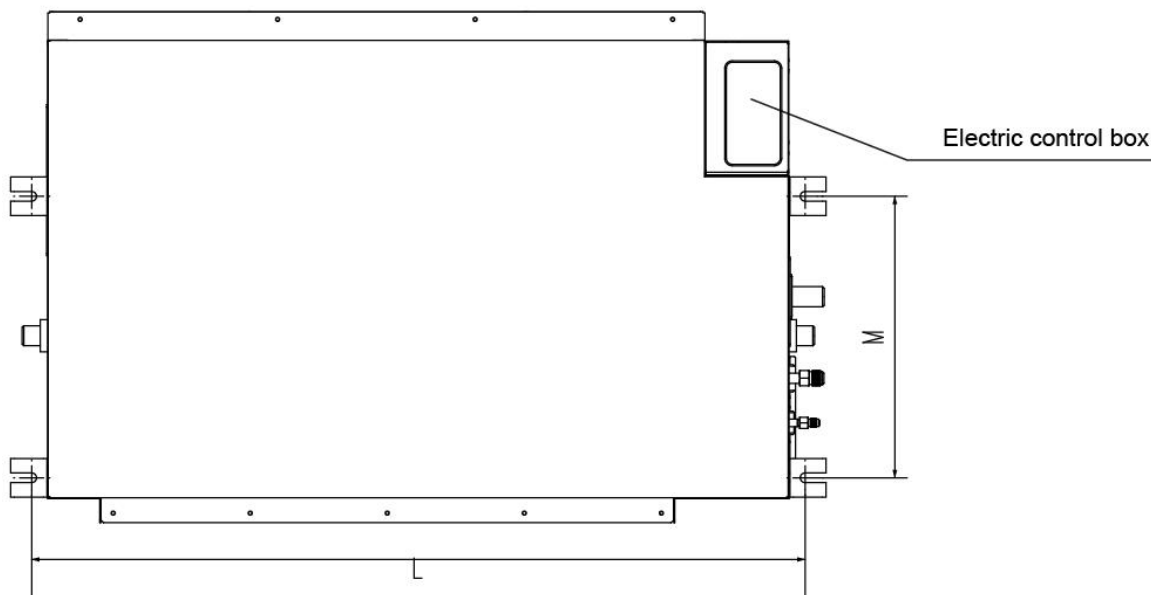

Capacity (KBtu)	Size of outline dimension mounted plug	
	L	M
9/12	740	350
18	960	350
24	960	350
30/36	1180	490
48/60	1240	500


3.3.3 Install the pendant bolt

Select the position of installation hooks according to the hook holes positions showed in upper picture. Drill four holes of $\varnothing 12\text{mm}$, 45~50mm deep at the selected positions on the ceiling. Then embed the expansible hooks (fittings).




3.3.4 Install the main body

Make the 4 suspender through the 4 hanger of the main body to suspend it. Adjust the hexangular nuts on the four installation hooks evenly, to ensure the balance of the body. Use a leveling instrument to make sure the levelness of the main body is within $\pm 1^\circ$.

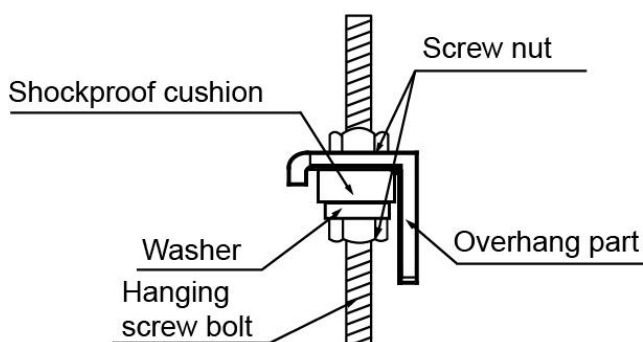


3.3.5 Install the air filter

Insert the air filter through the filter slot and fix it with 2 screws.

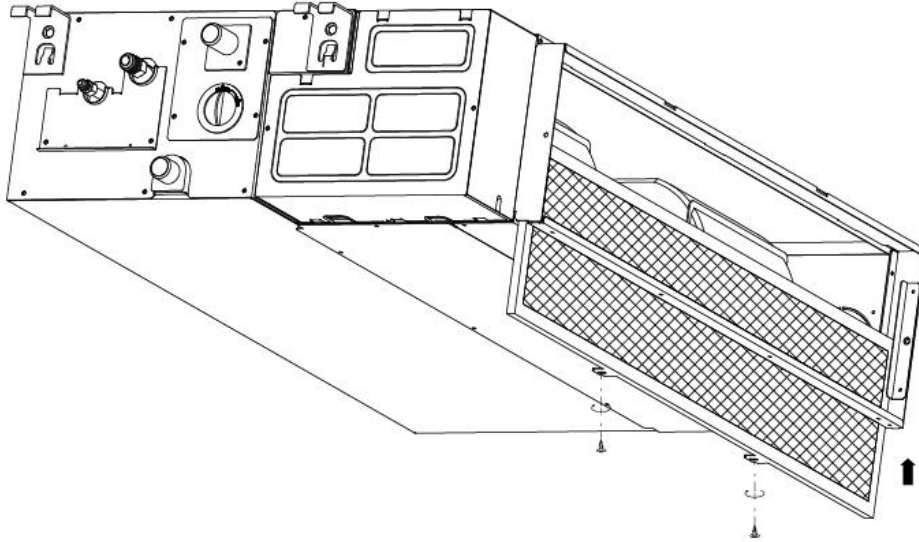


3.3.6 Install the air duct

Please design the air duct as below recommended picture

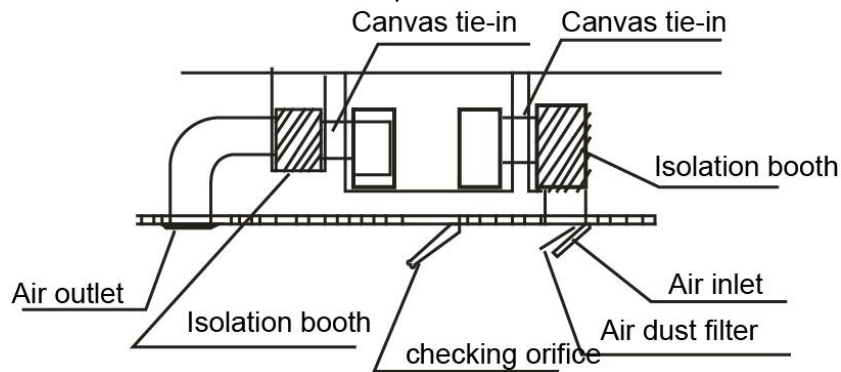


3.3.7 Change the air inlet direction


① Take off ventilation panel and flange, cut off the staples at side rail.

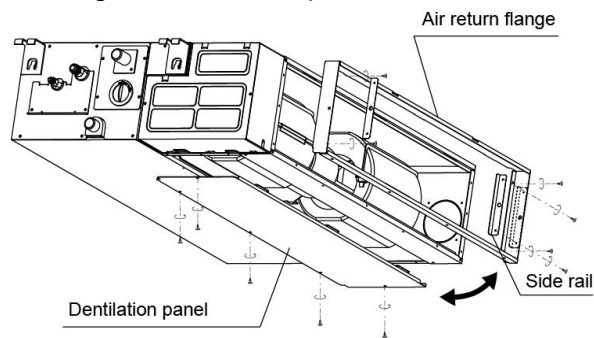


② Stick the attached seal sponge as per the indicating place in the following fig, and then change the mounting positions of air return panel and air return flange .

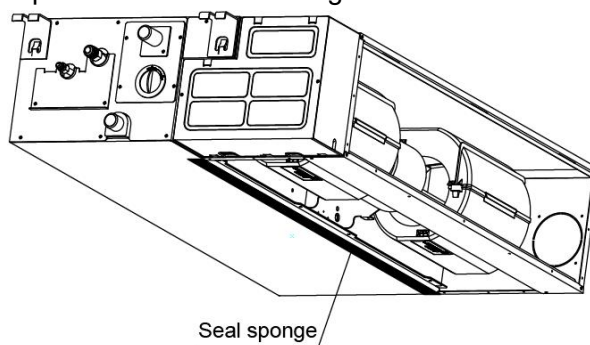

- ③ When install the filter mesh, please plug it into flange inclined from air return opening, and then push up.

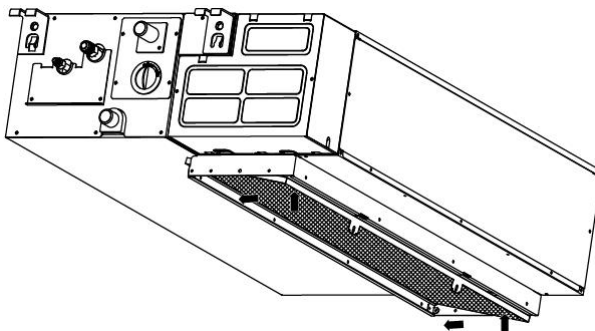


- ④ The installation has finish, upon filter mesh which fixing blocks have been insert to the flange positional holes.

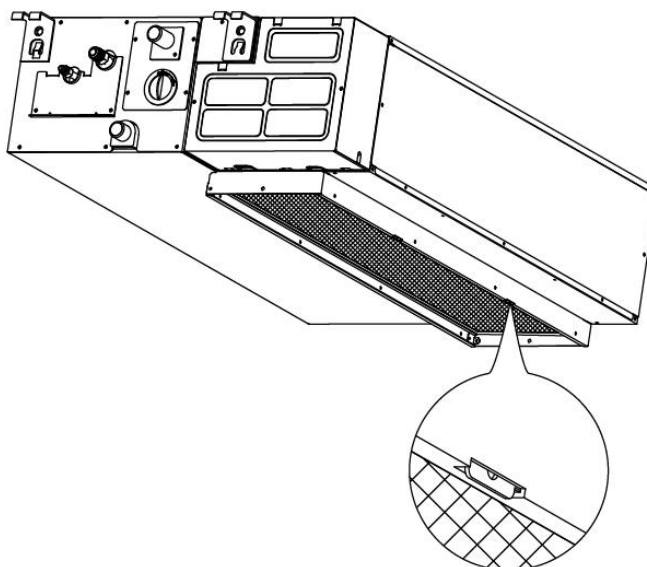


3.4 A6 duct indoor unit installation

3.4.1 Service space for indoor unit

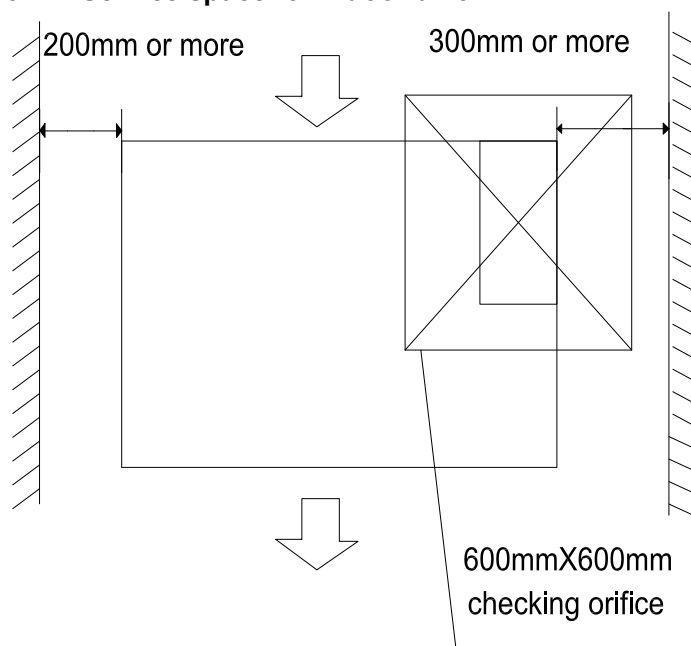


3.4.2 Bolt pitch

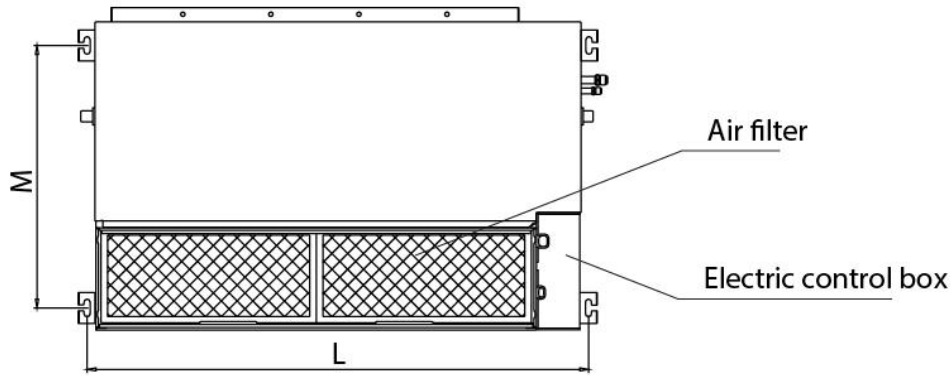


Capacity	Size of outline dimension mounted plug	
	L	M
18K	920	508
24K~36K	1140	598
48K~60K	1240	697

3.4.3 Hang indoor unit

1. Please refer to the upper data to locate the four positioning screw bolt hole on the ceiling. Be sure to mark the areas where ceiling hook holes will be drilled.
2. Carry out the pipe and line operation in the ceiling after finishing the installation of the main body. While choosing where to start the operation, determine the direction of the pipes to be drawn out. Especially in case there is a ceiling, position the refrigerant pipes, drain pipes, indoor & outdoor lines to the connection places before hanging up the machine.
3. The installation of hanging screw bolts.
 - Cut off the roof beam.
 - Strengthen the place that has been cut off, and consolidate the roof beam.
4. After the selection of installation location position the refrigerant pipes, drain pipes, indoor & outdoor wires to the connection places before hanging up the machine.
5. Drill 4 holes 10cm (4") deep at the ceiling hook positions in the internal ceiling. Be sure to hold the drill at a 90° angle to the ceiling.
6. Secure the bolt using the included washers and nuts.
7. Install the four suspension bolts.
8. Mount the indoor unit. You will need two people to lift and secure it. Insert suspension bolts into the unit's hanging holes. Fasten them using the included washers and nuts

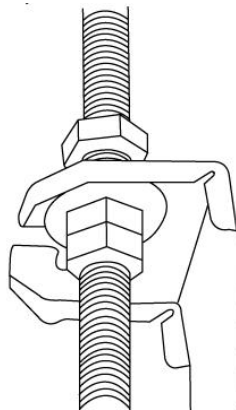


9. Overhang the indoor unit onto the hanging screw bolts with block. Position the indoor unit in a flat level by using the level indicator, unless it may cause leakage.

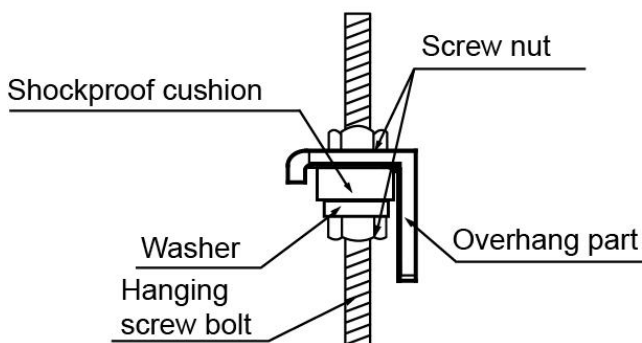

Note: Confirm the minimum drain tilt is 1/100 or more.

3.4.4 Duct and accessories installation

1. Install the filter(optional) according to air inlet size.
2. Install the canvas tie-in between the body and duct.
3. Air inlet and air outlet duct should be apart far enough to avoid air passage short-circuit.
4. Recommended duct connection.

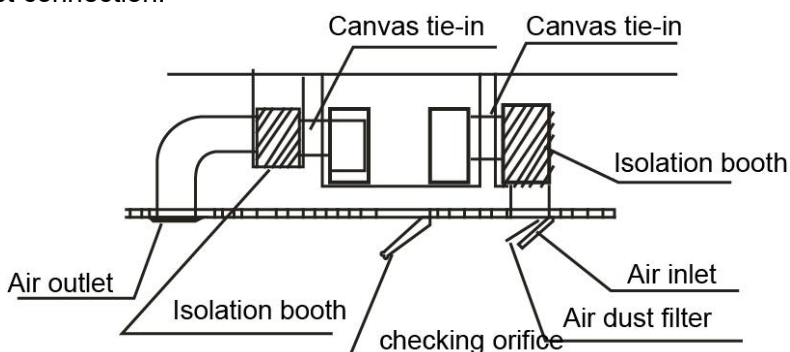

5. Please refer to the following static pressure to install..


Model(KBtu/h)	Static Pressure(Pa)
18~30	0~80
36	0~100
48~60	0~160

Change the fan motor static pressure corresponding to external duct static pressure.


- NOTE: 1. Do not put the connecting duct weight on the indoor unit.
 2. When connecting duct, use inflammable canvas tie-in to prevent vibrating.
 3. Insulation foam should be wrapped outside the duct to avoid condensate and internal duct underlayer shall be added to reduce the noise for special requirement.

3.4.7 Adjust the air inlet direction(From rear side to under-side.)


- ① Take off ventilation panel and flange,

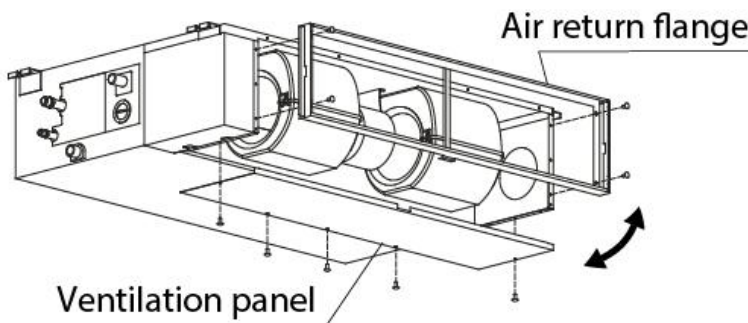

- ② Change the mounting positions of ventilation panel and air return flange .

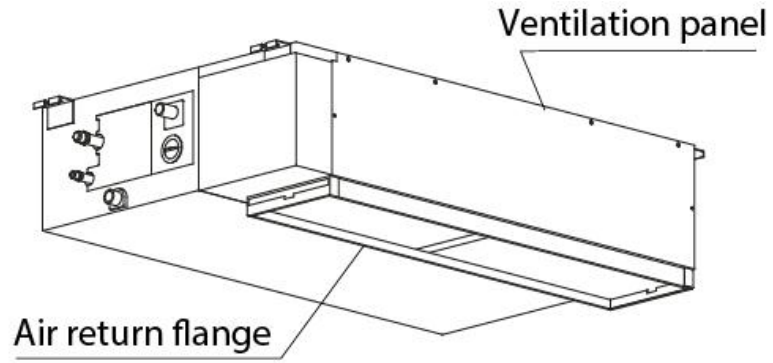

③ When install the filter mesh, please plug it into flange as shown in figure below.

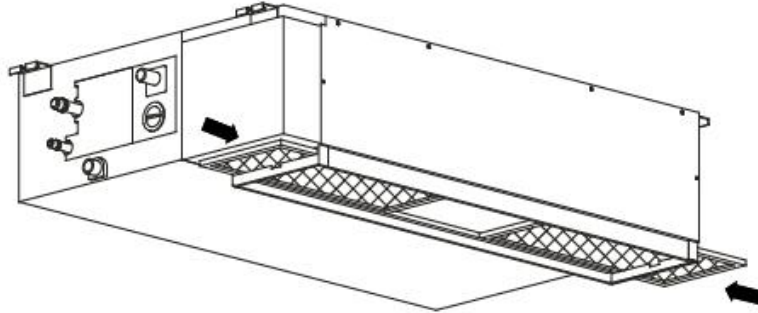


NOTE: All the figures in this manual are for explanation purpose only. They may be slightly different from the air conditioner you purchased.


The actual unit shall prevail.

3.5 HESP duct indoor unit installation

3.1 Service space for indoor unit

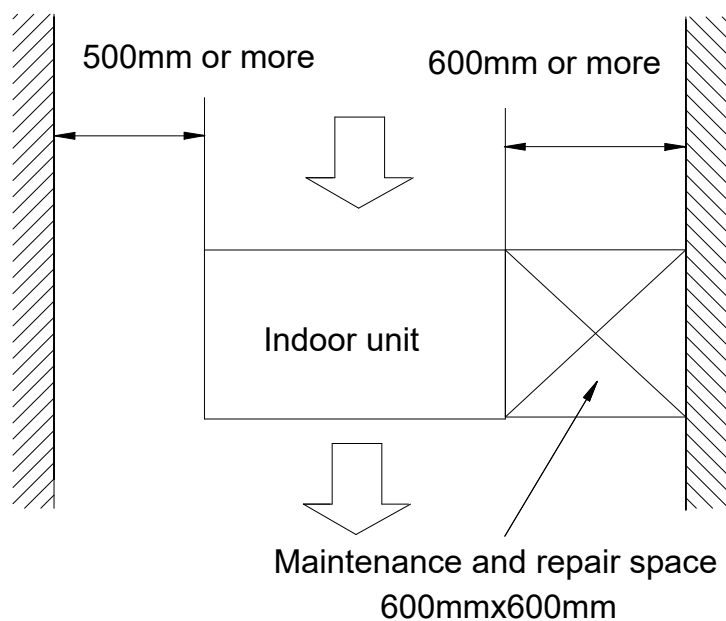

3.2 Bolt pitch

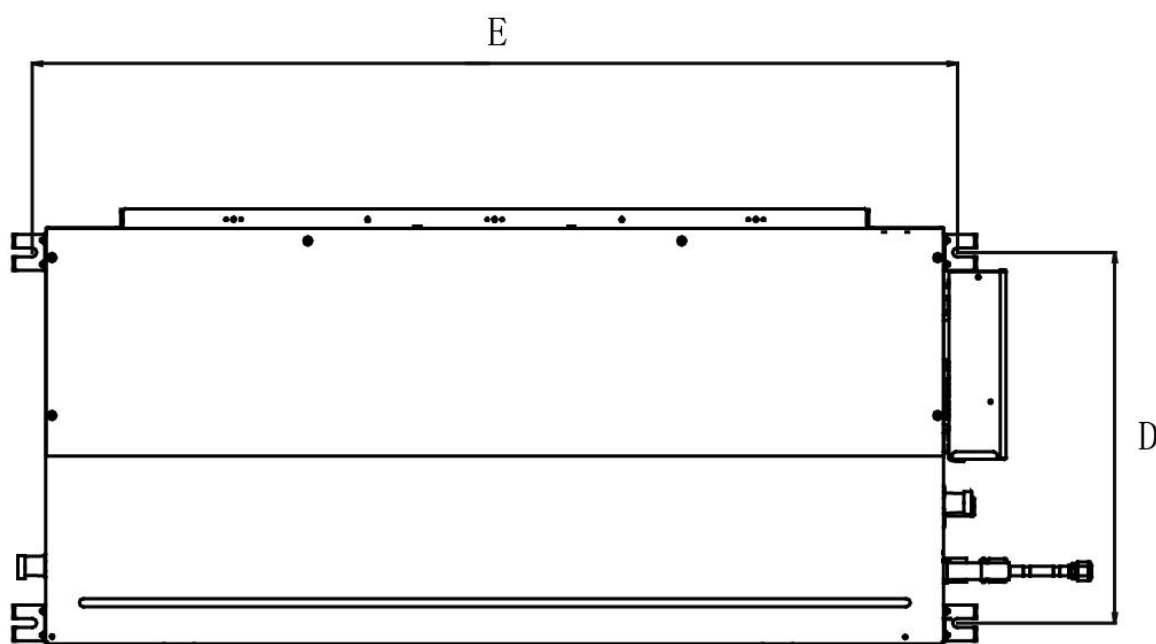

Capacity (KBtu)	Size of mounted lug	
	D	E
24	397	936
36	397	1146
48/60	495	1236


3.3 Install the pendant bolt

Select the position of installation hooks according to the hook holes positions showed in upper picture. Drill four holes of $\text{Ø}12\text{mm}$, 45~50mm deep at the selected positions on the ceiling. Then embed the expansible hooks (fittings).




3.4 Install the main body

Make the 4 suspender through the 4 hanger of the main body to suspend it. Adjust the hexangular nuts on the four installation hooks evenly, to ensure the balance of the body. Use a leveling instrument to make sure the levelness of the main body is within $\pm 1^\circ$.

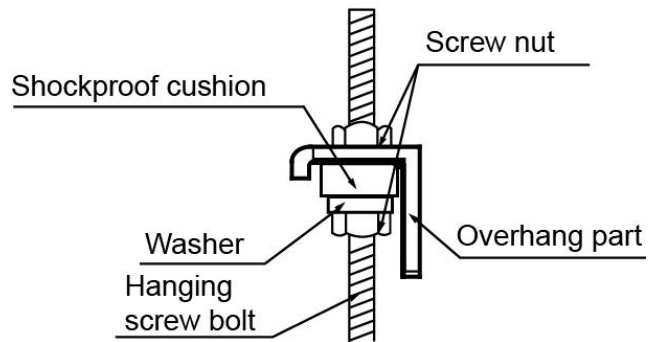


3.5 Install the air duct

Please design the air duct as below recommended picture

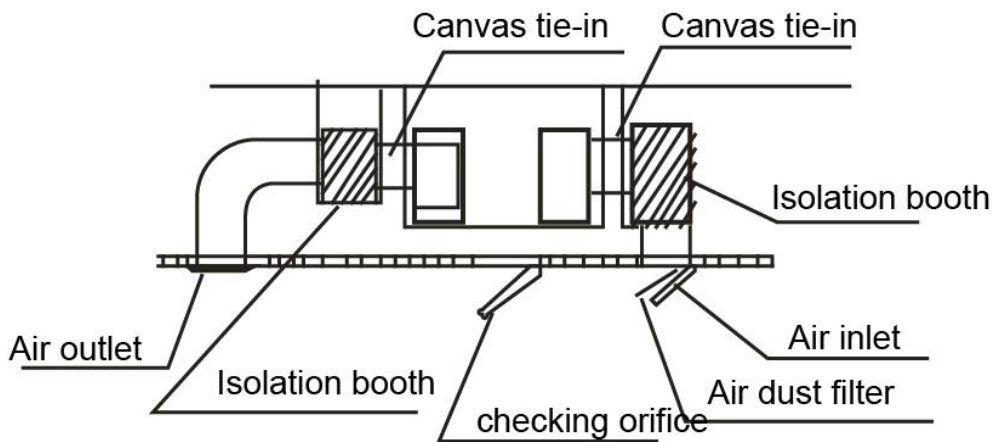


3.6 Ceiling & floor indoor unit installation

3.6.1 Service space for indoor unit

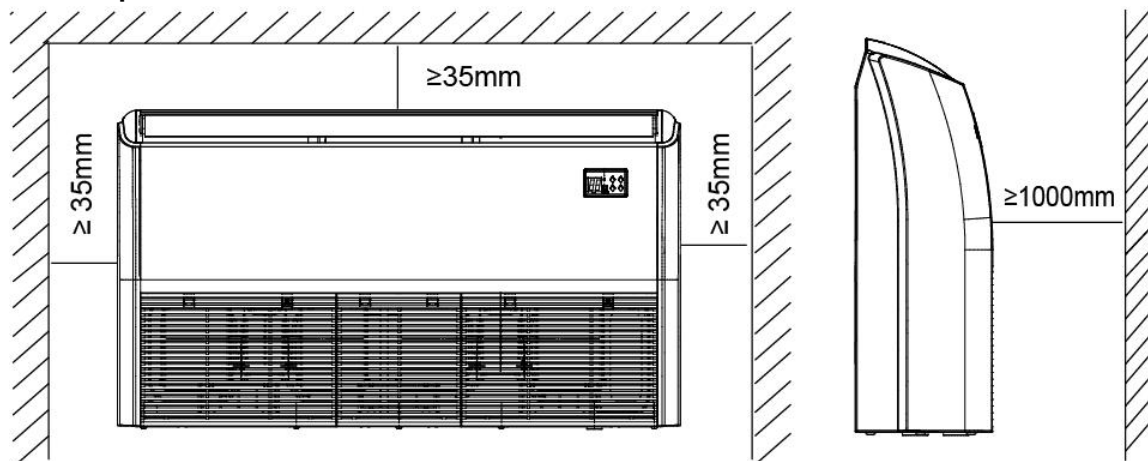


3.6.2 Bolt pitch

① Ceiling installation

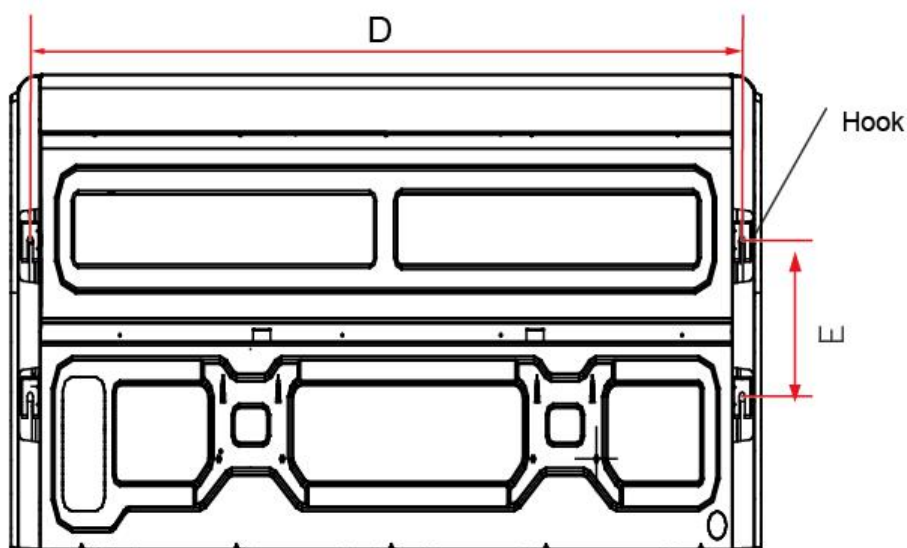

Capacity (Btu/h)	D	E
12-24K	983	220
30~36K	1200	220
48-60K	1565	220

② Wall-mounted installation

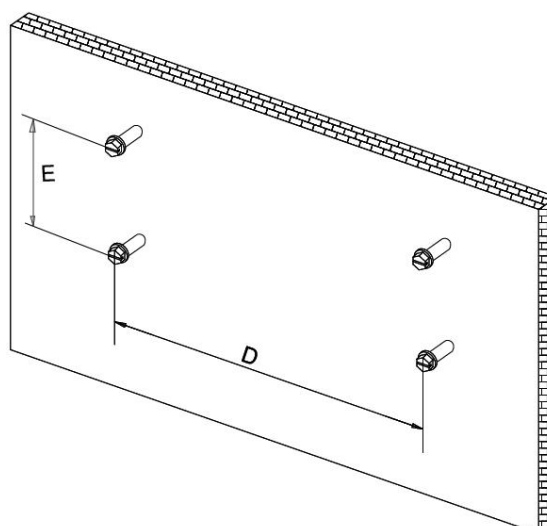

3.6.3 Install the pendant bolt


① Ceiling installation

Select the position of installation hooks according to the hook holes positions showed in upper picture. Drill four holes of $\text{Ø}12\text{mm}$, 45~50mm deep at the selected positions on the ceiling. Then embed the expansible hooks (fittings).



② Wall-mounted installation


Install the tapping screws onto the wall.(Refer to picture below)

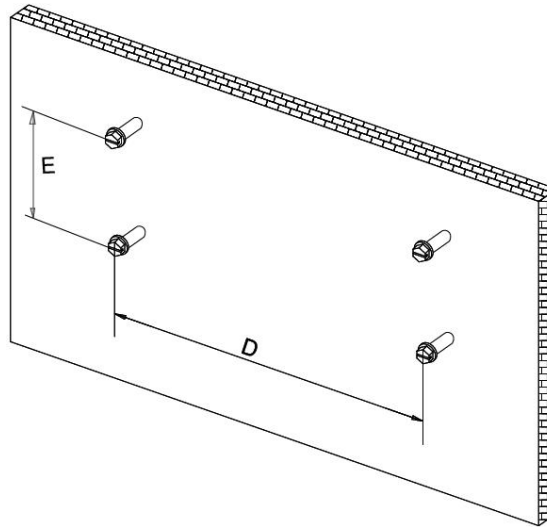


3.6.4 Install the main body

① Ceiling installation (The only installation method for the unit with drain pump)


Remove the side board and the grille.

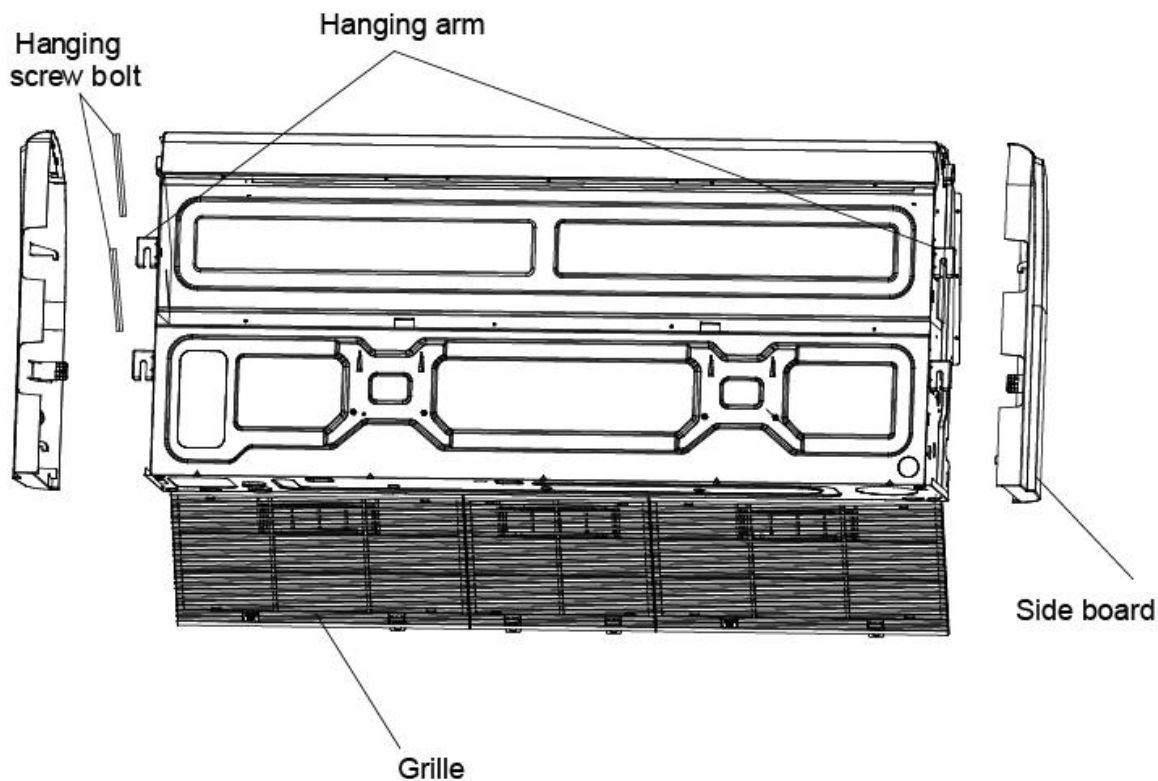


Locate the hanging arm on the hanging screw bolt. Prepare the mounting bolts on the unit.

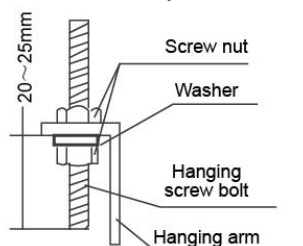



Put the side panels and grilles back.

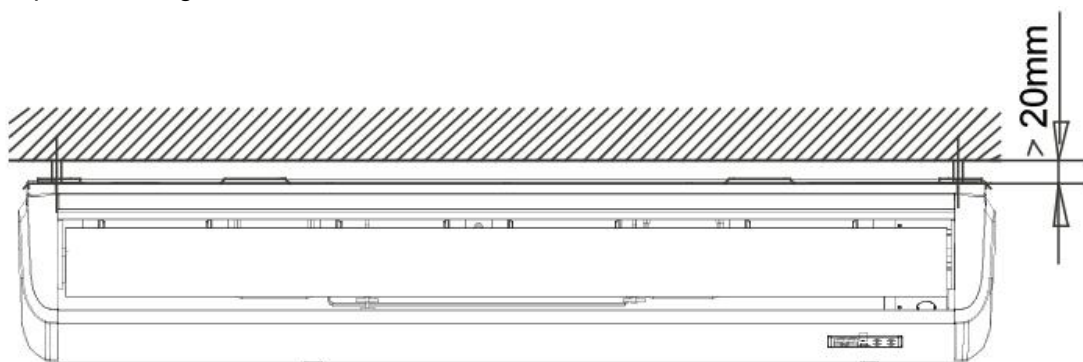

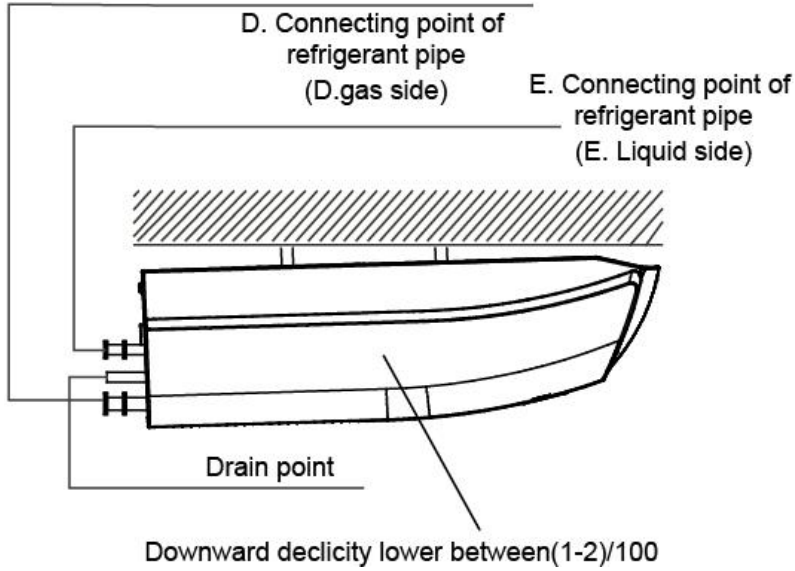

② Wall-mounted installation

Hang the indoor unit by insert the tapping screws into the hanging arms on the main unit. (The bottom of body can touch with floor or suspended, but the body must install vertically.)

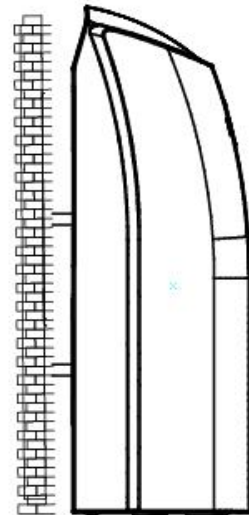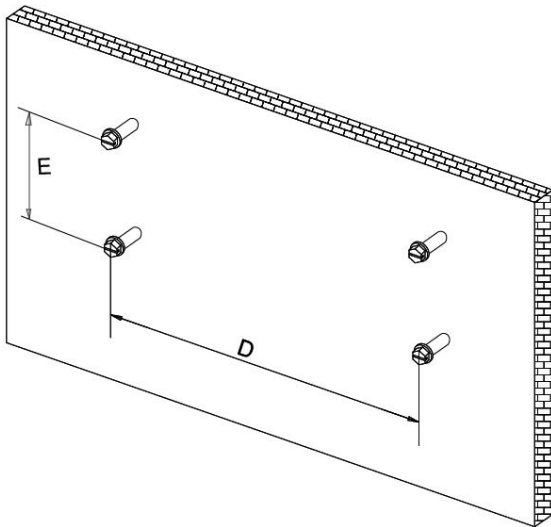


3.7 GA floor standing indoor unit installation

3.7.1 Service space for indoor unit

- a. A place which provides the spaces around the indoor unit as required above in the diagram.
- b. A place where is no obstacle near the inlet and outlet area.
- c. A place which can bear the weight of the indoor unit.
- d. A place which allows the air filter to be removed downward.
- e. A place where the reception range is not exposed to direct sunlight.
- f. In the center of the room where possible.

- 3.7.1.1 Please stand the unit in hard and flat ground;
Please reserve space for installation and maintenance.

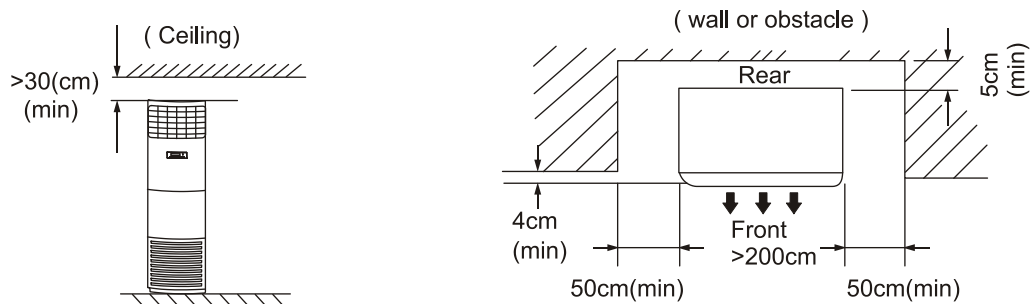


3.11.2 Installing

3.7.2.1. Anti-falling;

To prevent the indoor unit from falling, you must:


- Pay full attention to the unit because its long outer shape makes it easy to fall;
- Firmly fix the unit to the wall or in the ground to avoid accidental falling.

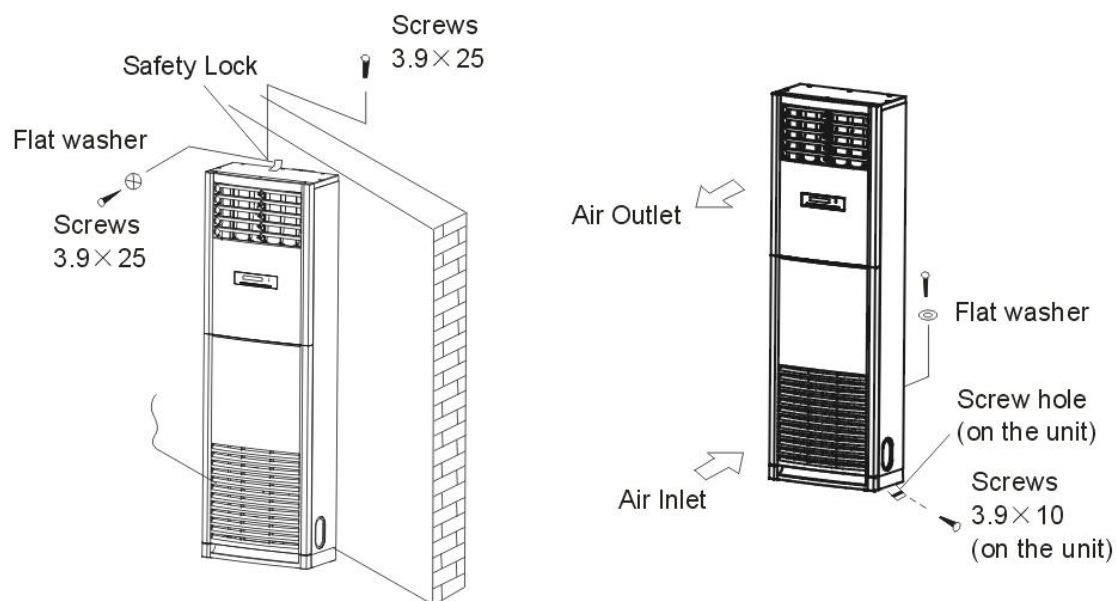

3.7.2.2. Dismounting the lower front panel

Please take off the air-inlet grid before connecting the pipes/wires.


Pull down the two knobs on the grille, take off the two screws, then the air-inlet grille goes free.

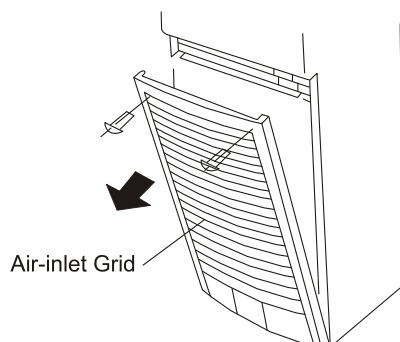



3.7.2.3. Take the Pipe Clip off before connecting the pipes and wiring; fit it when these finished.

Use accessories to connect the pipes/wires on both sides and back side.


Pipe/wire-hole position on back side

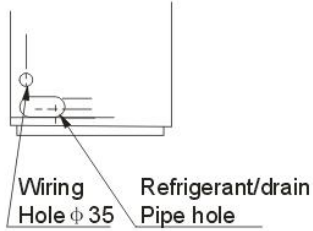

Pipe/wire-hole position on the bottom

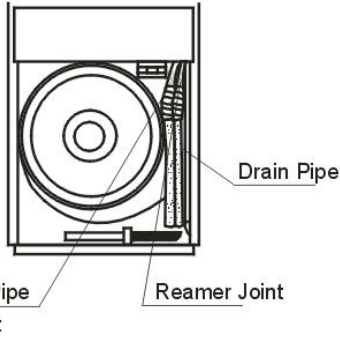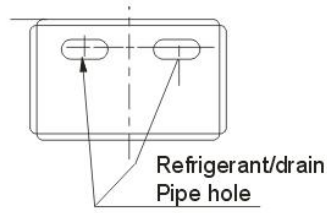

Pipe/wire-hole positions on both sides

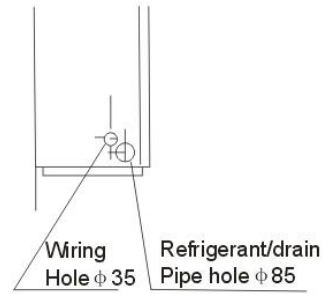


3.8 M & J2 floor standing indoor unit installation

3.8.1 Service space for indoor unit

- A place which provides the spaces around the indoor unit as required above in the diagram.
- A place where is no obstacle near the inlet and outlet area.
- A place which can bear the weight of the indoor unit.
- A place which allows the air filter to be removed downward.
- A place where the reception range is not exposed to direct sunlight.
- In the center of the room where possible.

3.8.1.1 Please stand the unit in hard and flat ground;

Please reserve space for installation and maintenance.

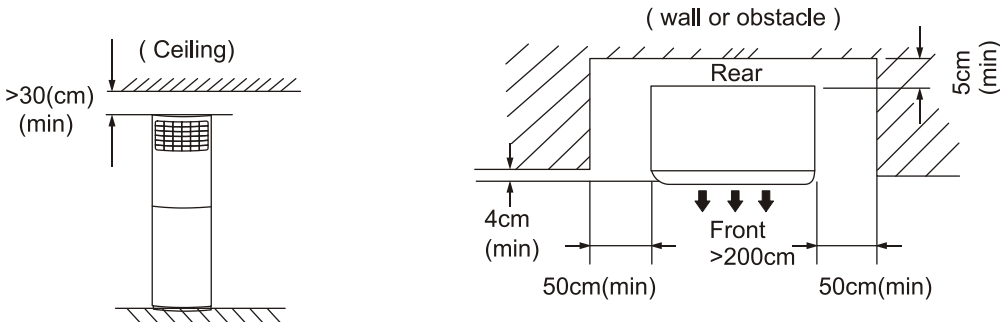


3.8.2 Installing

3.8.2.1. Anti-falling;

To prevent the indoor unit from falling, you must:


- Pay full attention to the unit because its long outer shape makes it easy to fall;
- Firmly fix the unit to the wall or in the ground to avoid accidental falling.

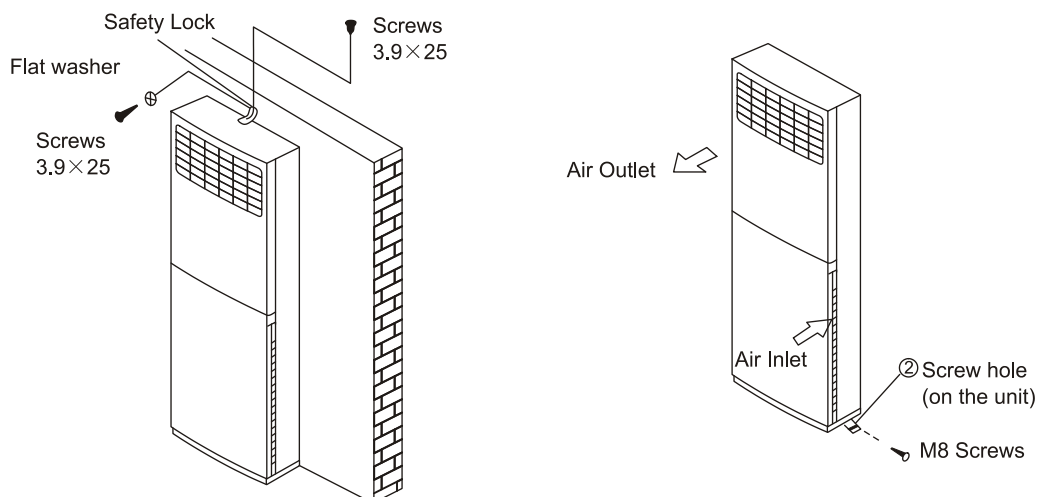

3.8.2.2. Dismounting the air-inlet grid


Please take off the air-inlet grid before connecting the pipes/wires.

The grid is hitched by a loop inside. To dismount the air-inlet grid, hold both sides of the grid and pull it up, let it slant downwards until the loop become straight. Then removing the screws fastened the loop with the grid, and the grid goes free.

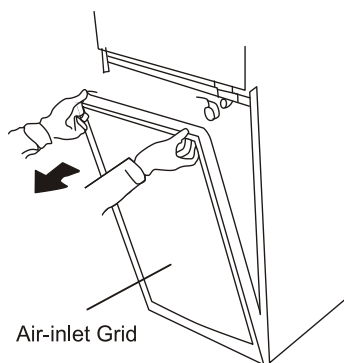

3.8.2.3. Take the Pipe Clip off before connecting the pipes and wiring; fit it when these finished.

Use accessories to connect the pipes/wires on both sides and back side.

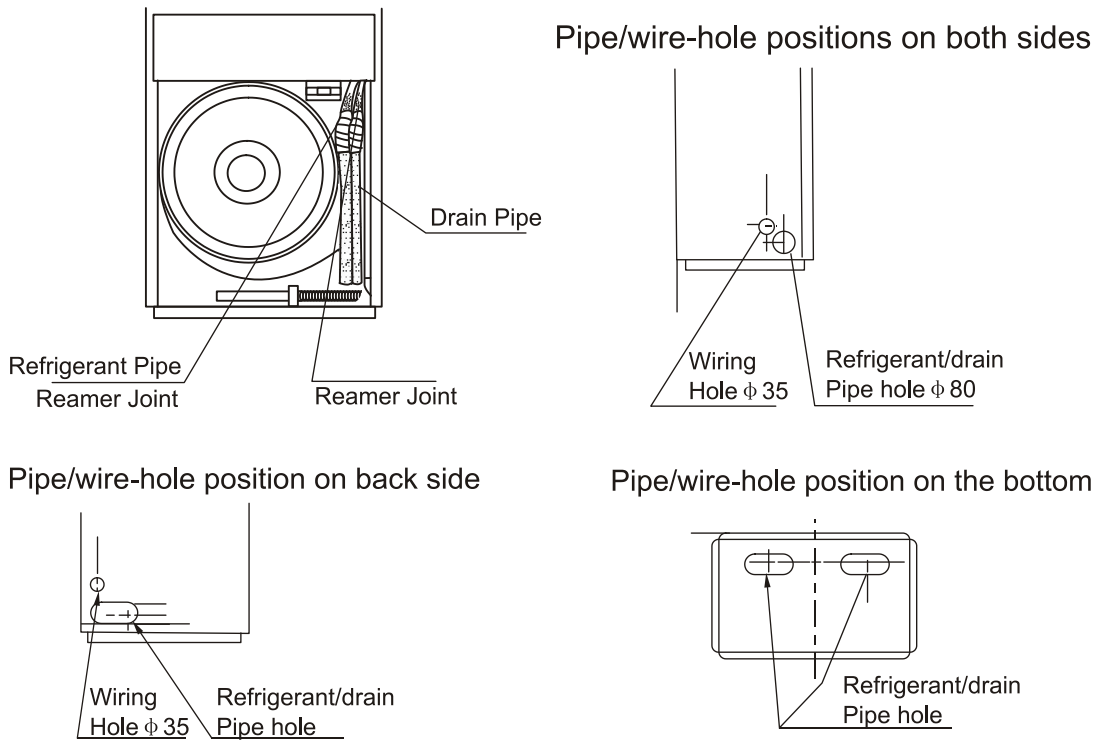


3.9 S2 floor standing indoor unit installation

3.9.1 Service space for indoor unit

- A place which provides the spaces around the indoor unit as required above in the diagram.
- A place where is no obstacle near the inlet and outlet area.
- A place which can bear the weight of the indoor unit.
- A place which allows the air filter to be removed downward.
- A place where the reception range is not exposed to direct sunlight.
- In the center of the room where possible.

3.9.1.1 Please stand the unit in hard and flat ground;

Please reserve space for installation and maintenance.

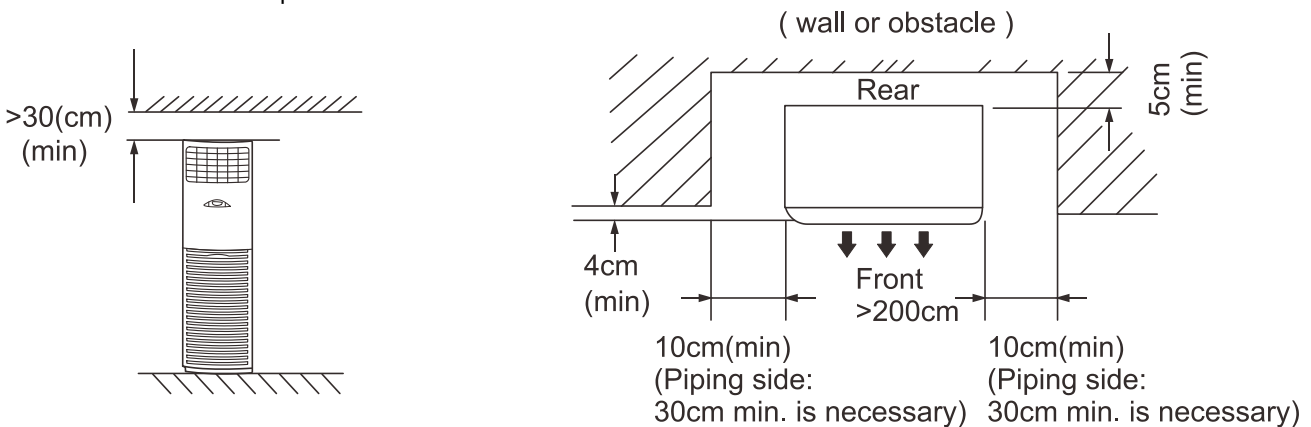


3.11.2 Installing

3.9.2.1. Anti-falling;

To prevent the indoor unit from falling, you must:


- Pay full attention to the unit because its long outer shape makes it easy to fall;
- Firmly fix the unit to the wall or in the ground to avoid accidental falling.

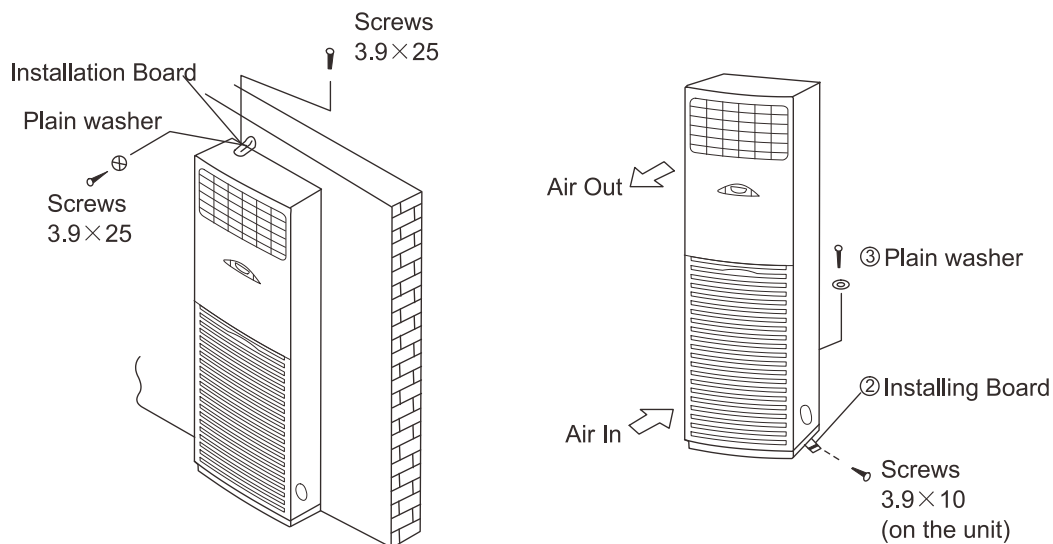

3.9.2.2. Dismounting the lower front panel

Please take off the air-inlet grid before connecting the pipes/wires.


Pull down the two knobs on the grille, take off the two screws, then the air-inlet grille goes free.

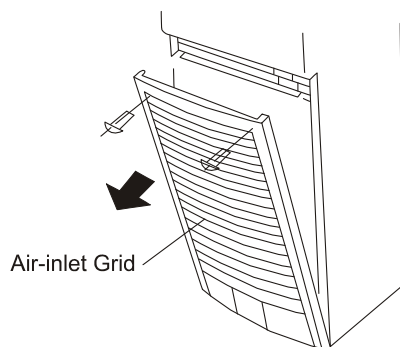


3.9.2.3. Take the Pipe Clip off before connecting the pipes and wiring; fit it when these finished.


Use accessories to connect the pipes/wires on both sides and back side.

Pipe/wire-hole position on back side

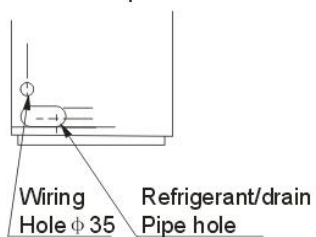

Pipe/wire-hole position on the bottom

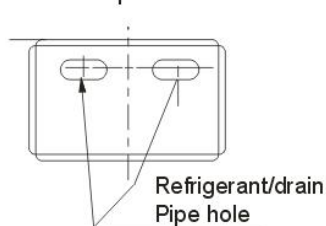

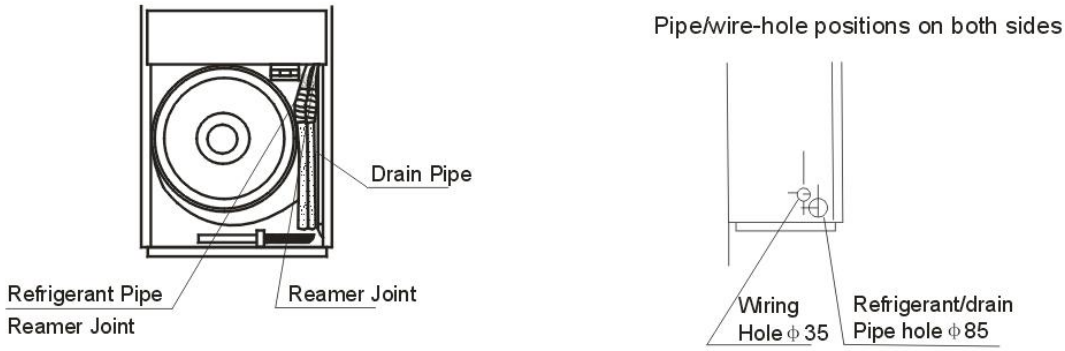


3.10 S4 floor standing indoor unit installation

3.11.1 Service space for indoor unit

- A place which provides the spaces around the indoor unit as required above in the diagram.
- A place where is no obstacle near the inlet and outlet area.
- A place which can bear the weight of the indoor unit.
- A place which allows the air filter to be removed downward.
- A place where the reception range is not exposed to direct sunlight.
- In the center of the room where possible.

- 3.10.1.1 Please stand the unit in hard and flat ground;
Please reserve space for installation and maintenance.

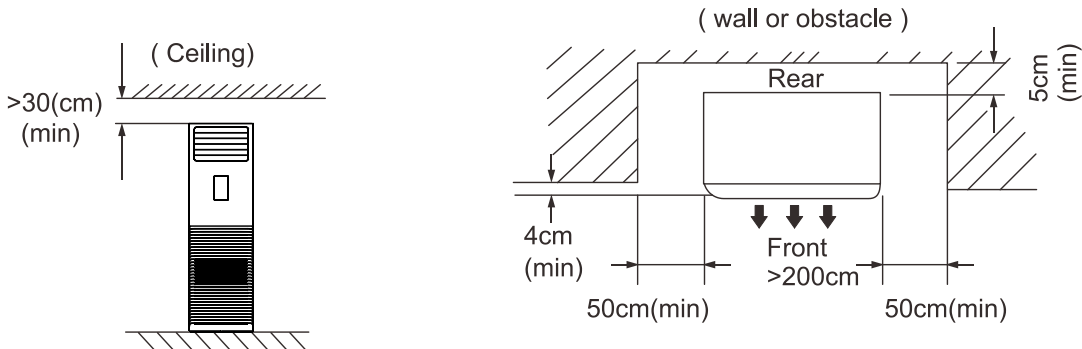


3.11.2 Installing

3.10.2.1. Anti-falling;

To prevent the indoor unit from falling, you must:


- Pay full attention to the unit because its long outer shape makes it easy to fall;
- Firmly fix the unit to the wall or in the ground to avoid accidental falling.

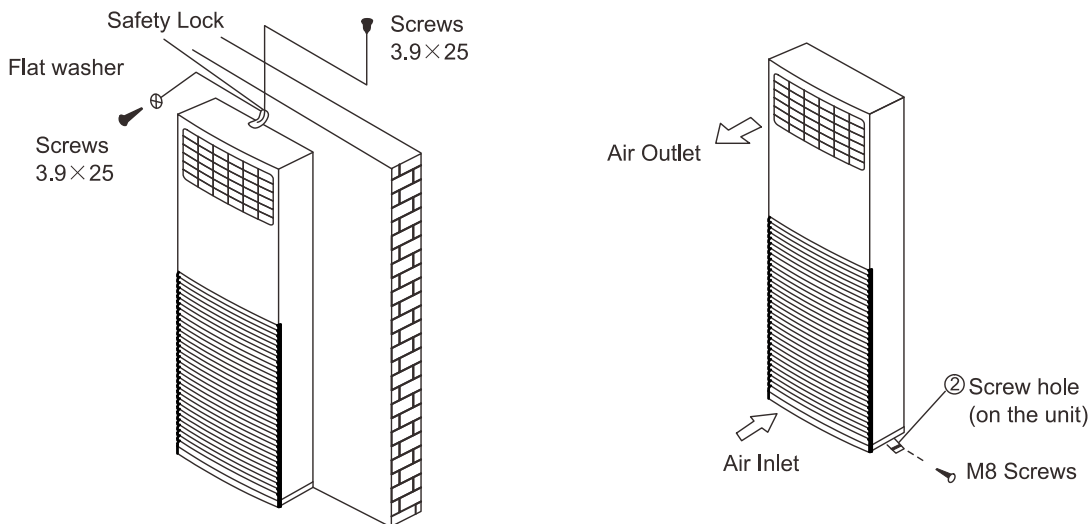

3.10.2.2. Dismounting the lower front panel

Please take off the air-inlet grid before connecting the pipes/wires.


Pull down the two knobs on the grille, take off the two screws, then the air-inlet grille goes free.

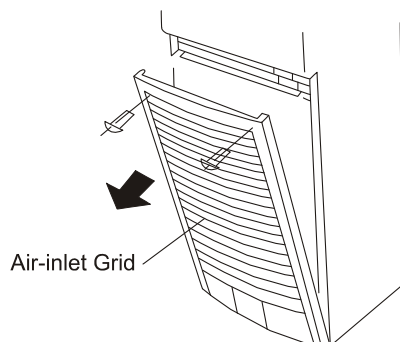



3.10.2.3. Take the Pipe Clip off before connecting the pipes and wiring; fit it when these finished.

Use accessories to connect the pipes/wires on both sides and back side.


Pipe/wire-hole position on back side

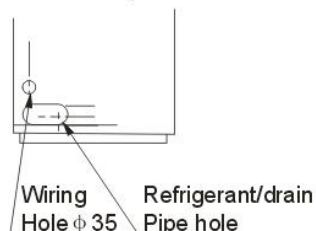

Pipe/wire-hole position on the bottom

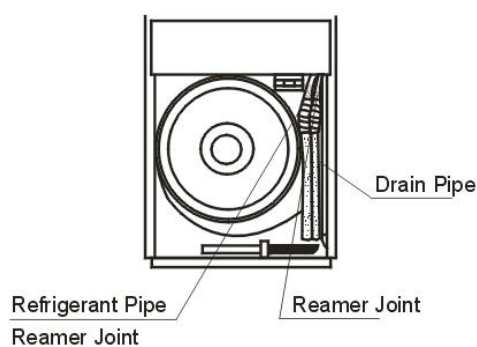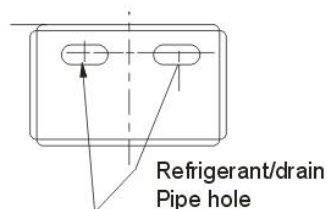

Pipe/wire-hole positions on both sides

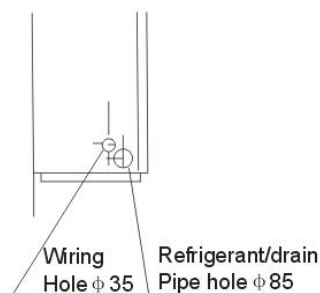


3.11 E2 floor standing indoor unit installation

3.11.1 Service space for indoor unit

- A place which provides the spaces around the indoor unit as required above in the diagram.
- A place where is no obstacle near the inlet and outlet area.
- A place which can bear the weight of the indoor unit.
- A place which allows the air filter to be removed downward.
- A place where the reception range is not exposed to direct sunlight.
- In the center of the room where possible.

3.11.1.1 Please stand the unit in hard and flat ground;

Please reserve space for installation and maintenance.

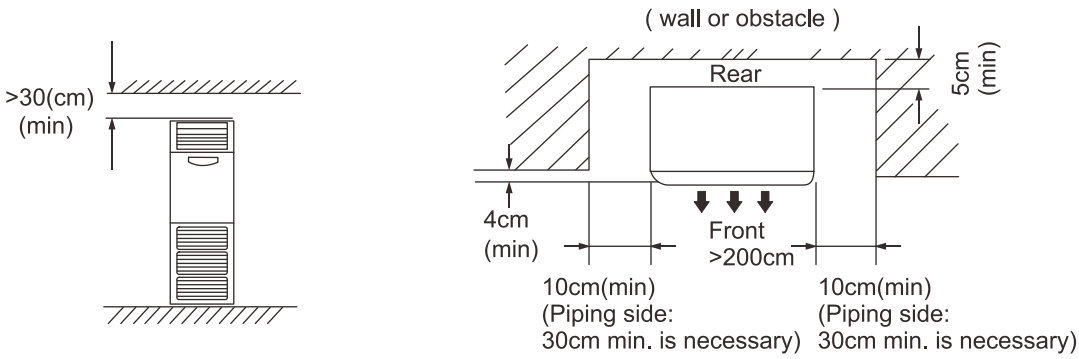


3.11.2 Installing

3.11.2.1. Anti-falling;

To prevent the indoor unit from falling, you must:


- a. Pay full attention to the unit because its long outer shape makes it easy to fall;
- b. Firmly fix the unit to the wall or in the ground to avoid accidental falling.

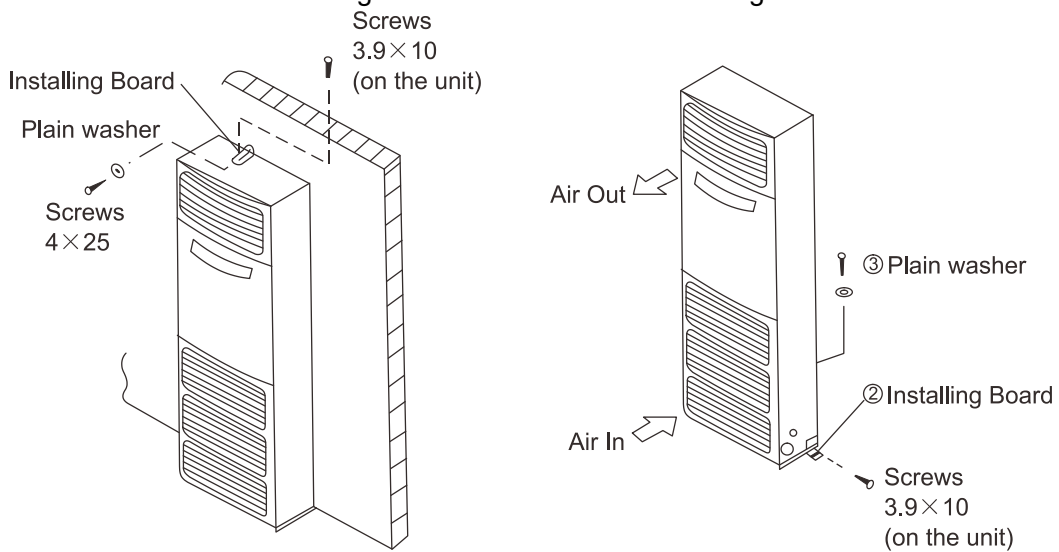

3.11.2.2. Dismounting the lower front panel

Please take off the air-inlet grid before connecting the pipes/wires.


Pull down the two knobs on the grille, take off the two screws, then the air-inlet grille goes free.

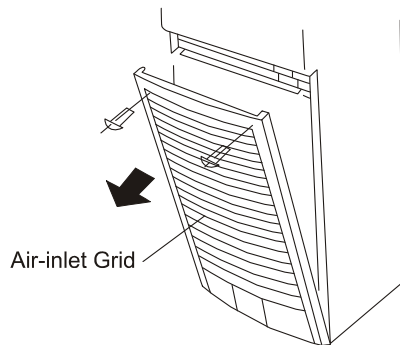



3.11.2.3. Take the Pipe Clip off before connecting the pipes and wiring; fit it when these finished.

Use accessories to connect the pipes/wires on both sides and back side.


Pipe/wire-hole position on back side

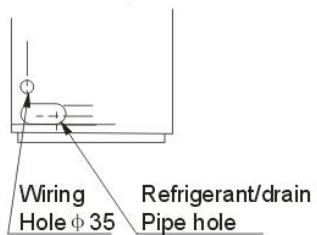

Pipe/wire-hole position on the bottom

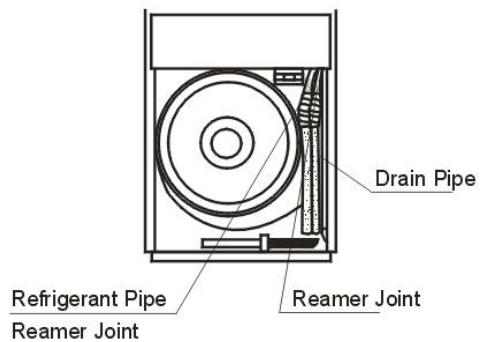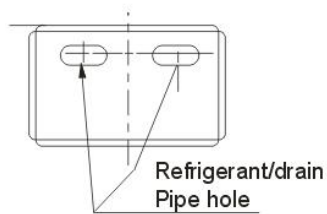


Pipe/wire-hole positions on both sides

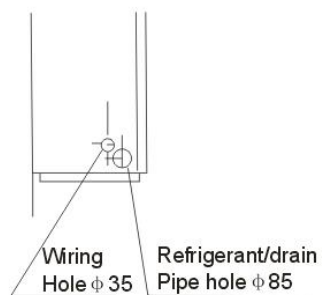


4. Outdoor unit installation (Side Discharge Unit)

4.1 Service space for outdoor unit

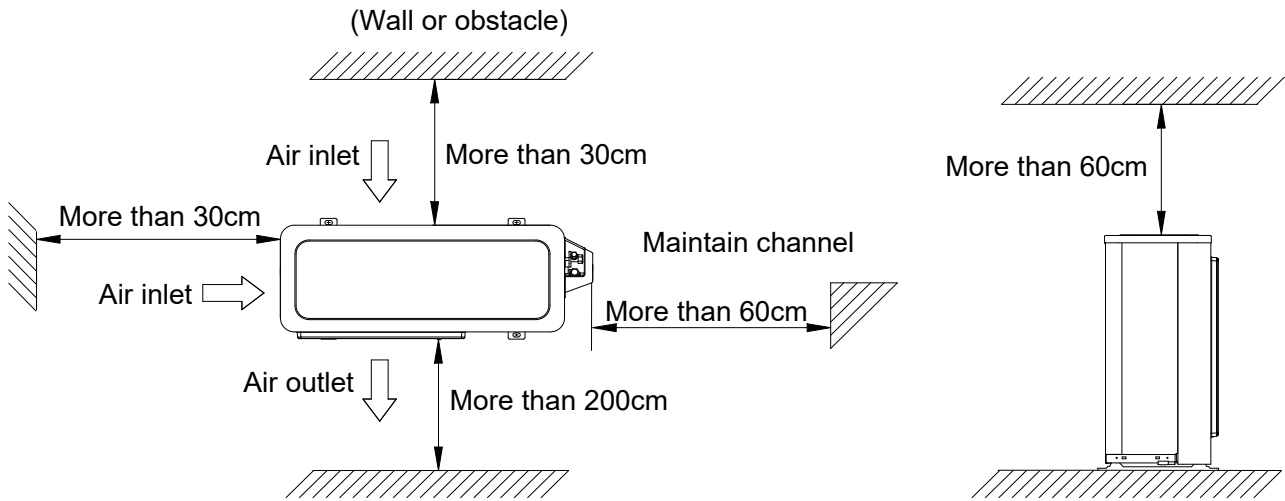


4.2 Bolt pitch

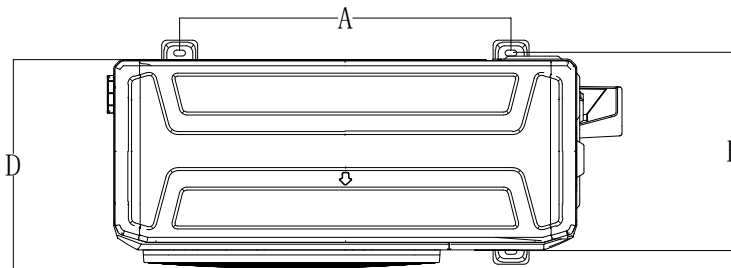

For the value of A,B and D, please refer to the dimension part.

4.3 Install the Unit

Since the gravity center of the unit is not at its physical center, so please be careful when lifting it with a sling. Never hold the inlet of the outdoor unit to prevent it from deforming. Do not touch the fan with hands or other objects. Do not lean it more than 45°, and do not lay it sidelong. Make concrete foundation according to the specifications of the outdoor units. Fasten the feet of this unit with bolts firmly to prevent it from collapsing in case of earthquake or strong wind.

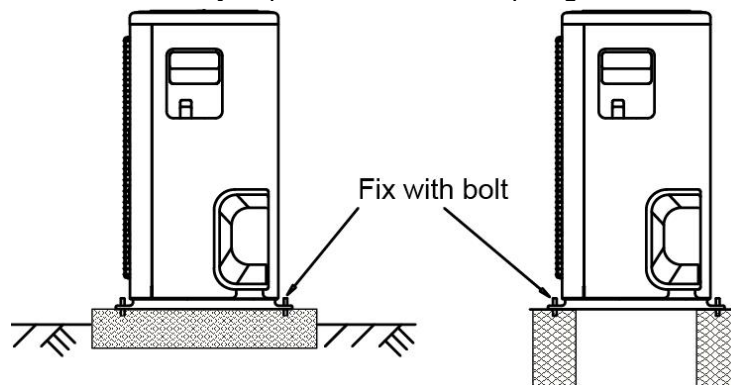

5. Refrigerant pipe installation

5.1 Maximum pipe length and height drop

Considering the allowable pipe length and height drop to decide the installation position. Make sure the distance and height drop between indoor and outdoor unit not exceeded the date in the following table.

Capacity	Max. Length	Max. Elevation
12,000Btu/h	15m	8m
18,000Btu/h~24,000Btu/h	25m	15m
30,000Btu/h~36,000Btu/h	30m	20m
42,000Btu/h~60,000Btu/h	50m	30m

5.2 The procedure of connecting pipes


5.2.1 Choose the pipe size according to the specification table.

5.2.2 Confirm the cross way of the pipes.

5.2.3 Measure the necessary pipe length.

5.2.4 Cut the selected pipe with pipe cutter

- Make the section flat and smooth.

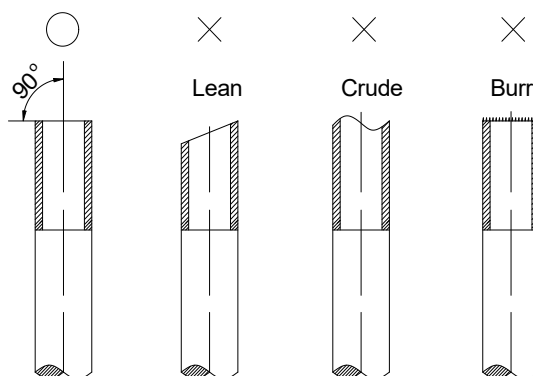

5.2.5 Insulate the copper pipe

- Before test operation, the joint parts should not be heat insulated.

5.2.6 Flare the pipe

- Insert a flare nut into the pipe before flaring the pipe
- According to the following table to flare the pipe

Pipe diameter	Flare dimension A (mm)		Flare shape
	Min	Max	
1/4" (6.35)	8.3	8.7	
3/8" (9.52)	12.0	12.4	
1/2" (12.7)	15.4	15.8	
5/8" (15.9)	18.6	19.1	
3/4" (19)	22.9	23.3	

- After flared the pipe, the opening part must be seal by end cover or adhesive tape to avoid duct or exogenous impurity come into the pipe.

5.2.7 Drill holes if the pipes need to pass the wall.

5.2.8 According to the field condition to bend the pipes so that it can pass the wall smoothly.

5.2.9 Bind and wrap the wire together with the insulated pipe if necessary.

5.2.10 Set the wall conduit

5.2.11 Set the supporter for the pipe.

5.2.12 Locate the pipe and fix it by supporter

- For horizontal refrigerant pipe, the distance between supporters should not be exceed 1m.
- For vertical refrigerant pipe, the distance between supporters should not be exceed 1.5m.

5.2.13 Connect the pipe to indoor unit and outdoor unit by using two spanners.

- Be sure to use two spanners and proper torque to fasten the nut, too large torque will damage the bellmouthing, and too small torque may cause leakage. Refer the following table for different pipe connection.

Pipe Diameter	Torque		Sketch map
	(kgf.cm)	(N.cm)	
1/4" (6.35)	144~176	1420~1720	
3/8" (9.52)	333~407	3270~3990	
1/2" (12.7)	504~616	4950~6030	
5/8" (15.9)	630~770	6180~7540	
3/4" (19)	990~1210	9270~11860	

6. Drainage pipe installation

Install the drainage pipe as shown below and take measures against condensation. Improperly installation could lead to leakage and eventually wet furniture and belongings.

6.1 Installation principle

- Ensure at least 1/100 slope of the drainage pipe
- Adopt suitable pipe diameter
- Adopt nearby condensate water discharge

6.2 Key points of drainage water pipe installation

6.2.1 Considering the pipeline route and elevation

- Before installing condensate water pipeline, determine its route and elevation to avoid intersection with other pipelines and ensure slope is straight.

6.2.2 Drainage pipe selection

- The drainage pipe diameter shall not small than the drain hose of indoor unit
- According to the water flowrate and drainage pipe slope to choose the suitable pipe, the water flowrate is decided by the capacity of indoor unit.

Relationship between water flowrate and capacity of indoor unit

Capacity (x1000Btu)	Water flowrate (l/h)
12	2.4
18	4
24	6
30	7
36	8
42	10
48	12
60	14

According to the above table to calculate the total water flowrate for the confluence pipe selection.

For horizontal drainage pipe (The following table is for reference)

PVC pipe	Reference value of inner diameter of pipe (mm)	Allowable maximum water flowrate (l/h)		Remark
		Slope 1/50	Slope 1/100	
PVC25	20	39	27	For branch pipe
PVC32	25	70	50	
PVC40	31	125	88	
PVC50	40	247	175	Could be used for confluence pipe
PVC63	51	473	334	

Attention: Adopt PVC40 or bigger pipe to be the main pipe.

For Vertical drainage pipe (The following table is for reference)

PVC pipe	Reference value of inner diameter of pipe (mm)	Allowable maximum water flowrate (l/h)	Remark
PVC25	20	220	For branch pipe
PVC32	25	410	
PVC40	31	730	
PVC50	40	1440	Could be used for confluence pipe
PVC63	51	2760	
PVC75	67	5710	
PVC90	77	8280	


Attention: Adopt PVC40 or bigger pipe to be the main pipe.

6.2.3 Individual design of drainage pipe system


- The drainage pipe of air conditioner shall be installed separately with other sewage pipe, rainwater pipe and drainage pipe in building.
- The drainage pipe of the indoor unit with water pump should be apart from the one without water pump.


6.2.4 Supporter gap of drainage pipe

- In general, the supporter gap of the drainage pipe horizontal pipe and vertical pipe is respectively 1m~1.5m and 1.5m~2.0m.
- Each vertical pipe shall be equipped with not less than two hangers.
- Overlarge hanger gap for horizontal pipe shall create bending, thus leading to air block.

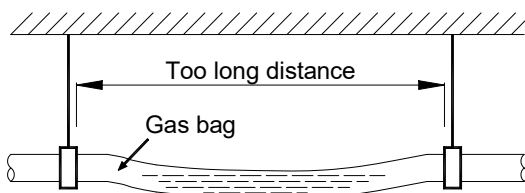

6.2.5 The horizontal pipe layout should avoid converse flow or bad flow

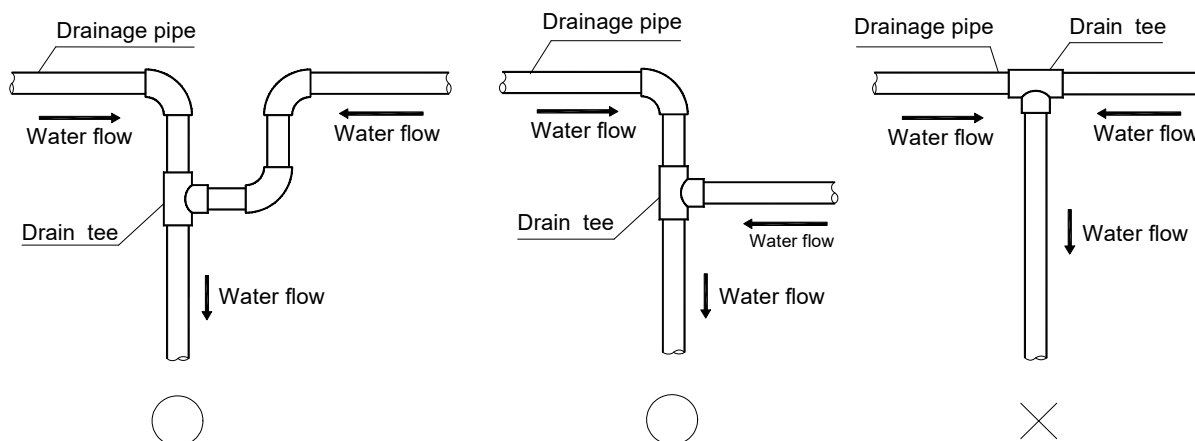


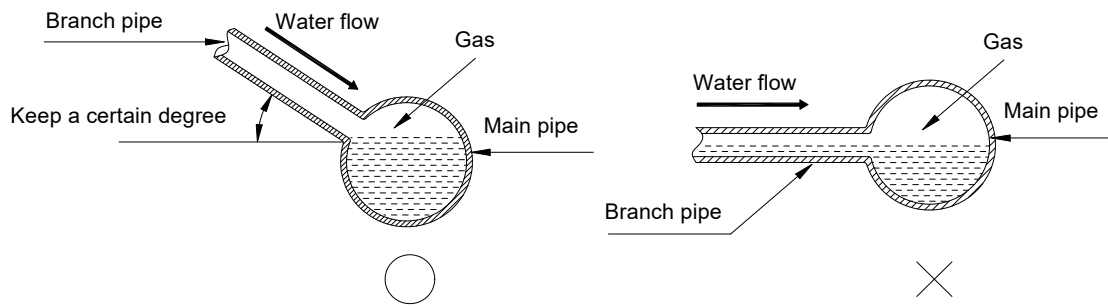

- The correct installation will not cause converse water flow and the slope of the branch pipes can be adjusted freely
- The false installation will cause converse water flow and the slope of the branch pipe can not be adjusted.


6.2.6 Water storage pipe setting

- If the indoor unit has high extra static pressure and without water pump to elevate the condensate water, such as high extra static pressure duct unit, the water storage pipe should be set to avoid converse flow or blow water phenomena.

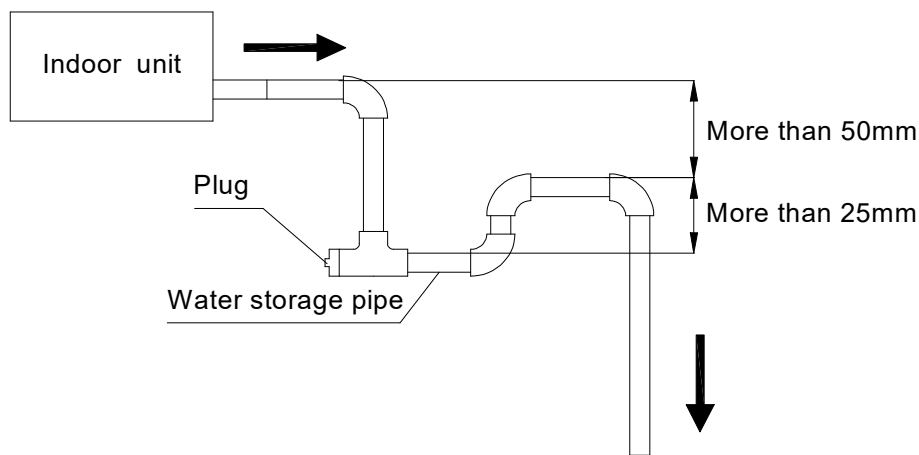

6.2.7 Lifting pipe setting of indoor unit with water pump


- The length of lifting pipe should not exceed the pump head of indoor unit water pump.
Pump head of big four way cassette: 750mm
Pump head of compact four way cassette: 500mm
- The drainage pipe should be set down inclined after the lifting pipe immediately to avoid wrong operation of water level switch.
- Refer the following picture for installation reference.

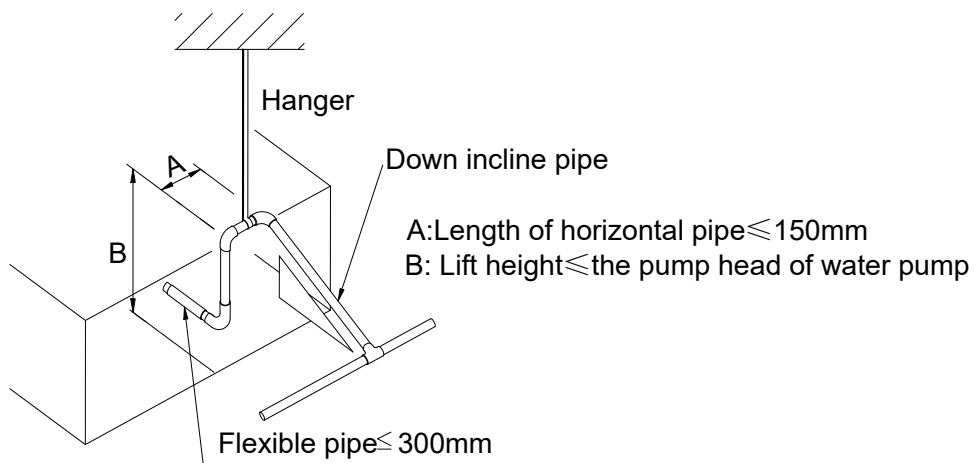

6.2.8 Blowhole setting

- For the concentrated drainage pipe system, there should design a blowhole at the highest point of main pipe to ensure the condensate water discharge smoothly.

- The air outlet shall face down to prevent dirt entering pipe.
- Each indoor unit of the system should be installed it.
- The installation should be considering the convenience for future cleaning.

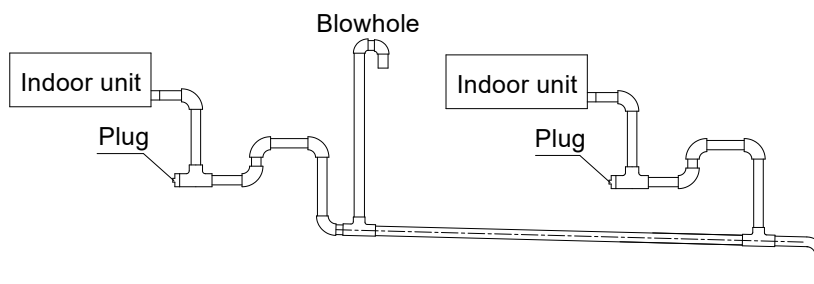

6.2.9 The end of drainage pipe shall not contact with ground directly.

6.3 Drainage test


6.3.1 Water leakage test

After finishing the construction of drainage pipe system, fill the pipe with water and keep it for 24 hours to check whether there is leakage at joint section.

6.3.2 Water discharge test

1. Natural drainage mode(the indoor unit with outdoor drainage pump)

Infuse above 600ml water through water test hole slowly into the water collector, observe whether the water can discharge through the transparent hard pipe at drainage outlet.
2. Pump drainage mode
 - 2.1 Disconnect the plug of water level switch, remove the cover of water test hole and slowly infuse about 2000ml water through the water test hole, be sure that the water will not touch the motor of drainage pump.

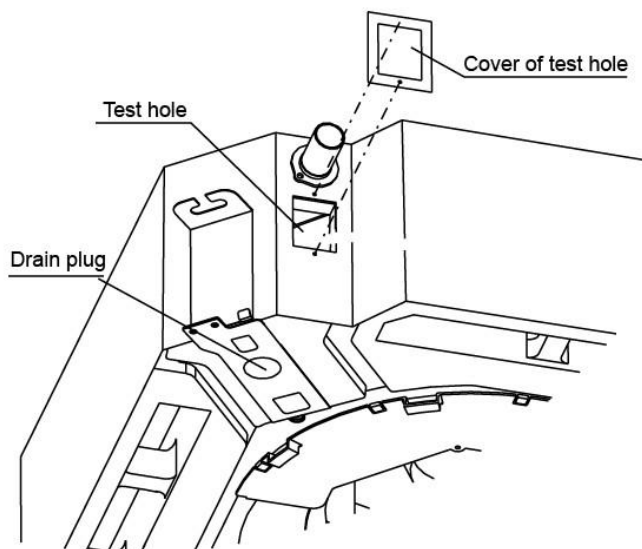

- 2.2 Power on and let the air conditioner operate for cooling. Check operation status of drainage pump, and then connect the plug of water level switch, check the operation sound of water pump and observe whether the water can discharge through the transparent hard pipe at drainage outlet. (In light of the length of drainage pipe, water shall be discharged about 1 minute delayed)
- 2.3 Stop the operation of air conditioner, power off the power supply and put the cover of water test hole back to the original place.
 - a. After stopped the air conditioner 3 minutes, check whether there is anything abnormal. If drainage pipes have not been distributed properly, over back-flow water shall cause the flashing of alarm indicator at remote-controlled receiving board and even water shall run over the water collector.
 - b. Continuously infusing water until water level alarmed, check whether the drainage pump could discharge water at once. If water level does not decline under warning water level 3 minutes later, it

shall cause shutdown of unit. When this situation happens, the normal startup only can be recovered by turning down power supply and eliminating accumulated water.

Note: Drain plug at the main water-containing plate is used for eliminating accumulated water in water-containing plate when maintaining air conditioner fault. During normal operation, the plug shall be filled in to prevent leakage.

6.4 Insulation work of drainage pipe

Refer the introduction to the insulation engineering parts.

7. Vacuum Drying and Leakage Checking

7.1 Purpose of vacuum drying

- Eliminating moisture in system to prevent the phenomena of ice-blockage and copper oxidation. Ice-blockage shall cause abnormal operation of system, while copper oxide shall damage compressor.
- Eliminating the non-condensable gas (air) in system to prevent the components oxidizing, pressure fluctuation and bad heat exchange during the operation of system.

7.2 Selection of vacuum pump

- The ultimate vacuum degree of vacuum pump shall be -756mmHg or above.
- Precision of vacuum pump shall reach 0.02mmHg or above.

7.3 Operation procedure for vacuum drying

Due to different construction environment, two kinds of vacuum drying ways could be chosen, namely ordinary vacuum drying and special vacuum drying.

7.3.1 Ordinary vacuum drying

1. When conduct first vacuum drying, connect pressure gauge to the infusing mouth of gas pipe and liquid pipe, and keep vacuum pump running for 1hour (vacuum degree of vacuum pump shall be reached -755mmHg).
2. If the vacuum degree of vacuum pump could not reach -755mmHg after 1 hour of drying, it indicates that there is moisture or leakage in pipeline system and need to go on with drying for half an hour.
3. If the vacuum degree of vacuum pump still could not reach -755mmHg after 1.5 hours of drying, check whether there is leakage source.
4. Leakage test: After the vacuum degree reaches -755mmHg, stop vacuum drying and keep the pressure for 1 hour. If the indicator of vacuum gauge does not go up, it is qualified. If going up, it indicates that there is moisture or leak source.

7.3.2 Special vacuum drying

The special vacuum drying method shall be adopted when:

1. Finding moisture during flushing refrigerant pipe.
2. Conducting construction on rainy day, because rain water might penetrated into pipeline.
3. Construction period is long, and rain water might penetrated into pipeline.
4. Rain water might penetrate into pipeline during construction.

Procedures of special vacuum drying are as follows:

1. Vacuum drying for 1 hour.
2. Vacuum damage, filling nitrogen to reach 0.5Kgf/cm² .
Because nitrogen is dry gas, vacuum damage could achieve the effect of vacuum drying, but this method could not achieve drying thoroughly when there is too much moisture. Therefore, special attention shall be drawn to prevent the entering of water and the formation of condensate water.
3. Vacuum drying again for half an hour.
If the pressure reached -755mmHg, start to pressure leakage test. If it can not reached the value, repeat vacuum damage and vacuum drying again for 1 hour.

- 4 Leakage test: After the vacuum degree reaches -755mmHg, stop vacuum drying and keep the pressure for 1 hour. If the indicator of vacuum gauge does not go up, it is qualified. If going up, it indicates that there is moisture or leak source.

8. Additional refrigerant charge

- After the vacuum drying process is carried out, the additional refrigerant charge process need to be performed.
- The outdoor unit is factory charged with refrigerant. The additional refrigerant charge volume is decided by the diameter and length of the liquid pipe between indoor and outdoor unit. Refer the following formula to calculate the charge volume.

Diameter of liquid pipe (mm)	Φ6.35	Φ9.52	Φ12.7
Formula	$V=15g/m \times (L-5)$	$V=30g/m \times (L-5)$	$V=65g/m \times (L-5)$

V: Additional refrigerant charge volume (g).

L : The length of the liquid pipe (m).

Note:

- Refrigerant may only be charged after performed the vacuum drying process.
- Always use gloves and glasses to protect your hands and eyes during the charge work.
- Use electronic scale or fluid infusion apparatus to weight refrigerant to be recharged. Be sure to avoid extra refrigerant charged, it may cause liquid hammer of the compressor or protections.
- Use supplementing flexible pipe to connect refrigerant cylinder, pressure gauge and outdoor unit. And The refrigerant should be charged in liquid state. Before recharging, The air in the flexible pipe and manifold gauge should be exhausted.
- After finished refrigerant recharge process, check whether there is refrigerant leakage at the connection joint part.(Using gas leakage detector or soap water to detect).

9. Engineering of insulation

9.1 Insulation of refrigerant pipe

9.1.1 Operational procedure of refrigerant pipe insulation

Cut the suitable pipe → insulation (except joint section) → flare the pipe → piping layout and connection → vacuum drying → insulate the joint parts

9.1.2 Purpose of refrigerant pipe insulation


- During operation, temperature of gas pipe and liquid pipe shall be over-heating or over-cooling extremely. Therefore, it is necessary to carry out insulation; otherwise it shall debase the performance of unit and burn compressor.
- Gas pipe temperature is very low during cooling. If insulation is not enough, it shall form dew and cause leakage.
- Temperature of gas pipe is very high (generally 50-100℃) during heating. Insulation work must be carried out to prevent hurt by carelessness touching.

9.1.3 Insulation material selection for refrigerant pipe

- The burning performance should over 120℃
- According to the local law to choose insulation materials
- The thickness of insulation layer shall be above 10mm.If in hot or wet environment place, the layer of insulation should be thicker accordingly.

9.1.4 Installation highlights of insulation construction

- Gas pipe and liquid pipe shall be insulated separately, if the gas pipe and liquid pipe were insulated together; it will decrease the performance of air conditioner.

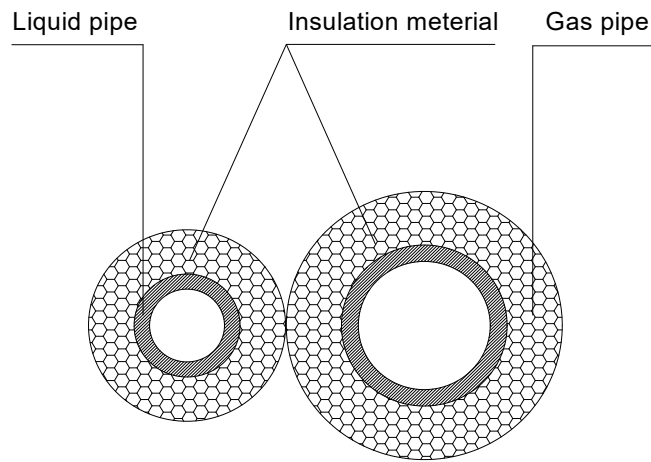

- The insulation material at the joint pipe shall be 5~10cm longer than the gap of the insulation material.
- The insulation material at the joint pipe shall be inserted into the gap of the insulation material.
- The insulation material at the joint pipe shall be banded to the gas pipe and liquid pipe tightly.
- The linking part should be use glue to paste together
- Be sure not bind the insulation material over-tight, it may extrude out the air in the material to cause bad insulation and cause easy aging of the material.

9.2 Insulation of drainage pipe

9.2.1 Operational procedure of refrigerant pipe insulation

Select the suitable pipe → insulation (except joint section) → piping layout and connection → drainage test → insulate the joint parts

9.2.2 Purpose of drainage pipe insulation

The temperature of condensate drainage water is very low. If insulation is not enough, it shall form dew and cause leakage to damage the house decoration.

9.2.3 Insulation material selection for drainage pipe

- The insulation material should be flame retardant material, the flame retardancy of the material should be selected according to the local law.
- Thickness of insulation layer is usually above 10mm.
- Use specific glue to paste the seam of insulation material, and then bind with adhesive tape. The width of tape shall not be less than 5cm. Make sure it is firm and avoid dew.

9.2.4 Installation and highlights of insulation construction

- The single pipe should be insulated before connecting to another pipe, the joint part should be insulated after the drainage test.
- There should be no insulation gap between the insulation material.

10. Engineering of electrical wiring

10.1 Highlights of electrical wiring installation

- All field wiring construction should be finished by qualified electrician.
- Air conditioning equipment should be grounded according to the local electrical regulations.
- Current leakage protection switch should be installed.
- Do not connect the power wire to the terminal of signal wire.
- When power wire is parallel with signal wire, put wires to their own wire tube and remain at least 300mm gap.
- According to table in indoor part named “the specification of the power” to choose the wiring, make sure the selected wiring not small than the date showing in the table.

- Select different colors for different wire according to relevant regulations.
- Do not use metal wire tube at the place with acid or alkali corrosion, adopt plastic wire tube to replace it.
- There must be not wire connect joint in the wire tube If joint is a must, set a connection box at the place.
- The wiring with different voltage should not be in one wire tube.
- Ensure that the color of the wires of outdoor and the terminal No. are same as those of indoor unit respectively.

11. Test operation

11.1 The test operation must be carried out after the entire installation has been completed.

11.2 Please confirm the following points before the test operation.

- The indoor unit and outdoor unit are installed properly.
- Tubing and wiring are correctly completed.
- The refrigerant pipe system is leakage-checked.
- The drainage is unimpeded.
- The ground wiring is connected correctly.
- The length of the tubing and the added stow capacity of the refrigerant have been recorded.
- The power voltage fits the rated voltage of the air conditioner.
- There is no obstacle at the outlet and inlet of the outdoor and indoor units.
- The gas-side and liquid-side stop valves are both opened.
- The air conditioner is pre-heated by turning on the power.

11.3 Test operation

Set the air conditioner under the mode of "COOLING" by remote controller, and check the following points.

Indoor unit

- Whether the switch on the remote controller works well.
- Whether the buttons on the remote controller works well.
- Whether the air flow louver moves normally.
- Whether the room temperature is adjusted well.
- Whether the indicator lights normally.
- Whether the temporary buttons works well.
- Whether the drainage is normal.
- Whether there is vibration or abnormal noise during operation.

Outdoor unit

- Whether there is vibration or abnormal noise during operation.
- Whether the generated wind, noise, or condensed of by the air conditioner have influenced your neighborhood.
- Whether any of the refrigerant is leaked.

Part 5

Electrical Control System

1. Electrical Control Function.....	95
2. Troubleshooting.....	100
3. Controller.....	117

1. Electrical Control Function

1.1 Abbreviation

- T1: Indoor room temperature
 T2: Evaporator coil temperature
 T3: Condenser coil temperature
 T4: Outdoor ambient temperature
 T5: Compressor discharge temperature
 Ts: Setting temperature

1.2 Main Protection

1.2.1 Compressor Restart Delay

1.2.2 Sensor protection at open circuit and breaking disconnection.

1.2.3 Phase check function(for 3-phase models)

If the phase sequence is detected wrong or lack of 1 or 2 phase, the unit won't start and there is error code displayed on outdoor PCB.

1.2.4 Low pressure check function(for 48-60K models & 3 6 K)

The low pressure switch should be always closed. If it is open, the system will stop until the fault is cleared. Within 5 minutes after the compressor starts and 4 minutes after defrosting ends, low pressure switch won't be checked.

Note: If this protection occurs 3 times within 20 minutes, it won't recover automatically until the main power is cut off.

1.2.5 Over-current protection(for 48-60K models)

When compressor is running, if the current is over twice of the rated for 3 seconds, the compressor will stop and an error code will be displayed on the outdoor PCB. If the current becomes normal, the compressor will restart after 3 minutes.

1.3 Operation Modes and Functions

1.3.1 Fan mode

- Outdoor fan and compressor cease operation.
- Temperature setting function is disabled, and


no preset temperature is displayed.

- Indoor fan can be set to high, (medium), low, or auto.
- Louver operates the same as in cooling mode.
- Auto fan:

For floor standing units:

Auto fan will be controlled in line with cooling auto fan with temperature set to be 24°C.

For other units:

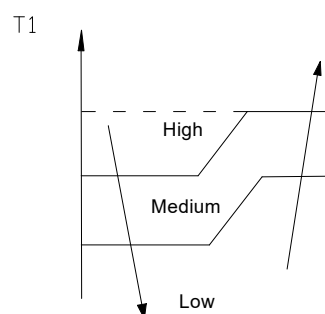


1.3.2 Cooling Mode

1.3.2.1 Compressor Running Guidelines

Once the compressor starts up, it will follow the below rules:

When $T1 - T_s$ is higher than setting value, the compressor and outdoor fan cease operation. When $T1 - T_s$ is lower than setting value, the compressor and outdoor fan activate..

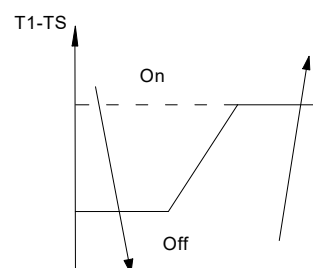


1.3.2.2 Outdoor Fan Running Guidelines

For single-fan units:


The outdoor fan will run following the compressor

For double-fan units:

The outdoor fans run depending on T3.

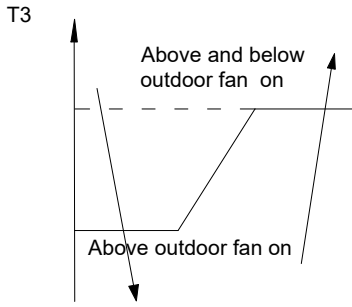


1.3.2.5 Condenser high temperature T3 protection(excluding 12~36k cooling only models)

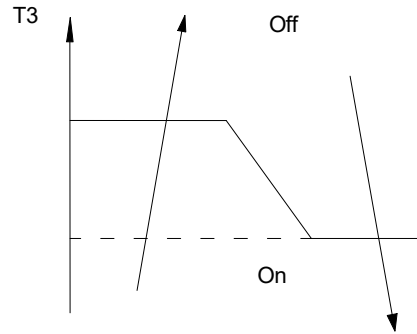


1.3.2.3 Indoor Fan Running Guidelines

In cooling mode, the indoor fan runs continuously. You can select the following speeds: high, (medium), low, or auto. The auto fan acts according to the following principles:


For floor standing units:

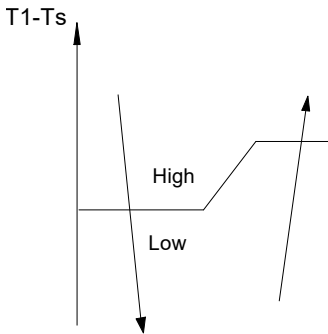

For other units:

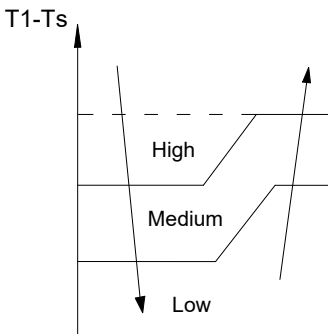

1.3.2.4 Low evaporator coil temperature T2 protection

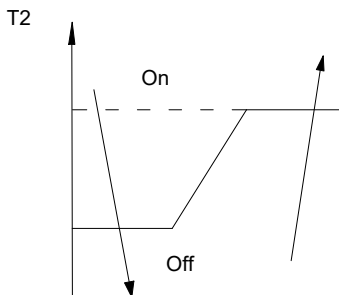

When the evaporator temperature goes below a preset value, the compressor stops.


When condenser temperature exceeds the preset value, the compressor stops.

1.3.3 Heating Mode(For heat pump models)

1.3.3.1 Compressor Running Guidelines

Once the compressor starts up, it keeps running 7 minutes, then it will follow the below rules:

When T1-Ts is higher than setting value, the compressor and outdoor fan will shut off. When T1-Ts is lower than setting value, the compressor and outdoor fan will start up.

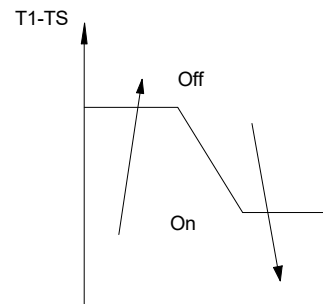


1.3.3.2 Outdoor Fan Running Guidelines

For single-fan units:

The outdoor fan will run following the compressor

For double-fan units:

The outdoor fans run depending on T4.

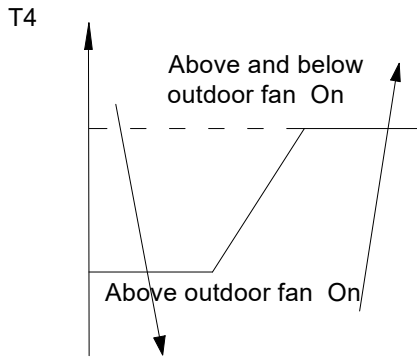


1.3.3.3 Indoor Fan Running Guidelines


When the compressor is on, the indoor fan can select the following speeds: high, (medium), low, or auto.. And the anti-cold wind function has the priority.

The auto fan acts according to the following principles:

For floor-standing units:

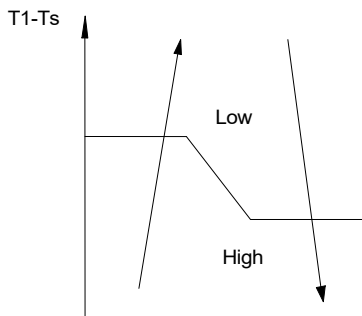

For other units:

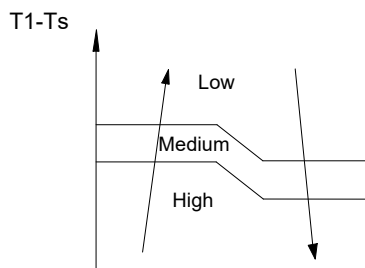


1.3.3.4 Defrosting mode:


the unit enters the defrosting mode according to the value of T3 and T4 as well as the compressor running time.

Defrosting action:

For 12~30K floor-standing units:

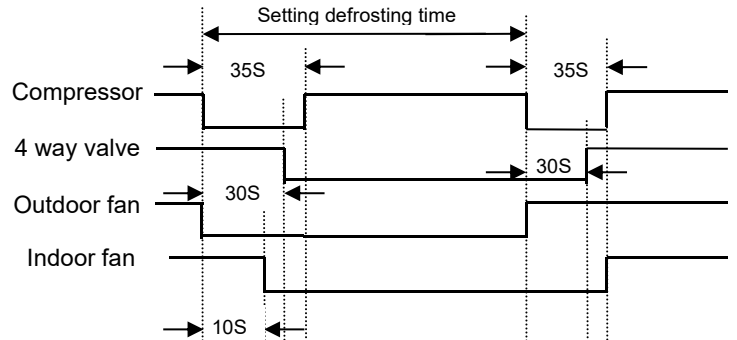

For 12~30 other units:

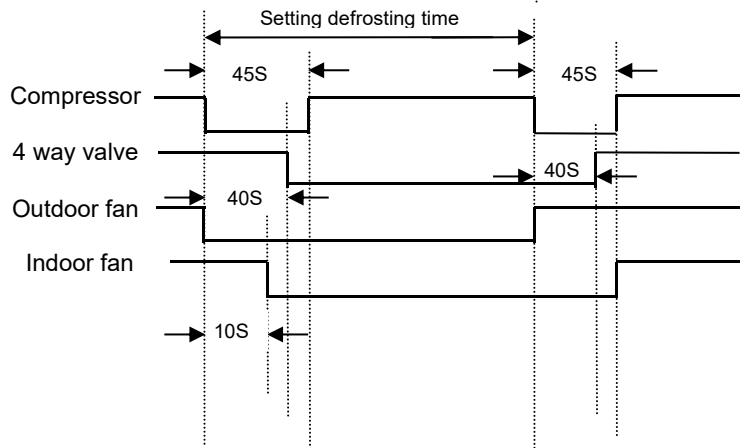


For 36~60K


In defrosting mode, the compressor continues to run, the indoor and outdoor motor stops

1.3.3.5 High evaporator coil temp. T2 protection:


For floor-standing units:

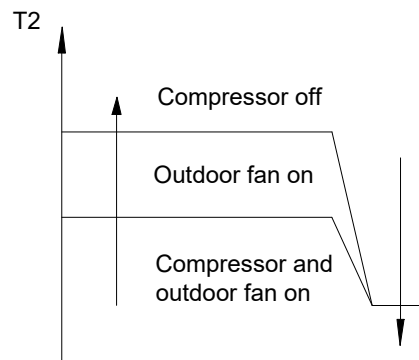

For Ceiling & floor type:

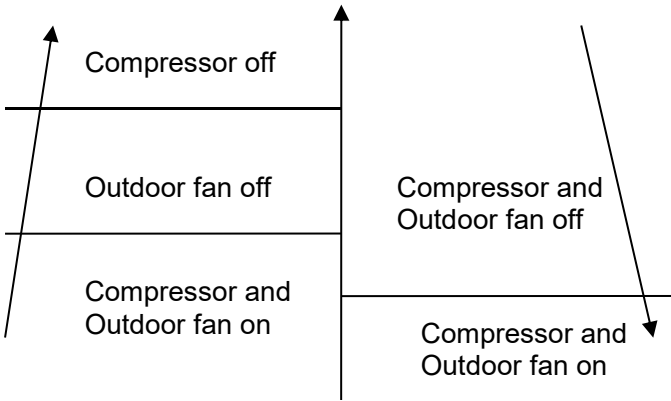


For other units:

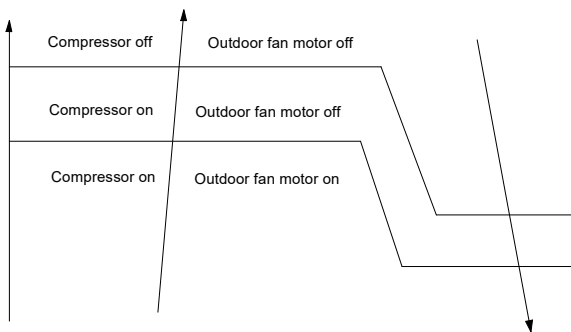

1.3.4 Auto Mode

This mode can be selected with the remote controller and the temperature setting can be adjusted between 17°C~30°C

In auto mode, the machine selects cooling, heating, or fan-only mode on the basis of ΔT (ΔT = T1-Ts).

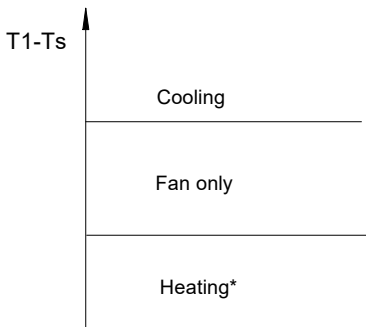

Heating*: In auto mode, cooling only models run the fan.

Indoor fans run at the auto fan speed of the relevant mode.

The louver operates the same as in relevant mode. If the machine switches mode between heating and cooling, the compressor pauses for a certain

period of time intermittently and then selects a mode based on T1-Ts. If the setting temperature is modified, the machine selects a new running function.

1.3.5 Dehumidifier Mode

1.3.5.1 Indoor fan speed is fixed at low and cannot be changed

1.3.5.2 All protections are activated and operate the same as they do in cooling mode.

1.3.5.3 The louver operates the same as in cooling mode.

1.3.6 Timer function

1.3.6.1 The timing range is 24 hours.

1.3.6.2 Timer On. The machine turns on automatically at the preset time.

1.3.6.3 Timer Off. The machine turns off automatically at the preset time.

1.3.6.4 Timer On/Off. The machine turns on automatically at the preset On Time, and then turns off automatically at the preset Off Time.

1.3.6.5 Timer Off/On. The machine turns off automatically at the preset Off Time and then turns on automatically at the preset On Time.

1.3.6.6 The timer does not change the unit operation mode. If the unit is off now, it does not start up immediately after the “timer off” function is set. When the setting time is reached, the timer LED switches off and the unit running mode remains unchanged.

1.3.6.7 The timer uses relative time, not clock time.

1.3.7 Sleep function

1.3.7.1 The sleep function is available in cooling, heating, or auto mode.

1.3.7.2. The operational process for sleep mode is as follows:

When cooling, the temperature rises 1 °C (to not higher than 30 °C) every hour. After 2 hours, the temperature stops rising and the indoor fan is fixed to auto speed.

When heating, the temperature decreases 1 °C (to not lower than 17 °C) every hour. After 2 hours, the

temperature stops decreasing and the indoor fan is fixed at auto speed. Anti-cold wind function takes priority.

1.3.7.3 The timer setting is available in this mode.

1.3.8 Auto-Restart function

The indoor unit has an auto-restart module that allows the unit to restart automatically. The module automatically stores the current settings (not including the Swing setting) and, in the case of a sudden power failure, will restore those setting automatically within 3 minutes after power returns.

1.3.9 Drain Pump Control (For Cassette)

Use the water-level switch to control drain pump.

The system checks the water level every 5 seconds.


----When the A/C operates in cooling (including auto cooling) or forced cooling mode, the pump begins running immediately and continuously until cooling stops.

----If the water level increases up to the control point, the LED displays an alarm code and the drain pump opens and continually monitors the water level. If the water level falls and LED alarm code is no longer displayed (drain pump close delay is 1 minute), the unit goes back into its last mode. Otherwise, the entire system (including the pump) stops and the LED displays an alarm again after 3 minutes.


2. Troubleshooting

2.1 Display board


2.1.1 Display board of A5 Duct,A6 Duct & HSPD

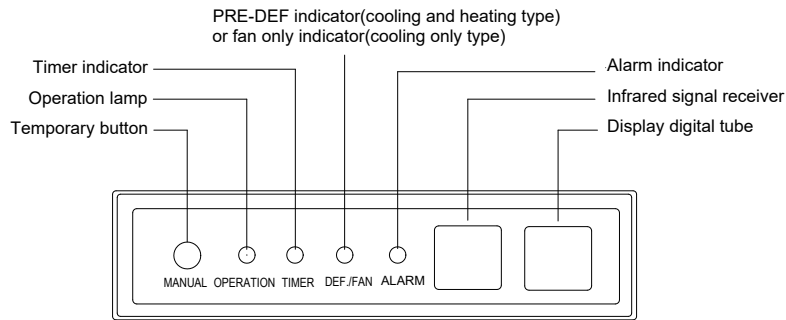


2.1.2 Display board of super slim cassette

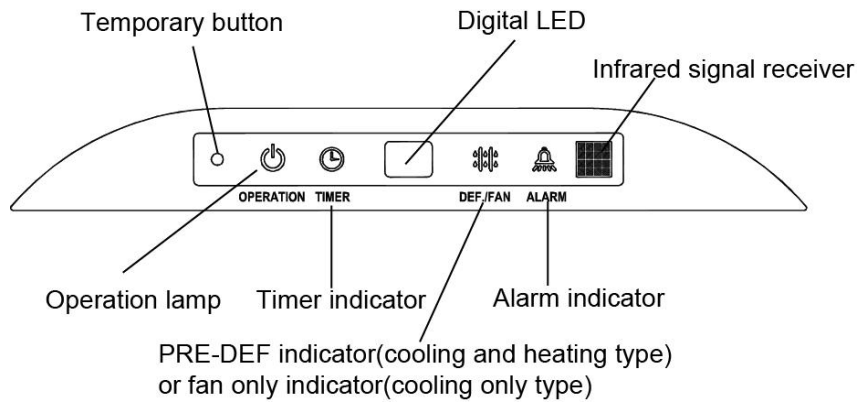


2.1.3 Display board of ceiling & Floor

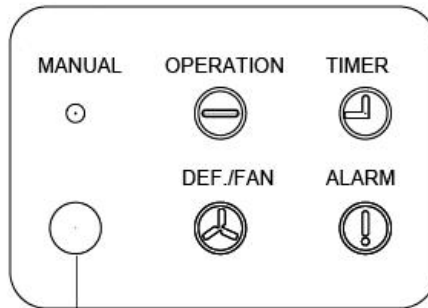

2.1.4 Display board of Compact cassette

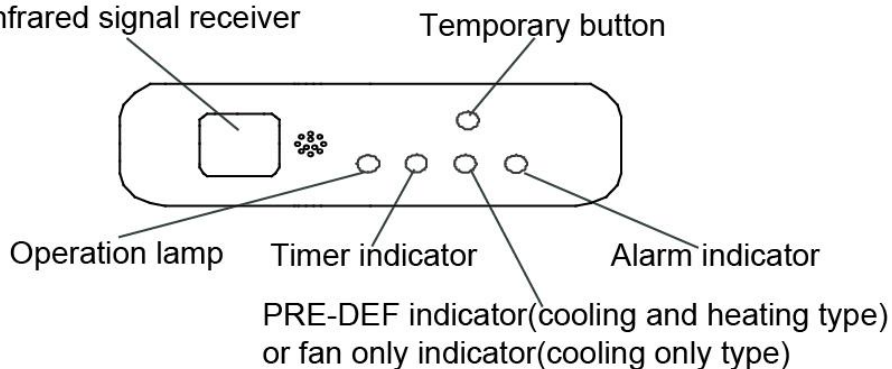


2.1.5 Display board of GA floor-standing

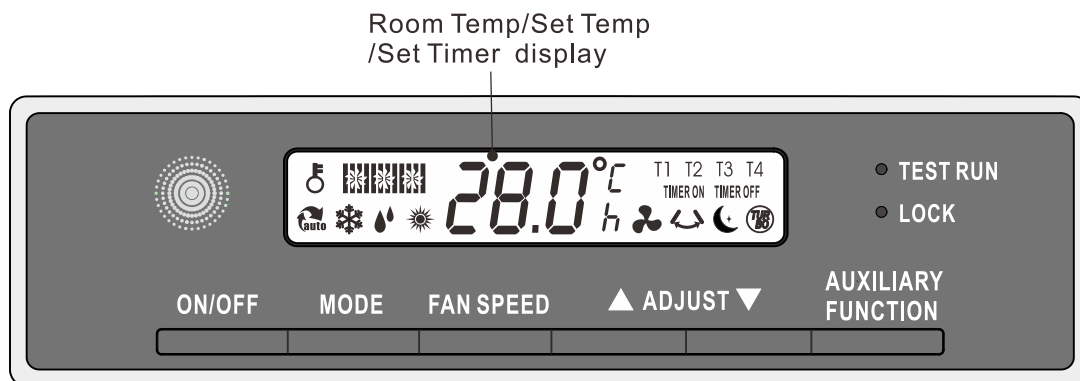

Indicators

- Auto operation display
- Cooling operation display
- Dry operation display
- Heating operation display
- Fan operation display
- Swing operation display
- Sleep operation display
- Turbo operation display
- On timer operation display
- Off timer operation display
- Lock operation display
- Fan speed display


2.1.6 Display board of M floor-standing

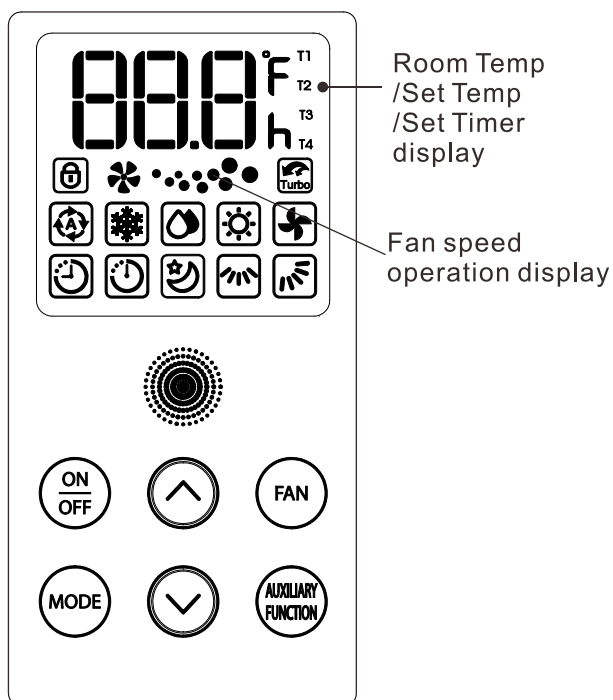

Indicators

- Auto operation display
- Cooling operation display
- Dry operation display
- Heating operation display
- Fan operation display
- Vertical airflow display(optional)
- Horizontal airflow display
- Sleep operation display
- Turbo operation display(optional)
- Off timer operation display
- On timer operation display
- Lock operation display


2.1.7 Display board of J2 floor-standing

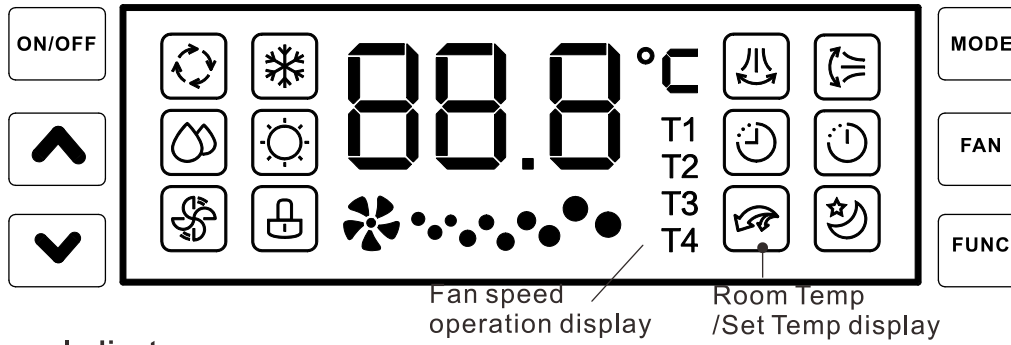

Indicators

- | | | | |
|--|---------------------------|--|------------------------------------|
| | Auto operation display | | On timer operation display |
| | Heating operation display | | Off timer operation display |
| | Cooling operation display | | Turbo operation display(optional) |
| | Fan operation display | | Sleep operation display |
| | Dry operation display | | Horizontal airflow display |
| | Lock operation display | | Vertical airflow display(optional) |


2.1.8 Display board of S2 floor-standing

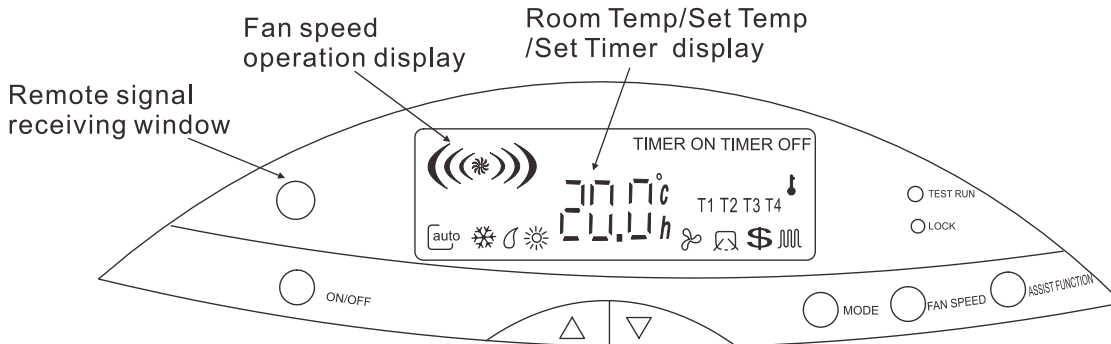

Indicators

- | | | | |
|--|---------------------------|--|--------------------------------------|
| | Auto operation display | | Horizontal airflow display |
| | Cooling operation display | | Sleep operation display |
| | Dry operation display | | Electrical heating operation display |
| | Heating operation display | | On timer operation display |
| | Fan operation display | | Off timer operation display |
| | | | Lock operation display |


2.1.9 Display board of S4 floor-standing

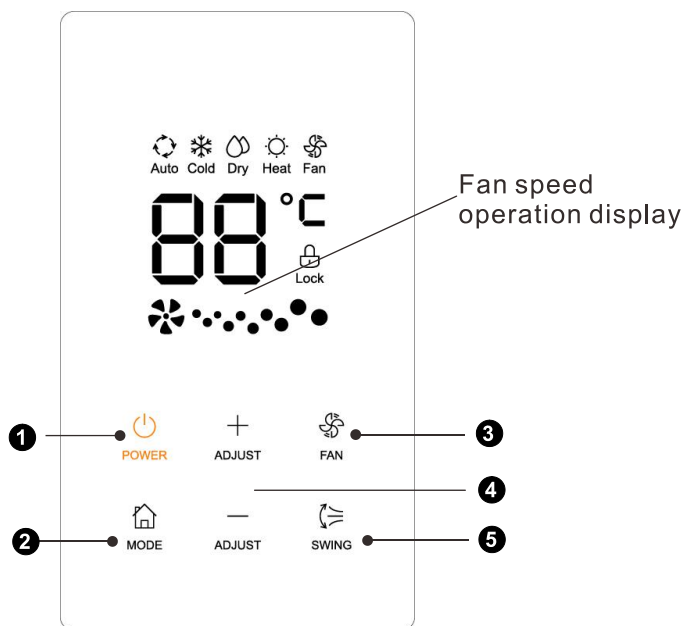

Indicators

- Auto operation display
- Cooling operation display
- Dry operation display
- Heating operation display
- Fan operation display
- Vertical airflow display (optional)
- Horizontal airflow display
- Sleep operation display
- Turbo operation display (optional)
- Off timer operation display
- On timer operation display
- Lock operation display

2.1.10 Display board of E2 floor-standing

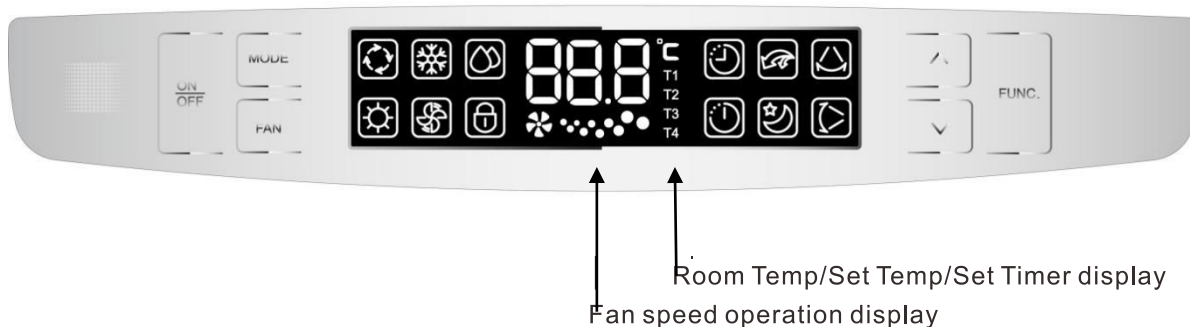

Indicators

- Auto operation display
- Cooling operation display
- Dry operation display
- Heating operation display
- Fan operation display
- Lock operation display
- On timer operation display
- Turbo operation display (optional)
- Vertical airflow display (optional)
- Off timer operation display
- Sleep operation display
- Horizontal airflow display

2.2. Self-diagnosis

Indoor unit's LED indication

During malfunction or protection, the indicators and digital LED displays as follow:

For A6 Duct:

Malfunction	Error Code	Timer Lamp	Operation Lamp (flashes)
Indoor EEPROM malfunction	E0	X	1
T1 temperature sensor open or short circuit	E4	X	5
T2 temperature sensor open or short circuit	E5	X	6
Refrigerant leakage detection	EC	X	7
Water level alarm malfunction	EE	X	8
T3 temperature sensor open or short circuit	F2	O	3
Dual chips communication malfunction	FA	O	11

O (on) X(off)

For Floor-standing type:

Codes	Contents
P4	Indoor evaporator temperature protection
P5	Outdoor condenser temperature protection
P9	Anti-cold wind
E1	T1 temperature sensor open or short circuit
E2	T2 temperature sensor open or short circuit
E3	T3 temperature sensor open or short circuit
E6	Outdoor unit malfunction
EC	Refrigerant leakage detection
HS	Defrosting
F0	Communication malfunction between indoor main PCB and display PCB(for J2,S4,E2 models)

For Other Types:

NO.	Malfunction	Operation lamp	Timer lamp	Defrosting lamp	Alarm lamp	Display(digital tube)
1	T1 temperature sensor open or short circuit	X	☆	X	X	E2
2	T2 temperature sensor open or short circuit	☆	X	X	X	E3
3	T3 temperature sensor open or short circuit	X	X	☆	X	E4
4	Indoor EEPROM malfunction	☆	☆	X	X	E7
5	Water level alarm	X	X	X	☆	E8
6	Refrigerant leakage detection	☆	X	X	☆	EC
7	Low pressure protection	☆	☆	☆	X	Ed
8	Communication error between auto-lifting panel and slim cassette	☆	X	☆	☆	F0
9	Auto-lifting panel is faulty (for slim cassettes with an auto-lifting panel)	X	☆	☆	☆	F1
10	Auto-lifting panel is not closed (for slim cassettes with an auto-lifting panel)	X	O	☆	☆	F2

O (on) X(off) ☆(flash at 5Hz)

LEDs' for the indication of outdoor trouble(for 36-60K models)

Type	Contents	LED1	LED2	LED3
Trouble	Phase sequence	Flash	Off	Off
Trouble	Lack of phase(A,B)	Flash	Off	Off
Trouble	Lack of phase(C)	Off	Off	Off
Trouble	Low pressure protection	Flash	Flash	Off
Trouble	Overload of current	Off	Off	Flash
Trouble	T3 temperature sensor open or short circuit	Off	Flash	Flash
Trouble	Temperature sensor open or short circuit of T4 or T5 or high pressure protection	Off	Flash	Off
Trouble	High temperature protection of condenser	Flash	Flash	Flash


Note:

1. If the LED1-LED3 are flashing slowly, means the system is stand-by.
2. T3: Outdoor condenser temperature sensor
3. T4: Outdoor ambient temperature sensor


2.3. Solving steps for typical malfunction

(1) For indoor unit


a. T1 or T2 temperature sensor open or short circuit

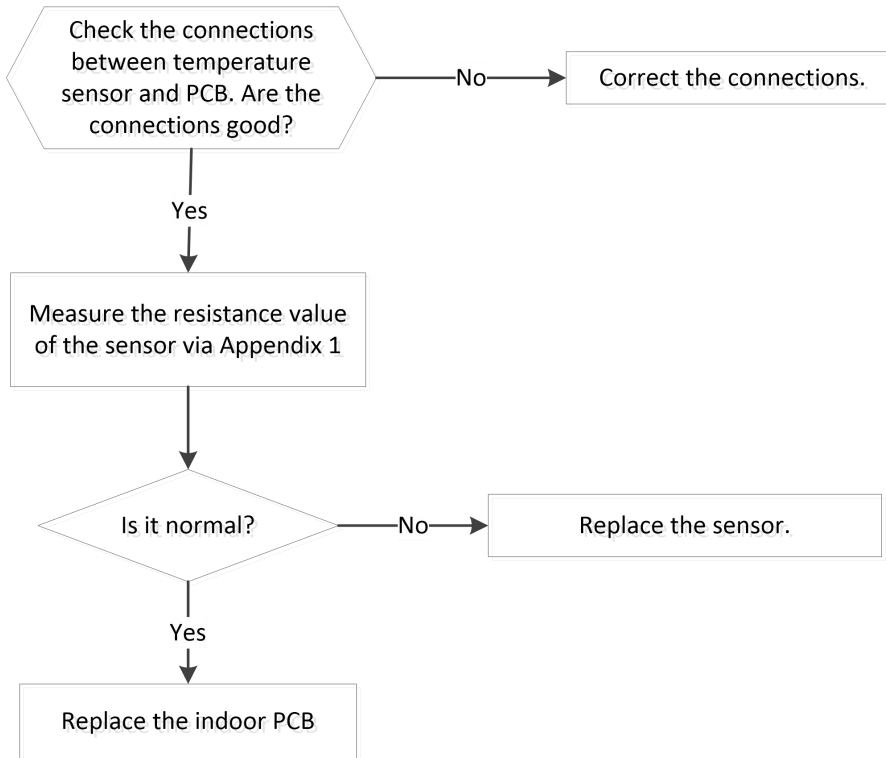

b. T3 temperature sensor open or short circuit

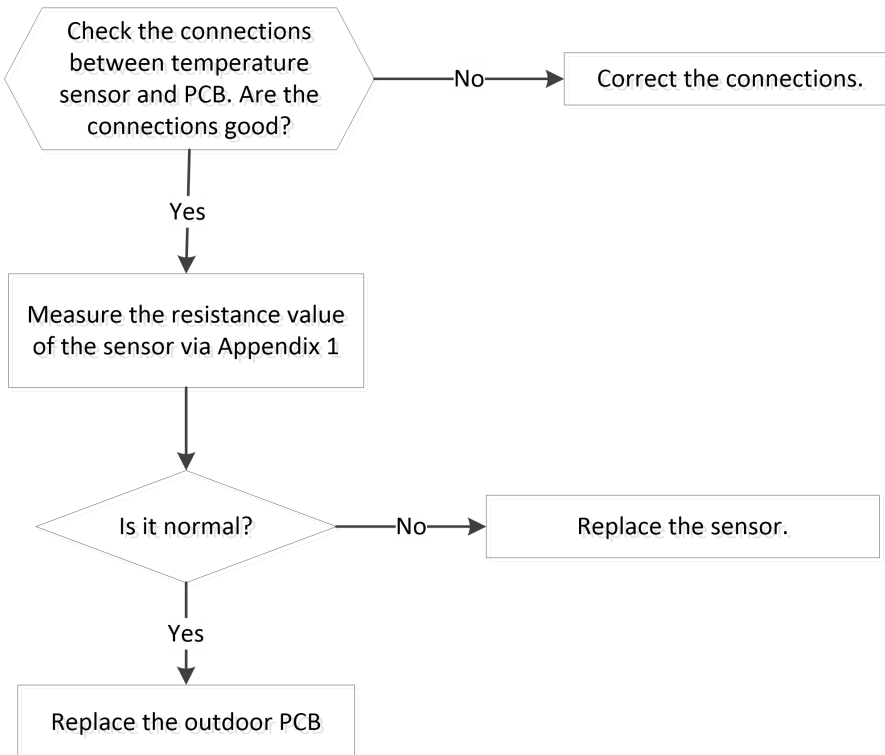


c. Indoor EEPROM malfunction

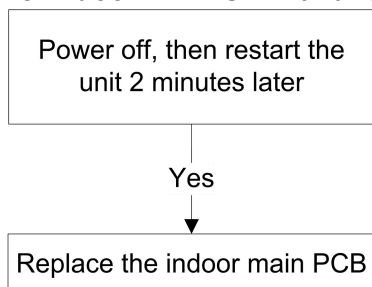


EEPROM: An electrically erasable programmable read-only memory whose contents can be erased and reprogrammed using a pulsed voltage.


d. Water level alarm

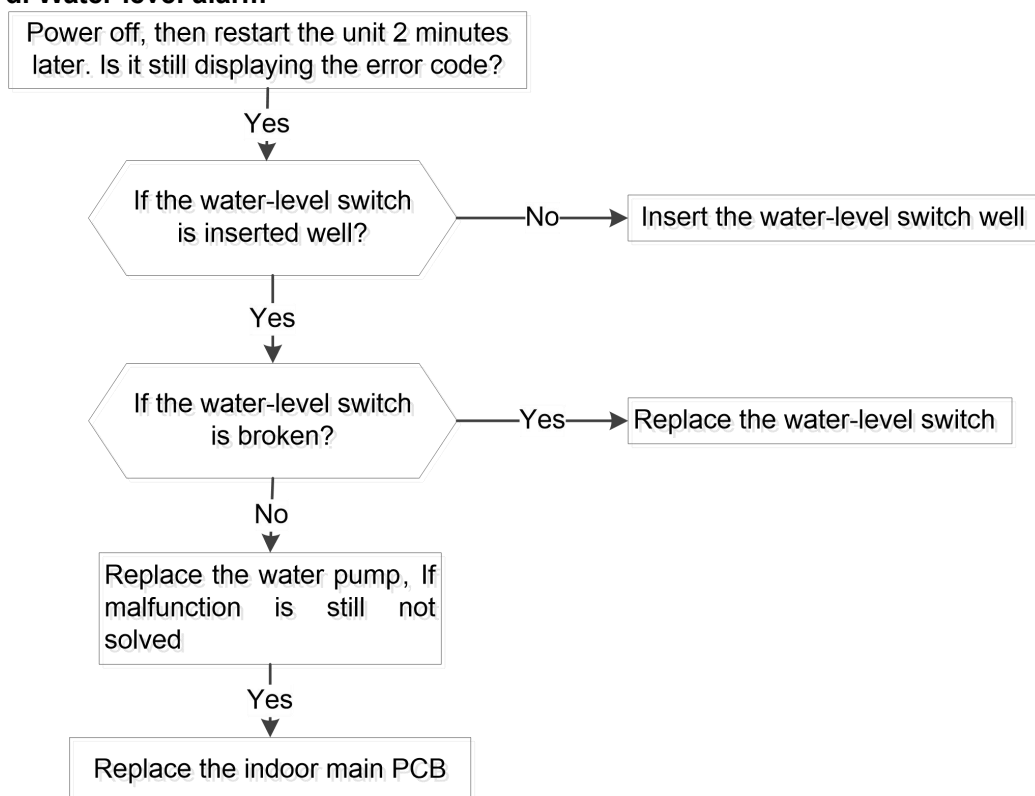

e. Communication malfunction between indoor main PCB and display PCB

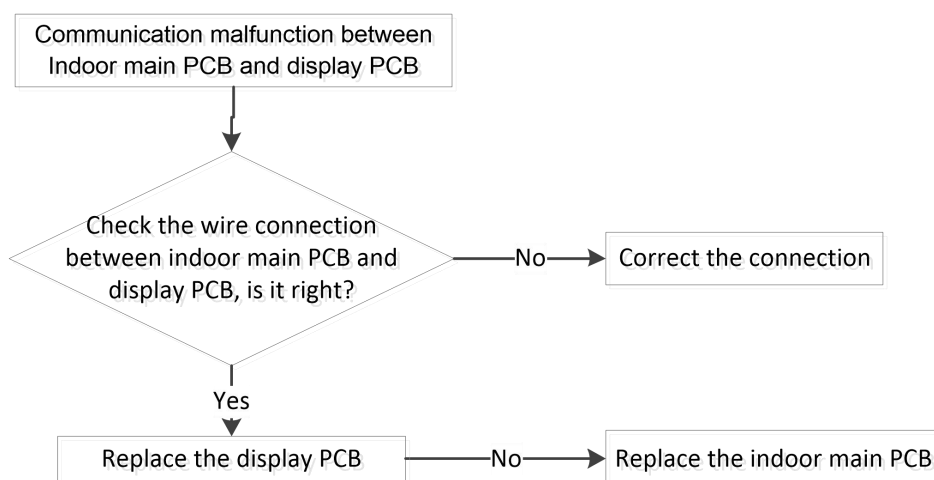


f. Refrigerant Leakage Detection

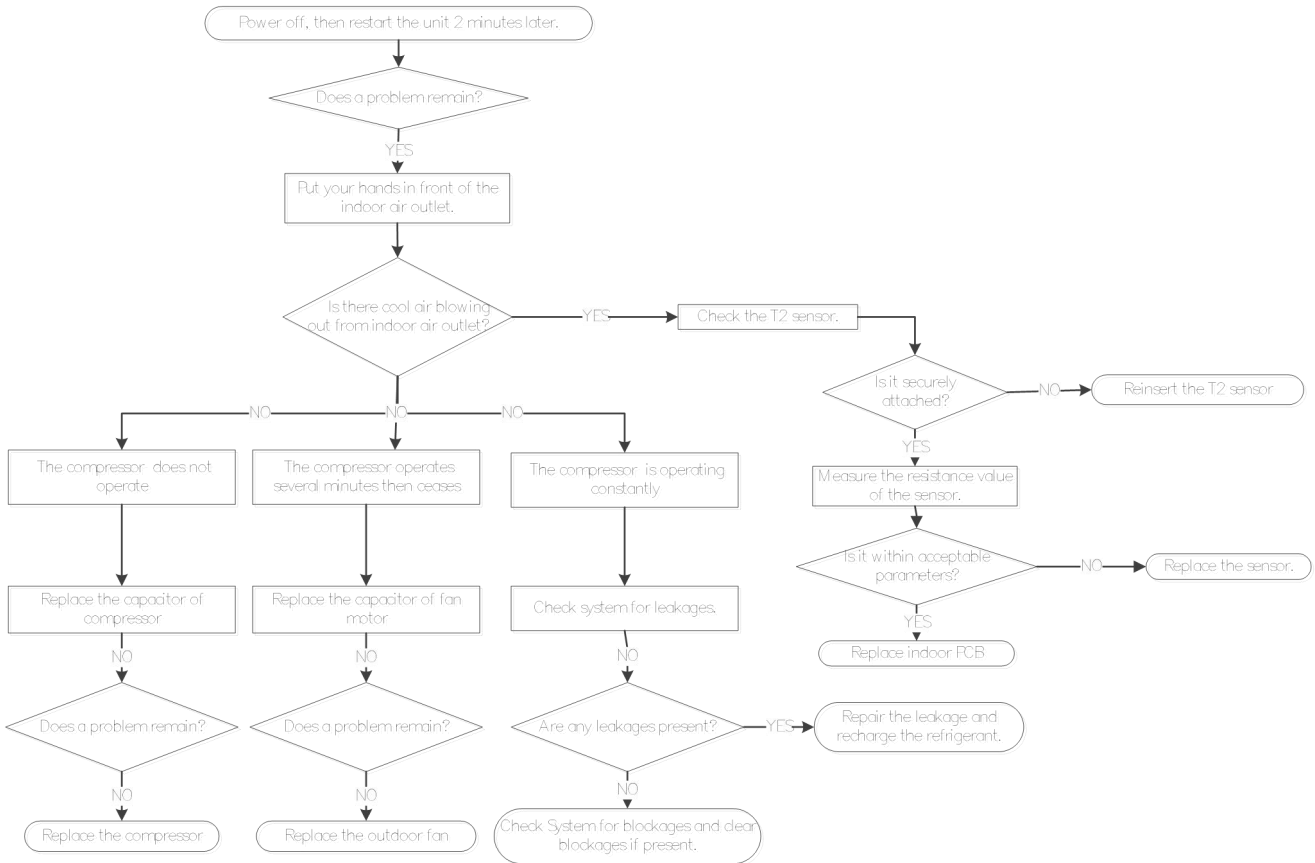


For the super-slim cassette with up-down panel

a. Communication error between auto-lifting panel and slim cassette

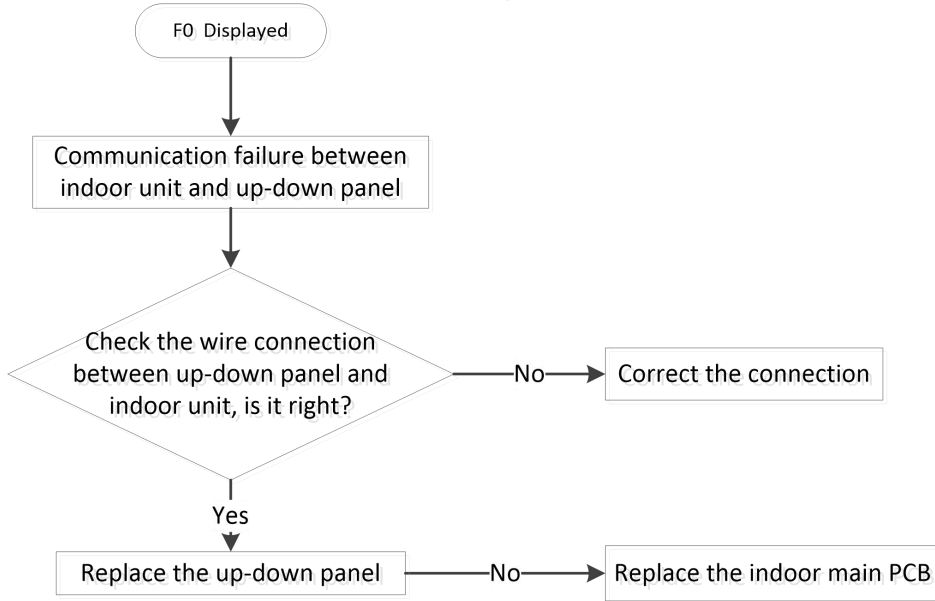


b. Auto-lifting panel is faulty

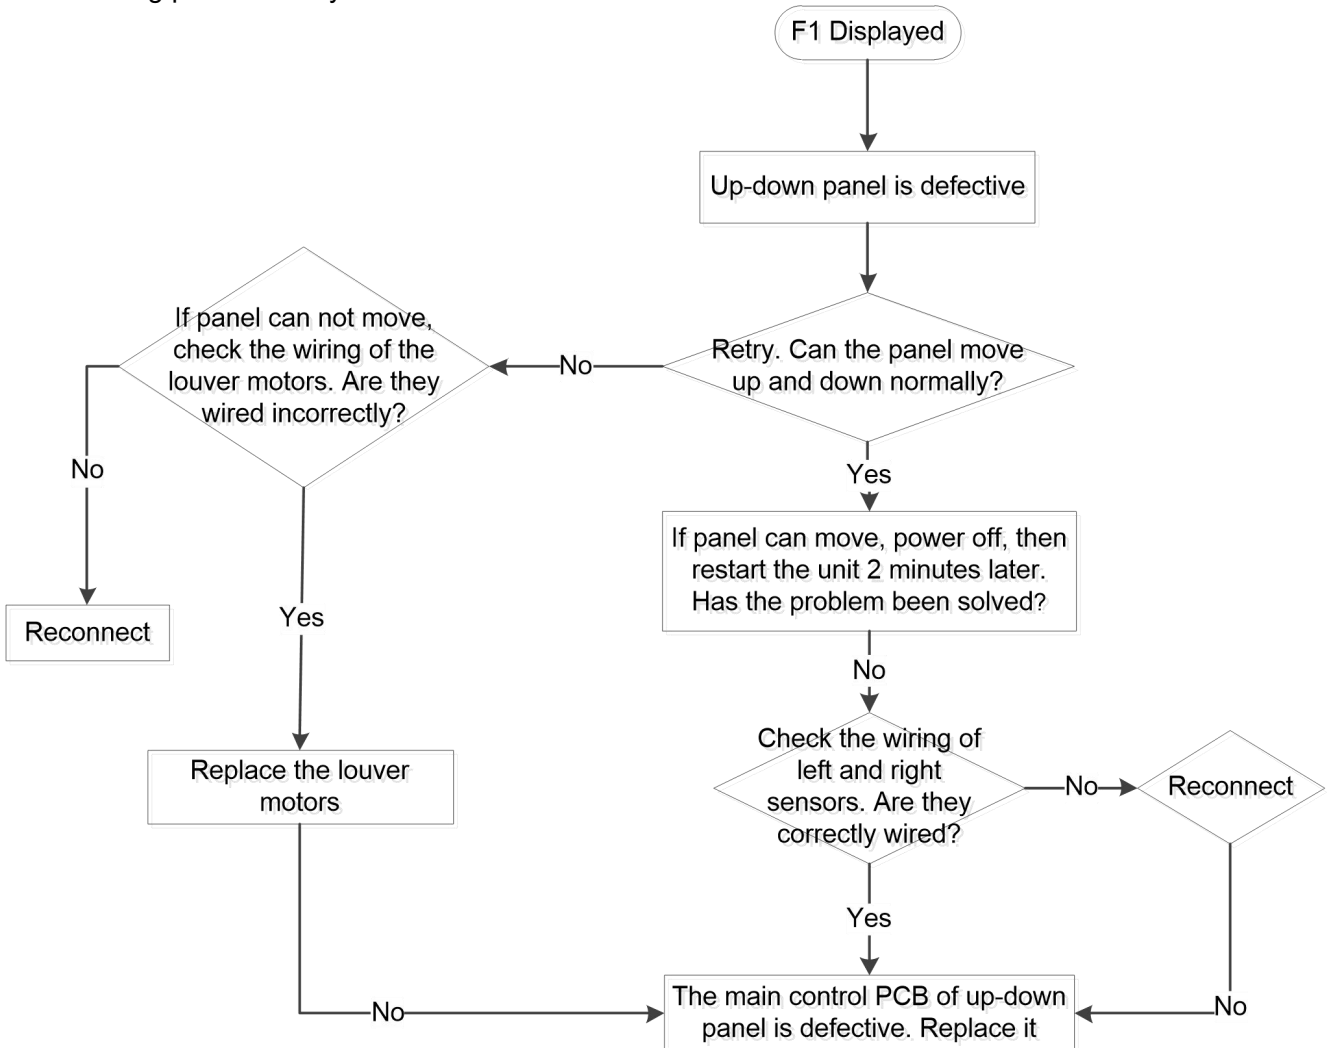


(2) For the outdoor unit


a. Phase sequence error:

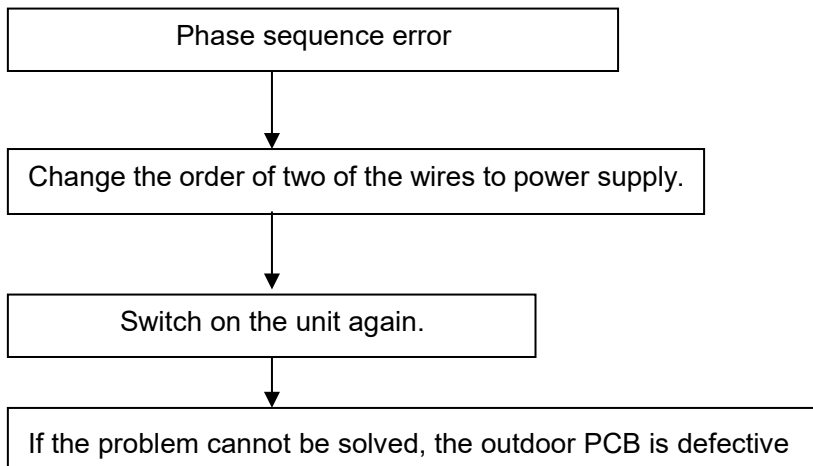


b. Lack of phase

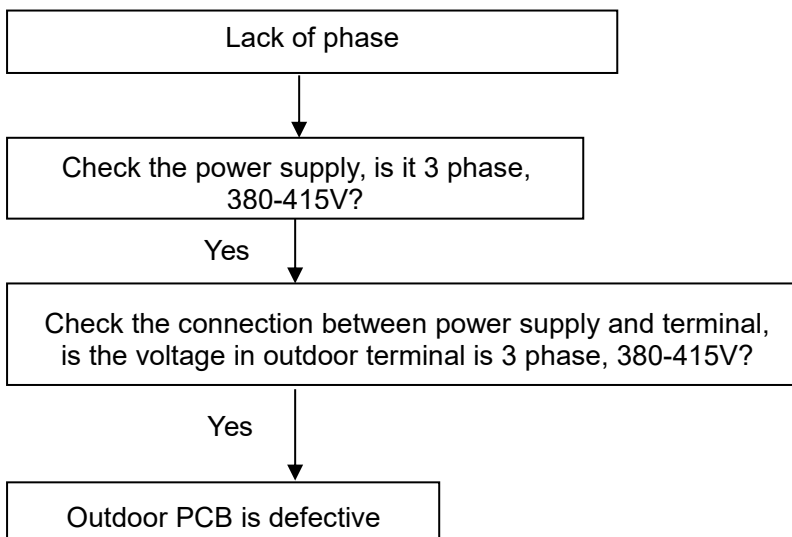


c. Overload of current

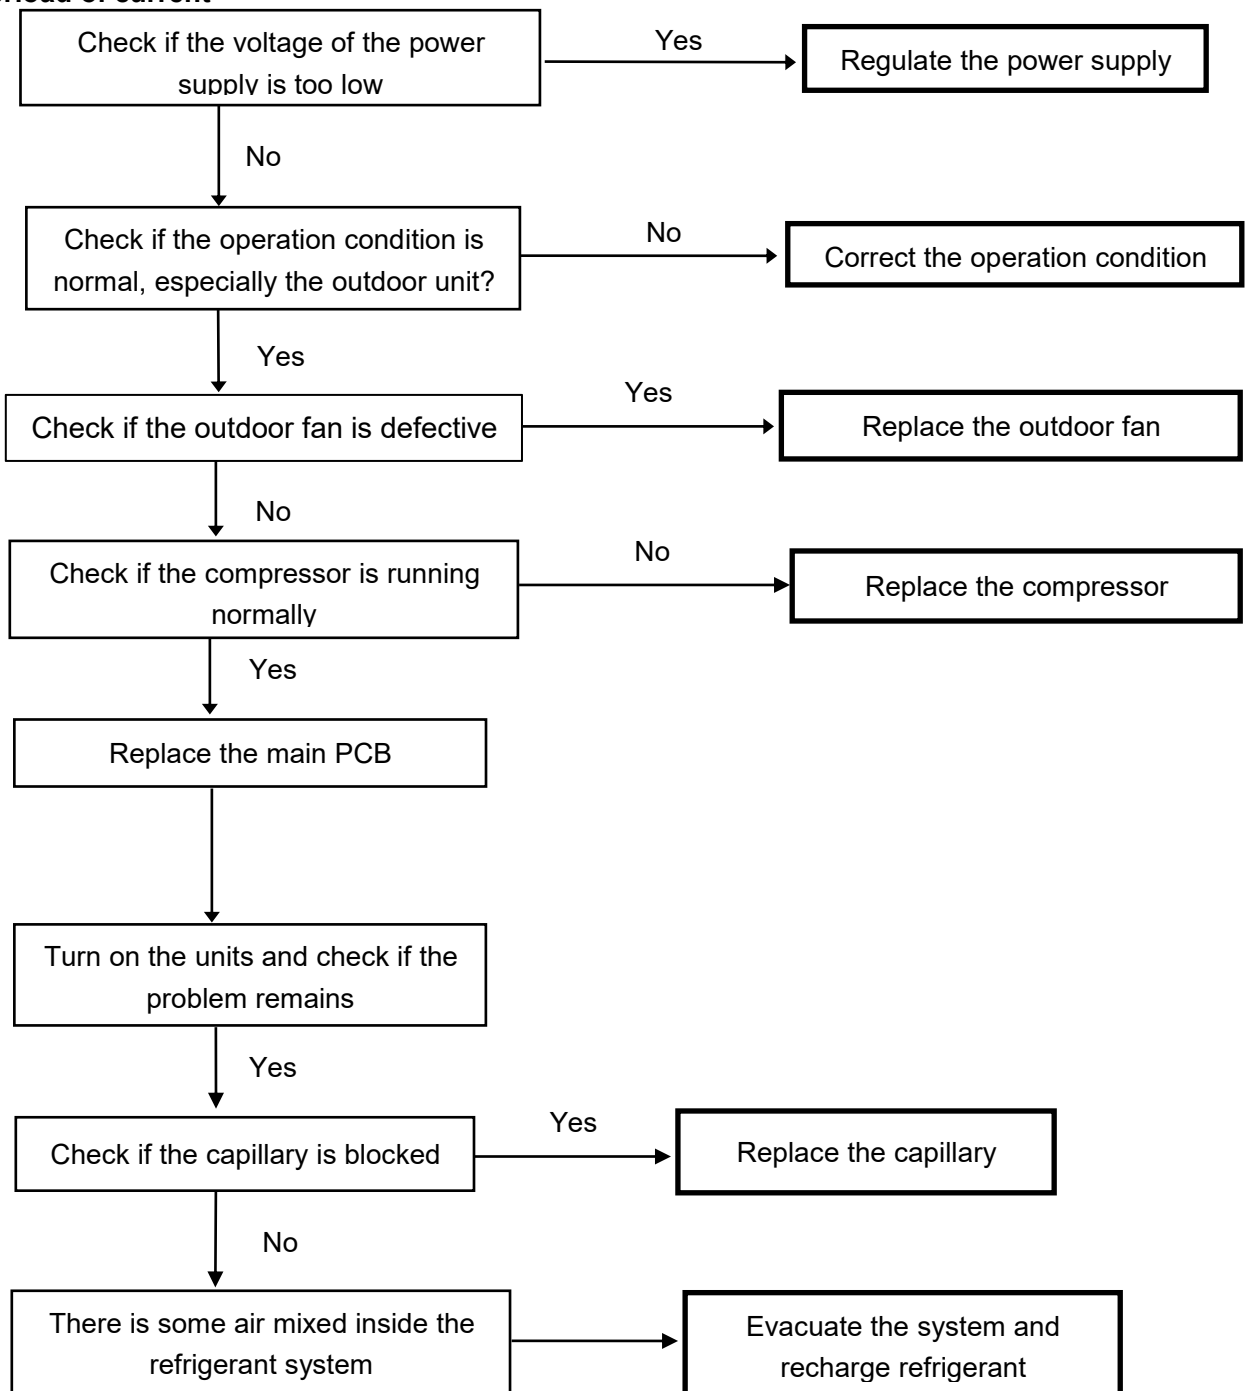


d. Protection of pressure or temp.

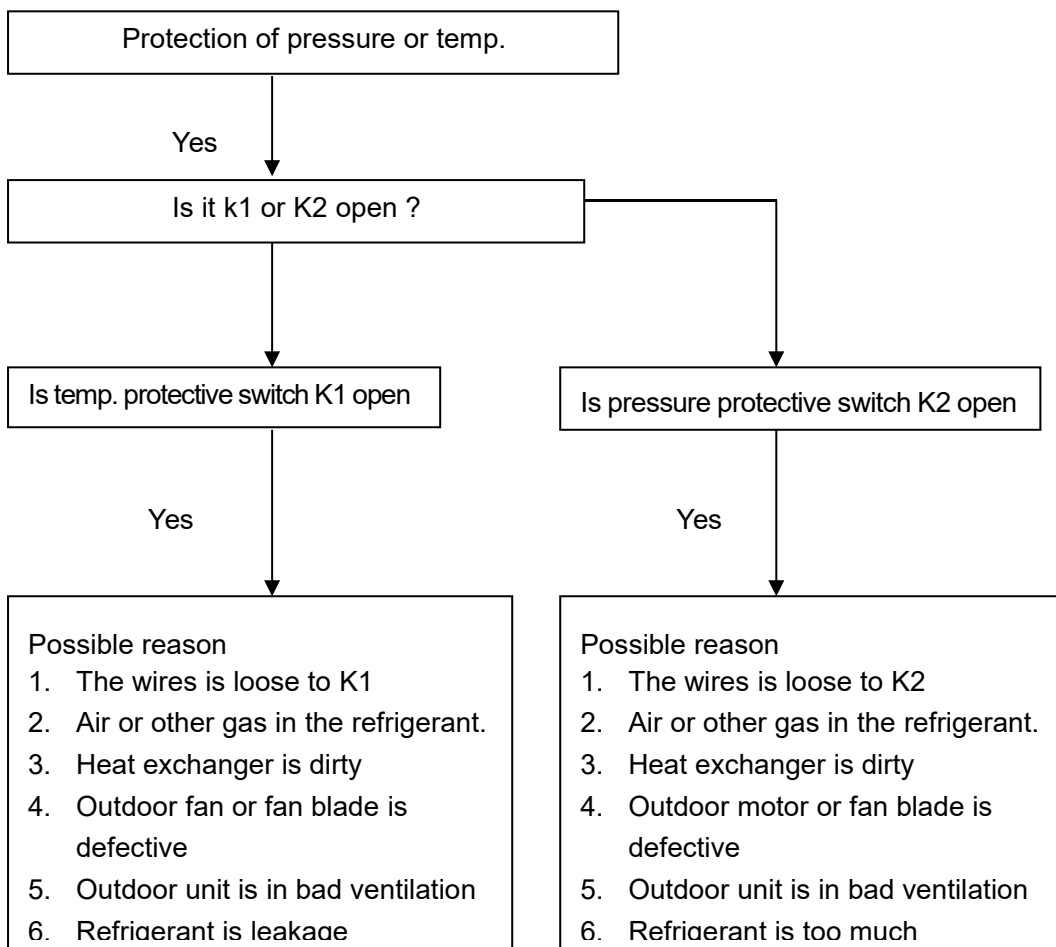

e. Temperature sensor open or short circuit

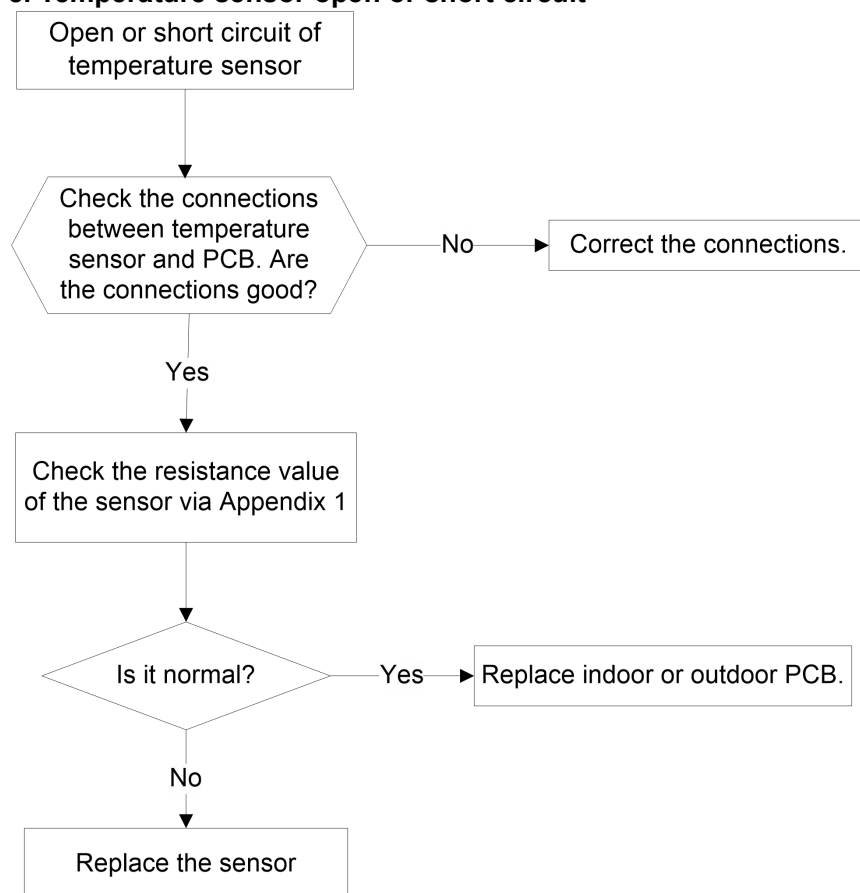

f. High temperature protection of condenser

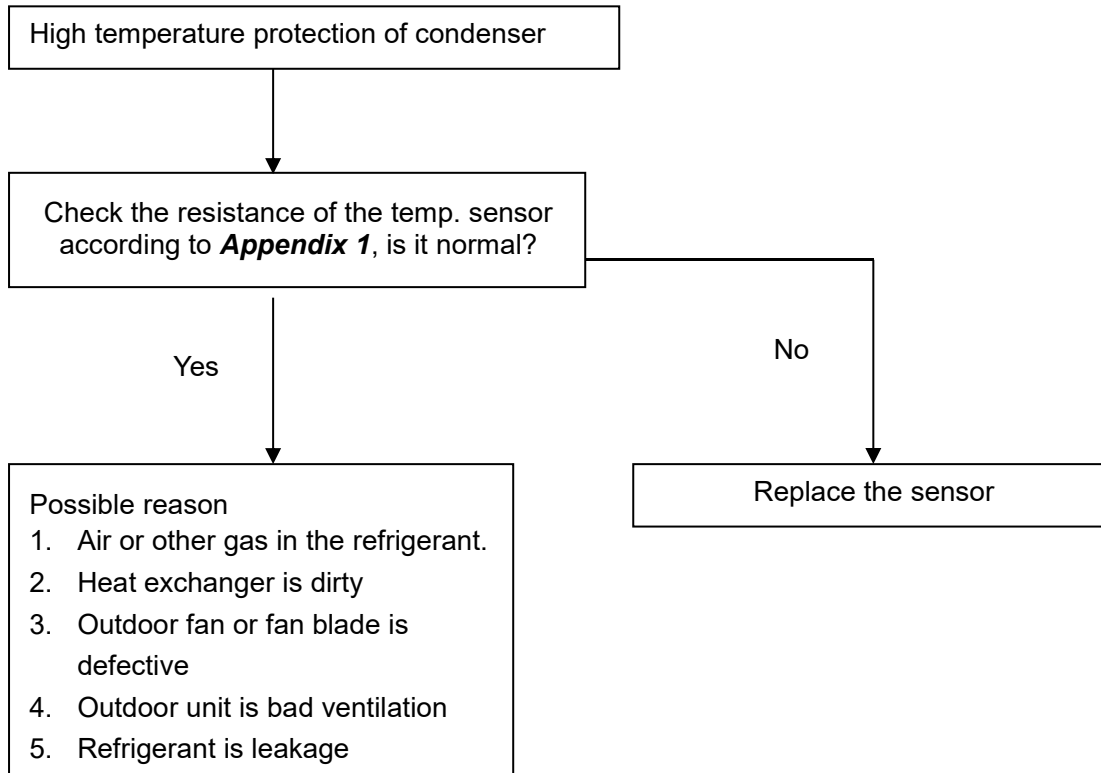

Appendix 1 Temperature Sensor Resistance Value Table (°C--K)

°C	K Ohm	°C	K Ohm	°C	K Ohm	°C	K Ohm
-20	115.266	20	12.6431	60	2.35774	100	0.62973
-19	108.146	21	12.0561	61	2.27249	101	0.61148
-18	101.517	22	11.5000	62	2.19073	102	0.59386
-17	96.3423	23	10.9731	63	2.11241	103	0.57683
-16	89.5865	24	10.4736	64	2.03732	104	0.56038
-15	84.2190	25	10.0000	65	1.96532	105	0.54448
-14	79.3110	26	9.55074	66	1.89627	106	0.52912
-13	74.5360	27	9.12445	67	1.83003	107	0.51426
-12	70.1698	28	8.71983	68	1.76647	108	0.49989
-11	66.0898	29	8.33566	69	1.70547	109	0.48600
-10	62.2756	30	7.97078	70	1.64691	110	0.47256
-9	58.7079	31	7.62411	71	1.59068	111	0.45957
-8	56.3694	32	7.29464	72	1.53668	112	0.44699
-7	52.2438	33	6.98142	73	1.48481	113	0.43482
-6	49.3161	34	6.68355	74	1.43498	114	0.42304
-5	46.5725	35	6.40021	75	1.38703	115	0.41164
-4	44.0000	36	6.13059	76	1.34105	116	0.40060
-3	41.5878	37	5.87359	77	1.29078	117	0.38991
-2	39.8239	38	5.62961	78	1.25423	118	0.37956
-1	37.1988	39	5.39689	79	1.21330	119	0.36954
0	35.2024	40	5.17519	80	1.17393	120	0.35982
1	33.3269	41	4.96392	81	1.13604	121	0.35042
2	31.5635	42	4.76253	82	1.09958	122	0.3413
3	29.9058	43	4.57050	83	1.06448	123	0.33246
4	28.3459	44	4.38736	84	1.03069	124	0.32390
5	26.8778	45	4.21263	85	0.99815	125	0.31559
6	25.4954	46	4.04589	86	0.96681	126	0.30754
7	24.1932	47	3.88673	87	0.93662	127	0.29974
8	22.5662	48	3.73476	88	0.90753	128	0.29216
9	21.8094	49	3.58962	89	0.87950	129	0.28482
10	20.7184	50	3.45097	90	0.85248	130	0.27770
11	19.6891	51	3.31847	91	0.82643	131	0.27078
12	18.7177	52	3.19183	92	0.80132	132	0.26408
13	17.8005	53	3.07075	93	0.77709	133	0.25757
14	16.9341	54	2.95896	94	0.75373	134	0.25125
15	16.1156	55	2.84421	95	0.73119	135	0.24512
16	15.3418	56	2.73823	96	0.70944	136	0.23916
17	14.6181	57	2.63682	97	0.68844	137	0.23338
18	13.9180	58	2.53973	98	0.66818	138	0.22776
19	13.2631	59	2.44677	99	0.64862	139	0.22231

Appendix 2

Unit: °C---K		Discharge temp. sensor table					
-20	542.7	20	68.66	60	13.59	100	3.702
-19	511.9	21	65.62	61	13.11	101	3.595
-18	483	22	62.73	62	12.65	102	3.492
-17	455.9	23	59.98	63	12.21	103	3.392
-16	430.5	24	57.37	64	11.79	104	3.296
-15	406.7	25	54.89	65	11.38	105	3.203
-14	384.3	26	52.53	66	10.99	106	3.113
-13	363.3	27	50.28	67	10.61	107	3.025
-12	343.6	28	48.14	68	10.25	108	2.941
-11	325.1	29	46.11	69	9.902	109	2.86
-10	307.7	30	44.17	70	9.569	110	2.781
-9	291.3	31	42.33	71	9.248	111	2.704
-8	275.9	32	40.57	72	8.94	112	2.63
-7	261.4	33	38.89	73	8.643	113	2.559
-6	247.8	34	37.3	74	8.358	114	2.489
-5	234.9	35	35.78	75	8.084	115	2.422
-4	222.8	36	34.32	76	7.82	116	2.357
-3	211.4	37	32.94	77	7.566	117	2.294
-2	200.7	38	31.62	78	7.321	118	2.233
-1	190.5	39	30.36	79	7.086	119	2.174
0	180.9	40	29.15	80	6.859	120	2.117
1	171.9	41	28	81	6.641	121	2.061
2	163.3	42	26.9	82	6.43	122	2.007
3	155.2	43	25.86	83	6.228	123	1.955
4	147.6	44	24.85	84	6.033	124	1.905
5	140.4	45	23.89	85	5.844	125	1.856
6	133.5	46	22.89	86	5.663	126	1.808
7	127.1	47	22.1	87	5.488	127	1.762
8	121	48	21.26	88	5.32	128	1.717
9	115.2	49	20.46	89	5.157	129	1.674
10	109.8	50	19.69	90	5	130	1.632
11	104.6	51	18.96	91	4.849		
12	99.69	52	18.26	92	4.703		
13	95.05	53	17.58	93	4.562		
14	90.66	54	16.94	94	4.426		
15	86.49	55	16.32	95	4.294	B(25/50)=3950K	
16	82.54	56	15.73	96	4.167		
17	78.79	57	15.16	97	4.045	R(90°C)=5KΩ±3%	
18	75.24	58	14.62	98	3.927		
19	71.86	59	14.09	99	3.812		


3. Controller

3.1 Wireless Remote Controller

3.1.1 Remote Controller Specifications

Model	
Rated Voltage	3.0V
Lowest Voltage of CPU Emitting Signal	2.0V
Reaching Distance	8m (when using 3.0 voltage, it can get 11m)
Environment Temperature Range	-5°C~60°C


Introduction of Function Buttons on the Remote Controller

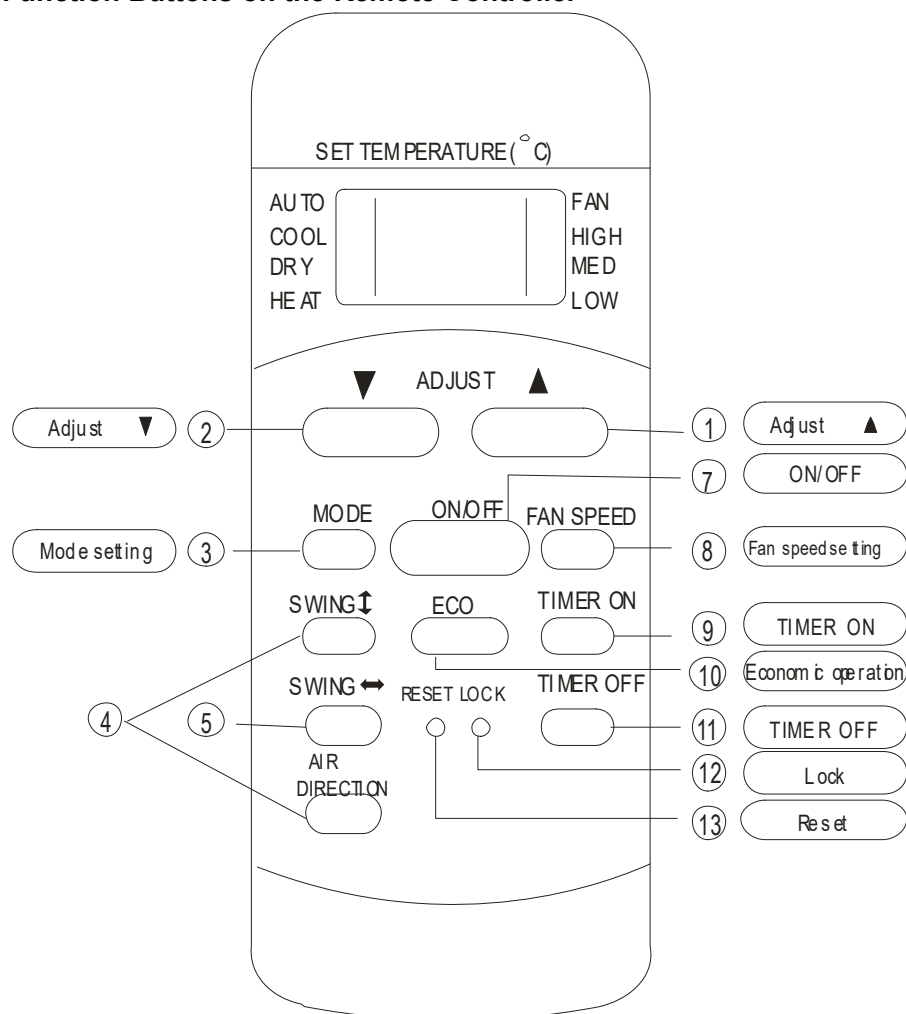

1. **Adjust ▼** : Decrease the set temp. Keeping pressing will decrease the temp with 1°C per 0.5s.

2. **Adjust ▲** : Increase the set temp. Keeping pressing will increase the temp with 1°C per 0.5s.

 3. **MODE**: Once pressing, running mode will be selected in the following sequence:



NOTE: No heating mode for cool only type unit.

4. **VERT SWING**: Used to stop or start horizontal louver movement. The louver will swing up and down automatically if push this button.

 
AIR DIRECTION: Used to set the desired up/down air flow direction. The louver changes 6 degree in angle for each press.

5. **HORIZ SWING**: Used to stop or start vertical louver movement.

6. FAN SPEED+ MODE: Press the Mode and Fan speed button simultaneously for 2 seconds. The remote controls into faceplate setting state and the LCD shows F2. Press the TEMPUP(▲) to control the faceplate up and press the TEMP DOWN(▼) to control the faceplate down. Press any button to exit the faceplate setting state, then the LCD back to the normal display.

7. ON/OFF: For turning on or turning off the air conditioner.

8. FAN SPEED: Fan speed will be selected in following sequence once pressing this button:



9. TIME ON: For time ON setting. Once pressing this button, the time will increase by 0.5 hour. When the set time exceeds 10 hours, pressing the button will increase the time by 1 hour. Adjusting the figure to 0.00 will cancel time ON setting.

10. ECO: Select this function during the sleeping time. It can maintain the most comfortable temperature and save energy. This function is available on COOL, HEAT or AUTO mode only .

NOTE: While the unit is running under Energy-saving mode, it would be cancelled if press MODE, FAN SPEED or ON/OFF button.

11. TIME OFF: For time OFF setting. Once pressing this button, the time will increase by 0.5 hour. When the set time exceeds 10 hours, pressing the button will increase the time by 1 hour.

Adjust the figure to 0.00 will cancel time ON setting.

12. LOCK (inner located): Push this button to lock in all the current settings, and the remote controller will not accept any operation except that of the LOCK. Use the LOCK mode when you want to prevent settings from being changed accidentally. Press the LOCK button again to cancel the LOCK function. A lock symbol will appear on the remote controller display when the lock function is activated.


13. RESET (inner located): Once the recessed RESET button is pressed, all of the current settings will be cancelled and the controller will return to the initial settings..

3.1.2 R51I3/BGE-M


Remote Controller Specifications

Model	
Rated Voltage	3.0V
Lowest Voltage of CPU Emitting Signal	2.0V
Reaching Distance	8m
Environment Temperature Range	-5℃~60℃

Introduction of Function Buttons on the Remote Controller

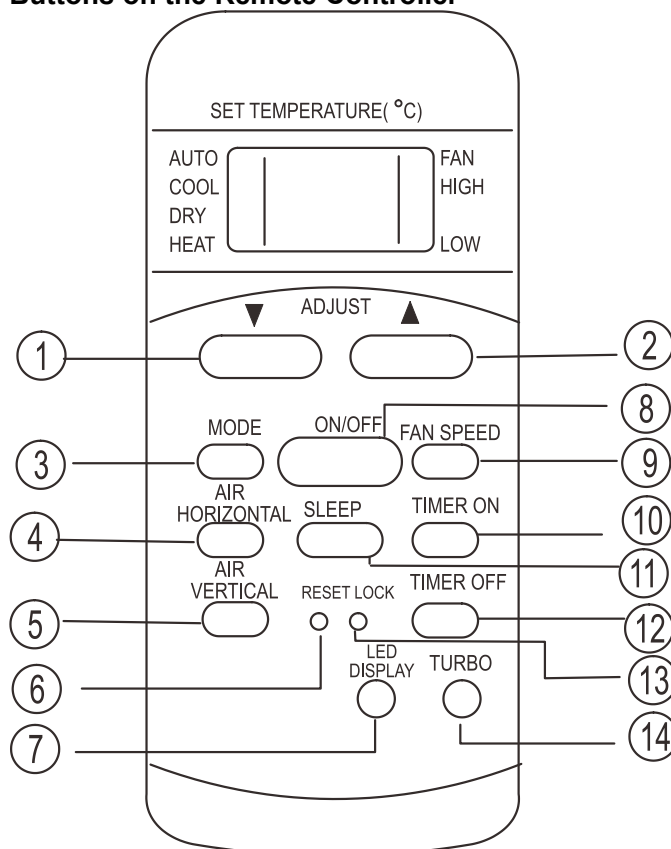

 1. **Adjust** ▼ : Decrease the set temp. Keeping pressing will decrease the temp with 1℃ per 0.5s.
2. **Adjust** ▲ : Increase the set temp. Keeping pressing will increase the temp with 1℃ per 0.5s.
3. **MODE**: Once pressing, running mode will be selected in the following sequence:



NOTE: No heating mode for cool only type unit.

4. AIR HORIZONTAL Button: When press the button once and quickly, the air flow direction setting feature of the louver is activated. The moving angle of the louver is 6° for each press. Keep pressing the button to move the louver to the desired position. If keep pressing the button without releasing for 2 more seconds, the auto swing feature of the louver is activated. The horizontal louver would swing up/down automatically. Press it again to stop.

 
5. AIR VERTICAL Button: When press the button once and quickly, the air flow direction setting feature of the louver is activated. The moving angle of the louver is 6° for each press. Keep pressing the button to move the louver to the desired position. If keep pressing the button without releasing for 2 more seconds, the auto swing feature of the louver is activated. The vertical louver would swing left and right automatically. Press it again to stop. (If the indoor unit has no this feature, there is no corresponding operation happened when press this button.)

6. RESET (inner located): Once the recessed RESET button is pressed, all of the current settings will be cancelled and the controller will return to the initial settings..

7. LED DISPLAY Button: Press this button to clear the display on the indoor unit, press it again to light the display

8. ON/OFF: For turning on or turning off the air conditioner.

9. FAN SPEED: Fan speed will be selected in following sequence once pressing this button:



10. TIME ON: For time ON setting. Once pressing this button, the time will increase by 0.5 hour. When the set time exceeds 10 hours, pressing the button will increase the time by 1 hour. Adjusting the figure to 0.00 will cancel time ON setting.

11. SLEEP Button: Press this button to activate the Energy-Saving mode. Press again to stop the function. This function is available on COOL, HEAT or AUTO mode only and maintain the most comfortable temperature for you.

12. TIME OFF: For time OFF setting. Once pressing this button, the time will increase by 0.5 hour. When the set time exceeds 10 hours, pressing the button will increase the time by 1 hour.

Adjust the figure to 0.00 will cancel time ON setting.

13. LOCK (inner located): Push this button to lock in all the current settings, and the remote controller will not accept any operation except that of the LOCK. Use the LOCK mode when you want to prevent settings from being changed accidentally. Press the LOCK button again to cancel the LOCK function. A lock symbol will appear on the remote controller display when the lock function is activated.


14. TURBO Button: Push this button to activate the speed cooling function(Speed cooling operates at super high fan speed in cooling mode). For the unit adopts PTC, when press TURBO button in heating mode, the PTC heater is energized and brings stronger and faster heating operation.

3.1.3 R51M/(C)E


Remote Controller Specifications

Model	
Rated Voltage	3.0V
Reaching Distance	8m
Environment Temperature Range	-5℃~60℃

Introduction of Function Buttons on the Remote Controller

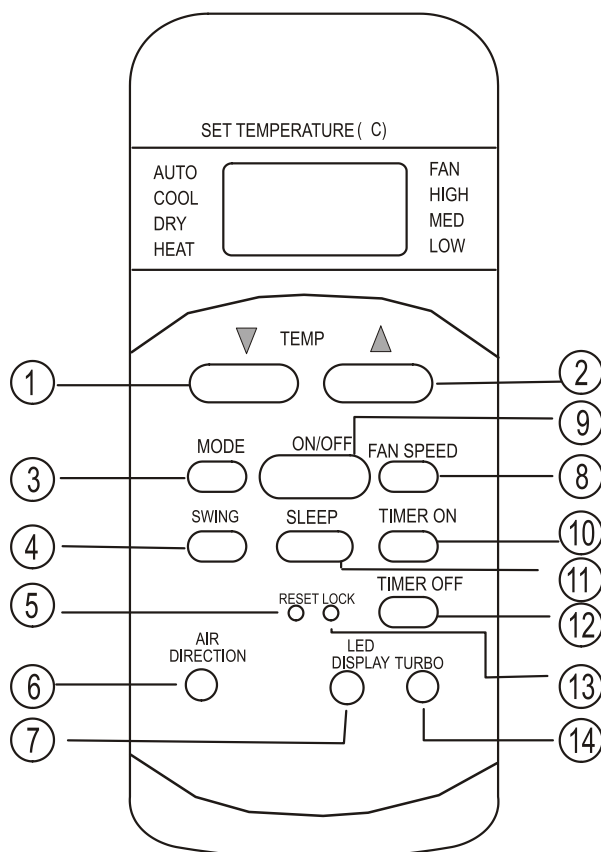


 - 1. Adjust ▼** : Decrease the set temp. Keeping pressing will decrease the temp with 1℃ per 0.5s.
- 2. Adjust ▲** : Increase the set temp. Keeping pressing will increase the temp with 1℃ per 0.5s.
- 3. MODE:** Once pressing, running mode will be selected in the following sequence:



NOTE: No heating mode for cool only type unit.

 - 4. SWING:** Used to stop or start horizontal louver movement. The louver will swing up and down automatically if push this button.
- 5. RESET** (inner located): Once the recessed RESET button is pressed, all of the current settings will be cancelled and the controller will return to the initial settings.
- 6. AIR DIRECTION:** Press this button to change the swing angle of the louver. The swing angle of the louver is 60 for each press. When the louver swing at a certain angle which would affect the cooling and heating effect of the air conditioner, it would automatically change the swing direction. No symbol will appear in the display area when press this button. (Not applicable to units without this function).
- 7. LED:** Press this button to clear the digit display in the air conditioner, press it again to activate it (Not available for the units without LED display window).
- 8. FAN SPEED:** Fan speed will be selected in following sequence once pressing this button:



9. ON/OFF: For turning on or turning off the air conditioner

10. TIME ON: For time ON setting. Once pressing this button, the time will increase by 0.5 hour. When the set time exceeds 10 hours, pressing the button will increase the time by 1 hour. Adjusting the figure to 0.00 will cancel time ON setting.

11. SLEEP: Press this button to go into the Energy-Saving operation mode. Press it again to cancel. This function is only can be used on COOL, HEAT and AUTO mode and maintain the most comfortable temperature for you.

12. TIME OFF: For time OFF setting. Once pressing this button, the time will increase by 0.5 hour. When the set time exceeds 10 hours, pressing the button will increase the time by 1 hour.


Adjust the figure to 0.00 will cancel time ON setting.

13. LOCK (inner located): Push this button to lock in all the current settings, and the remote controller will not accept any operation except that of the LOCK. Use the LOCK mode when you want to prevent settings

from being changed accidentally. Press the LOCK button again to cancel the LOCK function. A lock symbol will appear on the remote controller display when the lock function is activated.

14. TURBO: Push this button to activate/cancel the Turbo function which enables the unit to reach the preset temperature in the shortest time. On cooling mode, the unit will blow strong cooling air with super high fan speed. On heating mode (applicable to the unit adopts PTC only), the PTC will bring fast heating operation.

3.1.4

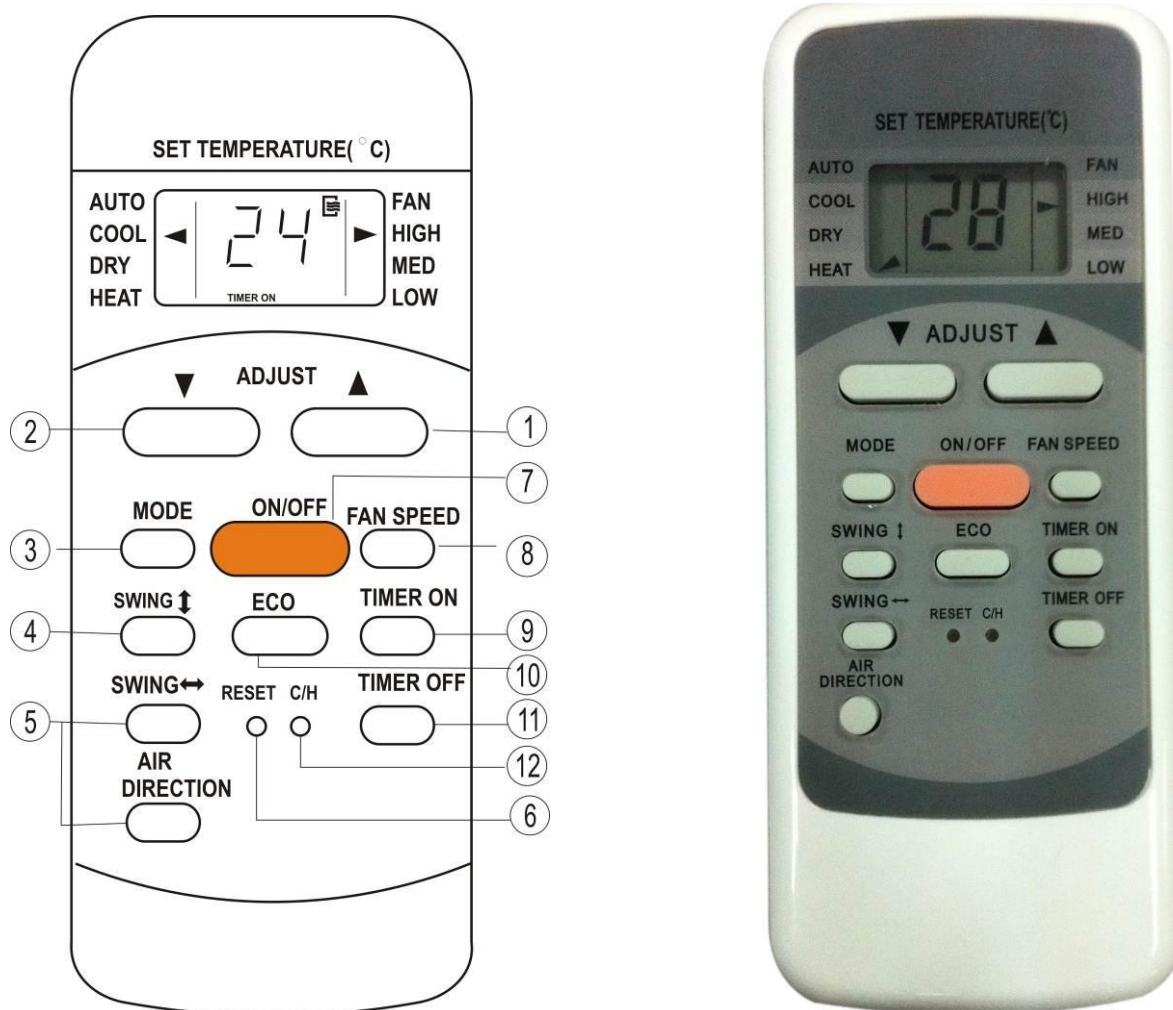**General Function for wireless remote controller:**


Model	
Rated voltage	3.0V(2pieces of LR03 7# batteries)
Min voltage for sending signal of CPU	2.4V
Effective receiving distance	8m~11m
Operation condition	-5~60℃

Buttons and functions

1. Adjust ▼ : Decrease the set temperature Keeping pressing will decrease the temp with 1°C per 0.5s.

2. Adjust ▲ : Increase the set temperature Keeping pressing will increase the temp with 1°C per 0.5s.

 3. MODE: Once pressing, running mode will be selected in the following sequence:



NOTE: No heating mode for cool only type unit.

 
4. VERT SWING: Used to stop or start horizontal louver movement or set the desired up/down air flow direction. The louver changes 6 degree in angle for each press. If keep pushing more than 2 seconds, the louver will swing up and down automatically.

5. HORIZ SWING: Used to stop or start vertical louver movement.

6. AIR DIRECTION: Used to set the desired up/down air flow direction. The louver changes 6 degree in angle for each press.

7. ON/OFF: For turning on or turning off the air conditioner.

8. FAN SPEED: Fan speed will be selected in following sequence once pressing this button:



9. TIME ON: For time ON setting. Once pressing this button, the time will increase by 0.5 hour. When the set time exceeds 10 hours, pressing the button will increase the time by 1 hour. Adjusting the figure to 0.00 will cancel time ON setting.

10. ECO: Activate or turn off economic operation mode. It is suggested to turn on this function when sleeping. (Only available when remote controller is used with corresponding unit.)

11. TIME OFF: For time OFF setting. Once pressing this button, the time will increase by 0.5 hour. When the set time exceeds 10 hours, pressing the button will increase the time by 1 hour.

Adjust the figure to 0.00 will cancel time ON setting.

12. C/H (inner located): Press this button with a needle of 1mm to shift the mode between Cooling only and Cooling & Heating according to the feature of the machine.


13. RESET (inner located): Press this button with a needle of 1mm to cancel the current setting and reset remote controller.

3.2 Wired Remote Controller


3.2.1



Name and functions of buttons on the wire controller

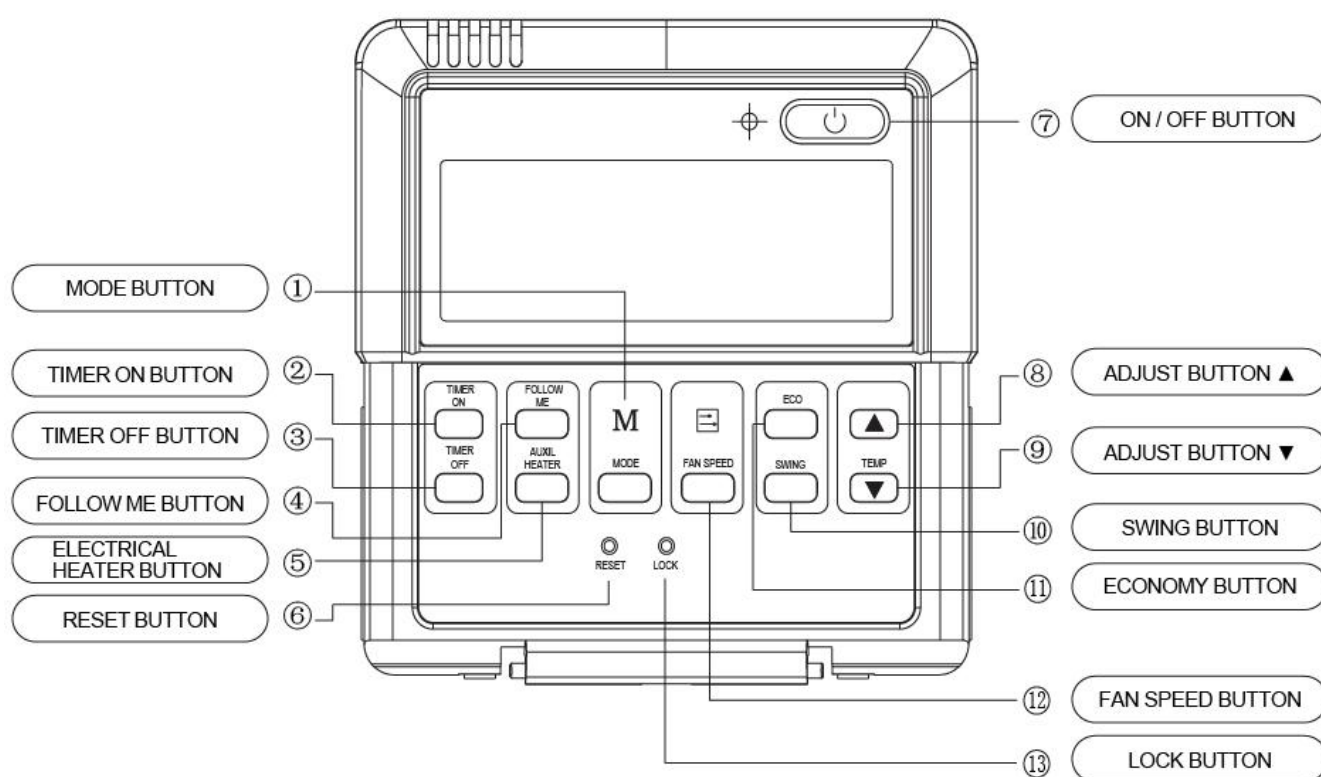

 1. Mode button: When press this button, the operation mode change as the following sequence:




Remark: For the cooling only model, the heating mode is skipped.

2. Timer on button: Press this button, timer on function is active. Then every press, the time increase 0.5h, after 10h, 1h increasement after each press. If cancel this Function, just set it to "0.0"
3. Timer off button: Press this button, timer off function is active. Then every press, the time increase 0.5h, after 10h, 1h increasement after each press. If cancel this function, just set it to "0.0" .
4. Follow me button: When under cool, heat and auto mode, press this button, follow me function is active. Press again, this function is ineffective.
5. Electrical heater button: If press this button in heat mode, electrical heater function become ineffective.
6. Reset button (hidden): Use a 1mm stick to press in the little hole , then the current setting is canceled . The wire controllers enter into original state.
7. ON/OFF button: When in off state, press this button, the indicator is on, the wire controller enter into on state, and send setting information to indoor PCB. When in on state, press this button, the indicator is off, and send instruction. If timer on or timer off has been set, it cancel this setting then send instruction to stop the machine.


Controller

8. Adjust button: Set indoor temperature up. If press and hold on, it will increase at 1degree per 0.5 second.
9. Adjust button: Set indoor temperature down. if press and hold on, it will decrease at 1degree per 0.5 Second.
10. Swing button: First press, start swing function; second press, stop swing. (Match to some model with swing function).
11. Economy operation button: press this button, the indoor unit operates in economy mode, press again, exit this mode (it may be ineffective for some models)
12. Fan speed button: press this button consecutively; the fan speed will circle as follow:

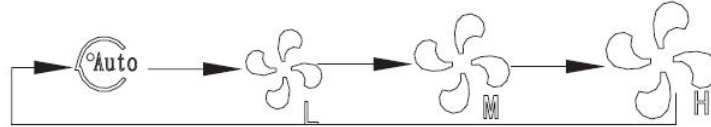

13. Lock button (hidden): When you push the LOCK button, all current settings are locked in and the wire controller does not accept any operation except that of the LOCK button. Use the lock mode when you want to prevent setting from being changed accidentally or play fully. Push the LOCK button again when you want to cancel the LOCK mode.

Name and function of LCD on the wire controller

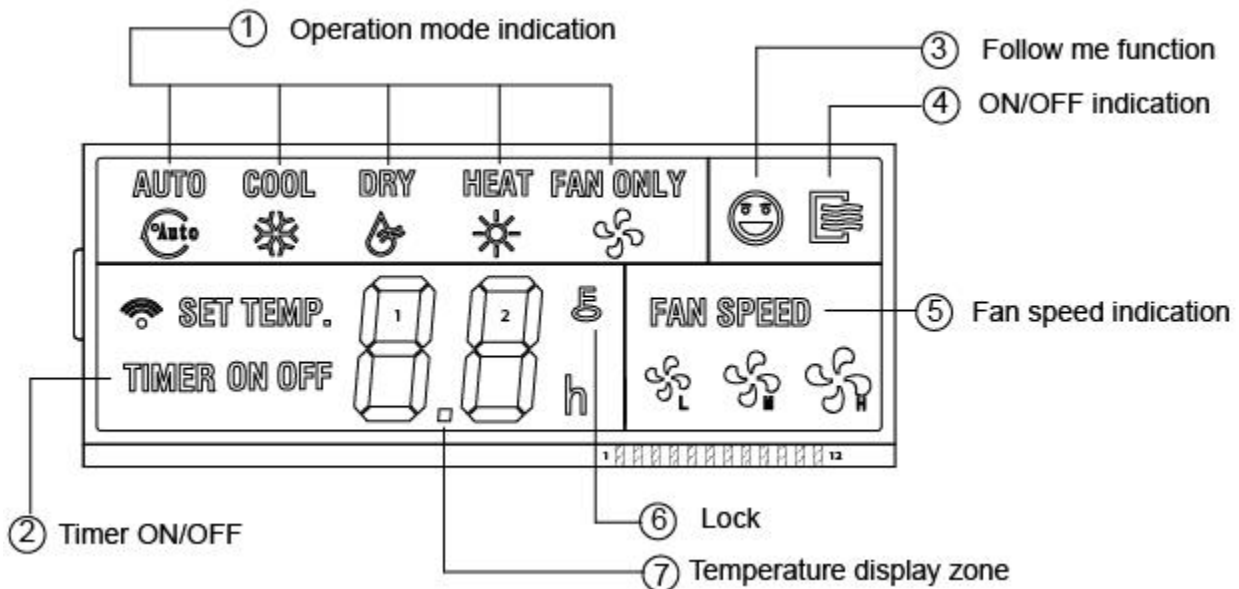

1. Operation mode indication: When press" MODE" button, the following mode can be selected in circle. Auto Cool Dry Heat Fan only Auto.
Auto→ Cool→ Dry →Heat→ Fan only →Auto
For cooling only model, heat mode is skipped.
2. Timer: When adjust setting on time or only on on time is set, the "ON" is lighted. When adjust setting off time or only off time is set, the" OFF" is lighted. If on and off timer are both set, the "ON" and "OFF" are both lighted.
3. Follow me function: There is a temperature sensor inside the wire controller, after setting temperature, it will compare the two temperatures, and the space of wire controller will be the same as setting temperature. It is available under cooling, heating, auto mode.
4. ON/OFF indication: When it is on, the icon display, otherwise it is extinguished.
5. Fan speed indication: There are four fan modes: low, middle, high, auto. For some models, no middle fan then the middle fan is seen as high speed.
6. Lock: When the "LOCK" button is pressed, the icon appears and other buttons is unable, press again, the icon disappears.
7. Temperature display zone: Generally it displays setting temperature; it can be adjusted by press temperature button▲and▼.But in fan mode, no display here.


Remark:

The wired controller will reset to factory setting with auto mode, auto fan and 24°C setting temperature when the air conditioner restarts after power failure.

And this may cause inconsistent displays on the wired controller and on the air conditioner. You need to readjust the running status through the wired controller.


Installation

Wiring Principle Sketch:

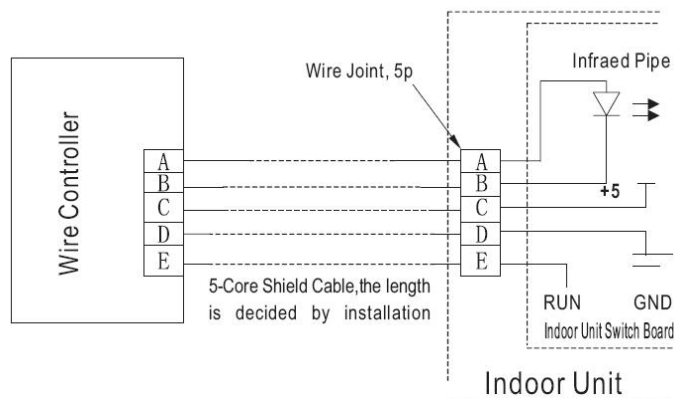

Installation Notice:

When the air conditioner needs the constant frequency wire controller, be sure adding a wire joint with 5 terminal named A, B, C, D, E in indoor unit, and fixing an infrared emitter whose anode and cathode connecting with A and B near the receiver in the indoor unit switch board, then connecting the terminal +5v, GND, Run in the switch board to C,D,E respectively.

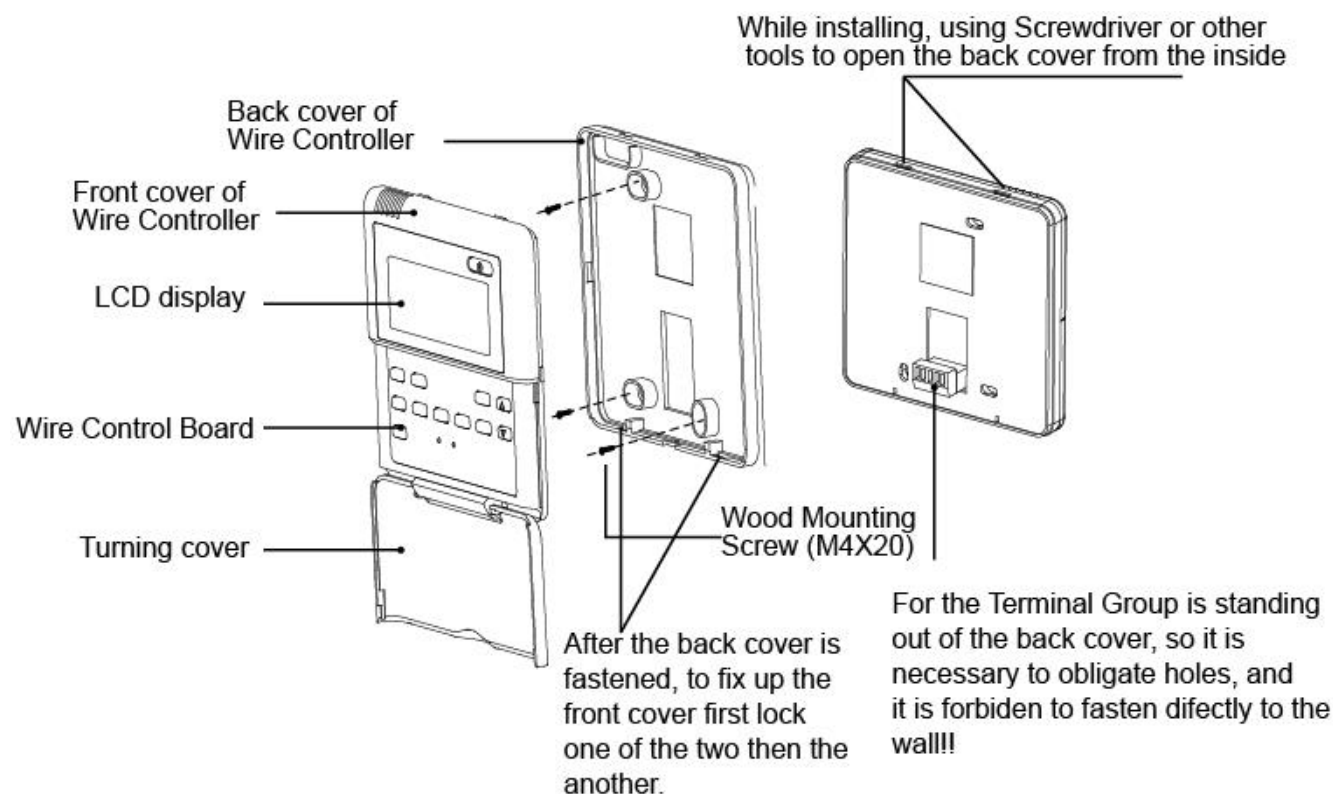

NOTE

- The connecting wire should be a little longer as to take away the switch board easily for maintenance.
- The connecting wire should be a little longer as to take away the controller easily for maintenance.

Airwell

Just feel well

WARNING :

The design and specifications are subject to change without prior notice for product improvement. Consult with the sales agency or manufacturer for details.

ATTENTION :

Le design et les données techniques sont donnés à titre indicatif et peuvent être modifiés sans préavis.



AIRWELL RESIDENTIAL SAS

10,Rue du Fort de Saint Cyr,
78180 Montigny le Bretonneux - France
www.airwell.com