

SERVICE MANUAL

Slim Duct Type Indoor Unit DVLA Range R410a English Manual

DVLA-025/022-01M22 DVLA-035N-01M22 DVLA-040N-01M22



IMPORTANT NOTE:

Read this manual carefully before installing or operating your new air conditioning unit. Make sure to save this manual for future reference.



1. Slim Duct Type Indoor Unit

1.1 Features



DVLA-025/022-01M22 DVLA-035N-01M22 DVLA-040N-01M22

- 1.185mm height ultra thin design and 420mm depth
- 2. Built in drain pump
- 3. Ultra low noise: realize 21dB (A) operation noise
- 4. Rear air return
- 5. Static pressure 0-30Pa
- 6. 7 models ranging from 1.5kW to 7.1KW



1.2 Specification

	MODEL		DVLA-022N-01M22
Power supply		Ph-V-Hz	1,220~230,50/60
	Capacity	kBtu/h	7.5
	Capacity	kW	2.2
Cooling	Power input	W	56
	Current	А	0.26
	Capacity	kBtu/h	8.5
	Capacity	kW	2.5
Heating	Power input	W	56
	Current	А	0.26
	Heating capacity at low temp.	kW	2.0
Operating curre	ent	А	0.26
Power consum	ption	kW	0.056
	Brand		Broad Ocean/Welling
	Model		Y5S413B5116/YSK20-4I-2
	Туре		AC
	Insulation class		В
Indoor motor	IP class		IP20
	Power Input	W	48
	Power output	W	25/23
	Capacitor	μF	1.5/3.0µF
	Speed (High/Middle/Low)	rpm	950/765/600
	Brand		/
Indoor fan	Туре		centrifugal
	Quantity		2
	a. Number of rows		2
	b. Tube pitch (a)×row pitch (b)	mm	21*13.3
	c. Fin spacing	mm	1.4
Indoor coil	d. Fin type (code)		
	e. Tube outside dia. and type	mm	
	f. Coil length×height×width	mm	640*210*26.6
	g. Number of circuits		3
	Cabinet coating type		Galvanized
Cabinet	Cabinet salt spray test duration	Hour	72
	Control box IP class		IP20



	MODEL		DVLA-022N-01M22
	Sheet metal thickness		0.8
	Drain pan material		PS
Construction	Drain pan insulation		20
	Drain pump option		Standard 600mm
	Branch outlet option		No
	Material		Hot zinc plate
Indoor wall	Thickness	mm	0.8
	Double or single skin		Single
	Material		PP
Air filter	Mesh		100
	Pressure drop	Pa	5
Disire	Liquid pipe	mm	6.35
Piping dimension	Gas pipe	mm	9.52
difficition	Drain hose	mm	25
	Panel model	1	
Panel	External dimensions(W/D/H)	mm	
(optional)	Shipping dimensions(W/D/H)	mm	
	Net / shipping weight	kg	
Fresh air dime	nsion	mm	Ф80
Sound pressur	e level (H/M/L)	dB (A)	27/24/21
Sound power I	evel (H/M/L)	dB (A)	41/38/35
Standard station	pressure	Pa	0
Max. static pre	ssure	Pa	30
Indoor air flow	(H/M/L)	m³/h	480/420/360
Air outlet dime	nsions	mm	640*90
Air return dime	nsions	mm	760*152
Dimension (W	*H*D)	mm	850*185*420
Packing (W*H*	D)	mm	1045*270*540
Net weight		kg	17.5
Gross weight		kg	22.5

Nominal condition: indoor temperature (cooling): 27DB (°C)/19WB (°C), indoor temperature (heating): 20DB (°C) Outdoor temperature (cooling): 35DB (°C)/24WB (°C), outdoor temperature (heating): 7DB (°C)/6WB (°C) The noise level will be measured in the third octave band limited values, using a Real Time Analyser calibrated sound intensity meter. It is a sound pressure noise level.



	MODEL		DVLA-025N-01M22	DVLA-035N-01M22	
Power supply		Ph-V-Hz	1,220~230,50/60	1,220~230,50/60	
	Capacity	kBtu/h	9.6	12.3	
	Capacity	kW	2.8	3.6	
Cooling	Power input	W	56	56	
	Current	Α	0.26	0.26	
	Capacity	kBtu/h	10.9	13.6	
	Capacity	kW	3.2	4.0	
Heating	Power input	W	56	56	
	Current	А	0.26	0.26	
	Heating capacity at low temp.	kW	2.5	3.2	
Operating curre	ent	Α	0.26	0.26	
Power consum	ption	kW	0.056	0.056	
	Brand		Broad Ocean/Welling	Broad Ocean/Welling	
	Model		Y5S413B5116/YSK20-4I-2	Y5S413B5116/YSK20-4I-2	
	Туре		AC	AC	
	Insulation class		В	В	
Indoor motor	IP class		IP20	IP20	
	Power Input	W	48	48	
	Power output	W	25/23	25/23	
	Capacitor	μF	1.5/3.0µF	1.5/3.0µF	
	Speed (High/Middle/Low)	rpm	950/765/600	950/765/600	
	Brand		1	1	
Indoor fan	Туре		centrifugal	Centrifugal	
	Quantity		2	2	
	a. Number of rows		2	2	
	b. Tube pitch (a)×row pitch (b)	mm	21*13.3	21*13.3	
	c. Fin spacing	mm	1.4	1.4	
Indoor coil	d. Fin type (code)		Hydrophilic	aluminum	
	e. Tube outside dia. and type	mm	Ф7 Inner g	roove tube	
	f. Coil length×height×width	mm	640*210*26.6	640*210*26.6	
	g. Number of circuits		3	3	
	Cabinet coating type		Galvanized	Galvanized	
Cabinet	Cabinet salt spray test duration	Hour	72	72	
	Control box IP class		IP20	IP20	



	MODEL		DVLA-025N-01M22	DVLA-035N-01M22			
	Sheet metal thickness		0.8	0.8			
	Drain pan material		PS	PS			
Construction	Drain pan insulation		20	20			
	Drain pump option		Standard 600mm	Standard 600mm			
	Branch outlet option		No	No			
	Material		Hot zinc plate	Hot zinc plate			
Indoor wall	Thickness	mm	0.8	0.8			
	Double or single skin		Single	Single			
	Material		PP	PP			
Air filter	Mesh		100	100			
	Pressure drop	Pa	5	5			
n	Liquid pipe	mm	6.35	6.35			
Piping dimension	Gas pipe	mm	9.52	12.7			
	Drain hose	mm	25	25			
	Panel model	/	DVLA PA	NEL 07-16			
5 .	External dimensions (M/D/H)	mm	890/190/100 (outlet panel)				
Panel (optional)	External dimensions(W/D/H)	mm -	890/290.5/32.4 (inlet panel)				
(optional)	Shipping dimensions(W/D/H)	mm	938/335/220				
	Net / shipping weight	kg	4/5				
Fresh air dime	ension	mm	Ф80	Ф80			
Sound pressu	re level (H/M/L)	dB (A)	27/24/21	30/28/25			
Sound power	level (H/M/L)	dB (A)	41/38/35	44/42/39			
Standard stati	c pressure	Pa	0	0			
Max. static pre	essure	Pa	30	30			
Indoor air flow	/ (H/M/L)	m³/h	480/420/360	550/430/370			
Air outlet dime	ensions	mm	640*90	640*90			
Air return dime	ensions	mm	760*152	760*152			
Dimension (W	/*H*D)	mm	850*185*420	850*185*420			
Packing (W*H	*D)	mm	1045*270*540	1045*270*540			
Net weight		kg	17.5	17.5			
Gross weight		kg	22.5	22.5			

Nominal condition: indoor temperature (cooling): 27DB (°C)/19WB (°C), indoor temperature (heating): 20DB (°C) Outdoor temperature (cooling): 35DB (°C)/24WB (°C), outdoor temperature (heating): 7DB (°C)/6WB (°C) The noise level will be measured in the third octave band limited values, using a Real Time Analyser calibrated sound intensity meter. It is a sound pressure noise level.



	MODEL	DVLA-040N-01M22	
Power supply		Ph-V-Hz	1,220~230,50/60
	Capacity	kBtu/h	15.4
Cooling	Capacity	kW	4.5
Cooling	Power input	W	65
	Current	Α	0.3
	Capacity	kBtu/h	17.1
	Capacity	kW	5.0
Heating	Power input	W	65
	Current	Α	0.3
	Heating capacity at low temp.	kW	4.0
Operating curre	ent	Α	0.3
Power consum	ption	kW	0.065
	Brand		Broad ocean
	Model		Y5S413B8100
	Туре		AC
	Insulation class		В
Indoor motor	IP class		IP20
	Power input	W	57
	Power output	W	51
	Capacitor	μF	3.5µF
	Speed (High/Middle/Low)	rpm	1220/1060/950
	Brand		1
Indoor fan	Туре		Centrifugal
	Quantity		2
	a. Number of rows		3
	b. Tube pitch (a)×row pitch (b)	mm	21*13.3
	c. Fin spacing	mm	1.4
Indoor coil	d. Fin type (code)		Hydrophilic aluminum
	e. Tube outside dia. and type	mm	Φ7 Inner groove tube
	f. Coil length×height×width	mm	640*210*39.9
	g. Number of circuits		4
	Cabinet coating type		Galvanized
Cabinet	Cabinet salt spray test duration	Hour	72
	Control box IP class		IP20



	MODEL		DVLA-040N-01M22		
	Sheet metal thickness		0.8		
Construction	Drain pan material		PS		
	Drain pan insulation		20		
	Drain pump option		Standard 600mm		
	Branch outlet option		No		
	Material		Hot zinc plate		
Indoor wall	Thickness	mm	0.8		
	Double or single skin		Single		
	Material		PP		
Air filter	Mesh		100		
	Pressure drop	Ра	5		
Piping dimension	Liquid pipe	mm	6.35		
	Gas pipe	mm	12.7		
	Drain hose	mm	25		
	Panel model	1	DVLA PANEL 07-16		
	External dimensions (M/D/L)		890/190/100 (outlet panel)		
Panel (optional)	External dimensions(W/D/H)	mm	890/290.5/32.4 (inlet panel)		
(optional)	Shipping dimensions(W/D/H)	mm	938/335/220		
	Net / shipping weight	kg	4/5		
Fresh air dime	ension	mm	Ф80		
Sound pressu	ire level (H/M/L)	dB (A)	33/30/27		
Sound power	level (H/M/L)	dB (A)	47/44/41		
Standard stat	ic pressure	Ра	0		
Max. static pr	essure	Ра	30		
Indoor air flow	v (H/M/L)	m³/h	600/540/460		
Air outlet dime	ensions	mm	640*90		
Air return dimensions		mm	760*152		
Dimension (W	/*H*D)	mm	850*185*420		
Packing (W*F	I*D)	mm	1045*270*540		
Net weight		kg	18.5		
Gross weight		kg	23.5		


Nominal condition: indoor temperature (cooling): 27DB (°C)/19WB (°C), indoor temperature (heating): 20DB (°C) Outdoor temperature (cooling): 35DB (°C)/24WB (°C), outdoor temperature (heating): 7DB (°C)/6WB (°C) The noise level will be measured in the third octave band limited values, using a Real Time Analyser calibrated sound intensity meter. It is a sound pressure noise level.




 
1.3 Dimension


DVLA-025/022-01M22


DVLA-035N-01M22 DVLA-040N-01M22

 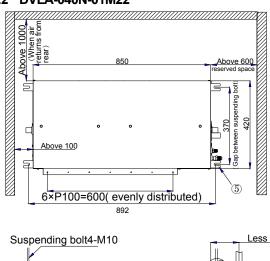


 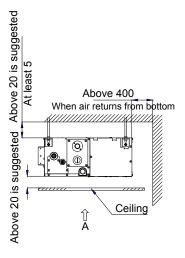




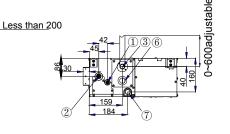

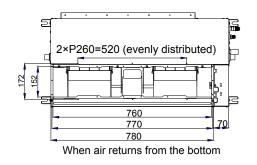







See from A side Checking hole(hole in ceiling)

SN	Part Name
1	Liquid pipe connection
2	Gas pipe connection
3	Drain hose with pump
4	Drain hose(accessory)
5	Suspending point
6	Checking hole
7	Water drainage outlet

 




1.4 Piping diagram

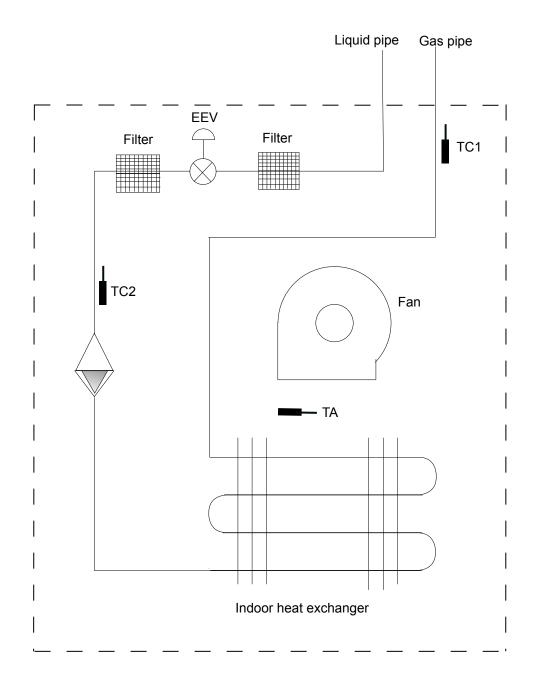




1.5 Wiring diagram

Old

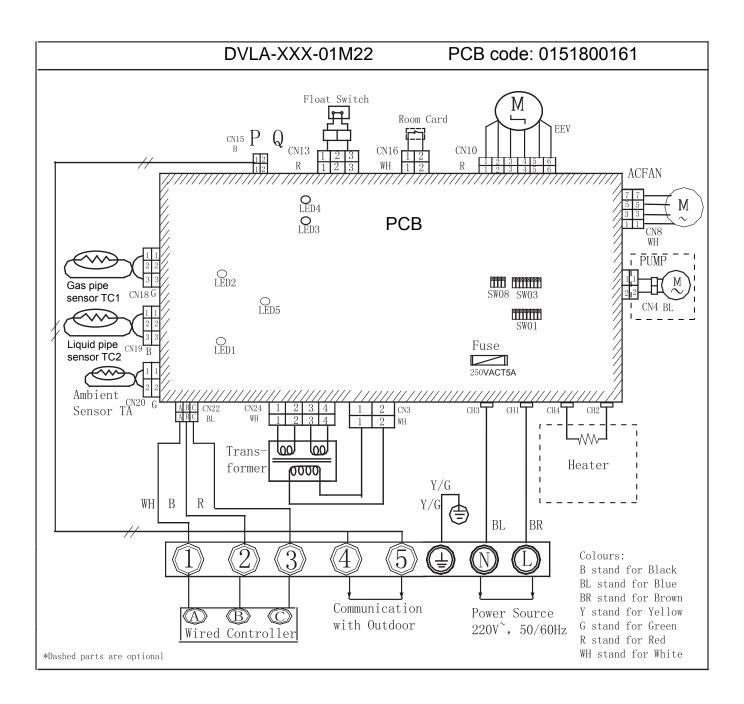



New

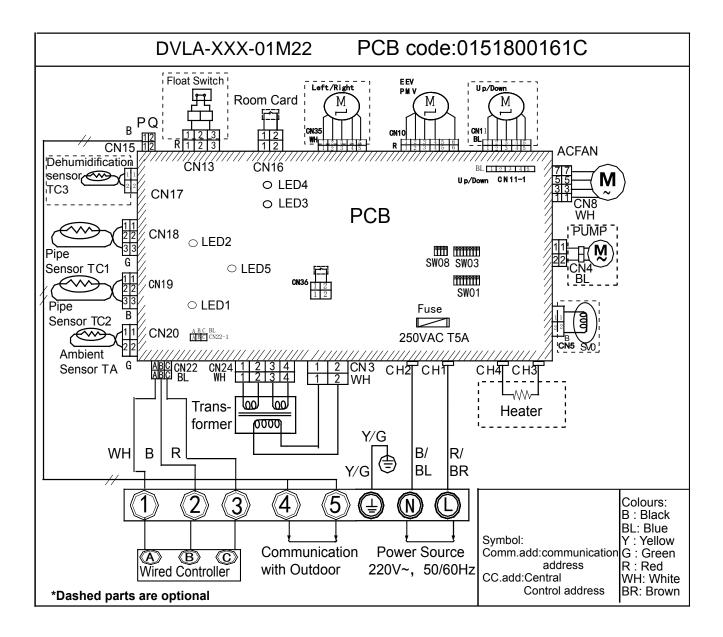



1.6 Electric characteristics

		Powers	supply	Indoor fan	motor	Power input (w)				
Model	Phase	FQY	Voltage	Volt range	MCA	MFA	Output (W)	FLA	Cooling	Heating
DVLA-022N-01M22	1	50/60	220	198-242	0.24	0.76	23	0.19	56	56
DVLA-025N-01M22	1	50/60	220	198-242	0.24	0.76	23	0.19	56	56
DVLA-035N-01M22	1	50/60	220	198-242	0.38	1.2	23	0.3	56	56
DVLA-040N-01M22	1	50/60	220	198-242	0.59	1.88	51	0.47	65	65

Symbols:

MCA: Min. circuit amps (A)

MFA: Max. fuse amps of circuit breaker Output: Fan motor rated output (w) FLA: Full load amps (A)

Note:


1. Voltage range

The units are applicable for the electrical systems where voltage supplied to unit is in the range.


- 2. Maximum allowable voltage unbalance between phases is 2%.
- 3. MCA=1.25*FLA MFA≤4*FLA
- 4. Power supply uses the circuit breaker.




1.7 Air flow and static pressure curves

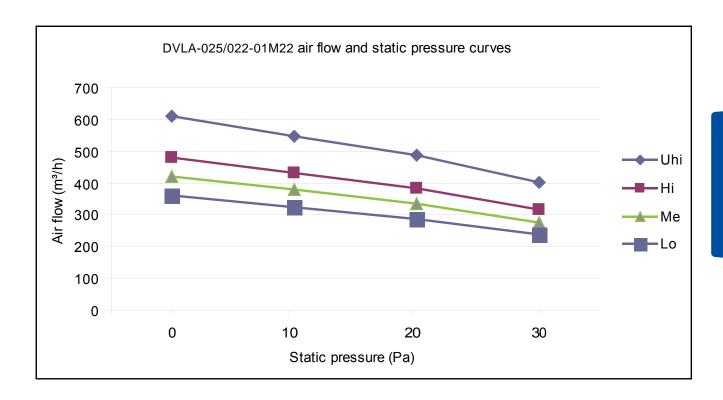



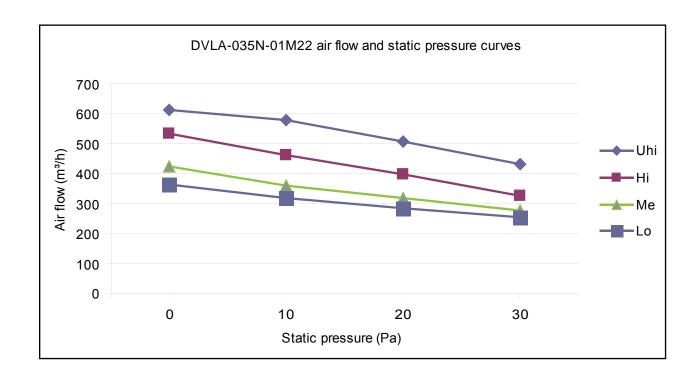

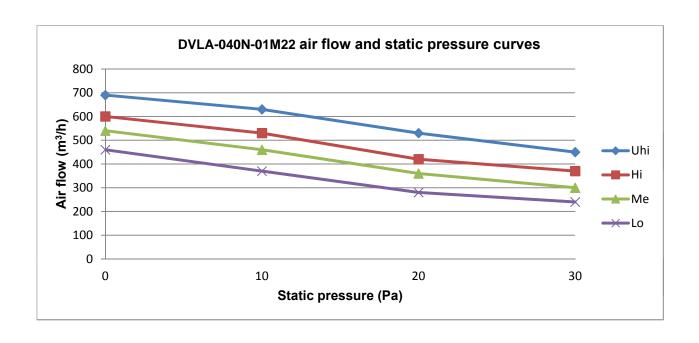




1.8 Sound pressure level

Slim duct type running noise

(1) Testing illustrate:

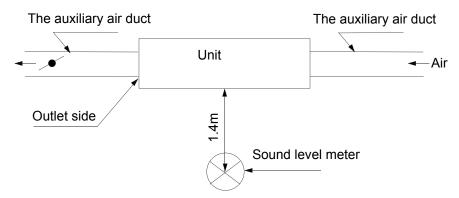


Testing position just below the central of the unit


Note: The length of the auxiliary air duct is 2m


- (2) Testing condition:
- a. Unit running in the standard condition
- b. Test in the semi-anechoic chamber
- c. Noise level varies from the actual factors such as room structure, etc.

(3) Octave band level:

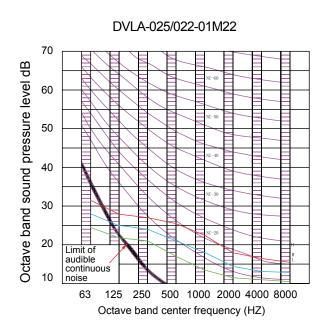



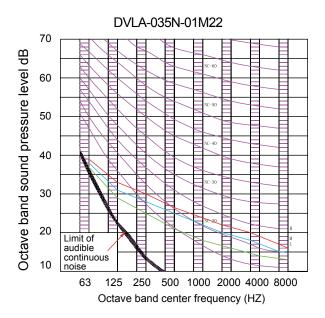

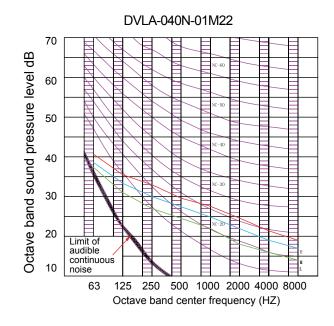



1.9 Installation

1.9.1 Installation Procedures

If you have any problem on product, contact the local Airwell distribution center.

Please use the standard tools according to the installation requirements.

The standard attached accessories of the units of this series refer to the packing list; prepare other accessories according to the requirements of the local installation point of our company.

1. Choose the suitable installation location. Indoor units should be installed in places with the environment of even circulation of cool and warm blows. The following places should be avoided.

Places with high salinity (beach), high sulfureted gas (such as the thermal spring regions where copper tubes and soft soldering are easy to be eroded), much oil (including mechanical oil) and steam; places where organic substance solvent is frequently used; places where machines generate the high frequency electromagnetic wave (abnormal condition will appear in the control system); places where there is high humidity exists near the door or windows (dew is easily formed); and places where the special sprayer is frequently used.

Indoor Units

- (1) The distance between wind outlet port and the ground should not be more than 2.7m.
- (2) Select appropriate places for installation where the outlet air can be spread to places all over the house and arrange proper locations for connecting pipes and lines as well as the drainpipe to the outdoor.
- (3) Ceiling construction must be hard enough to hold the weight of the unit.
- (4) Make sure that the connecting pipe, the drainpipe and connecting guide line can be put into walls to connect the outdoor units.
- (5) It is recommended to make the connecting pipe between the outdoor and indoor units and the drainpipe are as short as possible.
- (6) Please read the attached installation instruction of outdoor units for regulation of filling amount of refrigerant if necessary.
- (7) The connecting flange should be checked by users.
- (8) Those electrical appliances such as television, instruments, devices, artwork, piano, wireless equipment and other valuables should not be placed under the indoor unit as to prevent condensate from dropping into them and causing damage.

2. The following steps can be taken after selecting the installation place:


- (1) Cut a hole in the wall and insert connection pipe and connecting wires through a locally purchased PVC pipe. The hole should be inclined slightly downward with an inclination of at least 1/100 (see Figure 1).
- (2) Before cutting the hole, ensure no pipe or rebar is placed behind the cutting position. Avoid cutting a hole at the place of wires or connection pipes.
- (3) Hang the unit on a horizontal and firm roof. If the unit base is not stable, it may cause noise, vibration leakage.
- (4) Support the unit firmly and change the shapes of connection pipe, connecting wires and drain pipe to make them easily get through the hole.

3. Dimension (unit: mm).

,									
Model	а	b	С	d	е	f	g	h	i
DVLA-025/022-01M22 DVLA-035N-01M22 DVLA-040N-01M22	420	892	370	850	185	640	90	760	152




DVLA-025/022-01M22 DVLA-035N-01M22 DVLA-040N-01M22

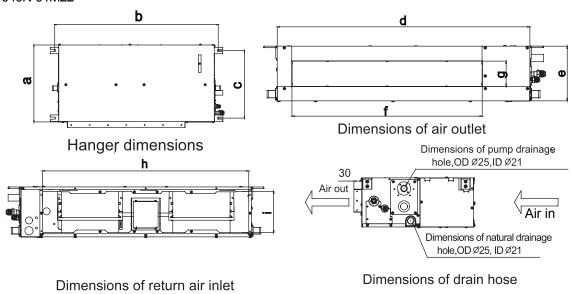

Installation modes of Indoor unit

This series of air conditioners can be arranged in two air return modes:

- 1. Backward air return (factory default);
- 2. Downward air return (can be adjusted on site. See the following figures.)

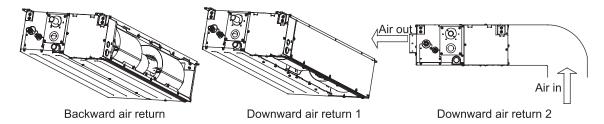

Note:

The downward air return mode would cause much more noise. It is recommended to install the air conditioner in downward return air mode 2 if enough space is available.


Installation space and method


Body installation

- 1. Use M10 lifting bolts.
- 2. Ceiling removal: For different building structures, please consult with indoor decoration personnel about actual conditions.
- a. Ceiling reinforcement: To ensure the ceiling is horizontal and will not shake, the ceiling base frame must be reinforced.
- b. Cut off and remove the ceiling base frame.
- c. Reinforce the end faces left when the ceiling is removed and further reinforce the base frame that fix both ends of the ceiling.
- d. After the body installation is complete, it is time to install pipes and wires. Before installation, choose a suitable installation position and determine the outgoing direction of pipes. Especially in case that a ceiling exists, please pull refrigerant tubing, drain hose, indoor and outdoor connecting wires, control wires to their connection positions prior to hanging the machine.




Installation space:

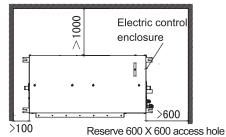

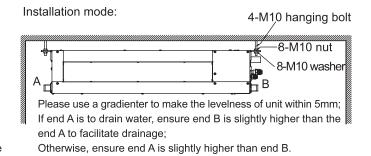

Installation of air-inlet grille

 The angle of air-inlet grille should be parallel with that of air inlet direction, otherwise it will cause more noise. As shown in the figure on the right.



Installation of Duct Pipe of Indoor Units:

- 1. Installation of the air blowing pipe:
- With a square blast pipe, the bore shouldn't be less than the sizes of air outlet pipe.
- 2. Installation of the air return pipe: Connect one side of the air return pipes to the air return port of the indoor units with rivets, with the other side connected to air return shutter, as shown in Fig.1.
- 3. Heat Preservation of Blast Pipes: Heat preservation lays should be provided for air blowing & return pipes. Paste glue nails on the blast pipes and attach thermo wool, which covered by a layer of silver paper, fix it with glue nail cover, and then seal the joint with silver paper.



Fig.2

Selection of fan outlet (when a high-performance filter is used)

The fan has red and white terminals. Its air outlet is set to the standard before delivery. If a high-performance filter or other optional devices is used to increase static pressure, it is required to change the connection of connector on the side of control enclosure as shown in the following.

	Standard Style(given in Factory)						High '	Winc	Spe	ed Style	
	Yellow			Yellow	End		Yellow			Yellow	End
Box	Black	e.	e	Orange	lead	l Bô	Black	e)	_	Black	lead
ntro	Blue	white	white	Black	-uw	ntro	Blue	white	red	Blue	-uw
ပိ	Red			Blue	Fan Dc	ပိ	Red			Red	Fan Do

Static pressure range Unit: Pa


Standard static pressure	Maximal static pressure
0	30



Installation of drain hose

Connection of indoor drain hose

- 1. Please use accessory drain hose to connect indoor unit's water outlet and PVC pipe and use snap rings to tighten them, as shown in the following figure:
- 2. Please use rigid PVC adhesive for connection of other pipes and ensure there is no leakage.
- 3. Drain hose must be wrapped up with insulation sleeve and tightened with strap to prevent air leaked in producing condensate.
- 4. To prevent water flowing back into air conditioner when it stops running, drain hose shall decline to the drainage side with a declination of above 1/100. Drain hose expansion or water accumulation shall be prevented, or else it will cause abnormal noise.
- 5. When connecting the drain hose, do not pull on it so as to avoid the pipe connections getting loose or off. Drain hose should not be pulled out laterally for more than 20cm and should be supported every 0.8-1.0m to avoid bending.
- 6. The end of drain hose should be more than 50mm away from the ground or the bottom of drainage tank. It should not be put in water. To directly drain condensate into drainage ditch, the drain hose must be U-shaped to avoid stink spreading through the hose into room.

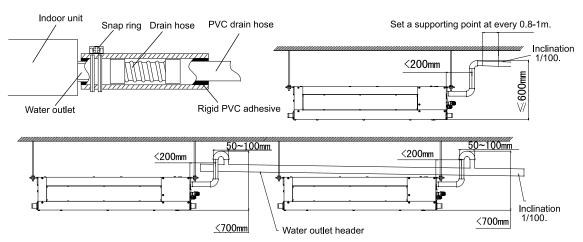


Multiple units use water outlet header to drain water into drainage ditch.

Drainage test

Before test, firstly ensure the drain hose is unblocked and all connections are tightly sealed and then perform the drainage test as follows:

- 1. Inject about 500ml water into the water pan through water injection hole;
- 2. Switch on the power and make air conditioner operate in refrigerating mode. Check whether the water outlet drains water normally and there are no leakages on connections. After the drainage test is complete, replace the water injection hole plug. For the position of water injection hole, see the figure on the right:

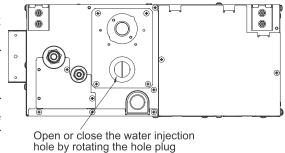



Pipe Length & Height Difference

Please refer to the attached manual of outdoor units.

Tubing Materials & Specifications

Special tools for R410A should be used for cutting and enlarging pipes.

M	odel	DVLA-025/ 022-01M22	DVLA-035~040N-01M22					
Tubing	Gas pipe	Ø9.52	Ø12.7					
Size (mm)	Liquid pipe	Ø6.35	Ø6.35					
Tubing	Phosphor	Phosphor deoxy bronze seamless pipe (TP2) for air						
Material	conditioner							

Refrigerant Recharge Amount

Add the refrigerant according to the installation instruction of outdoor unit. The addition of R410A refrigerant must be performed with a measure gage to ensure the specified amount while compressor failure can be caused by filling too much or little refrigerant.

Connecting Procedures of Refrigerant Tubing

With the soft solder, the nitrogen-filling protection should be used.

Cutting and Enlarging

Cutting or enlarging pipes should be proceeded by installation personnel according to the operating criterion if the tube is too long or flare opening is broken.

Vacuumizing

Vacuumize from the stop valve of outdoor units with vacuum pump. Refrigerant sealed in indoor machine is not allowed to use for vacuumization.

Vacuum pump with check valve should be used for vacuumizing to prevent pump oil flowing into the machine.

Open All Valves

Open all the valves of outdoor units. [NB: oil balancing stop valve must be shut up completely when only connected one master unit.]

Checkup for Air Leakage

Check if there is any leakage at the connecting part and bonnet with hydrophone or soapsuds.

Connecting

1. Connecting circular terminals:

The connecting method of circular terminal is shown in the Fig. Take off the screw, connect it to the terminal tier after heading it through the ring at the end of the lead and then tighten it.

Connecting

 
circular terminals:

2. Connecting straight terminals:

The connection methods for the circular terminals are shown as follows: loosen the screw before putting the line terminal into the terminal tier, tighten the screw and confirm it has been clamped by pulling the line gently.

3. Pressing connecting line

After connecting line is completed, press the connecting line with clips which should press on the protective sleeve of the connecting line.






1.9.2 Electrical Wiring

⚠ WARNING

- Electrical construction should be made with specific mains circuit by the qualified personnel according to the installation instruction. Electric shock and fire may be caused if the capacity of power supply is not sufficient.
- During arranging the wiring layout, specified cables should be used as the mains line, which accords with the local regulations on wiring. Connecting and fastening should be performed reliably to avoid the external force of cables from transmitting to the terminals. Improper connection or fastness may lead to burning or fire accidents.
- There must be the ground connection according to the criterion. Unreliable grounding may cause electrical shocks. Do not connect the grounding line to the gas pipe, water pipe, lightening rod and telephone line.

ATTENTION


- Only copper wire can be used. Breaker for electric leakage should be provided, or electric shock may occur.
- The wiring of the mains line is of Y type. The power plug L should be connected to the live wire and plug N connected to null wire while should be connected to the ground wire. For the type with auxiliary electrically heating function, the live wire and the null wire should not be misconnected, or the surface of electrical heating body will be electrified. If the power line is damaged, replace it by the professional personnel of the manufacturer or service center.
- The power line of indoor units should be arranged according to the installation instruction of indoor units.
- The electrical wiring should be out of contact with the high-temperature sections of tubing as to avoid melting the insulating layer of cables, which may cause accidents.
- After connected to the terminal tier, the tubing should be curved into be a U-type elbow and fastened with the pressing clip.
- Controller wiring and refrigerant tubing can be arranged and fixed together.
- The machine can't be powered on before electrical operation. Maintenance should be done while the power is shut down.
- Seal the thread hole with heat insulating materials to avoid condensation.
- Signal line and power line are separately independent, which can't share one line. [Note: the power line and signal line are provided by users. Parameters for power lines are shown as below: 3×1.0-1.5) mm²; parameters for signal line: 2×0.75-1.25)mm²(shielded line)]
- 5 butt lines (1.5mm) are equipped in the machine before delivery, which are used in connection between the valve box and the electrical system of the machine. The detailed connection is displayed in the circuit diagram.

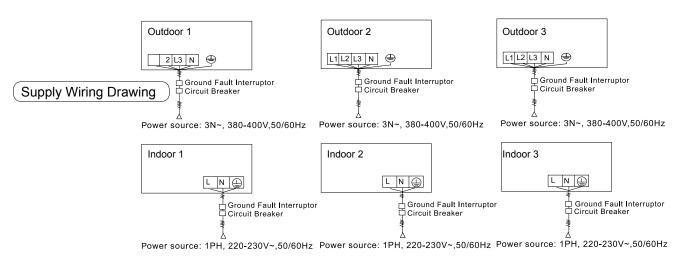

■ Indoor units and outdoor units should be connected to the power source separately. Indoor units must share one single electrical source, but its capacity and specifications should be calculated. Indoor & outdoor units should be equipped with the power leakage breaker and the overflow breaker.




Signal Wiring Drawing

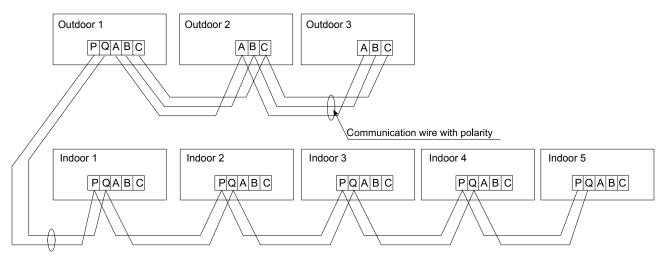


Outdoor units are of parallel connection via three lines with polarity. The master unit, central control and all indoor units are of parallel connection via two lines without polarity. The singal line between wired controller and indoor units are polarity

There are three connecting ways between wired controller and indoor units:

A. One wired controller controls one indoor unit, the wired controller connects with the ABC terminal of indoor unit.

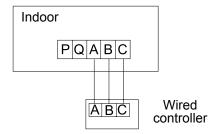

B. Two wired controllers control one indoor unit. Either of the wired controls can be set to be the master wired controller while the other is set to be the slave wired controller.

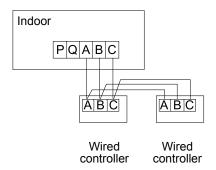


Master and slave controller setting method for RWV05, other controllers' setting method please refer to the controller manual

	No.	Туре	State of switch	Function description
ſ	CW4 4	Select the master or	ON	Slave controller
	SW1-1	the slave controller	OFF	Master controller



C. One wired controller controls multiple units

0151800161C PCB

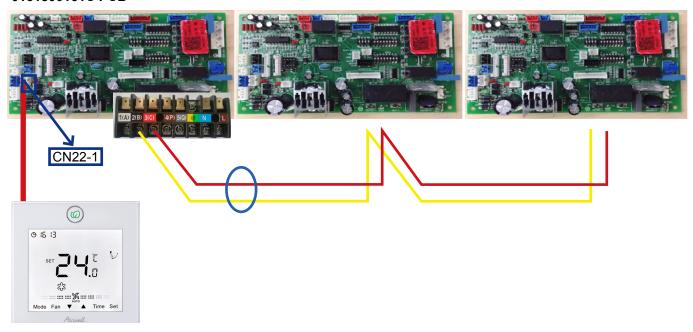

Note:

- 1. Plug the wired controller terminal to the CN22-1 terminal of master unit which wired address is 0, the slave unit only connects BC terminal.
- 2. Wired address setting

		[1]	[2]	[3]	[4]	Wired control address
	Wired control address	OFF	OFF	OFF	OFF	Master unit in group control
SW01_1		OFF	OFF	OFF	<u>ON</u>	Slave unit 1 in group control
SW01_2 SW01_3		OFF	OFF	<u>ON</u>	OFF	Slave unit 2 in group control
SW01_4		OFF	OFF	<u>ON</u>	<u>ON</u>	Slave unit 3 in group control
		<u>ON</u>	<u>ON</u>	<u>ON</u>	<u>ON</u>	Slave unit 15 in group control

- 3. One controller can Max. control 16 indoor units.
- 4. Hand-in-hand connection method
- 5. The singal line is polarity



The combination of multiple indoor units can be controlled by wired controller or remote controller.

% Switching mode of Wired control master unit/ Wired control slave unit/ remote control types can be used for switching over %

Setting mode Socket/dip switch	Wired control master unit	Wired control slave unit	Remote control
SW01-[2][3][4]	All OFF	[0][0][1]	All OFF
CN21 socket	Null	Null	Connect to remote receiver
Terminal block (control)	A, B, C connect with wired controller	B, C connect with wired controller	A, B, C Null

Indoor power supply wiring & signal wiring between indoor and outdoor & signal wiring between indoors.

Items	Cross	Length	Rated current of	Rated current of residual circuit breaker (A)	Cross sectional area of signal Line	
Total current of ndoor units (A)	section (mm²)	(m)	overflow breaker (A)	Ground fault Interrupter (mA)	Outdoor -indoor (mm²)	Indoor -indoor (mm²)
<7	2.5	20	10	10 A, 30 mA, 0.1S or below		
≥7 and <11	4	20	16	16 A, 30 mA, 0.1S or below	2 000004	0.75.2.0)
≥11 and <16	6	25	20	20 A, 30 mA, 0.1S or below	2 cores×(mm² shie	
≥16 and <22	8	30	32	32 A, 30 mA, 0.1S or below	111111 51110	
≥22 and <27	10	40	32	32 A, 30 mA, 0.1S or below		

- The electrical power line and signal lines must be fastened tightly.
- Every indoor unit must have the ground connection.
- The power line should be enlarged if it exceeds the permissible length.
- Shielded lays of all the indoor and outdoor units should be connected together, with the shielded lay at the side of signal lines of outdoor units grounded at one point.
- It is not permissible if the whole length of signal line exceeds 1000m.

Signal wiring of wired controller

Length of signal line (m)	Wiring dimensions
≤ 250	0.75mm ² ×3 core shielded line

- * The shielding lay of the signal line must be grounded at one end.
- % The total length of the signal line shall not be more than 250m.



1.9.3 Test run

Before Test Run

Before switching it on, test the supply terminal tier (L, N terminals) and grounding points with 500V megaohm meter and check if the resistance is above $1M\Omega$. It can't be operated if it is below $1M\Omega$.

Connect it to the power supply of outdoor units to energize the heating belt of the compressor. To protect the compressor at startup, power it on 12 hours prior to the operation.

Check if the arrangements of the drainpipe and connection line are correct.

The drainpipe shall be placed at the lower part while the connection line placed at the upper part. Heat preservation measures should be taken such as winding the drainpipe esp. in the indoor units with heating insulating materials. The drain pipe should be made a slope type to avoid protruding at the upper part and concaving at the lower part on the way.

Checkup (of Ins	stalla	tion
-----------	--------	--------	------

☐ Check if the mains voltage is matching	☐ Check if the installation place meets the requirement
☐ Check if there is air leakage at the piping joints	☐ Check if there is too much noise
☐ Check if the connections of mains power and	☐ Check if the connecting line is fastened
indoor & outdoor units are correct	☐ Check if the connectors for tubing are heat insulated
☐ Check if the serial numbers of terminals are matching	\square Check if the water is drained to the outside
	☐ Check if the indoor units are positioned

Ways of Test Run

Do ask the installation personnel to make a test run. Take the testing procedures according to the manual and check if the temperature regulator works properly.

When the machine fails to start due to the room temperature, the following procedures can be taken to do the compulsive running. The function is not provided for the type with remote control.

Set the wired controller to cooling/heating mode, press "ON/OFF" button for 5 seconds to enter into the compulsive cooling/heating mode. Repress "ON/OFF" button to quit the compulsive running and stop the operation of the air conditioner.



WARNING:

The design and specifications are subject to change without prior notice for product improvement. Consult with the sales agency or manufacturer for details.

ATTENTION:

Le design et les données techniques sont donnés à titre indicatif et peuvent être modifiés sans préavis.

AIRWELL RESIDENTIAL SAS

10,Rue du Fort de Saint Cyr,78180 Montigny le Bretonneux - France www.airwell.com