

# Airwell

*Just feel well*



## REMOTE CONTROLLER OPERATION MANUAL

RCV03

### CONTENT

Parts and Functions.....	1
Functional description.....	2

- Please read this operation manual before using the air conditioner.
- Please keep this manual carefully and safely.


22.AW.RCV03.UM.EN.12.09.Rev02

# Parts and Functions

## External View of Remote Controller

### Remote Controller function description

This remote Controller is a general remote Controller, and some functions are valid according to the adaptable model.

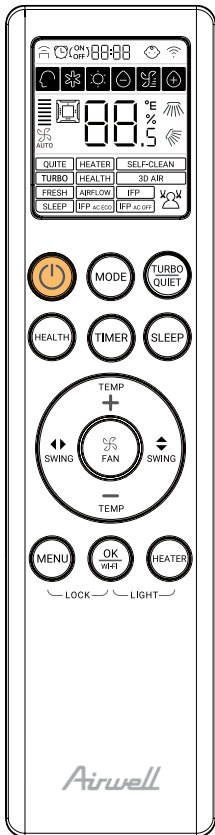


	Turning on/off the units
	Switch operation modes
	Set/cancel TURBO/QUIET functions
	Set/cancel HEALTH functions
	Set the Timer on/ Timer off function.
	Set/cancel SLEEP function
TEMP + / - TEMP	1. Setting temperature increase or decrease.2. Timing adjustment
	Set the airflow angle under the up and down swing.
	Set the airflow angle under the left and right swing.
	Adjust the fan speed.
	Set/cancel electrical heater function.
	1. Set/cancel for menu function selection 2. Long press for 3 seconds to enter Wi-Fi mode
	Press “OK/Wi-Fi” and “MENU” to access the lock function, and then press again to cancel the lock function.
	At the same time, press the “OK/Wi-Fi” and “HEATER” keys to enter the lighting function.
	For function selection, see menu function introduction for details.

# Functional description


---

## 1. ON/OFF Button:

Turning on the units: Press the  button to turning on the units.


Note: The initial default operation mode is AUTO and then will display the mode before turning off  
Press  button again to turn off the unit.

## 2. MODE

Press the  button every time, Function loop will be:  →  →  →  →  → .



## 3. TURBO/QUIET


This function is valid under the mode of COOL and HEAT

Along with pressing the  button each time, it will display according to the loop of TURBO→QUIET  
→ Cancel →TURBO. Under the function of TURBO / QUIET.

When "SLEEP" is set, the "TURBO" function is disabled and the "QUIET" function is effective.

## 4. HEALTH

(1) When turning on the units, press  button, the remote controller will display "HEALTH", and  
then press  button to cancel.

(2) When turning off the units, press the  button to enter FAN mode and display "HEALTH".

## 5. TIMER

When the unit is in turning on status, users can only set the TIMER OFF, while in off status, users can only set the TIMER ON.

In Off status, press the  button to enter the TIMER ON adjustment process.



In On status, Press the  button to enter the TIMER OFF adjustment process.

When entering the timing adjustment process, timer ON/OFF icon and clock flash at the same time,  
the initial default value is: 0:30. Press the  $\overset{\text{TEMP}}{+} / \overset{\text{TEMP}}{-}$  button once to increase or decrease the time for 30  
minutes, and pressing and holding the button will speed up the adjustment.


After the time adjustment is completed, press the  button again to confirm, the time static display,  
and start the countdown.


# Functional description

## 6. SLEEP

- (1) Valid during power on.
- (2) Press the  button, and the remote control will display "Sleep". The SLEEP time is fixed to 8 hours and is not adjustable.  
Press the  button again, and the sleep function will be cancelled.
- (3) It is invalid in FAN mode.


## 7. FAN SPEED Button



Each time the  button is pressed, the cycle sequence is as follows:

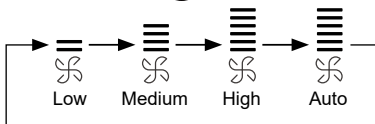

## 8. Up-and-down SWING Angle Adjustment


SWING

  
Each time you press the button , Remote control display cycle sequence is as follows:



## 9. Right-and-left SWING Angle

SWING

 Each time you press the button , the remote control will display the following cycle:



# Functional description


---


## 10. +/- Button

(1) This button is invalid in FAN mode;

(2) Press  $\overset{\text{TEMP}}{+} / \overset{\text{TEMP}}{-}$  button, temperature change 0.5°C; pressing and holding the button will change quickly.

## 11. HEATER


 
 

 



Press the  button, and the remote control will display “HEATER”.

Press  button again, the “HEATER” on the remote control will disappear, and the HEATER function will be turned off.

This function will be effective only in AUTO and HEAT mode.


## 12.MENU

Functional cycle: SELF-CLEAN→3D AIR (reserved)→FRESH→HEALTH AIRFLOW→IFP→ →




 →IFP AC OFF→IFP AC ECO→ → → → → → → →10°C

heating (Only valid in HEAT mode)→°F/°C→SELF-CLEAN




(1) Press  button, the current function to be set flashes;


(2) Press  button again to set/cancel the current setting function in the above sequence. If there is no operation in 5 seconds, it will exit automatically.

Note:

Individual flap control for Round-way cassette: press  button to enter function loop to select the corresponding function icon and press  button to confirm the operation, then press the  button to select the airflow angles.

## 13. LOCK

Press the combination key  and , and the remote control will display “”. All buttons on the remote control are invalid.

Press the combination button again to unlock the button and the icon “” will disappear.

# Functional description


---

## 14. LIGHT

Press the combined button  and  to turn on the lighting function.

Press the combination key again and the light function turns off.

## 15. Wi-Fi

Press  button 3s to enter Wi-Fi configuration, remote control display COOL mode, LOW fan speed, 30°C.



# Airwell

*Just feel well*

**WARNING :**

The design and specifications are subject to change without prior notice for product improvement. Consult with the sales agency or manufacturer for details.

**ATTENTION :**

Le design et les données techniques sont donnés à titre indicatif et peuvent être modifiés sans préavis.



AIRWELL RESIDENTIAL SAS  
10,Rue du Fort de Saint Cyr,  
78180 Montigny le Bretonneux - France  
[www.airwell.com](http://www.airwell.com)

21.AW.RCV03.UM.EN.12.13.Rev01

