## **Table of Contents**

## §. Safety Precautions

- 1. Precautions
- 2. Information servicing(For flammable materials)

## §. Specifications

- 1. Model Reference
- 2. Pipe length and the Drop Height
- 3. Electrical Wiring Diagrams

#### §. Product Features

- 1. Display Function
- 2. Safety Features
- 3. Basic Features
- 4. Optional Features

## §. Maintenance

- 1. First Time Installation Check
- 2. Refrigerant Recharge
- 3. Re-Installation

## §. Indoor Unit Disassembly

- 1. Dimension
- 2. Indoor Unit Disassembly

## §. Outdoor Unit Disassembly

- 1. Outdoor Unit Table
- 2. Dimension
- 3. Outdoor Unit Disassembly

## **Table of Contents**

## §. Troubleshooting

- 1. Safety Caution
- 2. General Troubleshooting
- 3. Complain Record Form
- 4. Information Inquiry
- 5. Error Diagnosis and Troubleshooting Without Error Code
- 6. Quick Maintenance by Error Code
- 7. Troubleshooting by Error Code
- 8. Check Procedures

## **Appendix**

- i) Temperature Sensor Resistance Value Table for T1,T2,T3 and T4 ( $^{\circ}$ C K)
- ii) Temperature Sensor Resistance Value Table for TP(for some units) ( $^{\circ}$ C K)
- iii) Pressure On Service Port





# **Safety Precautions**

# **Contents**

| 1. | Precautions                                    |   |  |
|----|--|---|--|
| 2  | Information servicing(For flammable materials) | 3 |  |

#### 1. Precautions

To prevent personal injury, or property or unit damage, adhere to all precautionary measures and instructions outlined in this manual. Before servicing a unit, refer to this service manual and its relevant sections.

Failure to adhere to all precautionary measures listed in this section may result in personal injury, damage to the unit or to property, or in extreme cases, death.



**WARNING** indicates a potentially hazardous situation which if not avoided could result in serious personal injury, or death.



**CAUTION** indicates a potentially hazardous situation which if not avoided could result in minor or moderate personal injury, or unit damage.

#### 1.1 In case of Accidents or Emergency

#### WARNING

- If a gas leak is suspected, immediately turn off the gas and ventilate the area if a gas leak is suspected before turning the unit on.
- If strange sounds or smoke is detected from the unit, turn the breaker off and disconnect the power supply cable.
- If the unit comes into contact with liquid, contact an authorized service center.
- If liquid from the batteries makes contact with skin or clothing, immediately rinse or wash the area well with clean water.
- Do not insert hands or other objects into the air inlet or outlet while the unit is plugged in.
- Do not operate the unit with wet hands.
- Do not use a remote controller that has previously been exposed to battery damage or battery leakage.

#### **CAUTION**

- Clean and ventilate the unit at regular intervals when operating it near a stove or near similar devices.
- Do not use the unit during severe weather conditions.
   If possible, remove the product from the window before such occurrences.

#### 1.2 Pre-Installation and Installation

## **WARNING**

- Use this unit only on a dedicated circuit.
- Damage to the installation area could cause the unit to fall, potentially resulting in personal injury, property damage, or product failure.
- Only qualified personnel should disassemble, install, remove, or repair the unit.
- Only a qualified electrician should perform electrical work. For more information, contact your dealer, seller, or an authorized service center.

#### **CAUTION**

 While unpacking be careful of sharp edges around the unit as well as the edges of the fins on the condenser and evaporator.

#### 1.3 Operation and Maintenance

### **WARNING**

- Do not use defective or under-rated circuit breakers.
- Ensure the unit is properly grounded and that a dedicated circuit and breaker are installed.
- Do not modify or extend the power cable. Ensure the power cable is secure and not damaged during operation.
- Do not unplug the power supply plug during operation.
- Do not store or use flammable materials near the unit.
- Do not open the inlet grill of the unit during operation.
- Do not touch the electrostatic filter if the unit is equipped with one.
- Do not block the inlet or outlet of air flow to the unit.
- Do not use harsh detergents, solvents, or similar items to clean the unit. Use a soft cloth for cleaning.
- Do not touch the metal parts of the unit when removing the air filter as they are very sharp.
- Do not step on or place anything on the unit or outdoor units.
- Do not drink water drained from the unit
- Avoid direct skin contact with water drained from the
  unit
- Use a firm stool or step ladder according to manufacturer procedures when cleaning or maintaining the unit.

## **A** CAUTION

- Do not install or operate the unit for an extended period of time in areas of high humidity or in an environment directly exposing it to sea wind or salt spray.
- Do not install the unit on a defective or damaged installation stand, or in an unsecure location.
- Ensure the unit is installed at a level position
- Do not install the unit where noise or air discharge created by the outdoor unit will negatively impact the environment or nearby residences.
- Do not expose skin directly to the air discharged by the unit for prolonged periods of time.
- Ensure the unit operates in areas water or other liquids.
- Ensure the drain hose is installed correctly to ensure proper water drainage.
- When lifting or transporting the unit, it is recommended that two or more people are used for this task.
- When the unit is not to be used for an extended time, disconnect the power supply or turn off the breaker.

# 2. Information servicing(For flammable materials)

#### 2.1 Checks to the area

- Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized.
- For repair to the refrigerating system, the following precautions shall be complied with prior to conducting work on the system.

#### 2.2 Work procedure

 Work shall be undertaken under a controlled procedure so as to minimise the risk of a flammable gas or vapour being present while the work is being performed.

#### 2.3 Work procedure

- All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out.
- Work in confined spaces shall be avoided.
- The area around the work space shall be sectioned off.
   Ensure that the conditions within the area have been made safe by control of flammable material.

#### 2.4 Checking for presence of refrigerant

- The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially flammable atmospheres.
- Ensure that the leak detection equipment being used is suitable for use with flammable refrigerants, i.e. no sparking, adequately sealed or intrinsically safe.

#### 2.5 Presence of fire extinguisher

- If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand.
- Have a dry powder or CO2 fire extinguisher adjacent to the charging area.

#### 2.6 No ignition sources

- No person carrying out work in relation to a refrigeration system which involves exposing any pipe work that contains or has contained flammable refrigerant shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion.
- All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which flammable refrigerant can possibly be released to the surrounding space.

- Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks.
- NO SMOKING signs shall be displayed.

#### 2.7 Ventilated area

• Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

#### 2.8 Checks to the refrigeration equipment

- Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed.
   If in doubt consult the manufacturer's technical department for assistance. The following checks shall be applied to installations using flammable refrigerants:
  - the charge size is in accordance with the room size within which the refrigerant containing parts are installed;
  - the ventilation machinery and outlets are operating adequately and are not obstructed;
  - if an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant; marking to the equipment continues to be visible and legible.
  - markings and signs that are illegible shall be corrected;
  - refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

#### 2.9 Checks to electrical devices

 Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised. Initial safety checks shall include:

- that capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
- that there no live electrical components and wiring are exposed while charging, recovering or purging the system;
- that there is continuity of earth bonding.

#### 2.10 Repairs to sealed components

- During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc. If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.
- Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected. This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc.
  - Ensure that apparatus is mounted securely.
  - Ensure that seals or sealing materials have not degraded such that they no longer serve the purpose of preventing the ingress of flammable atmospheres. Replacement parts shall be in accordance with the manufacturer's specifications.

NOTE: The use of silicon sealant may inhibit the effectiveness of some types of leak detection equipment. Intrinsically safe components do not have to be isolated prior to working on them.

#### 2.11 Repair to intrinsically safe components

- Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use. Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere. The test apparatus shall be at the correct rating.
- Replace components only with parts specified by the manufacturer. Other parts may result in the ignition of refrigerant in the atmosphere from a leak.

#### 2.12 Cabling

• Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check

shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

#### 2.13 Detection of flammable refrigerants

• Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

#### 2.14 Leak detection methods

- The following leak detection methods are deemed acceptable for systems containing flammable refrigerants. Electronic leak detectors shall be used to detect flammable refrigerants, but the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.) Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used. Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed and the appropriate percentage of gas (25 % maximum) is confirmed. Leak detection fluids are suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.
  - If a leak is suspected, all naked flames shall be removed or extinguished.
  - If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the systemremote from the leak. Oxygen free nitrogen (OFN) shall then be purged through the system both before and during the brazing process.

#### 2.15 Removal and evacuation

- When breaking into the refrigerant circuit to make repairs or for any other purpose, conventional procedures shall be used. However, it is important that best practice is followed since flammability is a consideration.
- The following procedure shall be adhered to:
  - remove refrigerant;
  - purge the circuit with inert gas;
  - evacuate;
  - purge again with inert gas;
  - open the circuit by cutting or brazing.

- The refrigerant charge shall be recovered into the correct recovery cylinders. The system shall be flushed with OFN to render the unit safe. This process may need to be repeated several times. Compressed air or oxygen shall not be used for this task. Flushing shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum. This process shall be repeated until no refrigerant is within the system. When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place. This operation is absolutely vital if brazing operations on the pipe-work are to take place.
- Ensure that the outlet for the vacuum pump is not close to any ignition sources and there is ventilation available.

#### 2.16 Charging procedures

- In addition to conventional charging procedures, the following requirements shall be followed:
  - Ensure that contamination of different refrigerants does not occur when using charging equipment.
     Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.
  - Cylinders shall be kept upright.
  - Ensure that the refrigeration system is earthed prior to charging the system with refrigerant.
  - Label the system when charging is complete (if not already).
  - Extreme care shall be taken not to overfill the refrigeration system.
  - Prior to recharging the system it shall be pressure tested with OFN. The system shall be leak tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

#### 2.17 Decommissioning

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken.

In case analysis is required prior to re-use of reclaimed refrigerant. It is essential that electrical power is available before the task is commenced.

- Become familiar with the equipment and its operation.
- Isolate system electrically.

- Before attempting the procedure ensure that:
  - mechanical handling equipment is available, if required, for handling refrigerant cylinders;
  - all personal protective equipment is available and being used correctly;
  - the recovery process is supervised at all times by a competent person;
  - recovery equipment and cylinders conform to the appropriate standards.
- Pump down refrigerant system, if possible.
- If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
- Make sure that cylinder is situated on the scales before recovery takes place.
- Start the recovery machine and operate in accordance with manufacturer's instructions.
- Do not overfill cylinders. (No more than 80 % volume liquid charge).
- Do not exceed the maximum working pressure of the cylinder, even temporarily.
- When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
- Recovered refrigerant shall not be charged into another refrigeration system unless it has been cleaned and checked.

#### 2.18 Labelling

- Equipment shall be labelled stating that it has been decommissioned and emptied of
- refrigerant. The label shall be dated and signed. Ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

#### 2.19 Recovery

- When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.
- When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct numbers of cylinders for holding the total system charge are available. All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure relief valve and associated shut-off valves in good working order.

- Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.
- The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of flammable refrigerants. In addition, a set of calibrated weighing scales shall be available and in good working order.
- Hoses shall be complete with leak-free disconnect couplings and in good condition. Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release. Consult manufacturer if in doubt.
- The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant Waste Transfer Note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.
- If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant.
   The evacuation process shall be carried out prior to returning the compressor to the suppliers. Only electric heating to the compressor body shall be employed to accelerate this process. When oil is drained from a system, it shall be carried out safely.

# **Specifications**

# **Contents**

| 1. | Model Reference             | 2 |
|----|-----------------------------|---|
|    |                             |   |
| 2. | Pipe Length and Drop Height | 3 |
| _  |                             | _ |
| 3. | Electrical Wiring Diagrams  | 4 |

## 1. Model Reference

Refer to the following table to determine the specific indoor and outdoor unit model.


| Indoor Unit Model | Outdoor Unit Model | Capacity (Btu) | Power Supply     |
|-------------------|--------------------|----------------|------------------|
| HFLA-025N-01M25   | YFAA-025R-01M22    | 9k             |                  |
| HFLA-035N-01M25   | YFAA-035R-01M22]   | 12k            | 220-240V~, 50Hz, |
| HFLA-050N-01M25   |                    | 18k            | 1Phase           |
| HFLA-070N-01M25   | YFAA-070R-01M22    | 24k            |                  |

## 2. Pipe Length and Drop Height

The length and elevation of connection pipe are shown in the table below. if the pipe length exceeds max pipe length, additional refrigerant should be charged to ensure nominal cooling/heating capacity.

| Capacity(Btu) | Standard Length | Max Pipe Length | Max Elevation | Additional Refrigerant |
|---------------|-----------------|-----------------|---------------|------------------------|
| <18k          | 5m (16.40ft)    | 20m (65.6ft)    | 8m (26.2ft)   | 15g/m (0.16oZ/ft)      |
| 18k           |                 | 25 m /02ft)     | 10m (32.8ft)  | 13g/111 (0.1002/11)    |
| 22k~27k       |                 | 25m (82ft)      |               | 30g/m (0.32oZ/ft)      |

If oil flows back into the outdoor unit's compressor, this might cause liquid compression or deterioration of oil return. Oil traps in the rising gas pipe can prevent this.

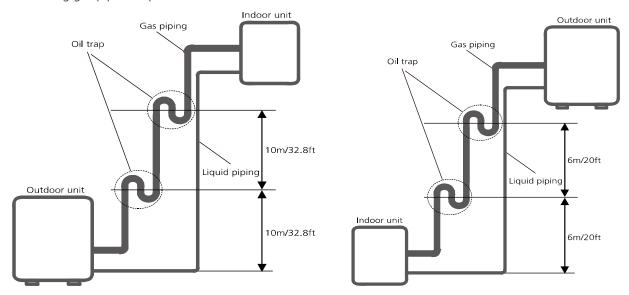

- 1. Indoor unit is installed higher than outdoor unit
- 2. Outdoor unit is installed higher than indoor unit

If indoor unit is installed higher than outdoor unit, oil trap should be set every 10m(32.8ft) of vertical distance.

If the outdoor unit is installed higher than the indoor unit, proper oil should return to the compressor along with the suction of refrigerant to keep lubrication of compressor. If the suction flow velocity drops below 7.62m/s(1500fpm (feet per minute)), oil won't return to the compressor. An oil trap should be installed every 6m(20ft) of vertical distance.

## 3. Electrical Wiring Diagrams

Indoor and outdoor unit wiring diagram

| Indoor Unit     |                    | Outdoor Unit    |                    |  |
|-----------------|--------------------|-----------------|--------------------|--|
| IDU Model       | IDU Wiring Diagram | ODU Model       | ODU Wiring Diagram |  |
| HFLA-025N-01M25 |                    | YFAA-025R-01M22 | 1602200022610      |  |
| HFLA-035N-01M25 | 16022000020455     | YFAA-035R-01M22 | 16022000033610     |  |
| HFLA-050N-01M25 |                    |                 |                    |  |
| HFLA-070N-01M25 | 16022000022180     | YFAA-070R-01M22 | 16022000031630     |  |


#### Indoor unit abbreviations

| Abbreviation | Paraphrase                                |  |
|--------------|---|--|
| Y/G          | Yellow-Green Conductor                    |  |
| ION          | Positive and Negative Ion Generator       |  |
| CAP          | Capacitor                                 |  |
| PLASMA       | Electronic Dust Collector                 |  |
| L            | LIVE                                      |  |
| N            | NEUTRAL                                   |  |
| T1           | Indoor Room Temperature                   |  |
| T2           | Coil Temperature of Indoor Heat Exchanger |  |


#### Outdoor unit abbreviations


| Abbreviation | Paraphrase                     |  |
|--------------|--------------------------------|--|
| 4-WAY        | Gas Valve Assembly/4-WAY VALVE |  |
| AC-FAN       | Alternating Current FAN        |  |
| DC-FAN       | Direct Current FAN             |  |
| CT1          | AC Current Detector            |  |
| COMP         | Compressor                     |  |
| T3           | Coil Temperature of Condenser  |  |
| T4           | Outdoor Ambient Temperature    |  |
| L-PRO        | Low Pressure Switch            |  |
| H-PRO        | High Pressure Switch           |  |

Indoor unit wiring diagram: 16022000020455

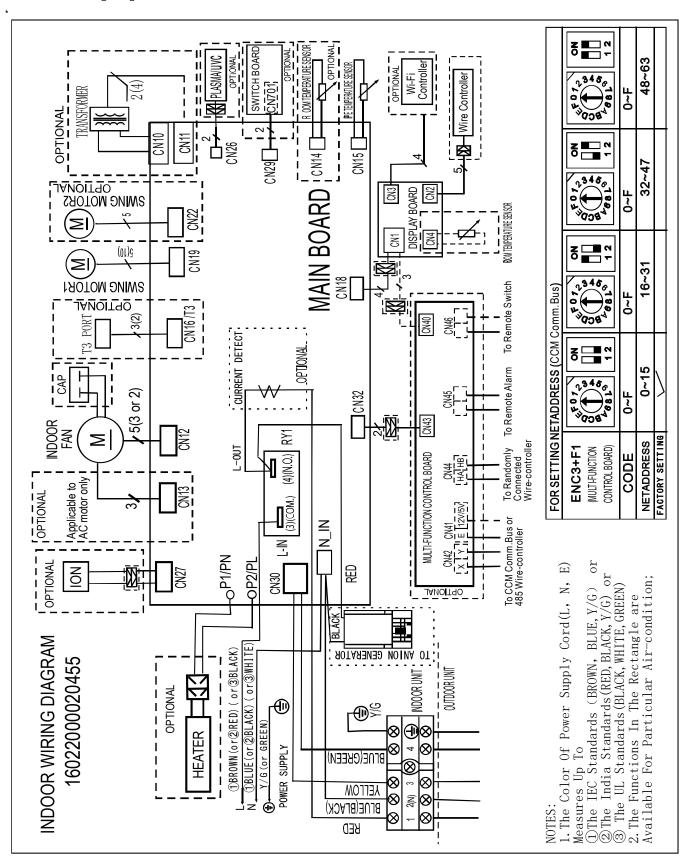


Indoor unit wiring diagram: 16022000022180

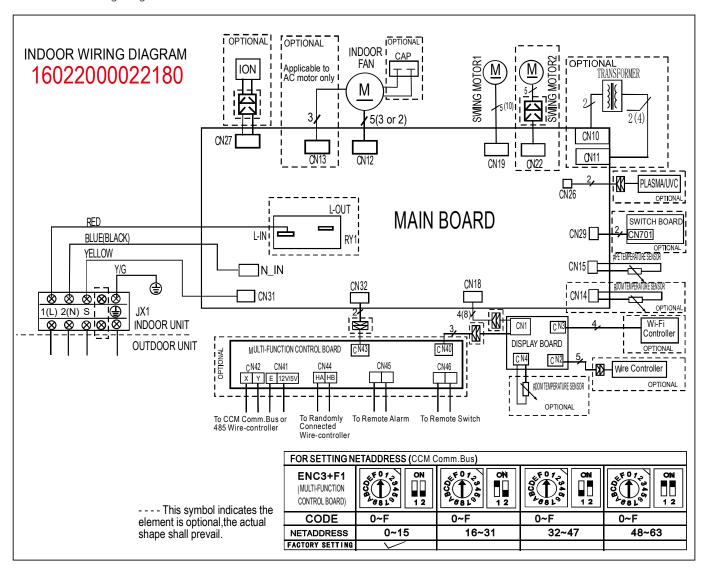

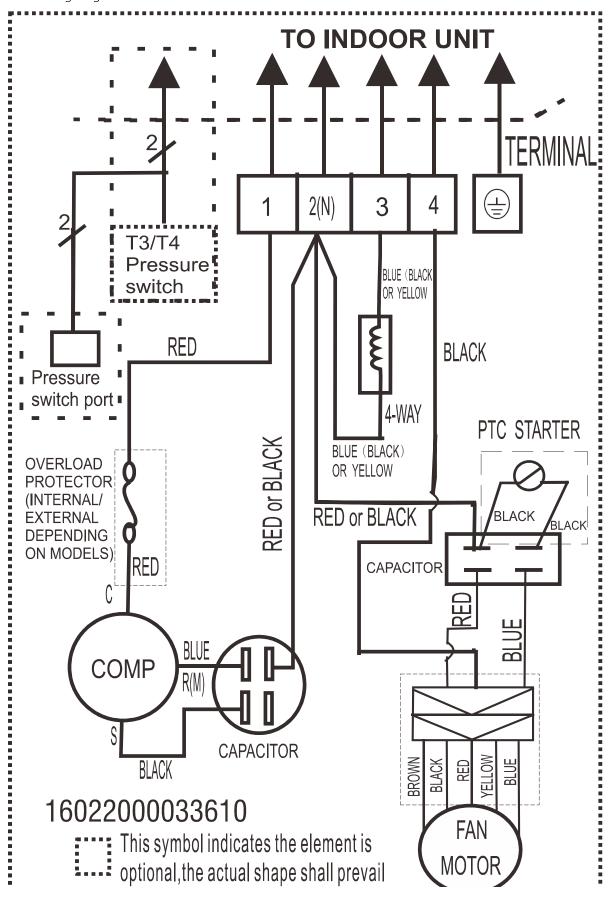

Outdoor unit wiring diagram: 16022000031630

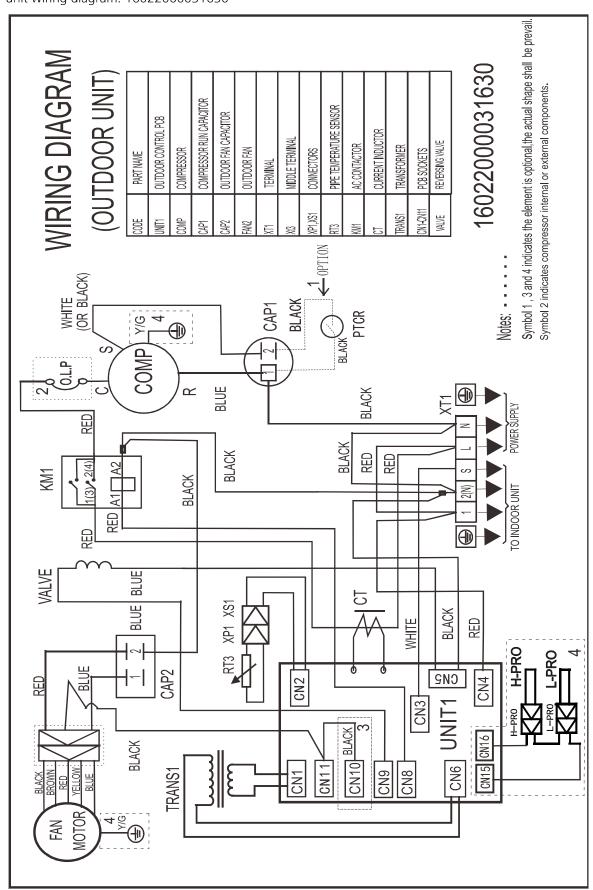


## **Product Features**

# **Contents**

| 1. | Displa | ay Function                      | 2 |
|----|--------|----------------------------------|---|
| 2  | Safet  | y Features                       | 3 |
| 3. | Basic  | Functions                        | 4 |
|    | 3.1    | Table                            | 4 |
|    | 3.2    | Abbreviation                     | 5 |
|    | 3.3    | Fan Mode                         | 5 |
|    | 3.4    | Cooling Mode                     | 5 |
|    | 3.5    | Heating Mode(Heat Pump Units)    | 5 |
|    | 3.6    | Auto-mode                        | 6 |
|    | 3.7    | Drying Mode                      | 7 |
|    | 3.8    | Forced Operation Function        | 7 |
|    | 3.9    | Sleep Function                   | 7 |
|    | 3.10   | Auto-Restart Function            | 7 |
|    | 3.11   | Refrigerant Leakage Detection    | 7 |
|    | 3.12   | Ionizer/Plasma (for some models) | 7 |
| 4  | Ontic  | onal Functions                   | 8 |

## 1. Display Function

Unit display functions

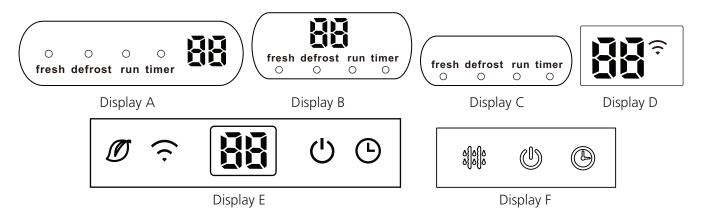

| Display           |   | Function  |
|-------------------|---|---|
| fresh or <b>Ø</b> |   | Fresh(available on select units only)                     |
| defrost or        | 어<br>성<br>성   | Defrost   |
| run or 🕲          |   | When the unit is on                                       |
| timer or 🕲        |   | When TIMER is on  |
| ÷                 |   | WiFi control (available on select units only)             |
| BB                | Temperature value   | Temperature   |
|                   | <b>III</b> (3s)   | Activation of Timer ON, Fresh, Swing, Turbo, or Silent    |
|                   | <b>IF</b> (3s)  | Cancellation of Timer OFF, Fresh, Swing, Turbo, or Silent |
|                   | dF  | Defrost   |
|                   | cF  | Warming in heating mode                                   |
|                   | 50  | Self-clean (available on select units only)               |
| FP                |   | Heating in room temperature under 8°C                     |
|                   | <b>E</b> → <b>E</b> → <b>Set</b> temperature → <b>E</b> gradually illuminates to <b>E</b> in one second intervals | ECO function (available on select units only)             |

Note: Please select the display function according to your purchase product.

#### 2. Safety Features

#### Compressor three-minute delay at restart

Compressor functions are delayed for up to one minute upon the first startup of the unit, and are delayed for up to three minutes upon subsequent unit restarts.

#### Zero crossing detection error protection(Except for DC fan units)

If AC can not detect zero crossing signal for 4 minutes or the zero crossing signal time interval is not correct, the unit will stop and the LED will display the failure. The correct zero crossing signal time interval should be between 6-13ms.

#### Automatic shutoff based on fan speed

If the indoor fan speed registers below 300RPM for an extended period of time, the unit ceases operation and the corresponding error code is displayed on the indoor unit.

#### Indoor fan delayed operation

- When the unit starts, the louver is automatically activated and the indoor fan will operate after a period of 4 seconds.
- If the unit is in heating mode, the indoor fan is regulated by the anti-cold wind function.

#### Sensor redundancy and automatic shutoff

If one temperature sensor malfunctions, the air conditioner ceases operation.

#### Refrigerant leakage detection

This function is active only when cooling mode is selected. It will detect if the compressor is being damaged by refrigerant leakage or by compressor overload. This is measured using the coil temperature of evaporator T2 when the compressor is in operation.

## 3. Basic Functions

#### 3.1 Table

| Functions |                     | Heating Mode    |           | Auto Mode                       |
|-----------|---------------------|-----------------|-----------|---------------------------------|
|           |                     | Defrosting Mode |           |                                 |
| Cases     |                     | Case1:T1 and T2 | Case 2:T3 | A=2°C(3.6°F),<br>B=-3°C(-5.4°F) |
|           | 9k~27k cooling only |                 |           | √                               |
| Models    | 7k~18k heat pump    | ✓               |           | ✓                               |
|           | 22k~27k heat pump   |                 | ✓         | ✓                               |

Note: The detailed description of case 1 or case 2 is shown in the following function sections(from 3.5 to 3.6).

#### 3.2 Abbreviation

Unit element abbreviations

| Abbreviation | Element                        |
|--------------|--------------------------------|
| T1           | Indoor room temperature        |
| T2           | Coil temperature of evaporator |
| T3           | Coil temperature of condenser  |
| T4           | Outdoor ambient temperature    |
| TS           | Set temperature                |

In this manual, such as  $I_{defrost}$ , TE1, TE2...etc., they are well-setting parameter of EEPROM.

#### 3.3 Fan Mode

When fan mode is activated:

- The outdoor fan and compressor are stopped.
- Temperature control is disabled and no temperature setting is displayed.
- The indoor fan speed can be set to high, medium, low, or auto
- The louver operations are identical to those in cooling mode
- Auto fan: In fan-only mode, AC operates the same as auto fan in cooling mode with the temperature set at 24°C(75.2°F).


#### 3.4 Cooling Mode

#### 3.4.1 Compressor Control

 When indoor room temperature T1 is lower than setting value, the compressor and outdoor fan cease operation.

#### 3.4.2 Indoor Fan Control

- In cooling mode, the indoor fan operates continuously.
   The fan speed can be set to high, medium, low, turbo or auto.
- The auto fan acts as below rules:

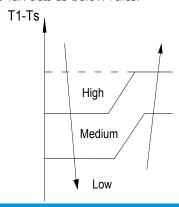

#### 3.4.3 Outdoor Fan Control

Outdoor units just have one single fan speed. The operation of outdoor fan is consistent with the operation of compressor. Except the following situations:

- Condenser high temperature protection
- Current protection

## 3.4.4 Condenser Temperature Protection(For the units have T3 sensor)

When condenser temperature is more than setting value, the compressor ceases operation.

#### 3.4.5 Evaporator Temperature Protection

When evaporator temperature drops below a configured value, the compressor and outdoor fan cease operation.

#### 3.5 Heating Mode(Heat pump units)


#### 3.5.1 Compressor Control

Once the compressor starts up, it will keep running for 7 minutes, then indoor room temperature T1 is higher than setting value, the compressor and outdoor fan cease operation.


#### 3.5.2 Indoor Fan Control:

- When the compressor is on, the indoor fan speed can be set to high, medium, low, or auto. And the anticold wind function has the priority.
- Anti-cold air function
  - When indoor unit coil temperature T2 is low, the anti-cold air function will start and the indoor fan is controlled by indoor unit coil temperature T2.

For 18K and below models:

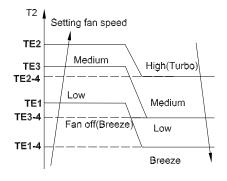


For above 18K models:

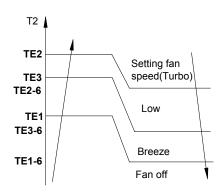

NOTE: During temperature rise, medium speed changeover has no requirement of forced running time . But during temperature drop, the high speed must be forced to run for 2 minutes before judging whether to directly turn to the low speed.

• Auto fan action in heating mode:

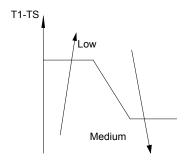

#### 3.5.3 Outdoor Fan Control:

Outdoor units just have one single fan speed. The operation of outdoor fan is consistent with the operation of compressor. Except the following situations:

- Evaporator high temperature protection
- Defrosting
- Current protection.

#### 3.5.4 Defrosting mode

#### Case 1:

- The unit enters defrosting mode according to the temperature difference between T2 and T1, as well as the compressor runtime.
- In defrosting mode, the compressor continues to run, the indoor and outdoor motor will cease operation, the defrost light of the indoor unit will turn on, and the "symbol is displayed.
- If any one of the following conditions is satisfied, defrosting ends and the machine switches to normal

heating mode:

- Compressor current is over than I<sub>defrost</sub> and lasts for 7s
- The defrosting time has reached the setting value.
- T2≥2°C(3.6°F) after entering defrosting mode for 3 minutes.
- After entering defrosting mode for 2 minutes, check the value of T2. The minimum temperature of T2 is marked as T2min. If T2-T2min≥2°C(3.6°F) during the following 4 minutes, AC will exit defrosting mode(if T2≤-15°C(5°F),considers it as -15°C(5°F)).

#### Case 2:

- The unit enters defrosting mode according to the value of temperature of T3 and the value range of temperature change of T3 as well as the compressor runtime..
- In defrosting mode, the compressor continues to run, the indoor and outdoor motor will cease operation, the defrost light of the indoor unit will turn on, and the "symbol is displayed.
- If any one of the following conditions is satisfied, defrosting ends and the machine switches to normal heating mode:
  - T3 rises above TC2.
  - Unit runs for 10 minutes consecutively in defrosting mode

#### 3.5.5 Evaporator Temperature Protection

When the evaporator temperature exceeds a preset protection value, the compressor ceases operation.

#### 3.6 Auto-mode

- This mode can be selected with the remote controller and the setting temperature can be changed between 17°C~30°C(62°F~86°F).
- In auto mode, the machine selects cooling, heating, or fan-only mode on the basis of  $\Delta T$  ( $\Delta T = T1-TS$ ).

| ΔΤ                                  | Running mode |
|-------------------------------------|--------------|
| ΔΤ>Α                                | Cooling      |
| B≤ΔT≤A                              | Fan-only     |
| ΔT <b< td=""><td>Heating*</td></b<> | Heating*     |

Heating\*: In auto mode, cooling only models run the fan

- Indoor fan will run at auto fan speed.
- The unit will choose running mode, when
  - received the auto signal from the remote controller;
  - forced-auto mode by pressing manual button;


- time on to auto mode;
- the compressor doesn't start in 20 minutes when a running mode is set in auto.

#### 3.7 Drying mode

- Compressor will run for 10 minutes and be off for 5 minutes and loop again and again
- Indoor fan speed is fixed at low and can't be changed. The louver angle is the same as in cooling mode.
- All protections are active and the same as that in cooling mode.
- Low indoor room temperature protection
  - If T1<10°C(50°F)., the compressor ceases operation until T1>13°C(55.4°F)..

#### 3.8 Forced operation function

Press the AUTO/COOL button, the AC will run as below sequence:

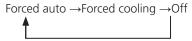

• Forced cooling mode:

The compressor and outdoor fan continue to run and the indoor fan runs at low speed. After running for 30 minutes, the AC will switch to auto mode with a preset temperature of 24°C(76°F).

• Forced auto mode:

Forced auto mode operates the same as normal auto mode with a preset temperature of 24°C(76°F).

- The unit exits forced operation when it receives the following signals:
  - Switch on
  - Switch off
  - Timer on
  - Timer off
  - Changes in:
    - mode
    - fan speed
    - sleep mode
    - Follow me

#### 3.9 Sleep function

- The sleep function is available in cooling, heating, or auto mode.
- The operational process for sleep mode is as follows:
  - When cooling, the temperature rises 1°C(2°F) (to

- not higher than 30°C(86°F)) every hour. After 2 hours, the temperature stops rising and the indoor fan is fixed at low speed.
- When heating, the temperature decreases 1°C(2°F) (to not lower than 17°C(62.6°F)) every hour. After 2 hours, the temperature stops decreasing and the indoor fan is fixed at low speed. Anti-cold wind function takes priority.
- The operating time for sleep mode is 8 hours, after which, the unit exits this mode but does not switch off.

#### 3.10 Auto-Restart function

- The indoor unit has an auto-restart module that allows the unit to restart automatically. The module automatically stores the current settings (not including the swing setting) and, in the case of a sudden power failure, will restore those setting automatically within 3 minutes after power returns.
- If the unit was in forced cooling mode, it will run in this mode for 30 minutes and turn to auto mode with temperature set to 24°C(76°F).
- If there is a power failure while the unit is running, the compressor starts 3 minutes after the unit restarts. If the unit was already off before the power failure, the compressor starts 1 minute after the unit restarts.

#### 3.11 Refrigerant Leakage Detection

With this new technology, the display area will show "EC" when the outdoor unit detects refrigerant leakage.

#### 3.12 Ionizer/Plasma (for some models)

When AC powers on and indoor fan is on, press "Fresh" on the remote control to enable the IONIZER function. While this function is active, the lonizer/Plasma Dust Collector(depending on models) is energized and will help to remove pollen and impurities from the air.

## 4. Optional Functions

#### 4.1 8°C Heating

In heating mode, the temperature can be set to as low as 8°C, preventing the indoor area from freezing if unoccupied during severe cold weather.

#### 4.2 Self clean

- If you press "Self Clean" when the unit is in cooling or drying mode:
  - For cooling models, the indoor unit will run in low fan mode for a certain time, then ceases operation.
  - For heat pump models, the indoor unit will run in fan-only mode, then low heat, and finally in fan-only mode.
- Self Clean keeps the indoor unit dry and prevents mold growth.
- When match with multi outdoor unit, this function is disabled.

#### 4.3 Follow me

- If you press "Follow Me" on the remote, the indoor unit will beep. This indicates the follow me function is active.
- Once active, the remote control will send a signal every 3 minutes, with no beeps. The unit automatically sets the temperature according to the measurements from the remote control.
- The unit will only change modes if the information from the remote control makes it necessary, not from the unit's temperature setting.
- If the unit does not receive a signal for 7 minutes or you press "Follow Me," the function turns off. The unit regulates temperature based on its own sensor and settings.

#### 4.4 Silence

- Press "Silence" on the remote control to enable the SILENCE function. While this function is active, the indoor unit will run in low speed, which reduces noise to the lowest possible level.
- This function is only active in cooling mode.

## **Maintenance**

# **Contents**

| 1. | First           | Time Installation Check | 2 |
|----|-----------------|-------------------------|---|
| 2  | Refri           | igerant Recharge        | 4 |
| 3  | Re-Installation |                         | 5 |
|    | 3.1             | Indoor Unit             | 5 |
|    | 3 2             | Outdoor Unit            | 7 |

#### 1. First Time Installation Check

Air and moisture trapped in the refrigerant system affects the performance of the air conditioner by:


- Increasing pressure in the system.
- Increasing the operating current.
- Decreasing the cooling or heating efficiency.
- Congesting the capillary tubing due to ice build-up in the refrigerant circuit.
- Corroding the refrigerant system.

To prevent air and moisture from affecting the air conditioner's performance, the indoor unit, as well as the pipes between the indoor and outdoor unit, must be be leak tested and evacuated.

#### Leak test (soap water method)

Use a soft brush to apply soapy water or a neutral liquid detergent onto the indoor unit connections and outdoor unit connections. If there is gas leakage, bubbles will form on the connection.


#### Air purging with vacuum pump

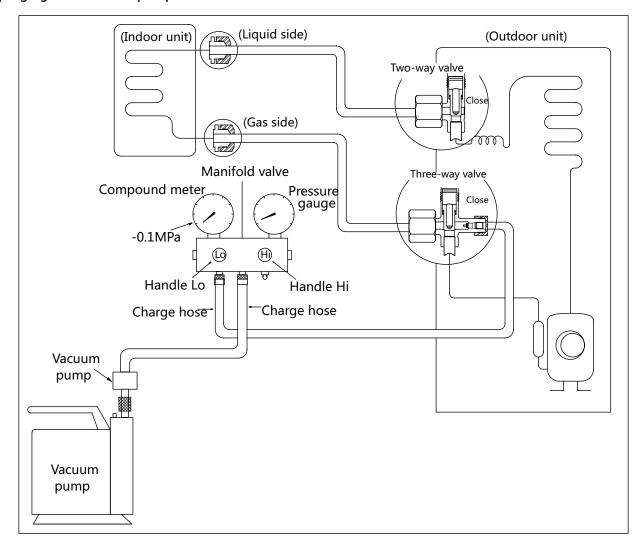

- 1. Tighten the flare nuts of the indoor and outdoor units, and confirm that both the 2- and 3-way valves are closed.
- **2.** Connect the charge hose with the push pin of Handle Lo to the gas service port of the 3-way valve.
- **3.** Connect another charge hose to the vacuum pump.
- **4.** Fully open the Handle Lo manifold valve.
- 5. Using the vacuum pump, evacuate the system for 30 minutes.
  - **a.** Check whether the compound meter indicates -0.1 MPa (14.5 Psi).
    - If the meter does not indicate -0.1 MPa (14.5 Psi) after 30 minutes, continue evacuating for an additional 20 minutes.
    - If the pressure does not achieve -0.1 MPa (14.5 Psi) after 50 minutes, check for leakage.

- If the pressure successfully reaches -0.1 MPa (14.5 Psi), fully close the Handle Lo valve, then cease vacuum pump operations.
- **b.** Wait for 5 minutes then check whether the gauge needle moves after turning off the vacuum pump. If the gauge needle moves backward, check wether there is gas leakage.
- Loosen the flare nut of the 3-way valve for 6 or 7 seconds and then tighten the flare nut again.
  - **a.** Confirm the pressure display in the pressure indicator is slightly higher than the atmospheric pressure.
  - **b.** Remove the charge hose from the 3-way valve.
- **7.** Fully open the 2- and 3-way valves and tighten the cap of the 2- and 3-way valves.

## 2. Refrigerant Recharge

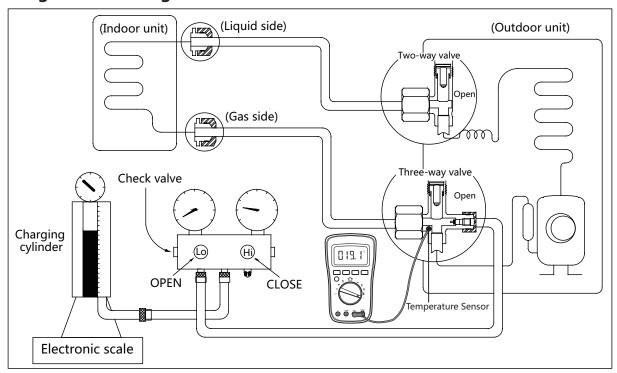

#### **Procedure:**

- 1. Close both 2- and 3-way valves.
- **2.** Slightly connect the Handle Lo charge hose to the 3-way service port.
- **3.** Connect the charge hose to the valve at the bottom of the cylinder.
- **4.** If the refrigerant is R410A/R32, invert the cylinder to ensure a complete liquid charge.
- **5.** Open the valve at the bottom of the cylinder for 5 seconds to purge the air in the charge hose, then fully tighten the charge hose with push pin Handle Lo to the service port of 3-way valve..
- **6.** Place the charging cylinder onto an electronic scale and record the starting weight.
- 7. Fully open the Handle Lo manifold valve, 2- and


3-way valves.

- **8.** Operate the air conditioner in cooling mode to charge the system with liquid refrigerant.
- **9.** When the electronic scale displays the correct weight (refer to the gauge and the pressure of the low side to confirm, the value of pressure refers to chapter Appendix), turn off the air conditioner, then disconnect the charge hose from the 3-way service port immediately.
- **10.** Mount the caps of service port and 2- and 3-way valves.
- **11.** Use a torque wrench to tighten the caps to a torque of 18 N.m.
- **12.** Check for gas leakage.

#### 3. Re-Installation


#### 3.1 Indoor Unit

Collecting the refrigerant into the outdoor unit

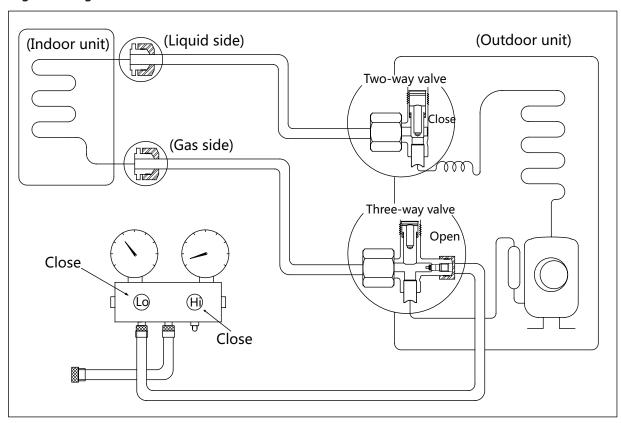

- 1. Confirm that the 2- and 3-way valves are opened.
- 2. Connect the charge hose with the push pin of Handle Lo to the 3-way valve's gas service port.
- **3.** Open the Handle Lo manifold valve to purge air from the charge hose for 5 seconds and then close it quickly.
- **4.** Close the 2-way valve.
- **5.** Operate the air conditioner in cooling mode. Cease operations when the gauge reaches 0.1 MPa (14.5 Psi).
- **6.** Close the 3-way valve so that the gauge rests between 0.3 MPa (43.5 Psi) and 0.5 MPa (72.5 Psi).
- **7.** Disconnect the charge set and mount the caps of service port and 2- and 3-way valves.
- **8.** Use a torque wrench to tighten the caps to a torque of 18 N.m.
- **9.** Check for gas leakage.

#### Air purging with vacuum pump

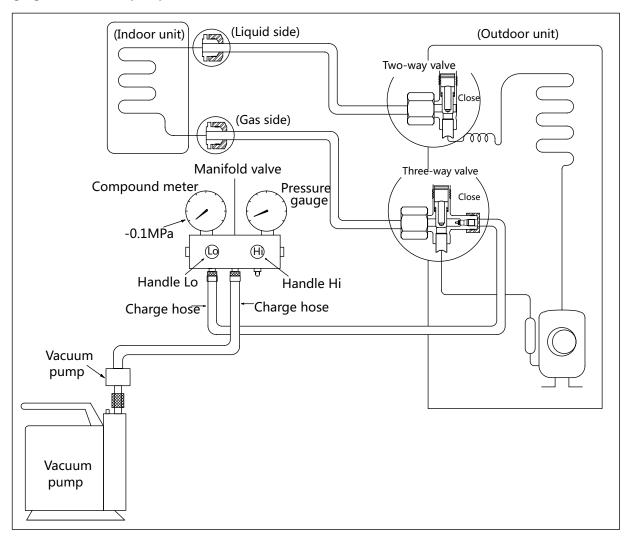


- 1. Tighten the flare nuts of the indoor and outdoor units, and confirm that both the 2- and 3-way valves are closed.
- 2. Connect the charge hose with the push pin of Handle Lo to the gas service port of the 3-way valve.
- **3.** Connect another charge hose to the vacuum pump.
- **4.** Fully open the Handle Lo manifold valve.
- **5.** Using the vacuum pump, evacuate the system for 30 minutes.
  - **a.** Check whether the compound meter indicates -0.1 MPa (14.5 Psi).
    - If the meter does not indicate -0.1 MPa (14.5 Psi) after 30 minutes, continue evacuating for an additional 20 minutes.
    - If the pressure does not achieve -0.1 MPa (14.5 Psi) after 50 minutes, check for leakage.

- If the pressure successfully reaches -0.1 MPa (14.5 Psi), fully close the Handle Lo valve, then cease vacuum pump operations.
- **b.** Wait for 5 minutes then check whether the gauge needle moves after turning off the vacuum pump. If the gauge needle moves backward, check wether there is gas leakage.
- **6.** Loosen the flare nut of the 3-way valve for 6 or 7 seconds and then tighten the flare nut again.
  - **a.** Confirm the pressure display in the pressure indicator is slightly higher than the atmospheric pressure.
  - **b.** Remove the charge hose from the 3-way valve.
- **7.** Fully open the 2- and 3-way valves and tighten the cap of the 2- and 3-way valves.


#### 3.2 Outdoor Unit

#### **Evacuation for the whole system**

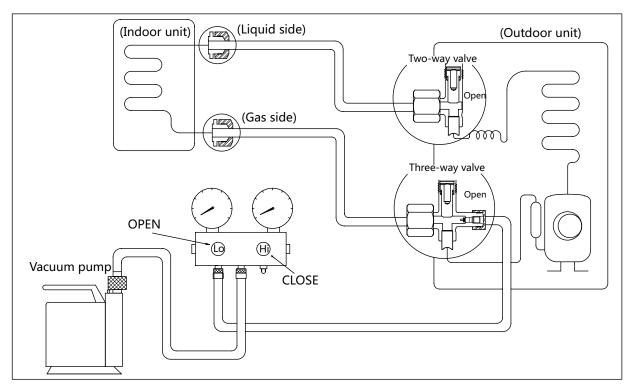

- 1. Confirm that the 2- and 3-way valves are opened.
- **2.** Connect the vacuum pump to the 3-way valve's service port.
- **3.** Evacuate the system for approximately one hour. Confirm that the compound meter indicates -0.1 MPa (14.5Psi).
- **4.** Close the valve (Low side) on the charge set and turn off the vacuum pump.
- **5.** Wait for 5 minutes then check whether the gauge needle moves after turning off the vacuum pump. If the gauge needle moves backward, check whether there is gas leakage.
- **6.** Disconnect the charge hose from the vacuum pump.
- 7. Mount the caps of service port and 2- and 3-way
- **8.** Use a torque wrench to tighten the caps to a torque of 18 N.m.

#### Refrigerant charging

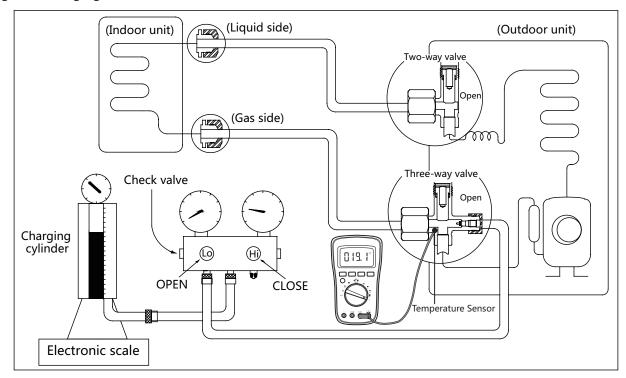

#### Procedure:

- 1. Close both 2- and 3-way valves.
- **2.** Slightly connect the Handle Lo charge hose to the 3-way service port.
- **3.** Connect the charge hose to the valve at the bottom of the cylinder.
- **4.** If the refrigerant is R410A/R32, invert the cylinder to ensure a complete liquid charge.
- **5.** Open the valve at the bottom of the cylinder for 5 seconds to purge the air in the charge hose, then fully tighten the charge hose with push pin Handle Lo to the service port of 3-way valve..
- **6.** Place the charging cylinder onto an electronic scale and record the starting weight.

- **7.** Fully open the Handle Lo manifold valve, 2- and 3-way valves.
- **8.** Operate the air conditioner in cooling mode to charge the system with liquid refrigerant.
- **9.** When the electronic scale displays the correct weight (refer to the gauge and the pressure of the low side to confirm, the value of pressure refers to chapter Appendix), turn off the air conditioner, then disconnect the charge hose from the 3-way service port immediately.
- **10.** Mount the caps of service port and 2- and 3-way valves.
- **11.** Use a torque wrench to tighten the caps to a torque of 18 N.m.
- **12.** Check for gas leakage.

Note: 1. Mechanical connectors used indoors shall comply with local regulations.


2. When mechanical connectors are reused indoors, sealing parts shall be renewed. When flared joints are reused indoors, the flare part shall be re-fabricated.

# **Indoor Unit Disassembly**


# **Contents**


| 1. | Dime                    | ension            | 2  |
|----|-------------------------|-------------------|----|
| 2. | Indoor Unit Disassembly |                   |    |
|    | 2.1                     | Front Panel       | 3  |
|    | 2.2                     | Electrical parts  | 8  |
|    | 2.3                     | Evaporator        | 12 |
|    | 2.4                     | Fan motor and fan | 14 |
|    | 2.5                     | Step motor        | 16 |
|    | 2.6                     | Drain Hose        | 17 |


# 1. Dimension

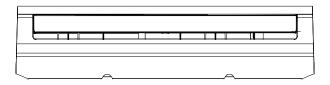



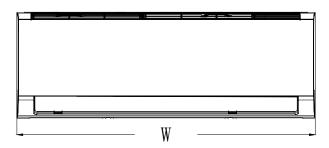

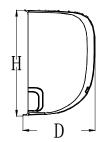

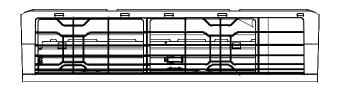



| Capacity | Body Code | W(mm) | D(mm) | H(mm) |
|----------|-----------|-------|-------|-------|
| 5K~11K   | А         | 715   | 194   | 285   |
| 9K~14K   | В         | 805   | 194   | 285   |
| 17K~18K  | С         | 957   | 213   | 302   |
| 18K~24K  | D         | 1040  | 220   | 327   |


# 2. Disassembly

# 2.1 Indoor unit

# 1. Front Panel

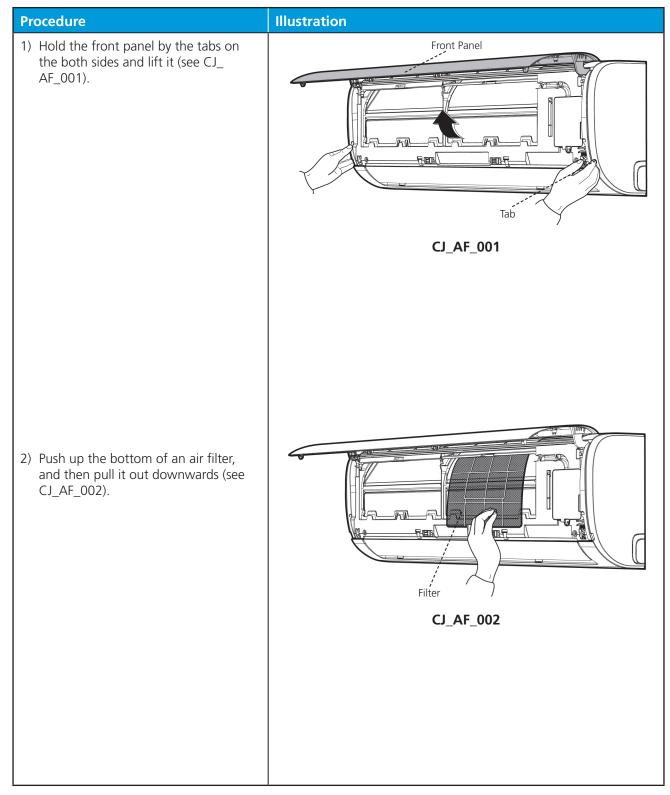

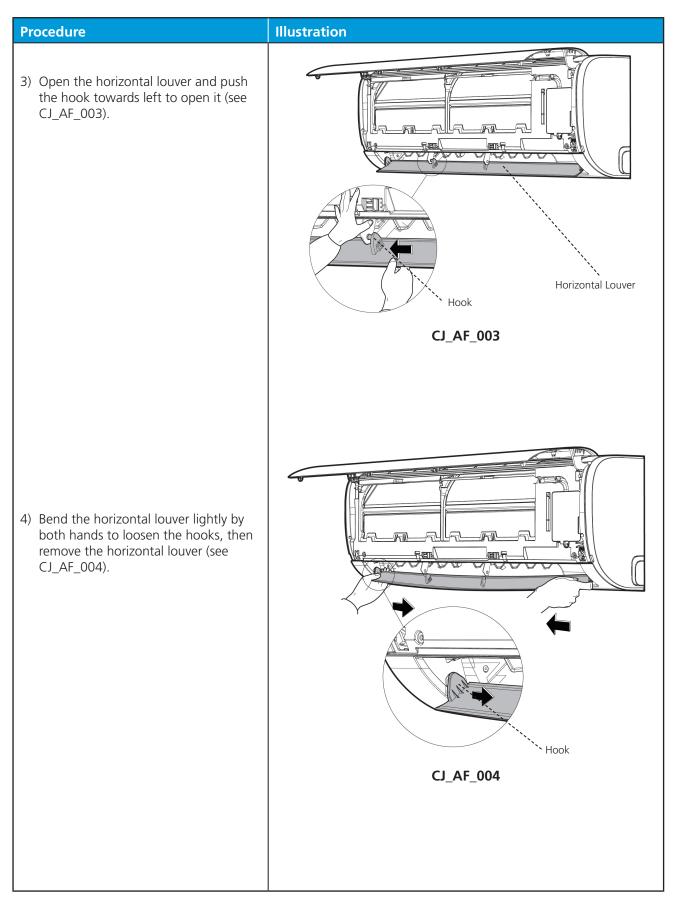

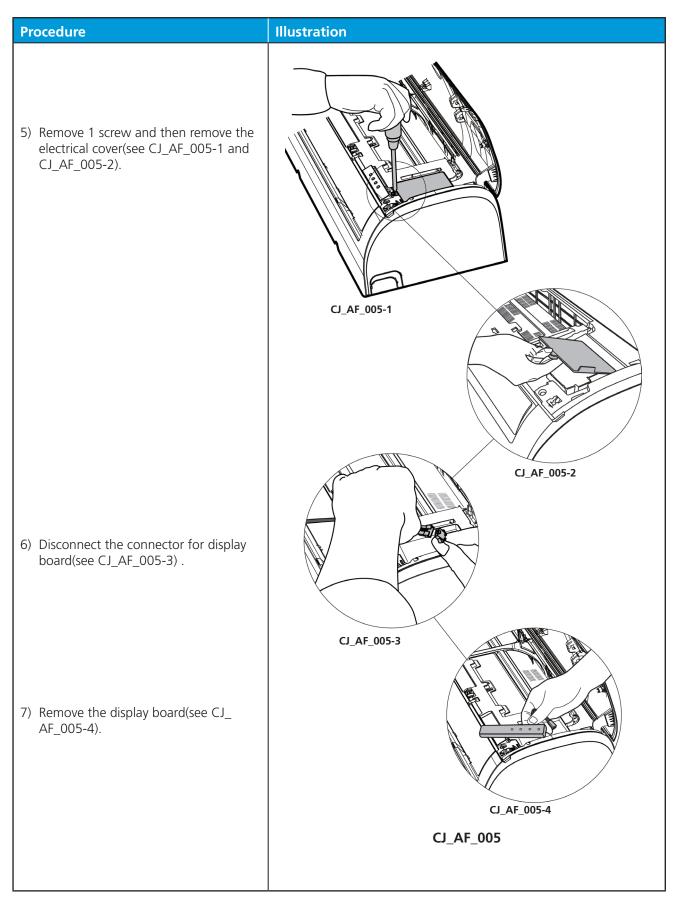



# Procedure Illustration 8) Open the screw caps(2) and the remove the screws(see CJ\_AF\_006). 9) Release the 4 hooks. CJ\_AF\_006 10)Release the seven hooks in the back (see CJ\_AF\_007). Hooks CJ\_AF\_007


# 11)Pull out the panel frame while pushing the hook through a clearance between the panel frame and the heat exchanger (see CJ\_AF\_008). CJ\_AF\_008 Panel Frame

# 2. Electrical parts

Note: Remove the front panel (refer to 1. Front panel) before disassembling electrical parts.

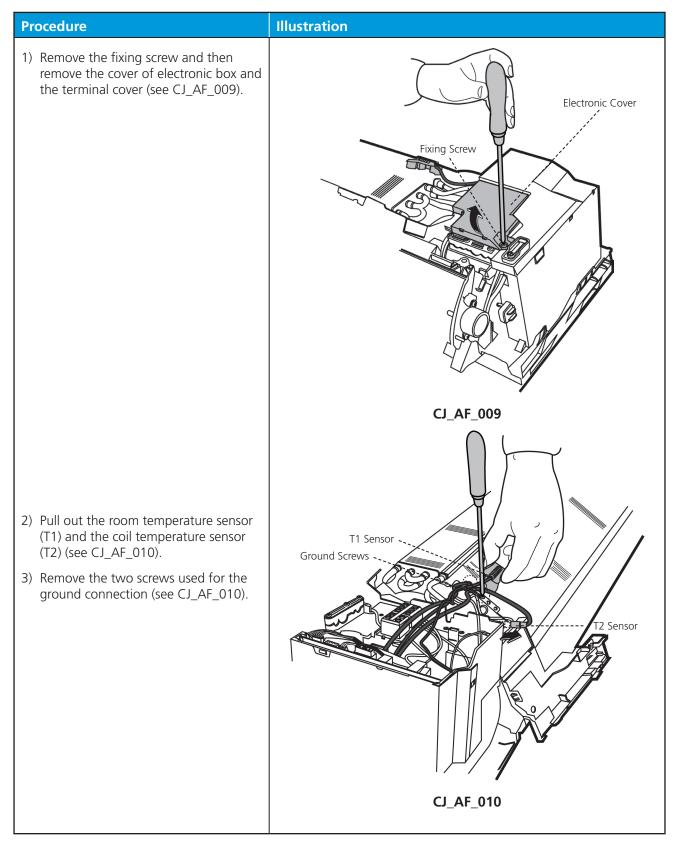


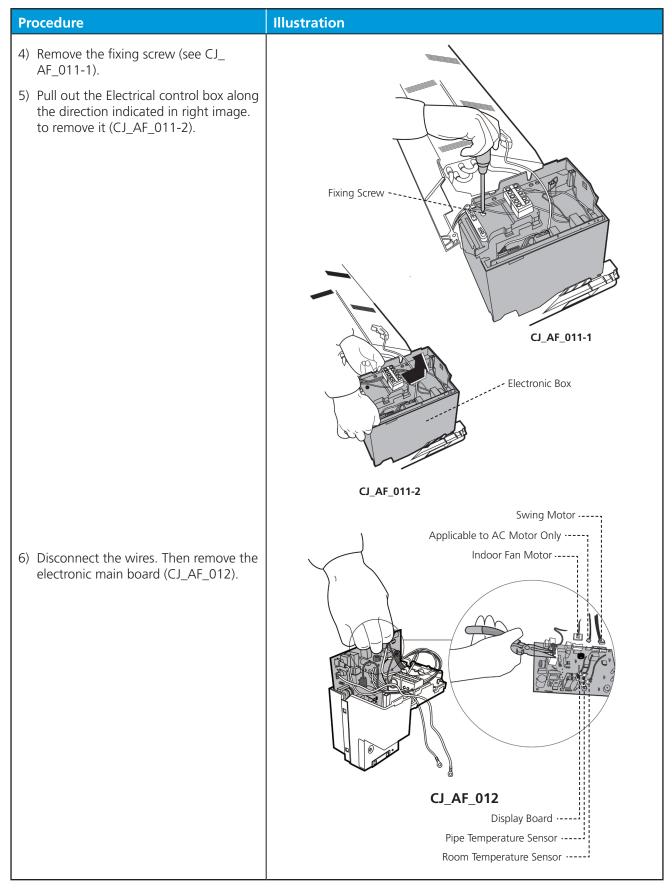


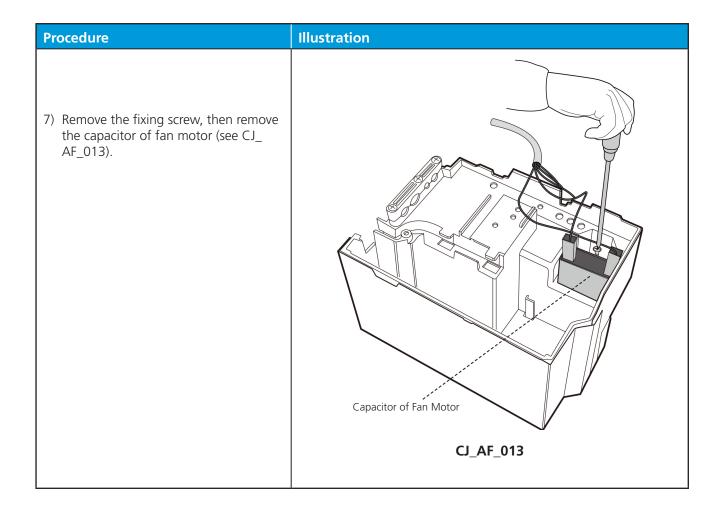

# 3. Evaporator


Note: Remove the front panel and electrical parts (refer to 1. Front panel and 2. Electrical parts) before disassembling evaporator.

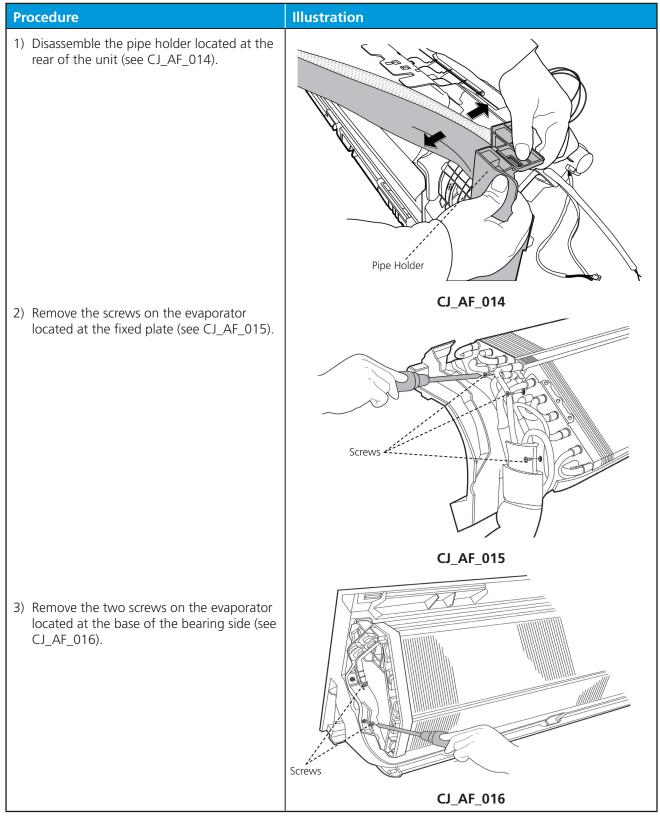

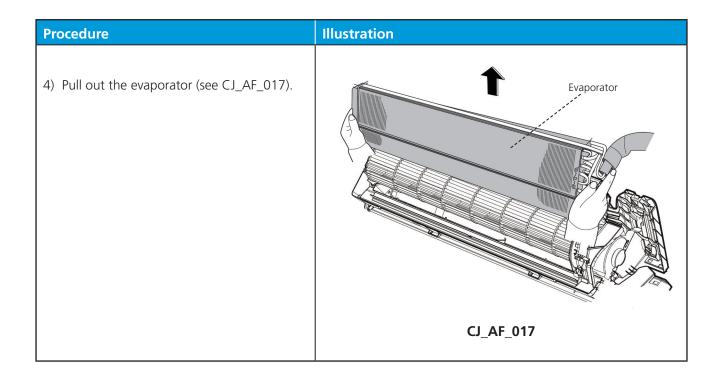


### 4. Fan motor and fan

Note: Remove the front panel, electrical parts and evaporator (refer to 1. Front panel, 2. Electrical parts, and 3. Evaporator). before disassembling fan motor and fan.

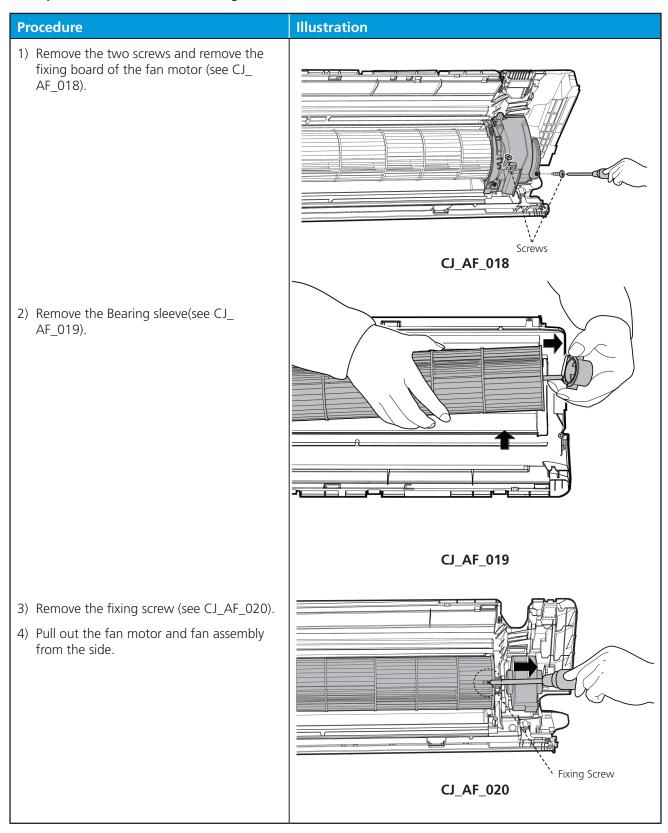

# 5. Step motor

Note: Remove the front panel and electrical parts (refer to 1. Front panel, 2. Electrical parts) before disassembling step motor.

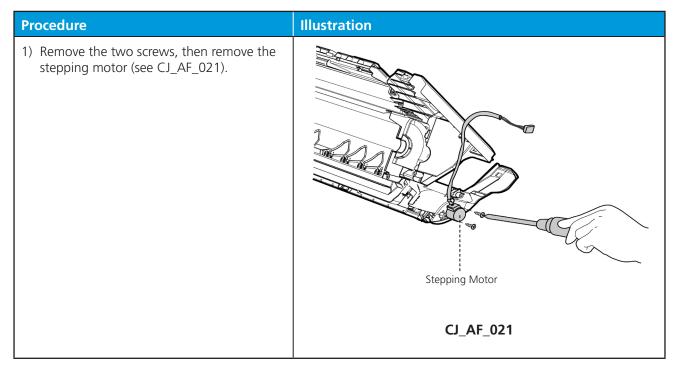

# **Outdoor Unit Disassembly**

# **Contents**

| 1. | Outdoor Unit Table |                       |    |
|----|--------------------|-----------------------|----|
| 2. | Dimension          |                       | 3  |
| 3. | Outo               | loor Unit Disassembly | 21 |
|    | 3.1                | Panel Plate           | 21 |
|    | 3.2                | Electrical Parts      | 46 |
|    | 3.3                | Fan Assembly          | 65 |
|    | 3.4                | Fan Motor             | 66 |
|    | 3.5                | Sound blanket         | 67 |
|    | 3.6                | Four-way valve        | 68 |
|    | 3.7                | Compressor            | 69 |


# 1. Outdoor Unit Disassembly


# 1.1 Outdoor Unit Table


| Outdoor Unit Model | Panel Plate | PCB Board   |
|--------------------|-------------|-------------|
| YFAA-025R-01M22    | X130        | PCB Board 1 |
| YFAA-035R-01M22]   | X130        | PCB Board 1 |
| YFAA-070R-01M22    | X430        | PCB Board 2 |


# 2. Dimension

# 1. Panel Plate X130

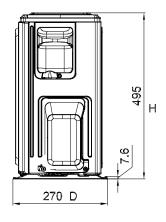


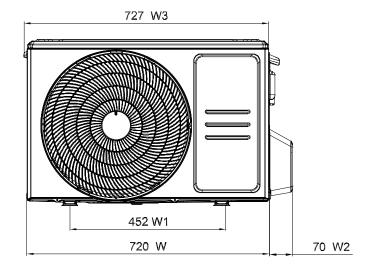

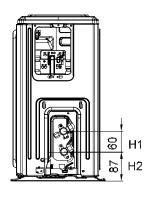

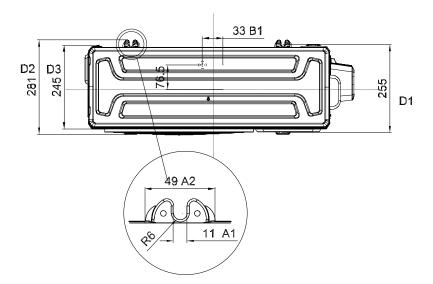


# 2. Panel Plate X430

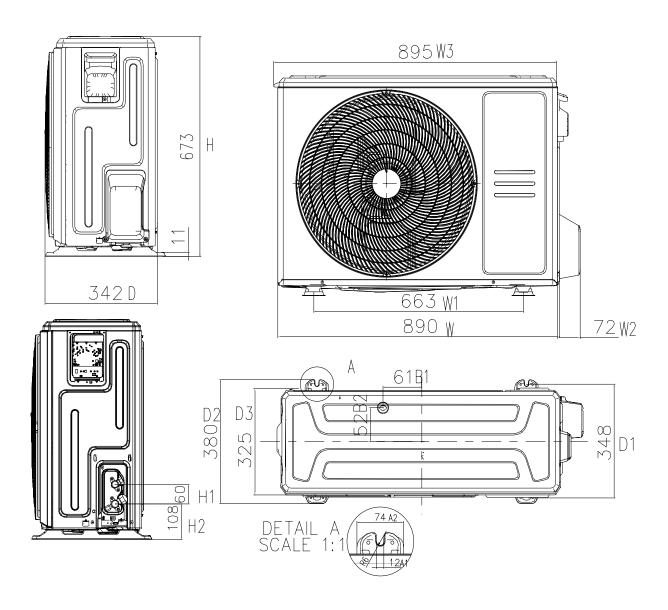


| 3.  | Outdoor Unit Disassembly |
|-----|--------------------------|
| 3.1 | Panel Plate              |
|     |                          |
|     |                          |
|     |                          |
|     |                          |
|     |                          |
|     |                          |
|     |                          |
|     |                          |
|     |                          |
|     |                          |
|     |                          |
|     |                          |
|     |                          |
|     |                          |
|     |                          |
|     |                          |
|     |                          |
|     |                          |
|     |                          |
|     |                          |

# 1. X130


# **Procedure** Illustration 1) Turn off the air conditioner and the power breaker. 2) Remove the screw of the big handle and then remove the big handle (1 screw) (see CJ\_X130\_001). Big Handle For US models (3 screws) CJ\_X130\_001 Top Cover 3) Remove the screws of the top cover and then remove the top cover (3 screws). One of the screws is located underneath the big handle (see CJ\_ X130\_002). CJ\_X130\_002

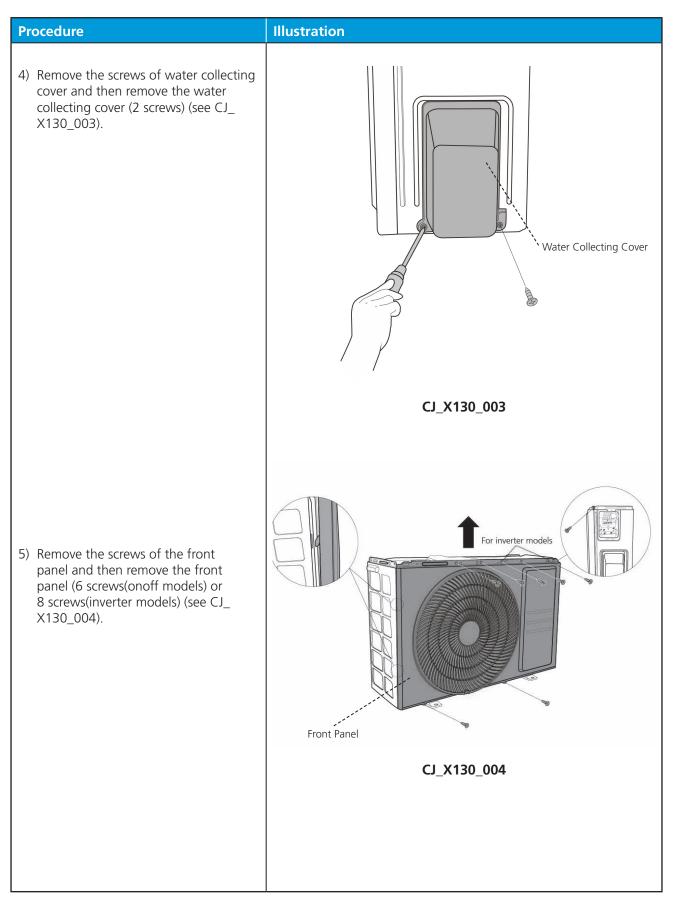


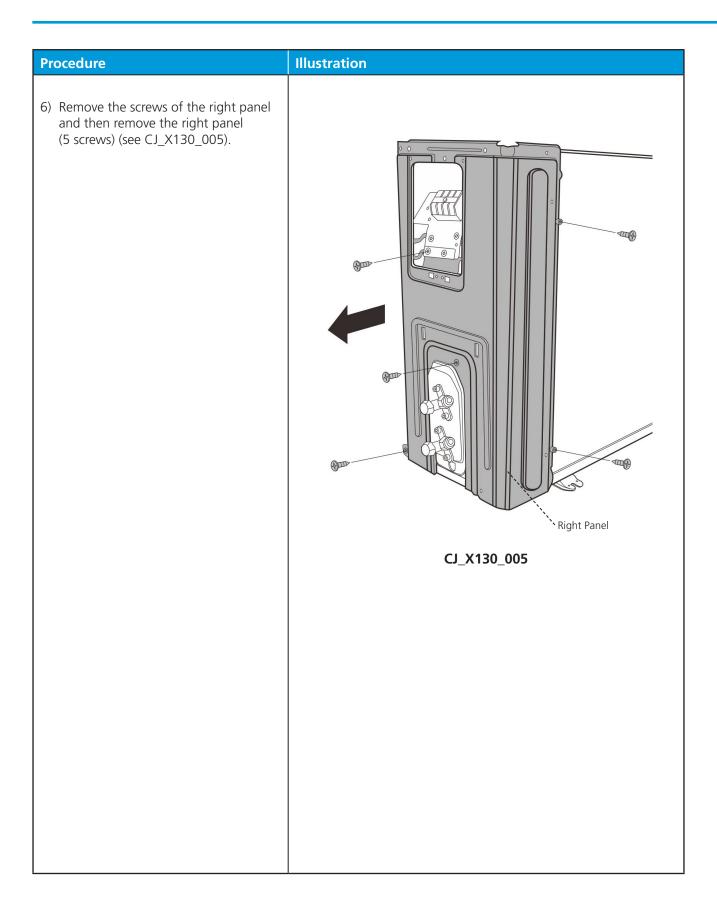

# 2. X430

# **Procedure** Illustration 1) Turn off the air conditioner and the power breaker. 2) Remove the screw of the big handle and then remove the big handle (1 screw) (see CJ\_X430\_001). Big Handle For US models (3 screws) CJ\_X430\_001 Top Cover 3) Remove the screws of the top cover and then remove the top cover (3 screws). One of the screws is located underneath the big handle (see CJ\_ X430\_002). CJ\_X430\_002

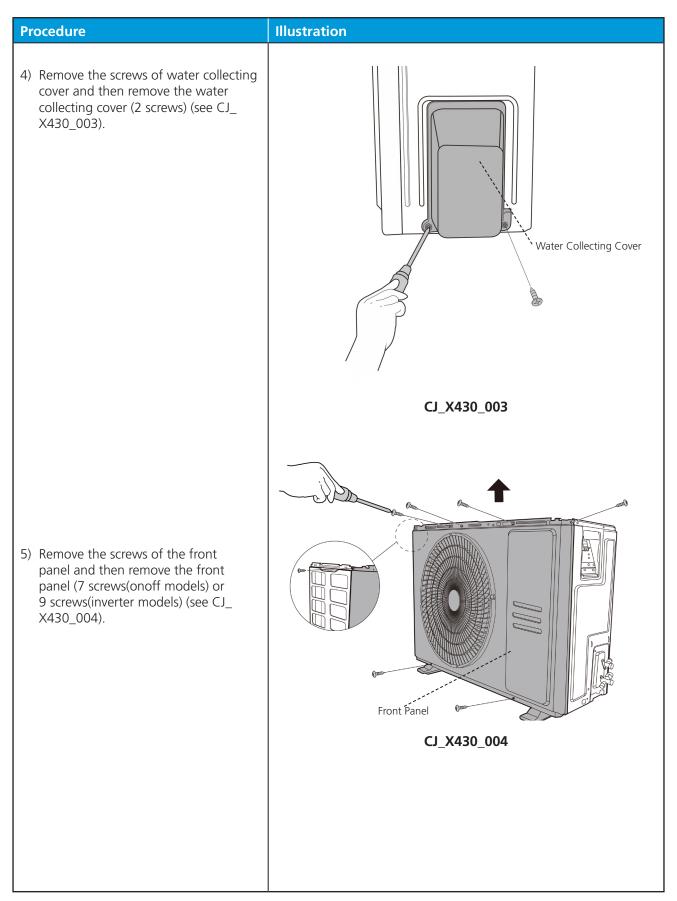

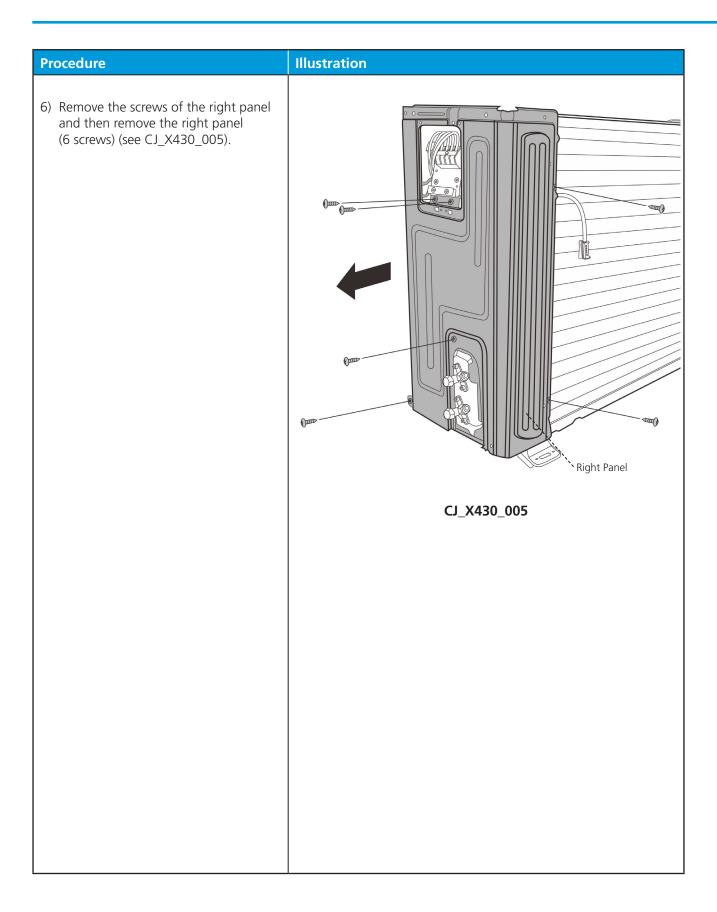


# 3.2 Electrical parts


**! WARNING:** Antistatic gloves must be worn when you disassemble the electronic box.

Note: Remove the air outlet grille(refer to 3.1 Panel Plate) before disassembling electrical parts.

### i) PCB for ON-OFF Models

### 1. PCB board 1

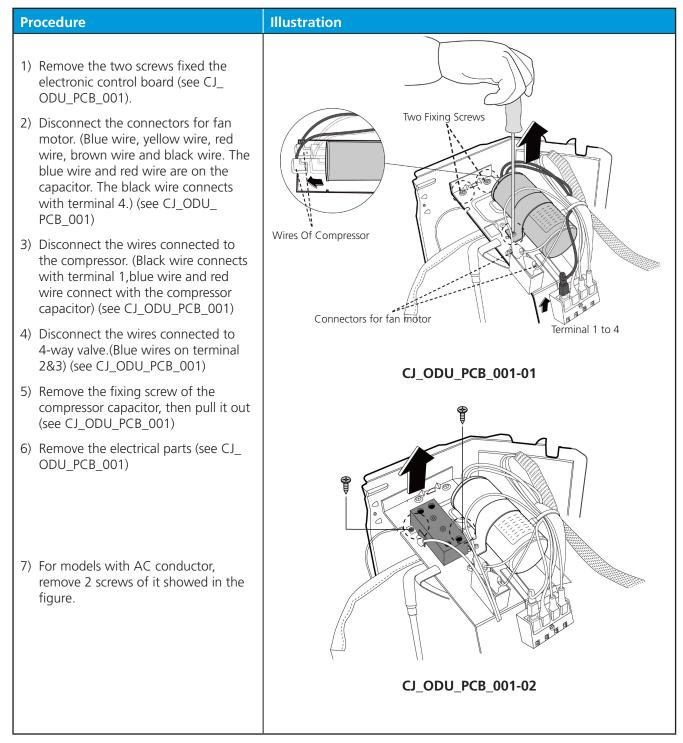

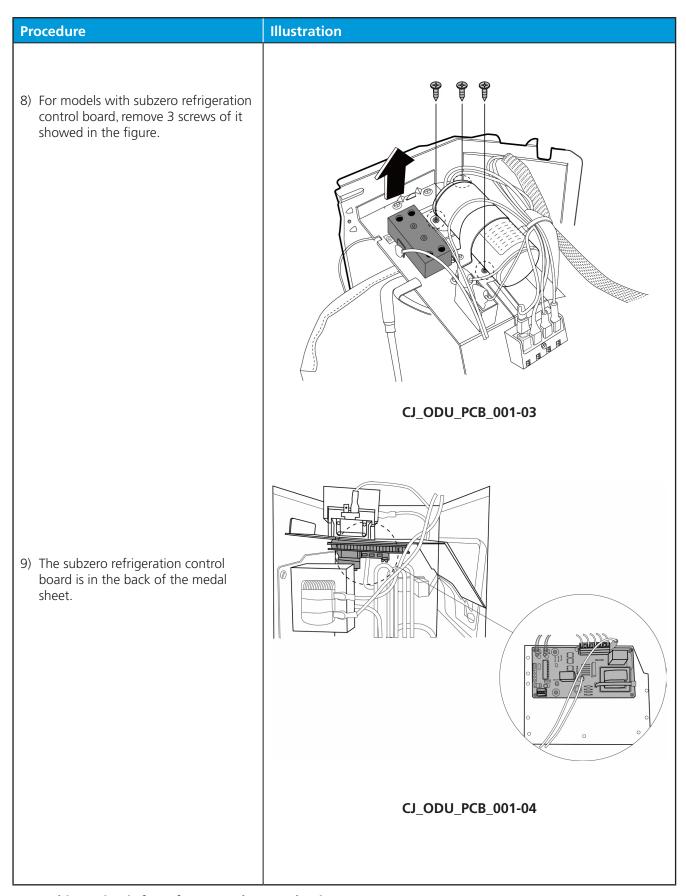


# 2. PCB board 2

# **Procedure** Illustration ---- Capacitor of compressor 1) Remove the fixing screws of the compressor capacitor, then pull it out (see CJ\_ODU\_PCB\_002-1) 2) Remove 2 screws of the transformer and then remove it. (see CJ\_ODU\_ PCB\_002-1) 3) Remove the fixing screws of the fan motor capacitor, then remove it. (see CJ\_ODU\_PCB\_002-1) 4) Remove the 4 screws of the electronic installing box and then remove it. (see CJ\_ODU\_PCB\_002-1) (for some Capacitor of fan motor models) CJ\_ODU\_PCB\_002-1 5) Remove the 2 screws of the AC contactor and then remove it. (see CJ\_ODU\_PCB\_002-2) CJ\_ODU\_PCB\_002-2


# 3.3 Fan Assembly

Note: Remove the panel plate (refer to 3.1 Panel Plate) before disassembling fan.

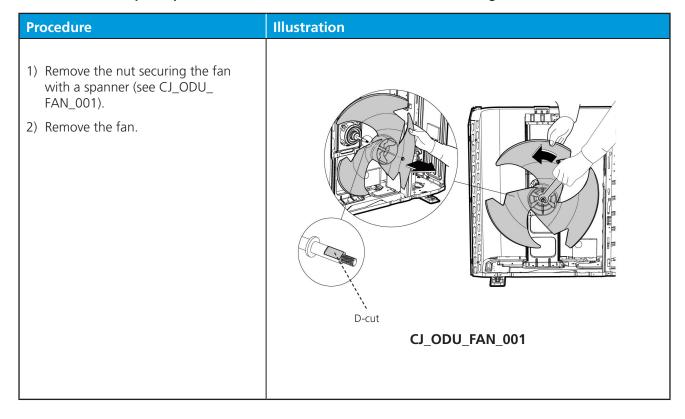


# 3.4 Fan Motor

Note: Remove the panel plate and the connection of fan motor on PCB (refer to 3.1 Panel Plate and 3.2 Electrical parts) before disassembling fan motor.

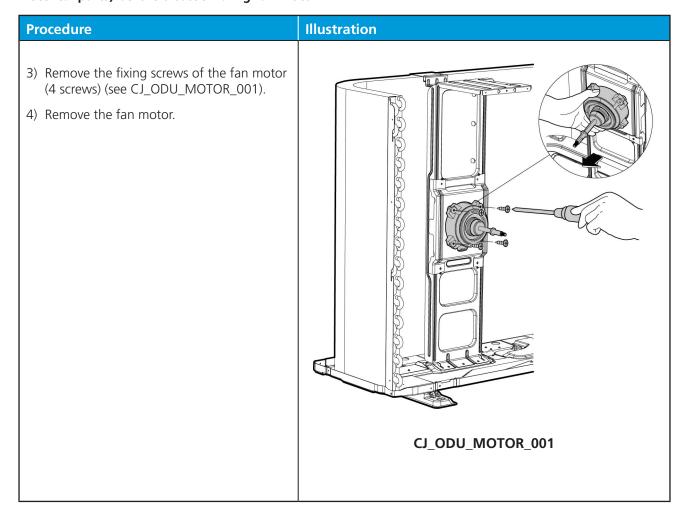

# 3.5 Sound blanket


Note: Remove the panel plate (refer to 3.1 Panel plate) before disassembling sound blanket.

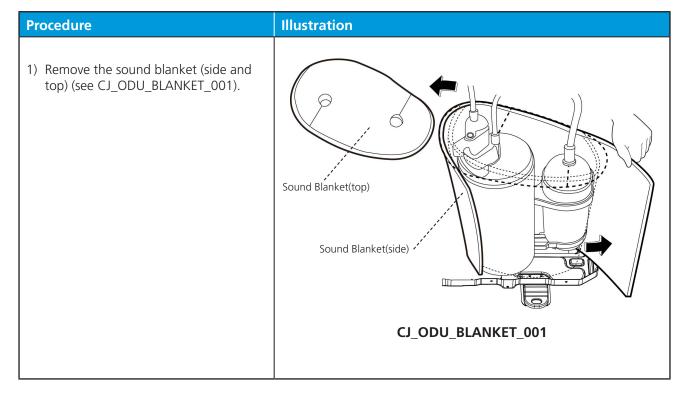

# 3.6 Four-way valve (for heat pump models)

**! WARNING:** Evacuate the system and confirm that there is no refrigerant left in the system before removing the four-way valve and the compressor. (For R32 & R290, you should evacuate the system with the vacuum pump; flush the system with nitrogen; then repeat the two steps before heating up the brazed parts. The operations above should be implemented by professionals.)


Note: Remove the panel plate, connection of four-way valve on PCB (refer to 3.1 Panel plate and 3.2 Electrical parts) before disassembling sound blanket.

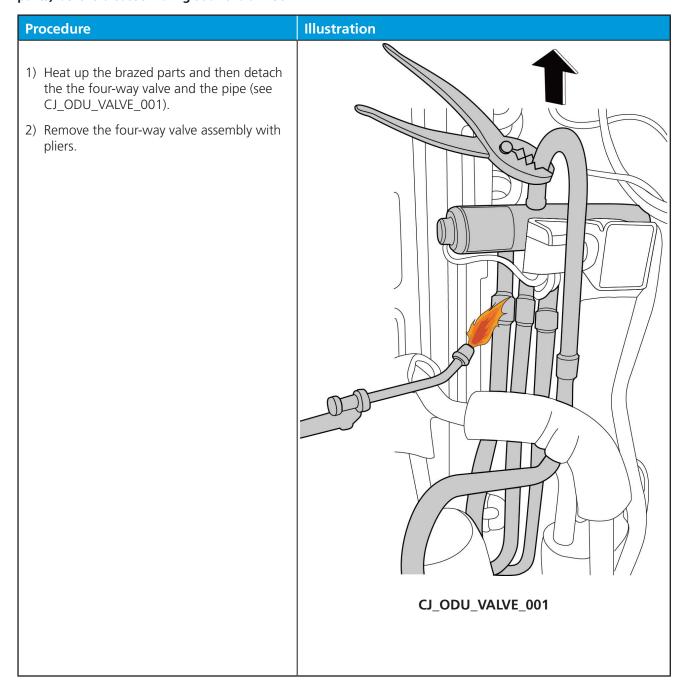


# 3.7 Compressor

**! WARNING:** Evacuate the system and confirm that there is no refrigerant left in the system before removing the four-way valve and the compressor. (For R32 & R290, you should evacuate the system with the vacuum pump; flush the system with nitrogen; then repeat the two steps before heating up the brazed parts. The operations above should be implemented by professionals.)

Note: Remove the panel plate, connection of compressor on PCB (refer to 3.1 Panel plate and 3.2 Electrical parts) before disassembling sound blanket.

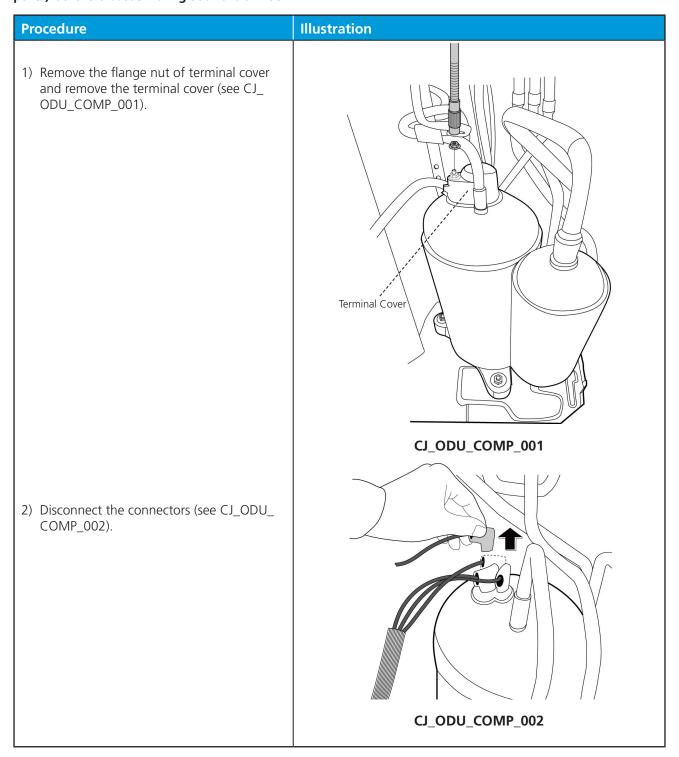

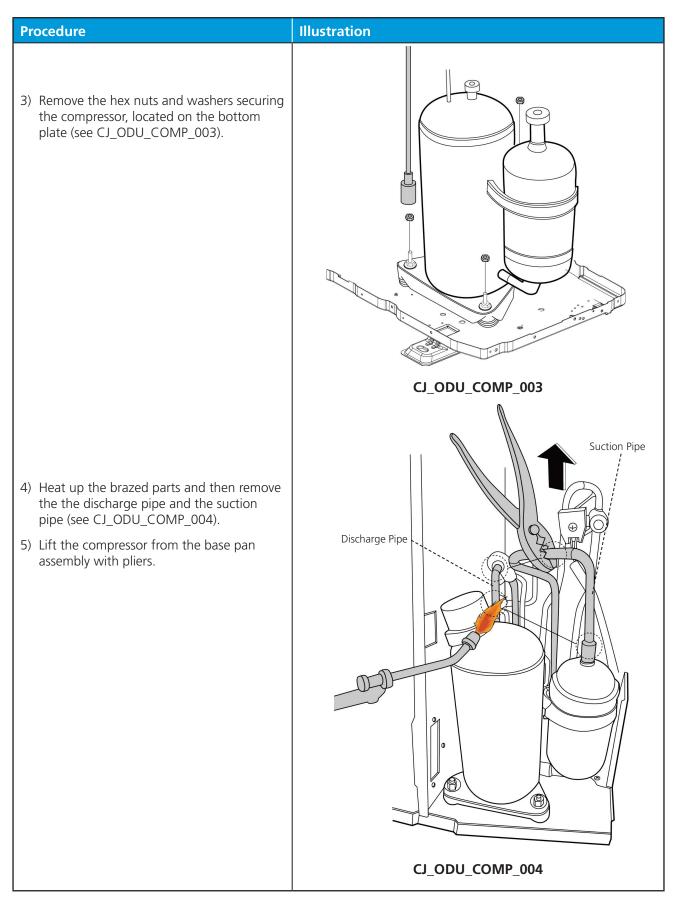

# **Troubleshooting**

# **Contents**

| 1. | Safety Caution2          |  |    |  |  |
|----|--------------------------|--|----|--|--|
| 2. | General Troubleshooting3 |  |    |  |  |
| 3. | Comp                     | Complain Record Form5  |    |  |  |
| 4. | Information Inquiry      |  |    |  |  |
| 5. | Error                    | Error Diagnosis and Troubleshooting Without Error Code   |    |  |  |
|    | 5.1                      | Remote maintenance   | 8  |  |  |
|    | 5.2                      | Field maintenance  | 9  |  |  |
| 6. | Quick                    | Maintenance by Error Code  | 14 |  |  |
| 7. | Troub                    | leshooting by Error Code   | 15 |  |  |
|    | 7.1                      | E0/EH 00 (EEPROM parameter error diagnosis and solution)   | 15 |  |  |
|    | 7.2                      | E1/EL 01 (Indoor and outdoor unit communication diagnosis and solution)                            | 16 |  |  |
|    | 7.3                      | E2/EH 02 (Zero-crossing detection error diagnosis and solution)                                    | 18 |  |  |
|    | 7.4                      | E3/EH 03/F5/EC 07 (Fan speed is operating outside of the normal range diagnosis and solution)      | 19 |  |  |
|    | 7.5                      | E4/EH 60/E5/EH 61/F2/EC 52 (Open circuit or short circuit of temperature s diagnosis and solution) |    |  |  |
|    | 7.6                      | E7/EH 0b (Indoor PCB/display board communication error diagnosis and solution)                     | 23 |  |  |
|    | 7.7                      | EC/EL OC (Refrigerant leakage detection diagnosis and solution)                                    | 24 |  |  |
|    | 7.8                      | P6/PC 03 (High pressure protection)  | 25 |  |  |
| 8. | Check                    | c Procedures   | 26 |  |  |

# 1. Safety Caution


# **WARNING**

Be sure to turn off all power supplies or disconnect all wires to avoid electric shock. While checking indoor/outdoor PCB, please equip oneself with antistatic gloves or wrist strap to avoid damage to the board.

# WARNING

Electricity remains in capacitors even when the power supply is off. Ensure the capacitors are fully discharged before troubleshooting.

Test the voltage between the two pins of the compressor capacitor. If the voltage is zero, the capacitors are fully discharged.

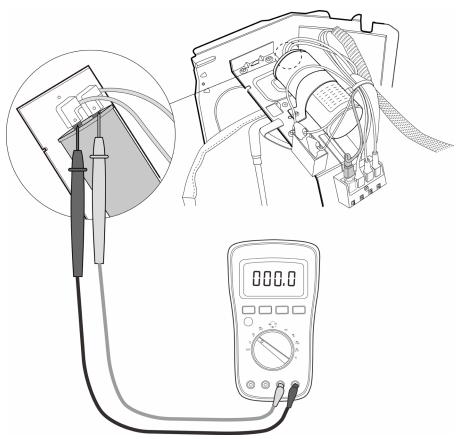

Note: This picture is for reference only. Actual appearance may vary.

## 2. General Troubleshooting

## 2.1 Error Display (Indoor Unit)

When the indoor unit encounters a recognized error, the operation lamp will flash in a corresponding series, the timer lamp may turn on or begin flashing, and an error code will be displayed. These error codes are described in the following tables:

| Operation<br>Lamp | Timer<br>Lamp | Display | Error Information   | Solution |
|-------------------|---------------|---------|---|----------|
| 1 time            | OFF           | EO      | Indoor unit EEPROM parameter error  | TS15     |
| 2 times           | OFF           | El      | Indoor / outdoor unit communication error(for some models)                                      | TS16     |
| 3 times           | OFF           | E5      | Zero-crossing signal detection error  | TS18     |
| 4 times           | OFF           | 8       | The indoor fan speed is operating outside of the normal range                                   | TS19     |
| 5 times           | OFF           | E4      | Indoor room temperature sensor T1 is in open circuit or has short circuited                     | TS22     |
| 6 times           | OFF           | ES      | Evaporator coil temperature sensor T2 is in open circuit or has short circuited                 | TS22     |
| 9 times           | OFF           | EJ/EHOP | Communication error between display board and main board  | TS23     |
| 7 times           | OFF           | EC      | Refrigerant leak detected   | TS24     |
| 3 times           | ON            | F2      | Condenser coil temperature sensor T3 is in open circuit or has short circuited(for some models) | TS22     |
| 6 times           | ON            | FS      | The outdoor fan speed is operating outside of the normal range (for some models)                | TS19     |
| 7 times           | FLASH         | P6      | High pressure protection(for some models)   | TS25     |

#### For some models:

| Operation<br>Lamp | Timer<br>Lamp | Display | Error Information   | Solution |
|-------------------|---------------|---------|---|----------|
| 1 time            | OFF           | EH 00   | Indoor unit EEPROM parameter error  | TS15     |
| 2 times           | OFF           | EL 01   | Indoor / outdoor unit communication error(for some models)  | TS16     |
| 3 times           | OFF           | EH 05   | Zero-crossing signal detection error  | TS18     |
| 4 times           | OFF           | EH 03   | The indoor fan speed is operating outside of the normal range   | TS19     |
| 6 times           | OFF           | EH 60   | Indoor room temperature sensor T1 is in open circuit or has short circuited   | TS22     |
| 6 times           | OFF           | EH 61   | Evaporator coil temperature sensor T2 is in open circuit or has short circuited   | TS22     |
| 9 times           | OFF           | ЕН ОЪ   | Communication error between display board and main board  | TS23     |
| 8 times           | OFF           | EL 0C   | Refrigerant leak detected   | TS24     |
| 5 times           | OFF           | EC S2   | Condenser coil temperature sensor T3 or Outdoor room temperature sensor T4 is in open circuit or has short circuited(for some models) | TS22     |
| 12 times          | OFF           | ECOT    | The outdoor fan speed is operating outside of the normal range (for some models)  | TS19     |
| 7 times           | FLASH         | PC 03   | High pressure protection(for some models)   | TS25     |

#### For other errors:

The display board may show a garbled code or a code undefined by the service manual. Ensure that this code is not a temperature reading.

#### **Troubleshooting:**

Test the unit using the remote control. If the unit does not respond to the remote, the indoor PCB requires replacement. If the unit responds, the display board requires replacement.

# 3. Complain Record Form

# **Complain Record Form**

| Installation Date: | Service Date: |
|--------------------|---------------|
| Request No.:       | Date:         |

| Customer Information          |                    |                               |                                 |  |  |  |  |  |  |  |  |
|-------------------------------|--------------------|-------------------------------|---------------------------------|--|--|--|--|--|--|--|--|
| Name                          |                    | Telephone No.                 |                                 |  |  |  |  |  |  |  |  |
| Home Address                  |                    |                               |                                 |  |  |  |  |  |  |  |  |
| Email                         |                    |                               |                                 |  |  |  |  |  |  |  |  |
|                               |                    |                               |                                 |  |  |  |  |  |  |  |  |
|                               | Product I          | nformation                    |                                 |  |  |  |  |  |  |  |  |
| Indoor Unit Model             |                    | Outdoor Unit Model            |                                 |  |  |  |  |  |  |  |  |
| Serial No. of indoor unit     |                    |                               |                                 |  |  |  |  |  |  |  |  |
| Serial No. of outdoor unit    |                    |                               |                                 |  |  |  |  |  |  |  |  |
| Working Mode                  | □Cooling           | □Heating □                    | Fan only $\square$ Dry          |  |  |  |  |  |  |  |  |
| Setting temperature           | °C / °F            | Fan speed                     | □Turbo □High □Medium □Low □Auto |  |  |  |  |  |  |  |  |
| Temperature of air inlet      | °C / °F            | Temperature of air outlet     | °C / °F                         |  |  |  |  |  |  |  |  |
|                               |                    |                               |                                 |  |  |  |  |  |  |  |  |
|                               | Installation / Con | dition Information            |                                 |  |  |  |  |  |  |  |  |
| Indoor temperature            | °C / °F            | Indoor humidity               | %RH                             |  |  |  |  |  |  |  |  |
| Outdoor temperature           | °C / °F            | Outdoor humidity              | %RH                             |  |  |  |  |  |  |  |  |
| Length of Connecting pipe     |                    | Pipe diameter                 | Gas pipe: Liquid pipe:          |  |  |  |  |  |  |  |  |
| Length of Wiring              |                    | wire diameter                 |                                 |  |  |  |  |  |  |  |  |
| System Running Pressure       |                    | MPa orBar orPSI               |                                 |  |  |  |  |  |  |  |  |
| Room size (L*W*H)             |                    |                               |                                 |  |  |  |  |  |  |  |  |
| Photo of Installation of In-  |                    | Photo of Installation         |                                 |  |  |  |  |  |  |  |  |
| door unit<br>(Photo #1)       |                    | of Outdoor unit<br>(Photo #2) |                                 |  |  |  |  |  |  |  |  |
| (11010 #1)                    |                    | (11010 #2)                    |                                 |  |  |  |  |  |  |  |  |
|                               | Eailuro D          | <br>Description               |                                 |  |  |  |  |  |  |  |  |
|                               | rallure L          | Code of Outdoor               |                                 |  |  |  |  |  |  |  |  |
| Error Code of Indoor unit     |                    | PCB                           |                                 |  |  |  |  |  |  |  |  |
| Unit does not start           |                    |                               |                                 |  |  |  |  |  |  |  |  |
| Remote control does not work  |                    |                               |                                 |  |  |  |  |  |  |  |  |
| Indoor display shows nothing  |                    |                               |                                 |  |  |  |  |  |  |  |  |
| No cooling or heating at all  |                    |                               |                                 |  |  |  |  |  |  |  |  |
| Less cooling or heating       |                    |                               |                                 |  |  |  |  |  |  |  |  |
| Unit starts but stops shortly |                    |                               |                                 |  |  |  |  |  |  |  |  |
| High noise                    |                    |                               |                                 |  |  |  |  |  |  |  |  |
| High vibration                |                    |                               |                                 |  |  |  |  |  |  |  |  |
|                               |                    |                               |                                 |  |  |  |  |  |  |  |  |

| Parameter Checking information by Remote controller |                          |               |                       |  |  |  |  |  |  |  |  |  |
|---|--------------------------|---------------|-----------------------|--|--|--|--|--|--|--|--|--|
| Displaying code                                     | Displaying code meaning  | Display value | Display value meaning |  |  |  |  |  |  |  |  |  |
| T1  | Room temperature         |               |                       |  |  |  |  |  |  |  |  |  |
| T2  | Indoor coil temperature  |               |                       |  |  |  |  |  |  |  |  |  |
| T3  | Outdoor coil temperature |               |                       |  |  |  |  |  |  |  |  |  |

| Approval from Manufacturer |  |  |  |  |  |  |  |  |
|----------------------------|--|--|--|--|--|--|--|--|
| □Approved                  |  |  |  |  |  |  |  |  |
| ☐More Proof needed         |  |  |  |  |  |  |  |  |
| □Rejected                  |  |  |  |  |  |  |  |  |

## 4. Information Inquiry

- To enter information inquiry status, complete the following procedure within ten seconds:
  - Press LED(or DO NOT DISTURB) 3 times.
  - Press SWING(or AIR DIRECTION) 3 times.
- Finish 1 and 2 within 10 seconds, you will hear beeps for two seconds, which means the unit goes into parameter checking mode.
- Use the LED(or DO NOT DISTURB) and SWING(or AIR DIRECTION) buttons to cycle through information displayed.
- Pressing LED(or DO NOT DISTURB) will display the next code in the sequence. Pressing SWING(or AIR DIRECTION) will show the previous.
- The following table shows information codes. The screen will display this code for two seconds, then the information for 25 seconds.

| Displayed code | Explanation                 | Displayed<br>value | Meaning | Additional Notes  |
|----------------|-----------------------------|--------------------|---------|---|
| TI             | Room temperature            |                    |         | All displayed temperatures use actual values.   |
| 72             | Indoor coil<br>temperature  | 14—-70             | -14—70  | All temperatures are displayed in °C regardless of remote used.                               |
| T3             | Outdoor coil<br>temperature |                    |         | 3. If the actual value exceeds the range, it will display the maximum value or minimum value. |

## 5. Error Diagnosis and Troubleshooting Without Error Code



# WARNING

Be sure to turn off unit before any maintenance to prevent damage or injury.

#### 5.1 **Remote maintenance**

**SUGGESTION:** When troubles occur, please check the following points with customers before field maintenance.

| No. | Problem  | Solution    |
|-----|--|-------------|
| 1   | Unit will not start                                      | TS10 - TS11 |
| 2   | The power switch is on but fans will not start           | TS10 - TS11 |
| 3   | The temperature on the display board cannot be set       | TS10 - TS11 |
| 4   | Unit is on but the wind is not cold(hot)                 | TS10 - TS11 |
| 5   | Unit runs, but shortly stops                             | TS10 - TS11 |
| 6   | The unit starts up and stops frequently                  | TS10 - TS11 |
| 7   | Unit runs continuously but insufficient cooling(heating) | TS10 - TS11 |
| 8   | Cool can not change to heat                              | TS10 - TS11 |
| 9   | Unit is noisy  | TS10 - TS11 |

## **5.2** Field maintenance

|    | Problem   | Solution    |
|----|---|-------------|
| 1  | Unit will not start                                   | TS12 - TS13 |
| 2  | Compressor will not start but fans run                | TS12 - TS13 |
| 3  | Compressor and condenser (outdoor) fan will not start | TS12 - TS13 |
| 4  | Evaporator (indoor) fan will not start                | TS12 - TS13 |
| 5  | Condenser (Outdoor) fan will not start                | TS12 - TS13 |
| 6  | Unit runs, but shortly stops                          | TS12 - TS13 |
| 7  | Compressor short-cycles due to overload               | TS12 - TS13 |
| 8  | High discharge pressure                               | TS12 - TS13 |
| 9  | Low discharge pressure                                | TS12 - TS13 |
| 10 | High suction pressure                                 | TS12 - TS13 |
| 11 | Low suction pressure                                  | TS12 - TS13 |
| 12 | Unit runs continuously but insufficient cooling       | TS12 - TS13 |
| 13 | Too cool  | TS12 - TS13 |
| 14 | Compressor is noisy                                   | TS12 - TS13 |
| 15 | Horizontal louver can not revolve                     | TS12 - TS13 |

| 1.Remote Maintenance                                     | E             | Electrical Circuit     |                               |                        | Refrigerant Circuit               |   |                            |                  |                      |   |   |                     |  |                                    |   |
|--|---------------|------------------------|-------------------------------|------------------------|-----------------------------------|---|----------------------------|------------------|----------------------|---|---|---------------------|--|------------------------------------|---|
| Possible causes of trouble                               | Power failure | he main power tripped  | Loose connections             | Faulty transformer     | he voltage is too high or too low | he remote control is powered off          | Broken remote control      | Dirty air filter | Dirty condenser fins | he setting temperature is higher/lower than the room's(cooling/heating) | he ambient temperature is too high/low when the mode is cooling/heating | Fan mode            | SILENCE function is activated(optional function) | Frosting and defrosting frequently |   |
| Unit will not start                                      | ☆             | ☆                      | ☆                             | ☆                      | F                                 | F   | 8                          |                  |                      | F   | F   | ŭ.                  | S  | ш                                  | , |
| The power switch is on but fans will not start           | ~             | ~                      | ₩                             | ☆                      | ☆                                 |   |                            |                  |                      |   |   |                     |  |                                    |   |
| The temperature on the display board cannot be set       |               |                        | ~                             | ~                      | ~                                 | ☆   | ☆                          |                  |                      |   |   |                     |  |                                    |   |
| Unit is on but the wind is not cold(hot)                 |               |                        |                               |                        |                                   | ~   | ~                          |                  |                      | ☆   | ☆   | ☆                   |  |                                    |   |
| Unit runs, but shortly stops                             |               |                        |                               |                        | ☆                                 |   |                            |                  |                      | ☆   | ☆   | 7.4                 |  |                                    |   |
| The unit starts up and stops frequently                  |               |                        |                               |                        | ☆                                 |   |                            |                  |                      |   | ☆   |                     |  | ☆                                  |   |
| Unit runs continuously but insufficient cooling(heating) |               |                        |                               |                        |                                   |   |                            | ☆                | ☆                    | ☆   | ☆   |                     | ☆  |                                    |   |
| Cool can not change to heat                              |               |                        |                               |                        |                                   |   |                            |                  |                      |   |   |                     |  |                                    |   |
| Unit is noisy  |               |                        |                               |                        |                                   |   |                            |                  |                      |   |   |                     |  |                                    |   |
| Test method / remedy                                     | Test voltage  | Close the power switch | Inspect connections - tighten | Change the transformer | Test voltage                      | Replace the battery of the remote control | Replace the remote control | Clean or replace | Clean                | Adjust the setting temperature  | Turn the AC later   | Adjust to cool mode | Turn off SILENCE function.                       | Turn the AC later                  |   |

| 1.Remote Maintenance                                     | Others                      |                                       |                                 |   |   |                                 |  |  |  |  |
|--|-----------------------------|---------------------------------------|---------------------------------|---|---|---------------------------------|--|--|--|--|
| Possible causes of trouble                               | Heavy load condition        | oosen hold down bolts and / or screws | Bad airproof                    | The air inlet or outlet of either unit is blocked | nterference from cell phone towers and remote boosters                            | Shipping plates remain attached |  |  |  |  |
| Unit will not start                                      | <u> </u>                    |                                       | <u> </u>                        |   | =   | S                               |  |  |  |  |
| The power switch is on but fans will not start           |                             |                                       |                                 |   | ☆   |                                 |  |  |  |  |
| The temperature on the display board cannot be set       |                             |                                       |                                 |   |   |                                 |  |  |  |  |
| Unit is on but the wind is not cold(hot)                 |                             |                                       |                                 |   |   |                                 |  |  |  |  |
| Unit runs, but shortly stops                             |                             |                                       |                                 |   |   | ļ,                              |  |  |  |  |
| The unit starts up and stops frequently                  |                             |                                       |                                 | ☆   |   |                                 |  |  |  |  |
| Unit runs continuously but insufficient cooling(heating) | $\stackrel{\wedge}{\simeq}$ |                                       | $\stackrel{\wedge}{\simeq}$     | ☆   |   |                                 |  |  |  |  |
| Cool can not change to heat                              |                             | ٨                                     |                                 |   |   | ۸.                              |  |  |  |  |
| Unit is noisy  |                             | ☆                                     |                                 |   |   | ☆                               |  |  |  |  |
| Test method / remedy                                     | Check heat load             | Tighten bolts or screws               | Close all the windows and doors | Remove the obstacles                              | Reconnect the power or press ON/OFF button on remote control to restart operation | Remove them                     |  |  |  |  |

| 2.Field Maintenance                                   | Electrical Circuit |                          |                               |                           |                                  |   |  |                                   |                             |  |                                    |              |                            |                                  |                                  |
|---|--------------------|--------------------------|-------------------------------|---------------------------|----------------------------------|---|--|-----------------------------------|-----------------------------|--|------------------------------------|--------------|----------------------------|----------------------------------|----------------------------------|
| Possible causes of trouble                            | Power failure      | Blown fuse or varistor   | Loose connections             | Shorted or broken wires   | Safety device opens              | Faulty thermostat / room temperature sensor     | Wrong setting place of temperature sensor                              | Faulty transformer                | Shorted or open capacitor   | Faulty magnetic contactor for compressor | Faulty magnetic contactor for fan  | Low voltage  | Faulty stepping motor      | Shorted or grounded compressor   | Shorted or grounded fan motor    |
| Unit will not start                                   | ☆                  | ☆                        | ☆                             | ☆                         | ☆                                |   |  | ☆                                 |                             |  |                                    |              |                            |                                  |                                  |
| Compressor will not start but fans run                |                    |                          |                               | ☆                         |                                  | ☆   |  |                                   | ☆                           | ☆  |                                    |              |                            | ☆                                |                                  |
| Compressor and condenser (outdoor) fan will not start |                    |                          |                               | ☆                         |                                  | ☆   |  |                                   |                             | ☆  |                                    |              |                            |                                  |                                  |
| Evaporator (indoor) fan will not start                |                    |                          |                               | ☆                         |                                  |   |  |                                   | ☆                           |  | ☆                                  |              |                            |                                  | ☆                                |
| Condenser (Outdoor) fan will not start                |                    |                          |                               | ☆                         |                                  | ☆   |  |                                   | ☆                           |  | ☆                                  |              |                            |                                  | ☆                                |
| Unit runs, but shortly stops                          |                    |                          |                               |                           |                                  |   |  |                                   |                             | ☆  |                                    | ☆            |                            |                                  |                                  |
| Compressor short-cycles due to overload               |                    |                          |                               |                           |                                  |   |  |                                   |                             | ☆  |                                    | ☆            |                            |                                  |                                  |
| High discharge pressure                               |                    |                          |                               |                           |                                  |   |  |                                   |                             |  |                                    |              |                            |                                  |                                  |
| Low discharge pressure                                |                    |                          |                               |                           |                                  |   |  |                                   |                             |  |                                    |              |                            |                                  |                                  |
| High suction pressure                                 |                    |                          |                               |                           |                                  |   |  |                                   |                             |  |                                    |              |                            |                                  |                                  |
| Low suction pressure                                  |                    |                          |                               |                           |                                  |   |  |                                   |                             |  |                                    |              |                            |                                  |                                  |
| Unit runs continuously but insufficient cooling       |                    |                          |                               |                           |                                  |   |  |                                   |                             |  |                                    |              |                            |                                  |                                  |
| Too cool  |                    |                          |                               |                           |                                  | ☆   | ☆  |                                   |                             |  |                                    |              |                            |                                  |                                  |
| Compressor is noisy                                   |                    |                          |                               |                           |                                  |   |  |                                   |                             |  |                                    |              |                            |                                  |                                  |
| Horizontal louver can not revolve                     |                    |                          | ☆                             | ☆                         |                                  |   |  |                                   |                             |  |                                    |              | ☆                          |                                  |                                  |
| Test method / remedy                                  | Test voltage       | Inspect fuse type & size | Inspect connections - tighten | Test circuits with tester | Test continuity of safety device | Test continuity of thermostat / sensor & wiring | Place the temperature sensor at the central of the air inlet<br>orilla | Check control circuit with tester | Check capacitor with tester | Test continuity of coil & contacts       | Test continuity of coil & contacts | Test voltage | Replace the stepping motor | Check resistance with multimeter | Check resistance with multimeter |

| 2.Field Maintenance  |                        | Refrigerant Circuit       |                             |                  |                       |  |                                   |                                      |  | C                               | thers                                   |   |                                  |                           |                            |   |  |                                  |                             |  |                                 |   |   |
|--|------------------------|---------------------------|-----------------------------|------------------|-----------------------|--|-----------------------------------|--------------------------------------|--|---------------------------------|---|---|----------------------------------|---------------------------|----------------------------|---|--|----------------------------------|-----------------------------|--|---------------------------------|---|---|
| Possible causes of trouble   | Compressor stuck       | Shortage of refrigerant   | Restricted liquid line      | Dirty air filter | Dirty evaporator coil | Insufficient air through evaporator coil | Overcharge of refrigerant         | Dirty or partially blocked condenser | Air or incompressible gas in refrigerant cycle | Short cycling of condensing air | High temperature condensing medium      | Insufficient condensing medium          | Broken compressor internal parts | Inefficient compressor    | Expansion valve obstructed | Expansion valve or capillary tube closed completely | Leaking power element on expansion valve | Poor installation of feeler bulb | Heavy load condition        | Loosen hold down bolts and / or screws | Shipping plates remain attached | Poor choices of capacity                            | Contact of piping with other piping or external plate                 |
| Unit will not start  |                        |                           |                             |                  |                       |  |                                   |                                      |  |                                 |   |   |                                  |                           |                            |   |  |                                  |                             |  |                                 |   | 1   |
| Compressor will not start but fans run Compressor and condenser (outdoor) fan will not | ☆                      |                           |                             |                  |                       |  |                                   |                                      |  |                                 |   |   |                                  |                           |                            |   |  |                                  |                             |  |                                 |   |   |
| Evaporator (indoor) fan will not start   |                        |                           |                             |                  |                       |  |                                   |                                      |  |                                 |   |   |                                  |                           |                            |   |  |                                  |                             |  |                                 |   |   |
| Condenser (Outdoor) fan will not start   |                        |                           |                             |                  |                       |  |                                   |                                      |  |                                 |   |   |                                  |                           |                            |   |  |                                  |                             |  |                                 |   |   |
| Unit runs, but shortly stops   |                        | $\stackrel{\wedge}{\sim}$ | $\stackrel{\wedge}{\simeq}$ |                  |                       |  | ☆                                 | ☆                                    |  |                                 |   |   |                                  |                           |                            | ☆   | ☆  |                                  |                             |  |                                 |   |   |
| Compressor short-cycles due to overload  |                        | ☆                         |                             |                  |                       |  | ☆                                 | ☆                                    |  |                                 |   |   |                                  |                           |                            |   |  |                                  |                             |  |                                 |   |   |
| High discharge pressure  |                        |                           |                             |                  |                       |  | ☆                                 | ☆                                    | ☆  | ☆                               | ☆                                       | ☆                                       |                                  |                           |                            |   |  |                                  |                             |  |                                 |   |   |
| Low discharge pressure   |                        | ☆                         |                             |                  |                       |  |                                   |                                      |  |                                 |   |   |                                  | ☆                         |                            |   |  |                                  |                             |  |                                 |   |   |
| High suction pressure  |                        |                           |                             |                  |                       |  | ☆                                 |                                      |  |                                 |   |   |                                  | ☆                         |                            |   |  | $\stackrel{\wedge}{\simeq}$      | $\stackrel{\wedge}{\simeq}$ |  |                                 |   |   |
| Low suction pressure   |                        | ☆                         | ☆                           | ☆                | ☆                     | ☆  |                                   |                                      |  |                                 |   |   |                                  |                           | ☆                          | ☆   | ☆  |                                  |                             |  |                                 |   |   |
| Unit runs continuously but insufficient cooling  |                        | ☆                         | ☆                           | ☆                | ☆                     | ☆  |                                   | ☆                                    | ☆  | ☆                               |   |   |                                  | ☆                         |                            |   |  |                                  | ☆                           |  |                                 | $\stackrel{\wedge}{\simeq}$                         |   |
| Too cool   |                        |                           |                             |                  |                       |  |                                   |                                      |  |                                 |   |   |                                  |                           |                            |   |  |                                  |                             |  |                                 |   |   |
| Compressor is noisy  |                        |                           |                             |                  |                       |  | ☆                                 |                                      |  |                                 |   |   | ☆                                |                           |                            |   |  |                                  |                             | ☆                                      | ☆                               |   | ☆   |
| Horizontal louver can not revolve  |                        |                           |                             |                  |                       |  |                                   |                                      |  |                                 |   |   |                                  |                           |                            |   |  |                                  |                             |  |                                 |   |   |
| Test method / remedy   | Replace the compressor | eak test                  | keplace restricted part     | Clean or replace | Clean coil            | Check fan                                | Change charged refrigerant volume | Clean condenser or remove obstacle   | Purge, evacuate and recharge                   | Remove obstruction to air flow  | Remove obstruction in air or water flow | kemove obstruction in air or water flow | Replace compressor               | est compressor efficiency | Replace valve              | Replace valve                                       | Replac e valve                           | Fix feeler bulb                  | Check heat load             | ighten bolts or screws                 | kemove them                     | Choose AC of lager capacity or add the number of AC | Rectify piping so as not to contact each other or with external plate |

## 6. Quick Maintenance by Error Code

If you do not have the time to test which specific parts are faulty, you can directly change the required parts according the error code.

You can find the parts to replace by error code in the following table.

| Part requiring replacement | Error Code |          |         |         |         |  |  |  |  |  |  |
|----------------------------|------------|----------|---------|---------|---------|--|--|--|--|--|--|
| rare requiring replacement | E0/EH00    | EI/EL OI | ES/EH0S | E3/EH03 | E4/EH60 |  |  |  |  |  |  |
| Indoor PCB                 | √          | √        | √       | √       | √       |  |  |  |  |  |  |
| Outdoor PCB                | х          | √        | х       | х       | х       |  |  |  |  |  |  |
| Indoor fan motor           | х          | х        | х       | √       | х       |  |  |  |  |  |  |
| Outdoor fan motor          | х          | х        | х       | х       | х       |  |  |  |  |  |  |
| T1 sensor                  | х          | х        | х       | х       | ✓       |  |  |  |  |  |  |
| T2 Sensor                  | х          | х        | х       | х       | х       |  |  |  |  |  |  |
| T3 Sensor                  | х          | х        | х       | х       | х       |  |  |  |  |  |  |
| Display Board              | х          | х        | х       | х       | х       |  |  |  |  |  |  |
| Additional refrigerant     | х          | х        | х       | х       | х       |  |  |  |  |  |  |

| Part requiring replacement | ES/EH6I | E1/EH08 | EC/ELOC | FR/ECS2 | FS/ECO1 | P6/PC03 |
|----------------------------|---------|---------|---------|---------|---------|---------|
| Indoor PCB                 | √       | √       | √       | √       | √       | х       |
| Outdoor PCB                | х       | х       | х       | х       | х       | ✓       |
| Indoor fan motor           | х       | х       | х       | х       | х       | х       |
| Outdoor fan motor          | х       | х       | х       | х       | ✓       | х       |
| T2 Sensor                  | √       | х       | ✓       | х       | х       | х       |
| T3 Sensor                  | х       | х       | х       | ✓       | х       | х       |
| Display Board              | х       | ✓       | х       | х       | х       | х       |
| Additional refrigerant     | х       | х       | ✓       | х       | х       | ✓       |
| Compressor                 | х       | х       | ✓       | х       | х       | х       |
| Capacitor of compressor    | х       | х       | ✓       | х       | х       | х       |
| Capacitor of fan motor     | х       | х       | ✓       | х       | х       | х       |
| System blockages           | х       | х       | х       | х       | х       | ✓       |
| Dirty condenser            | х       | х       | х       | х       | х       | ✓       |

## 7. Troubleshooting by Error Code


#### 7.1 E0/EH 00 (Indoor EEPROM parameter error diagnosis and solution)

**Description**: Indoor PCB main chip does not receive feedback from EEPROM chip.

#### Recommended parts to prepare:

• Indoor PCB


#### Troubleshooting and repair:

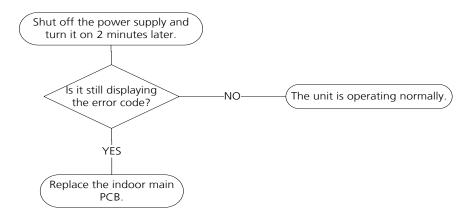

#### Remarks:

**EEPROM:** A read-only memory whose contents can be erased and reprogrammed using a pulsed voltage.

The location of the EEPROM chip on the indoor PCB is shown in the following image:

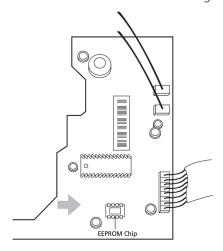


Note: The picture and the value are only for reference, actual condition and specific value may vary.

#### 7.2 E1/EL 01 (Indoor / outdoor unit communication error diagnosis and solution)


**Description**: The indoor unit has not received feedback from the outdoor unit for 110 seconds, four consecutive times **Recommended parts to prepare**:

- Indoor PCB
- Outdoor PCB
- Reactor

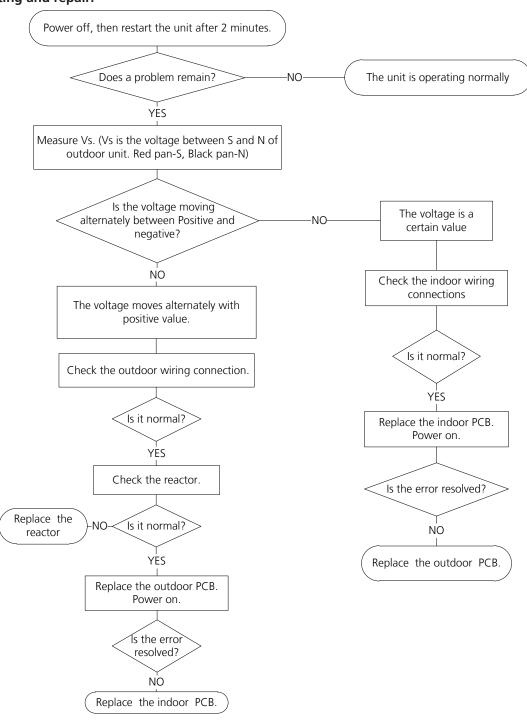


#### Remarks:

- Use a multimeter to test the DC voltage between 2 port(or S or L2 port) and 3 port(or N or S port) of outdoor unit. The red pin of multimeter connects with 2 port(or S or L2 port) while the black pin is for 3 port(or N or S port). When AC is normal running, the voltage will move alternately between -25V to 25V.
- If the outdoor unit has malfunction, the voltage will move alternately with positive value.
- While if the indoor unit has malfunction, the voltage will be a certain value.

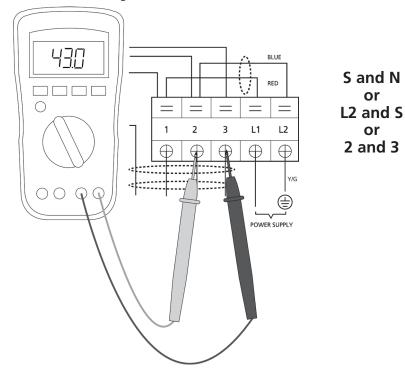

- Use a multimeter to test the resistance of the reactor which does not connect with capacitor.
- The normal value should be around zero ohm. Otherwise, the reactor must have malfunction.

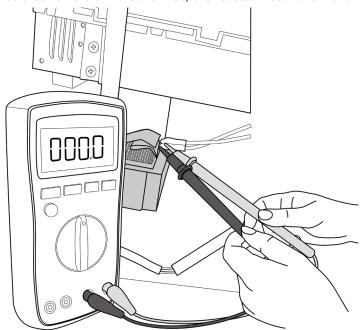

Note: The picture and the value are only for reference, actual condition and specific value may vary.


#### 7.3 E2/EH 02 (Zero crossing detection error diagnosis and solution)

**Description**: When PCB does not receive zero crossing signal feedback for 4 minutes or the zero crossing signal time interval is abnormal.

#### **Recommended parts to prepare:**

- Connection wires
- Indoor PCB

#### Troubleshooting and repair:

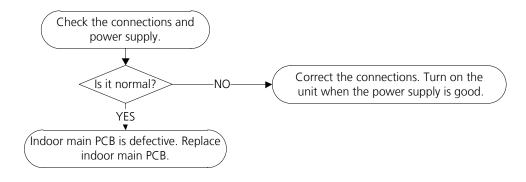


Note: E2/EH 02 zero crossing detection error is only valid for the unit with AC fan motor, for other models, this error is invalid.

# 7.4 E3/EH 03 / F5/EC 07 (Fan speed is operating outside of the normal range diagnosis and solution)

**Description**: When indoor fan speed keeps too low (300RPM) for certain time, the LED displays the failure code and AC turns off.

#### Recommended parts to prepare:

- Connection wires
- Fan assembly
- Fan motor
- PCB

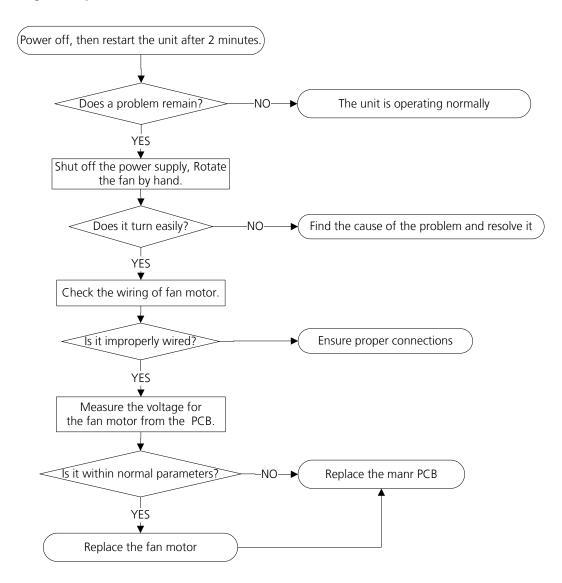

#### Index:

#### 1. Indoor or Outdoor DC Fan Motor(control chip is in fan motor)


Power on and when the unit is in standby, measure the voltage of pin1-pin3, pin4-pin3 in fan motor connector. If the value of the voltage is not in the range showing in below table, the PCB must has problems and need to be replaced.

• DC motor voltage input and output (voltage: 220-240V~):

| No. | Color  | Signal | Voltage   |
|-----|--------|--------|-----------|
| 1   | Red    | Vs/Vm  | 280V~380V |
| 2   |        |        |           |
| 3   | Black  | GND    | 0V        |
| 4   | White  | Vcc    | 14-17.5V  |
| 5   | Yellow | Vsp    | 0~5.6V    |
| 6   | Blue   | FG     | 14-17.5V  |


• DC motor voltage input and output (voltage: 115V~):

| No. | Color  | Signal | Voltage   |
|-----|--------|--------|-----------|
| 1   | Red    | Vs/Vm  | 140V~190V |
| 2   |        |        |           |
| 3   | Black  | GND    | 0V        |
| 4   | White  | Vcc    | 14-17.5V  |
| 5   | Yellow | Vsp    | 0~5.6V    |
| 6   | Blue   | FG     | 14-17.5V  |

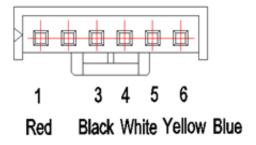


#### 2. Outdoor DC Fan Motor (control chip is in outdoor PCB)

Release the UVW connector. Measure the resistance of U-V, U-W, V-W. If the resistance is not equal to each other, the fan motor must has problems and need to be replaced. otherwise the PCB must has problems and need to be replaced.

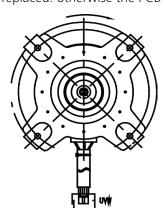

#### 3. Indoor AC Fan Motor

Power on and set the unit running in fan mode at high fan speed. After running for 15 seconds, measure the voltage of pin1 and pin2. If the value of the voltage is less than 100V(208~240V power supply) or 50V (115V power supply), the PCB must has problems and need to be replaced.

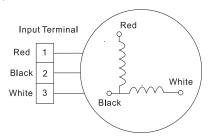

# 7.5 E4/EH 60/E5/EH 61/F2/EC 52 (Open or short circuit of temperature sensor diagnosis and solution)


**Description**: If the sampling voltage is lower than 0.06V or higher than 4.94V, the LED displays the failure code.

Check the connection between temperature sensor and PCB.

#### **Recommended parts to prepare:**

- Connection wires
- Sensors
- PCB

#### Troubleshooting and repair:

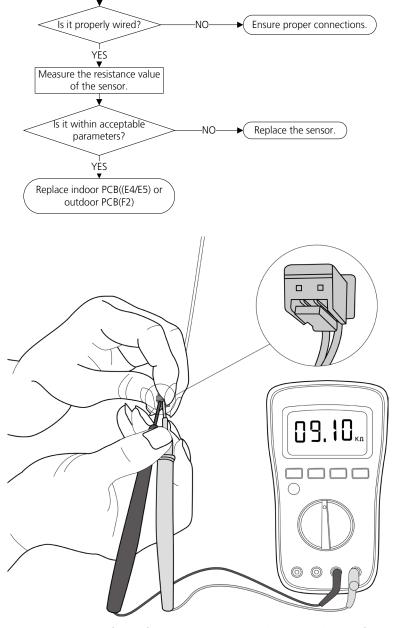


Note: The picture and the value are only for reference, actual condition and specific value may vary.

## 7.6 E7/EH 0b (Indoor PCB/display board communication error diagnosis and solution)

**Description**: The display board cannot communicate with the indoor PCB.

#### **Recommended parts to prepare:**

- Communication wire
- Indoor PCB
- Display board

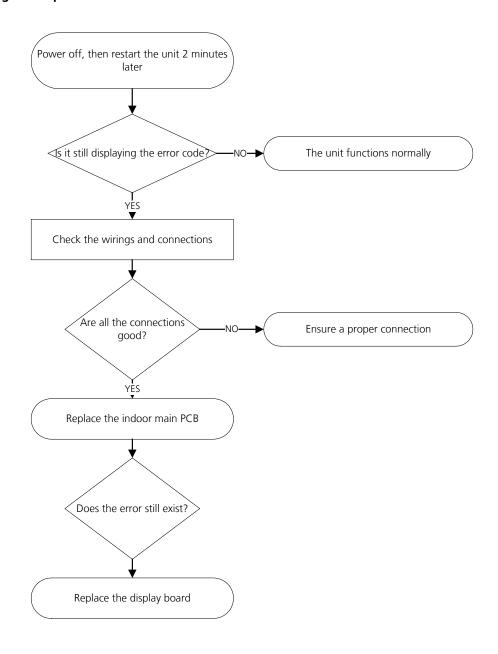


#### 7.7 EC/EL OC (Refrigerant leakage detection diagnosis and solution)

**Description**: Define the evaporator coil temperature T2 of the compressor just starts running as Tcool.

In the beginning 5 minutes after the compressor starts up, if T2 < Tcool-2°C does not keep continuous 4 seconds and this situation happens 3 times, the LED displays the failure code and AC turns off.

#### **Recommended parts to prepare:**

- T2 sensor
- Compressor
- Capacitor of compressor
- Indoor PCB
- System problems, such as leakage or blockages
- Capacitor of fan motor
- Outdoor fan

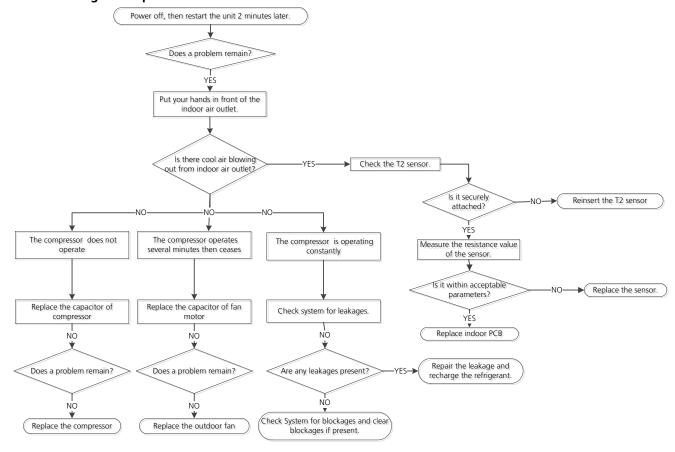


#### 7.8 P6/PC 03 (High pressure protection)

**Description**: If the current is less than setting value for 4 seconds, AC shuts off and restarts after 3 minutes in cooling mode or after 4 minutes in heating mode. If this happens 8 times, the LED displays the failure code and AC turns off.

#### **Recommended parts to prepare:**

- System blockages
- Dirty condenser

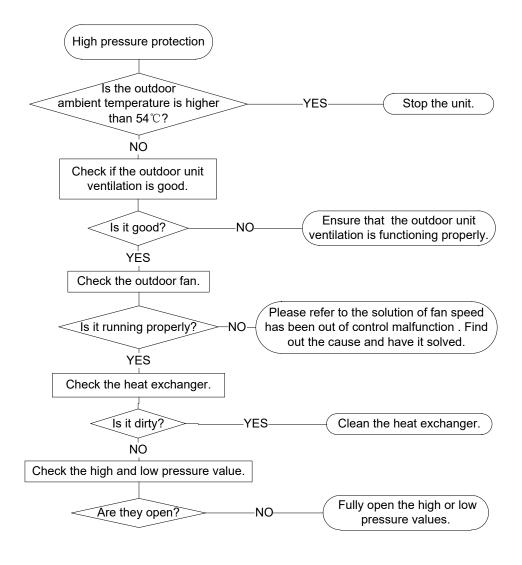


#### 8. Check Procedures

#### **8.1 Temperature Sensor Check**

### **WARNING**

Be sure to turn off all power supplies or disconnect all wires to avoid electric shock. Operate after compressor and coil have returned to normal temperature in case of injury.

- 1. Disconnect temperature sensor from PCB (Refer to Chapter 5. Indoor Disassembly and Chapter 6. Outdoor Disassembly).
- 2. Measure the resistance value of the sensor using a multi-meter.
- 3. Check corresponding temperature sensor resistance value table (Refer to Chapter 8. Appendix).

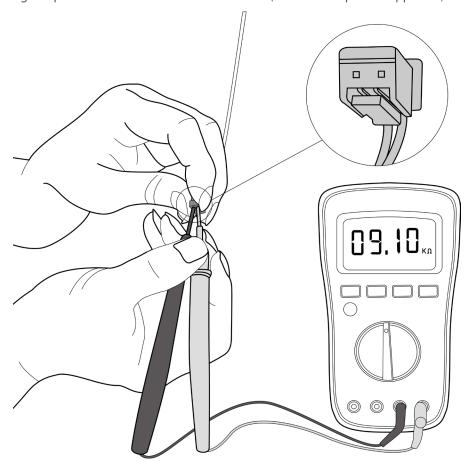

Note: The picture and the value are only for reference, actual condition and specific value may vary.

#### 8.2 Fan Motor Check

- 1. Turn off outdoor unit and disconnect power supply
- 2. Disconnect outdoor fan motor power cord from outdoor PCB
- 3. Measure the resistance value between each windings.

The normal value of different motor show as follows:

| Model            | YKFG-13-4-38L<br>YKFG-13-4-38L-4 | YKFG-15-4-28-1 | YKFG-20-4-10L | YKFG-20-4-5-11 |
|------------------|----------------------------------|----------------|---------------|----------------|
| Brand            | Welling                          | Welling        | Welling       | Welling        |
| Black – Red Main | 345Ω                             | 75Ω            | 269Ω          | 388Ω           |
| Blue – Black AUX | 348Ω                             | 150Ω           | 224Ω          | 360Ω           |

| Model            | YKFG-20-4-5-19 | YKFG-25-4-6-14 | YKFG-28-4-3-7<br>YKFG-28-4-3-14 | YKFG-28-4-6-5 |
|------------------|----------------|----------------|---------------------------------|---------------|
| Brand            | Welling        | Welling        | Welling                         | Welling       |
| Black – Red Main | 444Ω           | 287Ω           | 231Ω                            | 183.6Ω        |
| Blue – Black AUX | 470Ω           | 409Ω           | 414Ω                            | 206Ω          |

| Model            | YKFG-45-4-13 | YKFG-45-4-22<br>YKFG-45-4-22-13 | YKFG-60-4-1 | YKFG-60-4-2-6 |
|------------------|--------------|---------------------------------|-------------|---------------|
| Brand            | Dongfang     | Welling                         | Welling     | Welling       |
| Black – Red Main | 125.2Ω       | 168Ω                            | 68Ω         | 96Ω           |
| Blue – Black AUX | 83.8Ω        | 141Ω                            | 53Ω         | 96Ω           |

# **Appendix**

# **Contents**

| i)   | Temperature Sensor Resistance Value Table for T1, T2, T3, and T4 (°C – K)2 |
|------|--|
| ii)  | Temperature Sensor Resistance Value Table for TP (for some units)(°CK)3    |
| (iii | Pressure On Service Port   |

# i) Temperature Sensor Resistance Value Table for T1,T2,T3 and T4 (°C – K)

| °C  | °F | K Ohm   | °C | °F  | K Ohm   | °C | °F  | K Ohm   | °C  | °F  | K Ohm   |
|-----|----|---------|----|-----|---------|----|-----|---------|-----|-----|---------|
| -20 | -4 | 115.266 | 20 | 68  | 12.6431 | 60 | 140 | 2.35774 | 100 | 212 | 0.62973 |
| -19 | -2 | 108.146 | 21 | 70  | 12.0561 | 61 | 142 | 2.27249 | 101 | 214 | 0.61148 |
| -18 | 0  | 101.517 | 22 | 72  | 11.5    | 62 | 144 | 2.19073 | 102 | 216 | 0.59386 |
| -17 | 1  | 96.3423 | 23 | 73  | 10.9731 | 63 | 145 | 2.11241 | 103 | 217 | 0.57683 |
| -16 | 3  | 89.5865 | 24 | 75  | 10.4736 | 64 | 147 | 2.03732 | 104 | 219 | 0.56038 |
| -15 | 5  | 84.219  | 25 | 77  | 10      | 65 | 149 | 1.96532 | 105 | 221 | 0.54448 |
| -14 | 7  | 79.311  | 26 | 79  | 9.55074 | 66 | 151 | 1.89627 | 106 | 223 | 0.52912 |
| -13 | 9  | 74.536  | 27 | 81  | 9.12445 | 67 | 153 | 1.83003 | 107 | 225 | 0.51426 |
| -12 | 10 | 70.1698 | 28 | 82  | 8.71983 | 68 | 154 | 1.76647 | 108 | 226 | 0.49989 |
| -11 | 12 | 66.0898 | 29 | 84  | 8.33566 | 69 | 156 | 1.70547 | 109 | 228 | 0.486   |
| -10 | 14 | 62.2756 | 30 | 86  | 7.97078 | 70 | 158 | 1.64691 | 110 | 230 | 0.47256 |
| -9  | 16 | 58.7079 | 31 | 88  | 7.62411 | 71 | 160 | 1.59068 | 111 | 232 | 0.45957 |
| -8  | 18 | 56.3694 | 32 | 90  | 7.29464 | 72 | 162 | 1.53668 | 112 | 234 | 0.44699 |
| -7  | 19 | 52.2438 | 33 | 91  | 6.98142 | 73 | 163 | 1.48481 | 113 | 235 | 0.43482 |
| -6  | 21 | 49.3161 | 34 | 93  | 6.68355 | 74 | 165 | 1.43498 | 114 | 237 | 0.42304 |
| -5  | 23 | 46.5725 | 35 | 95  | 6.40021 | 75 | 167 | 1.38703 | 115 | 239 | 0.41164 |
| -4  | 25 | 44      | 36 | 97  | 6.13059 | 76 | 169 | 1.34105 | 116 | 241 | 0.4006  |
| -3  | 27 | 41.5878 | 37 | 99  | 5.87359 | 77 | 171 | 1.29078 | 117 | 243 | 0.38991 |
| -2  | 28 | 39.8239 | 38 | 100 | 5.62961 | 78 | 172 | 1.25423 | 118 | 244 | 0.37956 |
| -1  | 30 | 37.1988 | 39 | 102 | 5.39689 | 79 | 174 | 1.2133  | 119 | 246 | 0.36954 |
| 0   | 32 | 35.2024 | 40 | 104 | 5.17519 | 80 | 176 | 1.17393 | 120 | 248 | 0.35982 |
| 1   | 34 | 33.3269 | 41 | 106 | 4.96392 | 81 | 178 | 1.13604 | 121 | 250 | 0.35042 |
| 2   | 36 | 31.5635 | 42 | 108 | 4.76253 | 82 | 180 | 1.09958 | 122 | 252 | 0.3413  |
| 3   | 37 | 29.9058 | 43 | 109 | 4.5705  | 83 | 181 | 1.06448 | 123 | 253 | 0.33246 |
| 4   | 39 | 28.3459 | 44 | 111 | 4.38736 | 84 | 183 | 1.03069 | 124 | 255 | 0.3239  |
| 5   | 41 | 26.8778 | 45 | 113 | 4.21263 | 85 | 185 | 0.99815 | 125 | 257 | 0.31559 |
| 6   | 43 | 25.4954 | 46 | 115 | 4.04589 | 86 | 187 | 0.96681 | 126 | 259 | 0.30754 |
| 7   | 45 | 24.1932 | 47 | 117 | 3.88673 | 87 | 189 | 0.93662 | 127 | 261 | 0.29974 |
| 8   | 46 | 22.5662 | 48 | 118 | 3.73476 | 88 | 190 | 0.90753 | 128 | 262 | 0.29216 |
| 9   | 48 | 21.8094 | 49 | 120 | 3.58962 | 89 | 192 | 0.8795  | 129 | 264 | 0.28482 |
| 10  | 50 | 20.7184 | 50 | 122 | 3.45097 | 90 | 194 | 0.85248 | 130 | 266 | 0.2777  |
| 11  | 52 | 19.6891 | 51 | 124 | 3.31847 | 91 | 196 | 0.82643 | 131 | 268 | 0.27078 |
| 12  | 54 | 18.7177 | 52 | 126 | 3.19183 | 92 | 198 | 0.80132 | 132 | 270 | 0.26408 |
| 13  | 55 | 17.8005 | 53 | 127 | 3.07075 | 93 | 199 | 0.77709 | 133 | 271 | 0.25757 |
| 14  | 57 | 16.9341 | 54 | 129 | 2.95896 | 94 | 201 | 0.75373 | 134 | 273 | 0.25125 |
| 15  | 59 | 16.1156 | 55 | 131 | 2.84421 | 95 | 203 | 0.73119 | 135 | 275 | 0.24512 |
| 16  | 61 | 15.3418 | 56 | 133 | 2.73823 | 96 | 205 | 0.70944 | 136 | 277 | 0.23916 |
| 17  | 63 | 14.6181 | 57 | 135 | 2.63682 | 97 | 207 | 0.68844 | 137 | 279 | 0.23338 |
| 18  | 64 | 13.918  | 58 | 136 | 2.53973 | 98 | 208 | 0.66818 | 138 | 280 | 0.22776 |
| 19  | 66 | 13.2631 | 59 | 138 | 2.44677 | 99 | 210 | 0.64862 | 139 | 282 | 0.22231 |


# ii) Temperature Sensor Resistance Value Table for TP(for some units) (°C --K)

|     |    |       |    |     |       |    |     | 11 (101 30 |     |     | <u> </u> |
|-----|----|-------|----|-----|-------|----|-----|------------|-----|-----|----------|
| °C  | °F | K Ohm | °C | °F  | K Ohm | °C | °F  | K Ohm      | °C  | °F  | K Ohm    |
| °C  | °F | K Ohm | °C | °F  | K Ohm | °C | °F  | K Ohm      | °C  | °F  | K Ohm    |
| -20 | -4 | 542.7 | 20 | 68  | 68.66 | 60 | 140 | 13.59      | 100 | 212 | 3.702    |
| -19 | -2 | 511.9 | 21 | 70  | 65.62 | 61 | 142 | 13.11      | 101 | 214 | 3.595    |
| -18 | 0  | 483   | 22 | 72  | 62.73 | 62 | 144 | 12.65      | 102 | 216 | 3.492    |
| -17 | 1  | 455.9 | 23 | 73  | 59.98 | 63 | 145 | 12.21      | 103 | 217 | 3.392    |
| -16 | 3  | 430.5 | 24 | 75  | 57.37 | 64 | 147 | 11.79      | 104 | 219 | 3.296    |
| -15 | 5  | 406.7 | 25 | 77  | 54.89 | 65 | 149 | 11.38      | 105 | 221 | 3.203    |
| -14 | 7  | 384.3 | 26 | 79  | 52.53 | 66 | 151 | 10.99      | 106 | 223 | 3.113    |
| -13 | 9  | 363.3 | 27 | 81  | 50.28 | 67 | 153 | 10.61      | 107 | 225 | 3.025    |
| -12 | 10 | 343.6 | 28 | 82  | 48.14 | 68 | 154 | 10.25      | 108 | 226 | 2.941    |
| -11 | 12 | 325.1 | 29 | 84  | 46.11 | 69 | 156 | 9.902      | 109 | 228 | 2.86     |
| -10 | 14 | 307.7 | 30 | 86  | 44.17 | 70 | 158 | 9.569      | 110 | 230 | 2.781    |
| -9  | 16 | 291.3 | 31 | 88  | 42.33 | 71 | 160 | 9.248      | 111 | 232 | 2.704    |
| -8  | 18 | 275.9 | 32 | 90  | 40.57 | 72 | 162 | 8.94       | 112 | 234 | 2.63     |
| -7  | 19 | 261.4 | 33 | 91  | 38.89 | 73 | 163 | 8.643      | 113 | 235 | 2.559    |
| -6  | 21 | 247.8 | 34 | 93  | 37.3  | 74 | 165 | 8.358      | 114 | 237 | 2.489    |
| -5  | 23 | 234.9 | 35 | 95  | 35.78 | 75 | 167 | 8.084      | 115 | 239 | 2.422    |
| -4  | 25 | 222.8 | 36 | 97  | 34.32 | 76 | 169 | 7.82       | 116 | 241 | 2.357    |
| -3  | 27 | 211.4 | 37 | 99  | 32.94 | 77 | 171 | 7.566      | 117 | 243 | 2.294    |
| -2  | 28 | 200.7 | 38 | 100 | 31.62 | 78 | 172 | 7.321      | 118 | 244 | 2.233    |
| -1  | 30 | 190.5 | 39 | 102 | 30.36 | 79 | 174 | 7.086      | 119 | 246 | 2.174    |
| 0   | 32 | 180.9 | 40 | 104 | 29.15 | 80 | 176 | 6.859      | 120 | 248 | 2.117    |
| 1   | 34 | 171.9 | 41 | 106 | 28    | 81 | 178 | 6.641      | 121 | 250 | 2.061    |
| 2   | 36 | 163.3 | 42 | 108 | 26.9  | 82 | 180 | 6.43       | 122 | 252 | 2.007    |
| 3   | 37 | 155.2 | 43 | 109 | 25.86 | 83 | 181 | 6.228      | 123 | 253 | 1.955    |
| 4   | 39 | 147.6 | 44 | 111 | 24.85 | 84 | 183 | 6.033      | 124 | 255 | 1.905    |
| 5   | 41 | 140.4 | 45 | 113 | 23.89 | 85 | 185 | 5.844      | 125 | 257 | 1.856    |
| 6   | 43 | 133.5 | 46 | 115 | 22.89 | 86 | 187 | 5.663      | 126 | 259 | 1.808    |
| 7   | 45 | 127.1 | 47 | 117 | 22.1  | 87 | 189 | 5.488      | 127 | 261 | 1.762    |
| 8   | 46 | 121   | 48 | 118 | 21.26 | 88 | 190 | 5.32       | 128 | 262 | 1.717    |
| 9   | 48 | 115.2 | 49 | 120 | 20.46 | 89 | 192 | 5.157      | 129 | 264 | 1.674    |
| 10  | 50 | 109.8 | 50 | 122 | 19.69 | 90 | 194 | 5          | 130 | 266 | 1.632    |
| 11  | 52 | 104.6 | 51 | 124 | 18.96 | 91 | 196 | 4.849      |     |     |          |
| 12  | 54 | 99.69 | 52 | 126 | 18.26 | 92 | 198 | 4.703      |     |     |          |
| 13  | 55 | 95.05 | 53 | 127 | 17.58 | 93 | 199 | 4.562      |     |     |          |
| 14  | 57 | 90.66 | 54 | 129 | 16.94 | 94 | 201 | 4.426      |     |     |          |
| 15  | 59 | 86.49 | 55 | 131 | 16.32 | 95 | 203 | 4.294      |     |     |          |
| 16  | 61 | 82.54 | 56 | 133 | 15.73 | 96 | 205 | 4.167      |     |     |          |
| 17  | 63 | 78.79 | 57 | 135 | 15.16 | 97 | 207 | 4.045      |     |     |          |
| 18  | 64 | 75.24 | 58 | 136 | 14.62 | 98 | 208 | 3.927      |     |     |          |
| 19  | 66 | 71.86 | 59 | 138 | 14.09 | 99 | 210 | 3.812      |     |     |          |

## iii) Pressure On Service Port


## Cooling chart(R410A):

| °F(°C) | ODU(DB)             | 0(-17) | 5(-15) | 15<br>(-9.44) | 45<br>(7.22) | 75<br>(23.89) | 85<br>(29.44) | 95 (35) | 105<br>(40.56) | 115<br>(46.11) | 120<br>(48.89) |
|--------|---------------------|--------|--------|---------------|--------------|---------------|---------------|---------|----------------|----------------|----------------|
|        | 70/59 (21.11/15)    | 6.4    | 6.5    | 7.3           | 8.0          | 8.2           | 7.8           | 8.1     | 8.6            | 10.1           | 10.6           |
| BAR    | 75/63 (23.89/17.22) | 6.7    | 6.8    | 7.9           | 8.6          | 8.6           | 8.3           | 8.7     | 9.1            | 10.7           | 11.2           |
| DAN    | 80/67 (26.67/19.44) | 7.1    | 7.2    | 8.5           | 9.5          | 9.3           | 8.9           | 9.1     | 9.6            | 11.2           | 11.9           |
|        | 90/73 (32.22/22.78) | 7.7    | 7.8    | 9.6           | 10.5         | 10.3          | 9.5           | 10.0    | 10.6           | 12.4           | 13.0           |
|        | 70/59 (21.11/15)    | 93     | 94     | 106           | 116          | 119           | 113           | 117     | 125            | 147            | 154            |
| PSI    | 75/63 (23.89/17.22) | 97     | 99     | 115           | 125          | 124           | 120           | 126     | 132            | 155            | 162            |
| FSI    | 80/67 (26.67/19.44) | 103    | 104    | 123           | 138          | 135           | 129           | 132     | 140            | 162            | 173            |
|        | 90/73 (32.22/22.78) | 112    | 113    | 139           | 152          | 149           | 138           | 145     | 154            | 180            | 189            |
|        | 70/59 (21.11/15)    | 0.64   | 0.65   | 0.73          | 0.8          | 0.82          | 0.78          | 0.81    | 0.86           | 1.01           | 1.06           |
| MPa    | 75/63 (23.89/17.22) | 0.67   | 0.68   | 0.79          | 0.86         | 0.86          | 0.83          | 0.87    | 0.91           | 1.07           | 1.12           |
| IVIPa  | 80/67 (26.67/19.44) | 0.71   | 0.72   | 0.85          | 0.95         | 0.93          | 0.89          | 0.91    | 0.96           | 1.12           | 1.19           |
|        | 90/73 (32.22/22.78) | 0.77   | 0.78   | 0.96          | 1.05         | 1.03          | 0.95          | 1       | 1.06           | 1.24           | 1.3            |

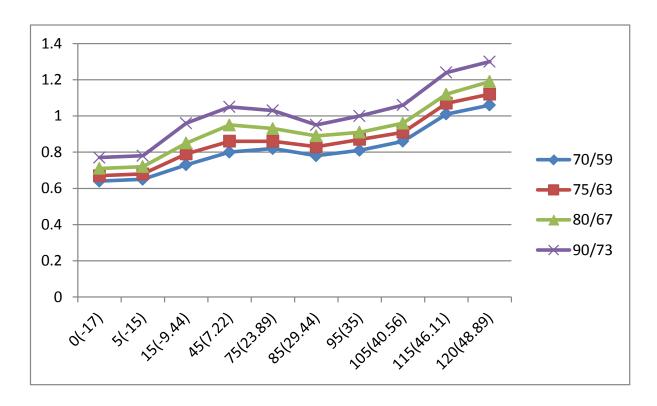


# Heating chart(R410A):

| °F(°C) | QDU(DB/WB) | 57/53<br>(13.89/11.67) | 47/43<br>(8.33/6.11) | 37/33<br>(2.78/0.56) | 27/23<br>(-2.78/-5) | 17/13 (-8.33/-<br>10.56) | 0/-2<br>(-17/-19) | -17/-18<br>(-27/-28) |
|--------|------------|------------------------|----------------------|----------------------|---------------------|--------------------------|-------------------|----------------------|
|        | 55(12.78)  | 30.3                   | 28.5                 | 25.3                 | 22.8                | 20.8                     | 18.5              | 16.5                 |
| BAR    | 65(18.33)  | 32.5                   | 30.0                 | 26.6                 | 25.4                | 23.3                     | 20.5              | 19.0                 |
|        | 75(23.89)  | 33.8                   | 31.5                 | 27.8                 | 26.3                | 24.9                     | 21.5              | 20.0                 |
|        | 55(12.78)  | 439                    | 413                  | 367                  | 330                 | 302                      | 268               | 239                  |
| PSI    | 65(18.33)  | 471                    | 435                  | 386                  | 368                 | 339                      | 297               | 276                  |
|        | 75(23.89)  | 489                    | 457                  | 403                  | 381                 | 362                      | 312               | 290                  |
|        | 55(12.78)  | 3.03                   | 2.85                 | 2.53                 | 2.28                | 2.08                     | 1.85              | 1.65                 |
| MPa    | 65(18.33)  | 3.25                   | 3.00                 | 2.66                 | 2.54                | 2.33                     | 2.05              | 1.90                 |
|        | 75(23.89)  | 3.38                   | 3.15                 | 2.78                 | 2.63                | 2.49                     | 2.15              | 2.00                 |

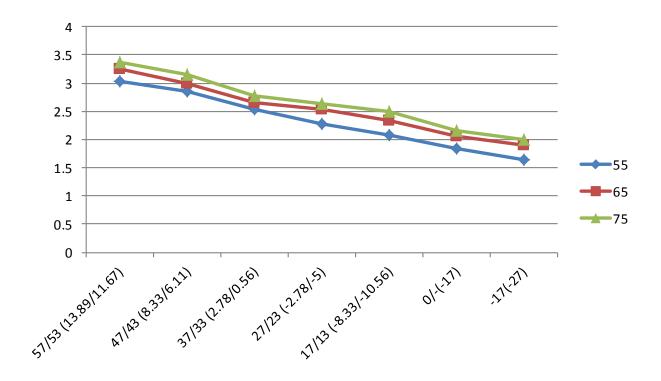


## Cooling chart(R22):

| °F(°C)    | ODU(DB) IDU(DB/WB)  | 0(-17) | 5(-15) | 15<br>(-9.44) | 45<br>(7.22) | 75<br>(23.89) | 85<br>(29.44) | 95 (35) | 105<br>(40.56) | 115<br>(46.11) | 120<br>(48.89) |
|-----------|---------------------|--------|--------|---------------|--------------|---------------|---------------|---------|----------------|----------------|----------------|
|           | 70/59 (21.11/15)    | 4.0    | 4.1    | 4.6           | 5.0          | 5.1           | 4.9           | 5.1     | 5.4            | 6.3            | 6.6            |
| DAD       | 75/63 (23.89/17.22) | 4.2    | 4.3    | 4.9           | 5.4          | 5.4           | 5.2           | 5.4     | 5.7            | 6.7            | 7.0            |
| BAR       | 80/67 (26.67/19.44) | 4.4    | 4.5    | 5.3           | 5.9          | 5.8           | 5.6           | 5.7     | 6.0            | 7.0            | 7.4            |
|           | 90/73 (32.22/22.78) | 4.8    | 4.9    | 6.0           | 6.6          | 6.4           | 5.9           | 6.3     | 6.6            | 7.8            | 8.1            |
|           | 70/59 (21.11/15)    | 58     | 59     | 67            | 73           | 74            | 71            | 74      | 78             | 91             | 96             |
| PSI       | 75/63 (23.89/17.22) | 61     | 62     | 71            | 78           | 78            | 75            | 78      | 83             | 97             | 102            |
| PSI       | 80/67 (26.67/19.44) | 64     | 65     | 77            | 86           | 84            | 81            | 83      | 87             | 102            | 107            |
|           | 90/73 (32.22/22.78) | 70     | 71     | 87            | 96           | 93            | 86            | 91      | 96             | 113            | 117            |
|           | 70/59 (21.11/15)    | 0.40   | 0.41   | 0.46          | 0.50         | 0.51          | 0.49          | 0.51    | 0.54           | 0.63           | 0.66           |
| <br>  MPa | 75/63 (23.89/17.22) | 0.42   | 0.43   | 0.49          | 0.54         | 0.54          | 0.52          | 0.54    | 0.57           | 0.67           | 0.70           |
| IVIPA     | 80/67 (26.67/19.44) | 0.44   | 0.45   | 0.53          | 0.59         | 0.58          | 0.56          | 0.57    | 0.60           | 0.70           | 0.74           |
|           | 90/73 (32.22/22.78) | 0.48   | 0.49   | 0.60          | 0.66         | 0.64          | 0.59          | 0.63    | 0.66           | 0.78           | 0.81           |

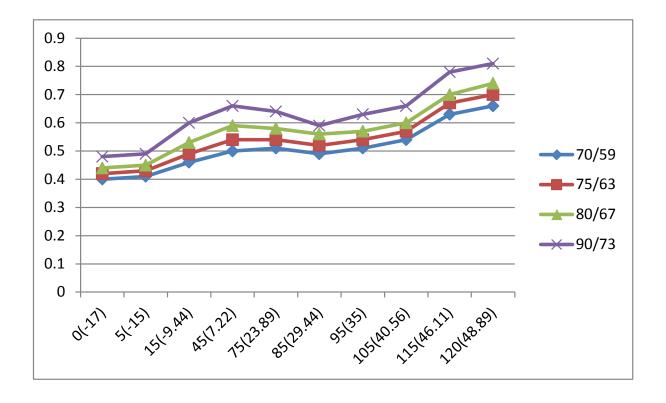


## **Heating chart(R22):**

| °F(°C) | QDU(DB/WB) | 57/53<br>(13.89/11.67) | 47/43<br>(8.33/6.11) | 37/33<br>(2.78/0.56) | 27/23<br>(-2.78/-5) | 17/13 (-8.33/-<br>10.56) | 0/-2<br>(-17/-19) | -17/-18<br>(-27/-28) |
|--------|------------|------------------------|----------------------|----------------------|---------------------|--------------------------|-------------------|----------------------|
|        | 55(12.78)  | 18.9                   | 17.8                 | 15.8                 | 14.3                | 13.0                     | 11.6              | 10.3                 |
| BAR    | 65(18.33)  | 20.3                   | 18.8                 | 16.6                 | 15.9                | 14.6                     | 12.8              | 11.9                 |
|        | 75(23.89)  | 21.1                   | 19.7                 | 17.3                 | 16.4                | 15.6                     | 13.4              | 12.5                 |
|        | 55(12.78)  | 274                    | 258                  | 229                  | 207                 | 189                      | 168               | 149                  |
| PSI    | 65(18.33)  | 294                    | 273                  | 241                  | 231                 | 212                      | 186               | 172.6                |
|        | 75(23.89)  | 306                    | 286                  | 251                  | 238                 | 226                      | 194               | 181                  |
|        | 55(12.78)  | 1.89                   | 1.78                 | 1.58                 | 1.43                | 1.30                     | 1.16              | 1.03                 |
| MPa    | 65(18.33)  | 2.03                   | 1.88                 | 1.66                 | 1.59                | 1.46                     | 1.28              | 1.19                 |
|        | 75(23.89)  | 2.11                   | 1.97                 | 1.73                 | 1.64                | 1.56                     | 1.34              | 1.25                 |

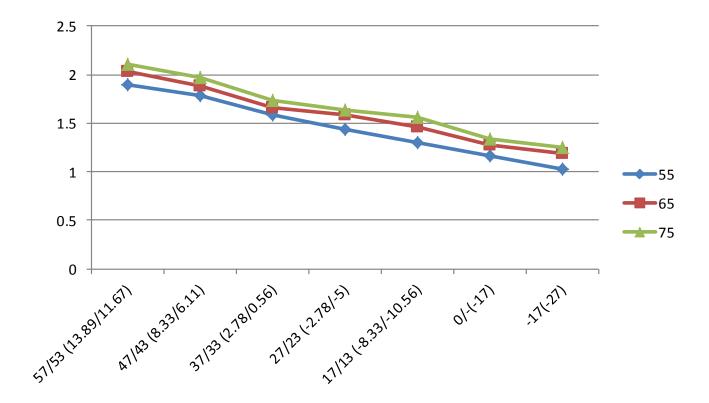


## Cooling chart(R32):

| °F(°C) | ODU(DB)             | 0(-17) | 5(-15) | 15<br>(-9.44) | 45<br>(7.22) | 75<br>(23.89) | 85<br>(29.44) | 95 (35) | 105<br>(40.56) | 115<br>(46.11) | 120<br>(48.89) |
|--------|---------------------|--------|--------|---------------|--------------|---------------|---------------|---------|----------------|----------------|----------------|
|        | 70/59 (21.11/15)    | 6.5    | 6.6    | 7.4           | 8.2          | 8.4           | 8.0           | 8.3     | 8.8            | 10.3           | 10.8           |
| BAR    | 75/63 (23.89/17.22) | 6.8    | 6.9    | 8.1           | 8.8          | 8.8           | 8.5           | 8.9     | 9.3            | 10.9           | 11.4           |
|        | 80/67 (26.67/19.44) | 7.2    | 7.3    | 8.7           | 9.7          | 9.5           | 9.1           | 9.3     | 9.8            | 11.4           | 12.1           |
|        | 90/73 (32.22/22.78) | 7.9    | 8.0    | 9.8           | 10.7         | 10.5          | 9.7           | 10.2    | 10.8           | 12.6           | 13.3           |
|        | 70/59 (21.11/15)    | 95     | 96     | 108           | 118          | 121           | 115           | 119     | 128            | 150            | 157            |
| PSI    | 75/63 (23.89/17.22) | 99     | 101    | 117           | 128          | 126           | 122           | 129     | 135            | 158            | 165            |
| FSI    | 80/67 (26.67/19.44) | 105    | 106    | 125           | 141          | 138           | 132           | 135     | 143            | 165            | 176            |
|        | 90/73 (32.22/22.78) | 114    | 115    | 142           | 155          | 152           | 141           | 148     | 157            | 184            | 193            |
|        | 70/59 (21.11/15)    | 0.65   | 0.66   | 0.74          | 0.82         | 0.84          | 0.80          | 0.83    | 0.88           | 1.03           | 1.08           |
| MPa    | 75/63 (23.89/17.22) | 0.68   | 0.69   | 0.81          | 0.88         | 0.88          | 0.85          | 0.89    | 0.93           | 1.09           | 1.14           |
| IVIFA  | 80/67 (26.67/19.44) | 0.72   | 0.73   | 0.87          | 0.97         | 0.95          | 0.91          | 0.93    | 0.98           | 1.14           | 1.21           |
|        | 90/73 (32.22/22.78) | 0.79   | 0.80   | 0.98          | 1.07         | 1.05          | 0.97          | 1.02    | 1.08           | 1.26           | 1.33           |

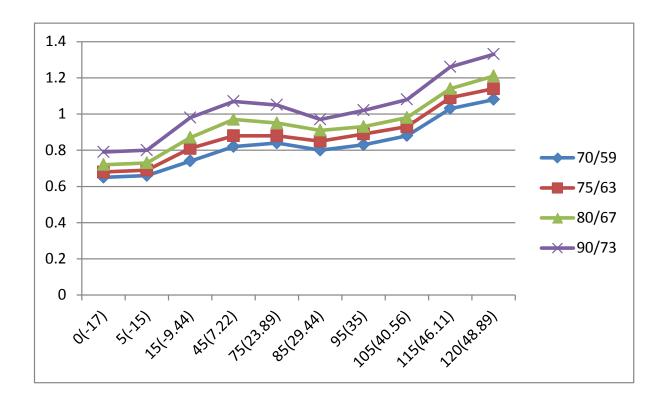

## **Heating chart(R32):**

| °F(°C) | QDU(DB/WB) | 57/53<br>(13.89/11.67) | 47/43<br>(8.33/6.11) | 37/33<br>(2.78/0.56) | 27/23<br>(-2.78/-5) | 17/13 (-8.33/-<br>10.56) | 0/-2<br>(-17/-19) | -17/-18<br>(-27/-28) |
|--------|------------|------------------------|----------------------|----------------------|---------------------|--------------------------|-------------------|----------------------|
|        | 55(12.78)  | 30.9                   | 29.1                 | 25.8                 | 23.3                | 21.2                     | 18.9              | 16.8                 |
| BAR    | 65(18.33)  | 33.2                   | 30.6                 | 27.1                 | 25.9                | 23.8                     | 20.9              | 19.4                 |
|        | 75(23.89)  | 34.5                   | 32.1                 | 28.4                 | 26.8                | 25.4                     | 21.9              | 20.4                 |
|        | 55(12.78)  | 448                    | 421                  | 374                  | 337                 | 308                      | 273               | 244                  |
| PSI    | 65(18.33)  | 480                    | 444                  | 394                  | 375                 | 346                      | 303               | 282                  |
|        | 75(23.89)  | 499                    | 466                  | 411                  | 389                 | 369                      | 318               | 296                  |
|        | 55(12.78)  | 3.09                   | 2.91                 | 2.58                 | 2.33                | 2.12                     | 1.89              | 1.68                 |
| MPa    | 65(18.33)  | 3.32                   | 3.06                 | 2.71                 | 2.59                | 2.38                     | 2.09              | 1.94                 |
|        | 75(23.89)  | 3.45                   | 3.21                 | 2.84                 | 2.68                | 2.54                     | 2.19              | 2.04                 |

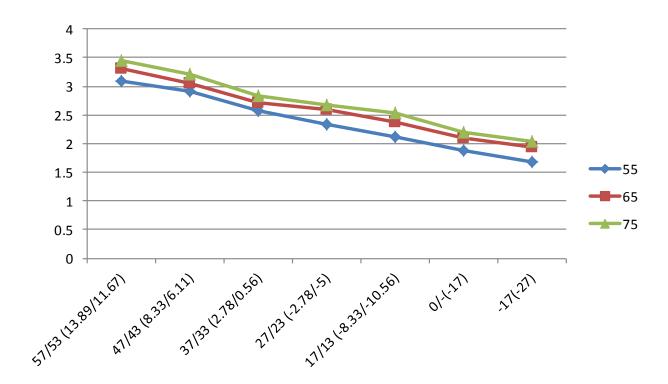

# System Pressure Table-R22

|      | Pressure |        | Temper  | ature   |      | Pressure |        | Temperature |         |  |
|------|----------|--------|---------|---------|------|----------|--------|-------------|---------|--|
| Кра  | bar      | PSI    | °C      | °F      | Кра  | bar      | PSI    | °C          | °F      |  |
| 100  | 1        | 14.5   | -41.091 | -41.964 | 1600 | 16       | 232    | 41.748      | 107.146 |  |
| 150  | 1.5      | 21.75  | -32.077 | -25.739 | 1650 | 16.5     | 239.25 | 43.029      | 109.452 |  |
| 200  | 2        | 29     | -25.177 | -13.319 | 1700 | 17       | 246.5  | 44.281      | 111.706 |  |
| 250  | 2.5      | 36.25  | -19.508 | -3.114  | 1750 | 17.5     | 253.75 | 45.506      | 113.911 |  |
| 300  | 3        | 43.5   | -14.654 | 5.623   | 1800 | 18       | 261    | 46.706      | 116.071 |  |
| 350  | 3.5      | 50.75  | -10.384 | 13.309  | 1850 | 18.5     | 268.25 | 47.882      | 118.188 |  |
| 400  | 4        | 58     | -6.556  | 20.199  | 1900 | 19       | 275.5  | 49.034      | 120.261 |  |
| 450  | 4.5      | 65.25  | -3.075  | 26.464  | 1950 | 19.5     | 282.75 | 50.164      | 122.295 |  |
| 500  | 5        | 72.5   | 0.124   | 32.223  | 2000 | 20       | 290    | 51.273      | 124.291 |  |
| 550  | 5.5      | 79.75  | 3.091   | 37.563  | 2050 | 20.5     | 297.25 | 52.361      | 126.250 |  |
| 600  | 6        | 87     | 5.861   | 42.550  | 2100 | 21       | 304.5  | 53.43       | 128.174 |  |
| 650  | 6.5      | 94.25  | 8.464   | 47.234  | 2150 | 21.5     | 311.75 | 54.48       | 130.064 |  |
| 700  | 7        | 101.5  | 10.92   | 51.656  | 2200 | 22       | 319    | 55.512      | 131.922 |  |
| 750  | 7.5      | 108.75 | 13.249  | 55.848  | 2250 | 22.5     | 326.25 | 56.527      | 133.749 |  |
| 800  | 8        | 116    | 15.465  | 59.837  | 2300 | 23       | 333.5  | 57.526      | 135.547 |  |
| 850  | 8.5      | 123.25 | 17.58   | 63.644  | 2350 | 23.5     | 340.75 | 58.508      | 137.314 |  |
| 900  | 9        | 130.5  | 19.604  | 67.287  | 2400 | 24       | 348    | 59.475      | 139.055 |  |
| 950  | 9.5      | 137.75 | 21.547  | 70.785  | 2450 | 24.5     | 355.25 | 60.427      | 140.769 |  |
| 1000 | 10       | 145    | 23.415  | 74.147  | 2500 | 25       | 362.5  | 61.364      | 142.455 |  |
| 1050 | 10.5     | 152.25 | 25.216  | 77.389  | 2550 | 25.5     | 369.75 | 62.288      | 144.118 |  |
| 1100 | 11       | 159.5  | 26.953  | 80.515  | 2600 | 26       | 377    | 63.198      | 145.756 |  |
| 1150 | 11.5     | 166.75 | 28.634  | 83.541  | 2650 | 26.5     | 384.25 | 64.095      | 147.371 |  |
| 1200 | 12       | 174    | 30.261  | 86.470  | 2700 | 27       | 391.5  | 64.98       | 148.964 |  |
| 1250 | 12.5     | 181.25 | 31.839  | 89.310  | 2750 | 27.5     | 398.75 | 65.852      | 150.534 |  |
| 1300 | 13       | 188.5  | 33.371  | 92.068  | 2800 | 28       | 406    | 66.712      | 152.082 |  |
| 1350 | 13.5     | 195.75 | 34.86   | 94.748  | 2850 | 28.5     | 413.25 | 67.561      | 153.610 |  |
| 1400 | 14       | 203    | 36.308  | 97.354  | 2900 | 29       | 420.5  | 68.399      | 155.118 |  |
| 1450 | 14.5     | 210.25 | 37.719  | 99.894  | 2950 | 29.5     | 427.75 | 69.226      | 156.607 |  |
| 1500 | 15       | 217.5  | 39.095  | 102.371 | 3000 | 30       | 435    | 70.042      | 158.076 |  |
| 1550 | 15.5     | 224.75 | 40.437  | 104.787 |      |          |        |             |         |  |

# System Pressure Table-R410A

|      | Pressure |        | Temperature |         |      | Pressure | Temperature |        |         |
|------|----------|--------|-------------|---------|------|----------|-------------|--------|---------|
| Кра  | bar      | PSI    | °C          | °F      | Кра  | bar      | PSI         | °C     | °F      |
| 100  | 1        | 14.5   | -51.623     | -60.921 | 2350 | 23.5     | 340.75      | 38.817 | 101.871 |
| 150  | 1.5      | 21.75  | -43.327     | -45.989 | 2400 | 24       | 348         | 39.68  | 103.424 |
| 200  | 2        | 29     | -36.992     | -34.586 | 2450 | 24.5     | 355.25      | 40.531 | 104.956 |
| 250  | 2.5      | 36.25  | -31.795     | -25.231 | 2500 | 25       | 362.5       | 41.368 | 106.462 |
| 300  | 3        | 43.5   | -27.351     | -17.232 | 2550 | 25.5     | 369.75      | 42.192 | 107.946 |
| 350  | 3.5      | 50.75  | -23.448     | -10.206 | 2600 | 26       | 377         | 43.004 | 109.407 |
| 400  | 4        | 58     | -19.953     | -3.915  | 2650 | 26.5     | 384.25      | 43.804 | 110.847 |
| 450  | 4.5      | 65.25  | -16.779     | 1.798   | 2700 | 27       | 391.5       | 44.592 | 112.266 |
| 500  | 5        | 72.5   | -13.863     | 7.047   | 2750 | 27.5     | 398.75      | 45.37  | 113.666 |
| 550  | 5.5      | 79.75  | -11.162     | 11.908  | 2800 | 28       | 406         | 46.136 | 115.045 |
| 600  | 6        | 87     | -8.643      | 16.444  | 2850 | 28.5     | 413.25      | 46.892 | 116.406 |
| 650  | 6.5      | 94.25  | -6.277      | 20.701  | 2900 | 29       | 420.5       | 47.638 | 117.748 |
| 700  | 7        | 101.5  | -4.046      | 24.716  | 2950 | 29.5     | 427.75      | 48.374 | 119.073 |
| 750  | 7.5      | 108.75 | -1.933      | 28.521  | 3000 | 30       | 435         | 49.101 | 120.382 |
| 800  | 8        | 116    | 0.076       | 32.137  | 3050 | 30.5     | 442.25      | 49.818 | 121.672 |
| 850  | 8.5      | 123.25 | 1.993       | 35.587  | 3100 | 31       | 449.5       | 50.525 | 122.945 |
| 900  | 9        | 130.5  | 3.826       | 38.888  | 3150 | 31.5     | 456.75      | 51.224 | 124.203 |
| 950  | 9.5      | 137.75 | 5.584       | 42.052  | 3200 | 32       | 464         | 51.914 | 125.445 |
| 1000 | 10       | 145    | 7.274       | 45.093  | 3250 | 32.5     | 471.25      | 52.596 | 126.673 |
| 1050 | 10.5     | 152.25 | 8.901       | 48.022  | 3300 | 33       | 478.5       | 53.27  | 127.886 |
| 1100 | 11       | 159.5  | 10.471      | 50.848  | 3350 | 33.5     | 485.75      | 53.935 | 129.083 |
| 1150 | 11.5     | 166.75 | 11.988      | 53.578  | 3400 | 34       | 493         | 54.593 | 130.267 |
| 1200 | 12       | 174    | 13.457      | 56.223  | 3450 | 34.5     | 500.25      | 55.243 | 131.437 |
| 1250 | 12.5     | 181.25 | 14.879      | 58.782  | 3500 | 35       | 507.5       | 55.885 | 132.593 |
| 1300 | 13       | 188.5  | 16.26       | 61.268  | 3550 | 35.5     | 514.75      | 56.52  | 133.736 |
| 1350 | 13.5     | 195.75 | 17.602      | 63.684  | 3600 | 36       | 522         | 57.148 | 134.866 |
| 1400 | 14       | 203    | 18.906      | 66.031  | 3650 | 36.5     | 529.25      | 57.769 | 135.984 |
| 1450 | 14.5     | 210.25 | 20.176      | 68.317  | 3700 | 37       | 536.5       | 58.383 | 137.089 |
| 1500 | 15       | 217.5  | 21.414      | 70.545  | 3750 | 37.5     | 543.75      | 58.99  | 138.182 |
| 1550 | 15.5     | 224.75 | 22.621      | 72.718  | 3800 | 38       | 551         | 59.591 | 139.264 |
| 1600 | 16       | 232    | 23.799      | 74.838  | 3850 | 38.5     | 558.25      | 60.185 | 140.333 |
| 1650 | 16.5     | 239.25 | 24.949      | 76.908  | 3900 | 39       | 565.5       | 60.773 | 141.391 |
| 1700 | 17       | 246.5  | 26.074      | 78.933  | 3950 | 39.5     | 572.75      | 61.355 | 142.439 |
| 1750 | 17.5     | 253.75 | 27.174      | 80.913  | 4000 | 40       | 580         | 61.93  | 143.474 |
| 1800 | 18       | 261    | 28.251      | 82.852  | 4050 | 40.5     | 587.25      | 62.499 | 144.498 |
| 1850 | 18.5     | 268.25 | 29.305      | 84.749  | 4100 | 41       | 594.5       | 63.063 | 145.513 |
| 1900 | 19       | 275.5  | 30.338      | 86.608  | 4150 | 41.5     | 601.75      | 63.62  | 146.516 |
| 1950 | 19.5     | 282.75 | 31.351      | 88.432  | 4200 | 42       | 609         | 64.172 | 147.510 |
| 2000 | 20       | 290    | 32.344      | 90.219  | 4250 | 42.5     | 616.25      | 64.719 | 148.494 |
| 2050 | 20.5     | 297.25 | 33.319      | 91.974  | 4300 | 43       | 623.5       | 65.259 | 149.466 |
| 2100 | 21       | 304.5  | 34.276      | 93.697  | 4350 | 43.5     | 630.75      | 65.795 | 150.431 |
| 2150 | 21.5     | 311.75 | 35.215      | 95.387  | 4400 | 44       | 638         | 66.324 | 151.383 |
| 2200 | 22       | 319    | 36.139      | 97.050  | 4450 | 44.5     | 645.25      | 66.849 | 152.328 |
| 2250 | 22.5     | 326.25 | 37.047      | 98.685  | 4500 | 45       | 652.5       | 67.368 | 153.262 |
| 2300 | 23       | 333.5  | 37.939      | 100.290 |      |          |             |        |         |

# System Pressure Table-R32

|      | Pressure |        | Tempe   | erature |      | Pressure |        | Temperature |         |  |
|------|----------|--------|---------|---------|------|----------|--------|-------------|---------|--|
| Кра  | bar      | PSI    | °C      | °F      | Кра  | bar      | PSI    | °C          | °F      |  |
| 100  | 1        | 14.5   | -51.909 | -61.436 | 1850 | 18.5     | 268.25 | 28.425      | 83.165  |  |
| 150  | 1.5      | 21.75  | -43.635 | -46.543 | 1900 | 19       | 275.5  | 29.447      | 85.005  |  |
| 200  | 2        | 29     | -37.323 | -35.181 | 1950 | 19.5     | 282.75 | 30.448      | 86.806  |  |
| 250  | 2.5      | 36.25  | -32.15  | -25.87  | 2000 | 20       | 290    | 31.431      | 88.576  |  |
| 300  | 3        | 43.5   | -27.731 | -17.916 | 2050 | 20.5     | 297.25 | 32.395      | 90.311  |  |
| 350  | 3.5      | 50.75  | -23.85  | -10.93  | 2100 | 21       | 304.5  | 33.341      | 92.014  |  |
| 400  | 4        | 58     | -20.378 | -4.680  | 2150 | 21.5     | 311.75 | 34.271      | 93.688  |  |
| 450  | 4.5      | 65.25  | -17.225 | 0.995   | 2200 | 22       | 319    | 35.184      | 95.331  |  |
| 500  | 5        | 72.5   | -14.331 | 6.204   | 2250 | 22.5     | 326.25 | 36.082      | 96.948  |  |
| 550  | 5.5      | 79.75  | -11.65  | 11.03   | 2300 | 23       | 333.5  | 36.965      | 98.537  |  |
| 600  | 6        | 87     | -9.150  | 15.529  | 2350 | 23.5     | 340.75 | 37.834      | 100.101 |  |
| 650  | 6.5      | 94.25  | -6.805  | 19.752  | 2400 | 24       | 348    | 38.688      | 101.638 |  |
| 700  | 7        | 101.5  | -4.593  | 23.734  | 2450 | 24.5     | 355.25 | 39.529      | 103.152 |  |
| 750  | 7.5      | 108.75 | -2.498  | 27.505  | 2500 | 25       | 362.5  | 40.358      | 104.644 |  |
| 800  | 8        | 116    | -0.506  | 31.089  | 2550 | 25.5     | 369.75 | 41.173      | 106.111 |  |
| 850  | 8.5      | 123.25 | 1.393   | 34.507  | 2600 | 26       | 377    | 41.977      | 107.559 |  |
| 900  | 9        | 130.5  | 3.209   | 37.777  | 2650 | 26.5     | 384.25 | 42.769      | 108.984 |  |
| 950  | 9.5      | 137.75 | 4.951   | 40.911  | 2700 | 27       | 391.5  | 43.55       | 110.39  |  |
| 1000 | 10       | 145    | 6.624   | 43.923  | 2750 | 27.5     | 398.75 | 44.32       | 111.776 |  |
| 1050 | 10.5     | 152.25 | 8.235   | 46.823  | 2800 | 28       | 406    | 45.079      | 113.142 |  |
| 1100 | 11       | 159.5  | 9.790   | 49.621  | 2850 | 28.5     | 413.25 | 45.828      | 114.490 |  |
| 1150 | 11.5     | 166.75 | 11.291  | 52.324  | 2900 | 29       | 420.5  | 46.567      | 115.821 |  |
| 1200 | 12       | 174    | 12.745  | 54.941  | 2950 | 29.5     | 427.75 | 47.296      | 117.133 |  |
| 1250 | 12.5     | 181.25 | 14.153  | 57.475  | 3000 | 30       | 435    | 48.015      | 118.427 |  |
| 1300 | 13       | 188.5  | 15.52   | 59.936  | 3050 | 30.5     | 442.25 | 48.726      | 119.707 |  |
| 1350 | 13.5     | 195.75 | 16.847  | 62.325  | 3100 | 31       | 449.5  | 49.428      | 120.970 |  |
| 1400 | 14       | 203    | 18.138  | 64.648  | 3150 | 31.5     | 456.75 | 50.121      | 122.218 |  |
| 1450 | 14.5     | 210.25 | 19.395  | 66.911  | 3200 | 32       | 464    | 50.806      | 123.451 |  |
| 1500 | 15       | 217.5  | 20.619  | 69.114  | 3250 | 32.5     | 471.25 | 51.482      | 124.668 |  |
| 1550 | 15.5     | 224.75 | 21.813  | 71.263  | 3300 | 33       | 478.5  | 52.15       | 125.87  |  |
| 1600 | 16       | 232    | 22.978  | 73.360  | 3350 | 33.5     | 485.75 | 52.811      | 127.060 |  |
| 1650 | 16.5     | 239.25 | 24.116  | 75.409  | 3400 | 34       | 493    | 53.464      | 128.235 |  |
| 1700 | 17       | 246.5  | 25.229  | 77.412  | 3450 | 34.5     | 500.25 | 54.11       | 129.398 |  |
| 1750 | 17.5     | 253.75 | 26.317  | 79.371  | 3500 | 35       | 507.5  | 54.748      | 130.546 |  |
| 1800 | 18       | 261    | 27.382  | 81.288  |      |          |        |             |         |  |