

Installation and maintenance manual
Manuel d'installation et de maintenance
Installations- und Wartungshandbuch
Manuale di installazione e di manutenzione
Manual de instalación y de mantenimiento

ROOFTECH

100 ÷ 220



English

Français

Deutsch

Italiano

Español



98.5
↑
221



97.4
↑
220



ROOF-MOUNTED AIR CONDITIONING UNIT

UNITE MONOBLOC DE TOITURE

DACHKLIMAGERÄT

UNITÀ D'ARIA CONDIZIONATA DA TETTO

UNIDAD DE AIRE ACONDICIONADO DE TEJADO

IOM RT 02-N-11GB

Part number / Code / Teil Nummer / Codice / Código : **3990426GB**

Supersedes / Annule et remplace / Annulliert und ersetzt /

Annulla e sostituisce / Anula y sustituye : **IOM RT 02-N-10GB**



INSTALLATION INSTRUCTION

NOTICE D'INSTALLATION

INSTALLATIONSHANDBUCH

ISTRUZIONI INSTALLAZIONE

INSTRUCCIONES DE INSTALACIÓN

English

Français

Deutsch

Italiano

Español

CONTENTS

GENERAL RECOMMENDATIONS	3
SAFETY DIRECTIONS	3
WARNING	3
EQUIPMENT SAFETY DATA	4
INSPECTION AND STORAGE	5
WARRANTY	5
CONTENTS OF PACKAGE	5
PRESENTATION	5
TECHNICAL SPECIFICATIONS.....	6
OPERATING LIMITS	6
DIMENSIONS	6
HANDLING	6
NET WEIGHT	7
POSITION OF CENTRE OF GRAVITY FOR THE BASE MODULE.....	7
ELECTRICAL SPECIFICATIONS	8
UNIT WITHOUT HEATING	8
UNIT WITH HEATING TYPE CH1	8
UNIT WITH HEATING TYPE CH2	8
INSTALLATION	9
PLACE OF INSTALLATION AND REQUIREMENTS.....	9
CLEARANCE	9
UNIT LOCATION	9
CONDENSATE DRAIN PAN	10
ROOF CURB.....	10
DIMENSIONS	10
CONFIGURATION OF THE UNIT	11
GENERALITIES.....	11
SUPPLY AIR.....	11
DUCT OUTLET DIMENSIONS	11
AIR INTAKE	11
ECONOMISER	12
ECONOMISER - 2 FLAPS	12
ECONOMISER - 3 FLAPS	13
ELECTRIC HEAT	13
WIRING DIAGRAM AND LEGEND.....	14
WIRING DIAGRAM	14
LEGEND	14
POWER SUPPLY	14
WIRING DIAGRAM KEY DESCRIPTIONS	14
POWER SUPPLY DIAGRAMS:.....	14
CONTROL AND REGULATION DIAGRAMS	15
RANGE AND SETTINGS OF THERMAL PROTECTION / NOMINAL INTENSITY OF THE CONTACTORS (CLASSE AC3)	16
COMPRESSORS CRANKCASE HEATER.....	16
PRESSOSTATS SETTING	16
ELECTRICAL CONNECTIONS.....	17
COMMISSIONING	19
PRE-START CHECK LIST.....	19
ELECTRICAL CHECK.....	19
VISUAL CHECK	19
DUCTING.....	19
AIR BALANCING	20
CASE N°1:	20
CASE N°2:	20
OPERATING CHECK LIST	21
GENERAL.....	21
PHASE ROTATION PROTECTION	21
ELECTRICAL	21
SET POINTS	21
OPERATING VOLTAGE:	21
CONTROL	21
BLOWER & DRIVE	21
COMPRESSOR AND REFRIGERATION SYSTEM	21
FINAL CHECK	22
FINAL TASKS	22
IN CASE OF WARRANTY - MATERIAL RETURN PROCEDURE	22
ORDERING SERVICE AND SPARE PARTS ORDER	22
MAINTENANCE.....	22
REGULAR MAINTENANCE	22
GENERAL INSPECTION	22
ACCESS PANELS.....	23
BLOWER DRIVE SYSTEM	23
COILS	23
ELECTRICAL SECTION.....	23
SERVICING CHECKLIST	24
TROUBLE SHOOTING	25



POWER SUPPLY MUST BE SWITCHED OFF BEFORE STARTING TO WORK IN THE ELECTRIC CONTROL BOX

GENERAL RECOMMENDATIONS

Please read the following safety precautions very carefully before installing the unit.

SAFETY DIRECTIONS

Follow the safety rules in forces when you are working on your appliance.

The installation, commissioning and maintenance of these units should be performed by qualified personnel having a good knowledge of standards and local regulations, as well as experience of this type of equipment.

Given the requirements of pressurising the system and the high current draws involved, this roof-mounted air conditioning should only be installed by qualified personnel.

The unit should be handled using lifting and handling equipment appropriate to the unit's size and weight.

Given the high refrigerant temperatures present at certain points in the cooling circuit, access to the area protected by the panels is strictly reserved for qualified personnel only. These panels are easily opened with a special tool. This tool should be kept by the installers or by the maintenance company.

Any wiring produced on site must comply with the corresponding national electrical regulations.

Make sure that the power supply and its frequency are adapted to the required electric current of operation, taking into account specific conditions of the location and the current required for any other appliance connected with the same circuit.

The unit must be EARTHED to avoid any risks caused by insulation defects.

It is forbidden to start any work on the electrical components if water or high humidity is present on the installation site.

WARNING

Cutoff power supply before starting to work on the appliance.

When making the hydraulic connections, ensure that no impurities are introduced into the pipe work.

The manufacturer declines any responsibility and the warranty becomes void if these instructions are not respected.

If you meet a problem, please call the Technical Department of your area.

If possible, assemble the compulsory or optional accessories before placing the appliance on its final location. (see instructions provided with each accessory).

In order to become fully familiar with the appliance, we suggest to read also our Technical Instructions.

-The informations contained in these Instructions are subject to modification without advance notice.

EQUIPMENT SAFETY DATA

Safety Data	R410A
Toxicity	Low
In contact with skin	Skin contact with the rapidly evaporating liquid may cause tissue chilblains. In case of skin contact with the liquid, warm the frozen tissue with water and call a doctor. Remove contaminated clothing and footwear. Wash the clothing prior to re-use.
In contact with eyes	Vapours have no effect. Liquid splashes or sprays may cause freeze burns. In these cases rinse your eyes with running water or with a solution for eye lavages for at least 10 minutes. Immediately contact a doctor.
Ingestion	In this case, burns may result. Do not attempt to make the patient vomit. If the patient is conscious, rinse the mouth with water. Call a doctor immediately.
Inhalation	In case of inhalation, move the patient to an area with fresh air and provide oxygen if necessary. Perform artificial respiration if the patient has stopped breathing or lacks air. In case of cardiac arrest, perform external cardiac massage. Call a doctor immediately.
Further Medical Advice	Exposure to high concentrations can be dangerous for individuals with cardiac problems, as the presence of catecholamines such as adrenalin in the bloodstream may lead to increased arrhythmia and possible cardiac arrest.
Occupational exposure limits	R410A: Recommended limits: 1,000 ppm v/v 8 hours TWA.
Stability	Stable product
Conditions to avoid	Increased pressure due to high temperatures may cause the container to explode. Keep out of the sun and do not expose to a temperature $>50^{\circ}\text{C}$.
Hazardous reactions	Possibility of dangerous reactions in case of fire due to the presence of F and/or Cl radicals
General precautions	Avoid the inhalation of high concentrations of vapours. The concentration in the atmosphere shall be kept at the minimum value and anyway below the occupational limits. Since vapours are heavier than air and they tend to stagnate and to build up in closed areas, any opening for ventilation shall be made at the lowest level.
Breathing protection	In case of doubt about the actual concentration, wear breathing apparatus. It should be self-contained and approved by the bodies for safety protection.
Storage Preservation	Refrigerant containers shall be stored in a cool place, away from fire risk, direct sunlight and all heat sources, such as radiators. The maximum temperature shall never exceed 50°C in the storage place.
Protection clothes	Wear boots, safety gloves and glasses or masks for facial protection.
Behaviour in case of leaks or escapes	Never forget to wear protection clothes and breathing apparatus. Isolate the source of the leakage, provided that this operation may be performed in safety conditions. Any small quantity of refrigerant which may have escaped in its liquid state may evaporate provided that the room is well ventilated. In case of a large leakage, ventilate the room immediately. Stop the leakage with sand, earth or any suitable absorbing material. Prevent the liquid refrigerant from flowing into drains, sewers, foundations or absorbing wells since its vapours may create an asphyxiating atmosphere.
Disposal	The best procedure involves recovery and recycle. If this is not possible, the refrigerant shall be given to a plant which is well equipped to destroy and neutralise any acid and toxic by-product which may derive from its disposal.
Combustibility features	R410A: Non-inflammable at ambient temperatures and atmospheric pressures.
Containers	If they are exposed to the fire, they shall be constantly cooled down by water sprays. Containers may explode if they are overheated.
Behaviour in case of fire	In case of fire wear protection clothes and self-contained breathing apparatus.

INSPECTION AND STORAGE

At the time of receiving the equipment carefully cross check all the elements against the shipping documents in order to ensure that all the crates and boxes have been received. Confirmation of the type of unit ordered can be obtained by reading the maker's plate (capacity, type and air blowing configuration).

Inspect the units for any visible or hidden damage.

In the event of shipping damage, write precise details of the damage on the shipper's delivery note and send immediately a registered letter to the shipper within 48 hours, clearly stating the damage caused. Forward a copy of this letter to the manufacturer or their representative.

Never store or transport the unit upside down. Protect unit at the job side from damages made by others. When unit is stored on the ground, avoid mud store unit leveled.

WARRANTY

The appliances are delivered fully assembled, factory tested and ready to operate.

Any modification to the units without the manufacturer's prior approval, shall automatically render the warranty null and void.

The following conditions must be respected in order to maintain the validity of the warranty:

- Commissioning shall be performed by specialised technicians from technical services approved by the manufacturer.
- Maintenance shall be performed by technicians trained for this purpose.
- Only Original Equipment spare parts shall be used.
- All the operations listed in the present manual shall be performed within the required time limits.

INSTRUCTIONS FOR FILLING IN THE "1st START-UP FORM"

(SEE APPENDIX)

It is the responsibility of the OWNER to make sure that the "1st Start-up Form" is fully filled in by the authorized Service Centre and sent by registered mail - notified in advance by fax - to the After-Sales Service of the constructor within 8 days of the initial start-up.

Failure to receive the form on the part of the constructor will render the guarantee null and void.

The OWNER must then keep the logbook for at least the duration of the guarantee.

The constructor reserves the right to request a copy of the "Machine Logbook" at any moment whatsoever. Failure to fill in the logbook may render the guarantee null and void.



THE WARRANTY SHALL BE NULL AND VOID IN THE EVENT OF NON-COMPLIANCE WITH ANY OF THE ABOVE CONDITIONS.

CONTENTS OF PACKAGE

1 ROOFTECH

1 Installation and maintenance manual

1 Control manual

PRESENTATION

The machine has been designed for an outdoor mounted application, ensuring perfectly weatherproof circulation of the air within the compartments.

Packaged ROOFTECH units are designed to safeguard to environment and reduce building energy consumption by the use of R410A as a refrigerant and double skin 50 mm panels for greater thermal insulation.

All the units are factory charged and tested, and ready to install to guarantee quick and efficient commissioning.

A modular design enables the system to be adapted perfectly to the client's configuration. The present manual defines the characteristics of the base module.

TECHNICAL SPECIFICATIONS

Models		100	120	140	160	180	200	220
Compressor type		Scroll Tandem						
Compressor quantity		4	4	4	4	4	4	4
Number of circuit		2	2	2	2	2	2	2
Refrigerant		R-410A						
Charge of circuit	kg	SEE NAME PLATE						
Number of blower		1	1	1	1	1	1	1
Type		Centrifugal						
Nominal indoor airflow	m³/h	20 000	22 500	27 500	30 000	34 000	37 000	40 000
Pressure available	Pa	250	350	350	350	350	350	350
Number of outdoor fans		2	2	2	2	2	2	2
Type		Helicoid						
Total nominal external airflow	m³/h	38 000	38 000	41 000	41 000	56 000	56 000	56 000

You can adjust the available static pressure and flow by adjusting the variable motor pulley fitted to the blower (SEE AIR BALANCING).

OPERATING LIMITS

Outdoor temperature	Minimum	maximum
Cooling mode *	+18°C	+43°C
Heating mode	-7°C	+21°C


* without all seasons kit

Indoor temperature	Minimum
Cooling mode	+20°C with +15°C outdoor
Heating mode	+8°C with +8°C outdoor

DIMENSIONS

SEE APPENDIX

HANDLING



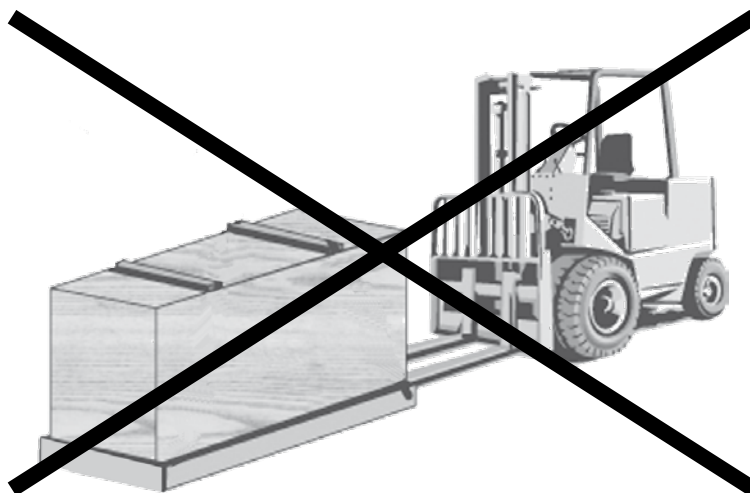


HANDLING WITH A FORKLIFT TRUCK PROHIBITED

Four or six sling attachment points are provided for lifting.

Rings attached rigidly to the unit structure are intended for completely safe handling.

A sling spreader is required to avoid damaging the edges of the unit. (mini: 2300mm)

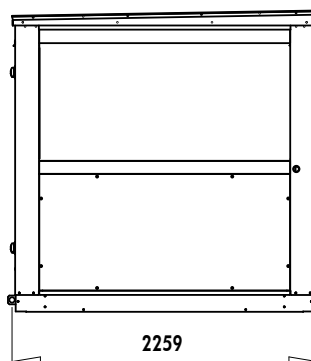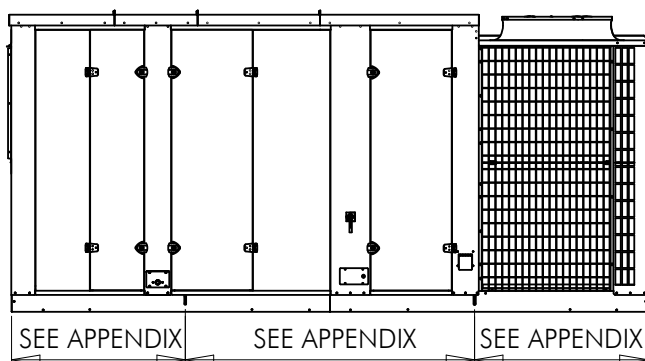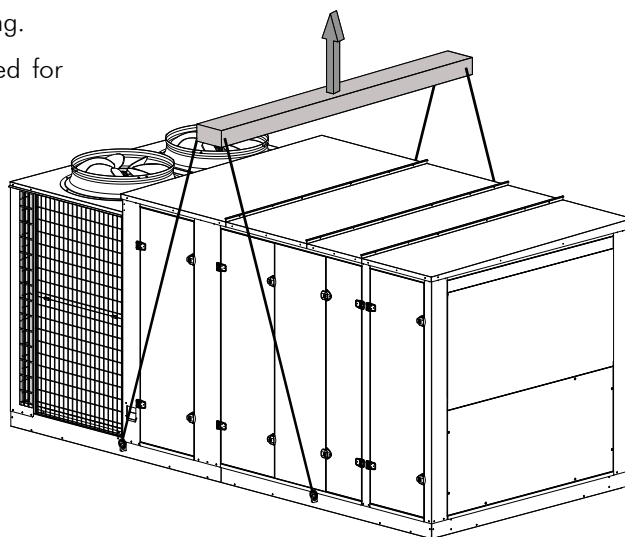

NET WEIGHT

Models		Base module without economiser							option				
		100	120	140	160	180	200	220	Burner gas	filter EU7	economiser 2 flaps	economiser 3 flaps	
												100/160	180/220
Weight	Kg	1720	1740	1760	1780	2080	2190	2270	550	170	120	770	650




**THE LIFTING POINT MUST SUIT THE UNIT'S CENTRE OF GRAVITY
(SEE CHART BELOW).**

POSITION OF CENTRE OF GRAVITY FOR THE BASE MODULE

Models		XG	YG	ZG
		mm	mm	mm
base module	100	1104.5	925	2742
	120			
	140			
	160			
	180	1123	833	2640
	200			
	220			

Approximative length

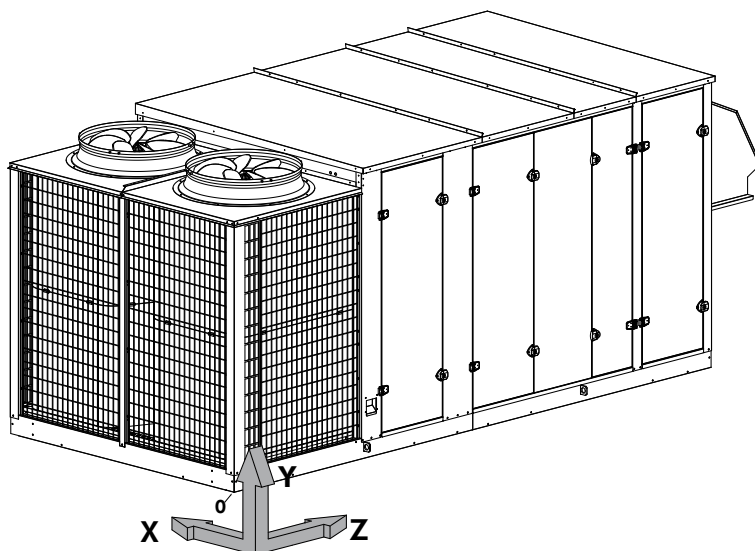

ELECTRICAL SPECIFICATIONS

UNIT WITHOUT HEATING

Models		100		120		140		160	
		PE	GE	PE	GE	PE	GE	PE	GE
Power supply		3+N /400 /50Hz							
Maximum current	A	124		128		152		153	
Total starting current	A	214		236		245		286	
Fuse rating aM	A	160		160		160		160	

Models		180		200		220	
		PE	GE	PE	GE	PE	GE
Power supply		3+N /400 /50Hz					
Maximum current	A	178		207		237	
Total starting current	A	345		392		412	
Fuse rating aM	A	200		250		250	

UNIT WITH HEATING TYPE CH1

Models		100		120		140		160	
		PE	GE	PE	GE	PE	GE	PE	GE
Power supply		3+N /400 /50Hz							
Capacities **	KW	36		63					
Maximum current	A	186		238		262		263	
Total starting current	A	276		346		355		396	
Fuse rating aM	A	200		250		315		315	

Models		180		200		220	
		PE	GE	PE	GE	PE	GE
Power supply		3+N /400 /50Hz					
Capacities **	KW	63					
Maximum current	A	288		317		347	
Total starting current	A	455		502		522	
Fuse rating aM	A	315		315		400	

UNIT WITH HEATING TYPE CH2

Models		100		120		140		160	
		PE	GE	PE	GE	PE	GE	PE	GE
Power supply		3+N /400 /50Hz							
Capacities **	KW	45		105					
Maximum current	A	202		311		335		337	
Total starting current	A	292		419		428		469	
Fuse rating aM	A	250		315		400		400	

Models		180		200		220	
		PE	GE	PE	GE	PE	GE
Power supply		3+N /400 /50Hz					
Capacities **	KW	105					
Maximum current	A	361		371		400	
Total starting current	A	528		576		595	
Fuse rating aM	A	400		400		400	

IMPORTANT

** for all other capacities, please consult us.

A main fuse must mandatorily be provided on the power supply.

- Fuses not supplied
- Cables not supplied

INSTALLATION



The unit is not designed to withstand weights or stresses from adjacent equipment, pipe work or constructions. Any foreign weight or stress on the unit structure could lead to a malfunction or a collapse with dangerous consequences for personnel and property. In such an event, the warranty shall be null and avoid.

PLACE OF INSTALLATION AND REQUIREMENTS

- The building structure must be capable of carrying the weight of the unit during operation.
- The place of installation must not be subject to flooding.
- The ROOFTECH should be installed on a flat, clean surface without any obstacles. The surface area must be sufficient to spread the weight of the unit over the building structure.
- Ensure that the recommended free clearances around the unit are maintained to avoid any risk of malfunctions.
- The installer is responsible for providing the waterproof seal between the building and the ROOFTECH. The installer must be fully versed in the practice of roof mounted equipments and must comply with the recommendations and rules detailed in the Technical Directives.
- In order to avoid risk of condensation and energy losses, all outdoor ducting and piping must be insulated.
- The unit's tightness must not be deteriorated by power supply connections.




The unit supporting base shall be supplied as indicated in the manual. There could be a risk of personal injury or damage to property in the event of the unit being incorrectly supported.

CLEARANCE

The drawing below illustrates the minimum service clearances to be provided around the unit to guarantee access and proper operation. Take particular care not to obstruct the outdoor coil in order to ensure proper air circulation through the appliance.

In addition to the service clearances stated on the dimensions sheet, it is imperative that safe and appropriate access to the unit is provided for repairs and servicing.

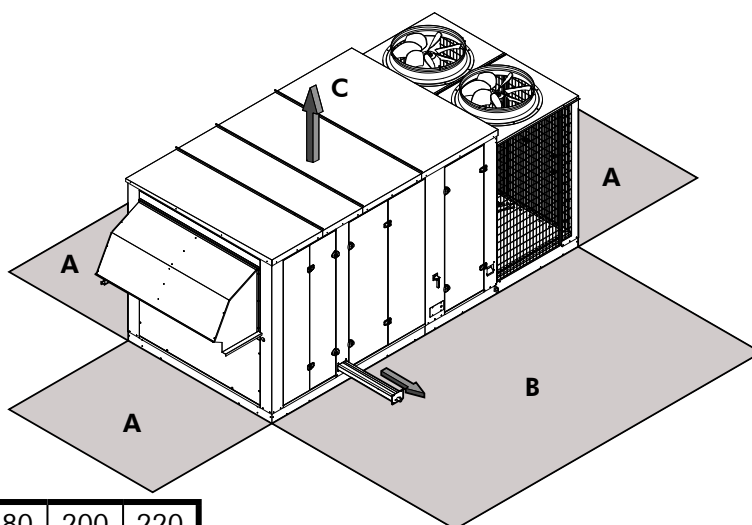

Models		100	120	140	160	180	200	220
A	mm	1500						
B*	mm	1800						
C	mm	3000						

* Removable condensates tray.

UNIT LOCATION



1. It must be high enough above the roof or ground to permit snow allowance and good drainage of water with siphon.
2. Keep duct connections outside the building to a minimum to reduce energy losses.
3. In addition to the service clearances noted above it is essential that provision is made for adequate and safe service access to the appliance.

CONDENSATE DRAIN PAN



Ø 30
L = 30mm

The installer must imperatively supply a siphon.

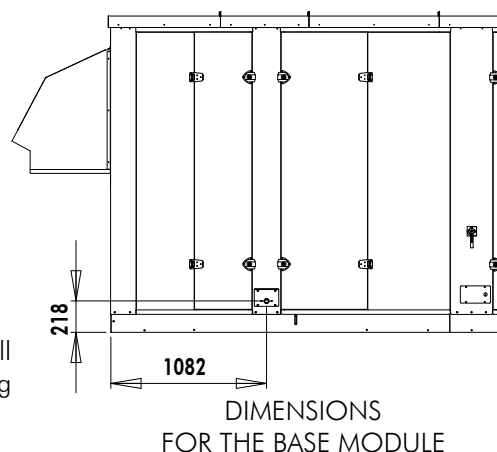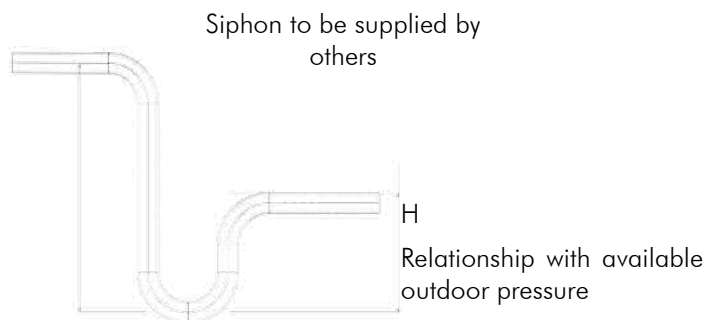

CAUTION

For Heatpump models, where the outdoor temperature is likely to fall below +1°C, provide a system to prevent the siphon from freezing (e.g. heating cord).

ROOF CURB


The main purpose of the roof curb is to provide weatherproof passage, supply and return air down to the building from the ROOFTECH.

In this way, all connections (air, electricity) to the building are not free above the roof. The curb provides a perfect roofing thermal insulation and weight distribution between the ROOFTECH and the building.

The roof curb should be used for a downward configuration at supply and return air. The roof curb guarantees the perfect weathertight sealing between the building structure and the appliance.

Two versions are available:

- Assembled and non-adjustable version
- Non-assembled and non-adjustable version

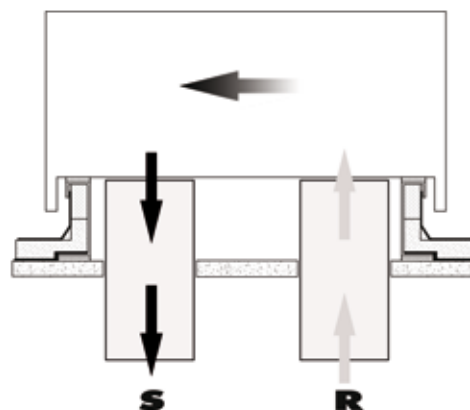


DIMENSIONS

SEE APPENDIX

The frame of the curb receiving the unit must be leveled. The unit must slot perfectly into the roof curb.

POSITIONING OF THE ROOF CURB ON THE ROOF (CUTAWAY VIEW)

- 1 Roof curb
- 2 Rubber seal (supplied with the roof curb)
- 3 Hard vibration-absorbent rubber (option)
- 4 Concrete beam or slab
- 5 Vapour sealing film (supplied by the roofer)
- 6 Roof insulation (supplied by the roofer)
- 7 Sealant roofskin (supplied by the roofer)

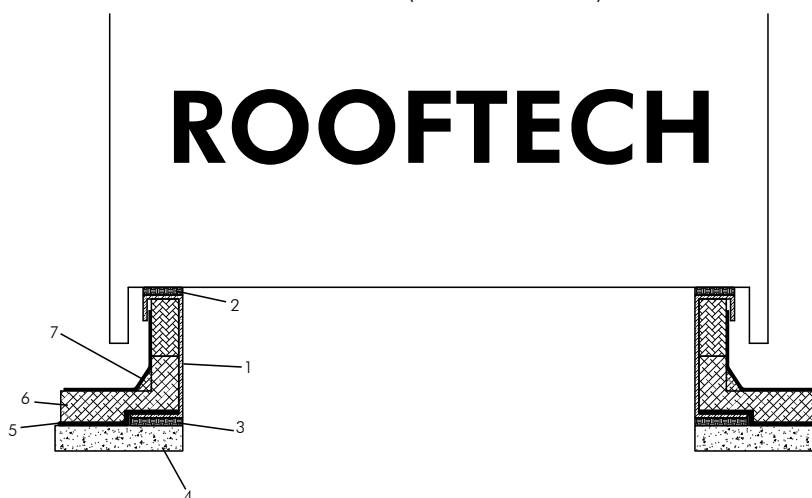

In order to break a thermal bridge between the roof curb and the unit, a seal (N°2) (50 X 5 mm) is supplied with the roof curb. This seal must be glued by the installer on the roof curb to avoid metal to metal contact and reduce eventual vibration transfer.

Once installed and fastened to the roof structure, the outside wall of the curb must be fully integrated in the roof insulation.

The minimum insulation thickness required is 25 mm and the surface must be protected by a bituminous coating (or any other equivalent material) to ensure a perfect weatherproof seal.

CONFIGURATION OF THE UNIT

GENERALITIES

The unit is designed to be connected to a duct work. The duct network pressure loss must be related to available outdoor pressure. Should it not be the case, a discharge protection grille and a device creating sufficient pressure drop must be supplied by the installer to avoid excess current draw generated at the motor (see blower curves in the appendix)

4 discharges and 5 intakes air configurations are available.

For each configuration, note the dimensions of the discharge air duct to be provided before the unit arrives on site. Make sure that it is fireproof and that it does produce toxic smoke in the event of a fire in the building. The interior surfaces must be smooth and cleanable to avoid contamination of the circulated air.

To ensure itself of a good air tightness and to water enters the machine and the air duct.



NEVER DRILL ANY HOLES IN THE AIR TREATMENT ZONE OF THE UNIT. THE MANUFACTURER'S WARRANTY WILL BE CANCELLED IN THE EVENT OF ANY WATER LEAKS RESULTING FROM THE DRILLING OF HOLES IN THE CASING.

SUPPLY AIR

- Downward discharge: S1
- Sideway discharge: S2L or S2R
- Top discharge: S4

AIR INTAKE

- Return air from below: R1
- Return air from the side: R2L or R2R
- Return air from the rear: R3
- Return air from the top: R4

Lower blowing (S1) or lower air intake (R1) require the presence of a roof curb. For other versions, given the unit's weight, analyse the installation to avoid any risk of damage to the bracket on which the unit will be placed.

DUCT OUTLET DIMENSIONS

SEE APPENDIX


ECONOMISER

ECONOMISER - 2 FLAPS

The economiser is a set of two dampers driven by one actuator. The quantity of outdoor air introduced into the building varies according to the room set point and provides energy savings in both modes. Economiser is used to modulate the return and outdoor air volumes. It also provides an antifreeze protection during OFF period by closing the outdoor air dampers



- 1 Filter
- 2 Indoor coil
- 3 Heating
 - 3-A Hot water or Gas
 - 3-B Additional heating
- 4 Centrifugal fan
- 5 Axial fan
- 6 Outdoor coil
- 7 Compressor with reversal cycle valve
- 8 Return air dampers
- 9 Outdoor air dampers

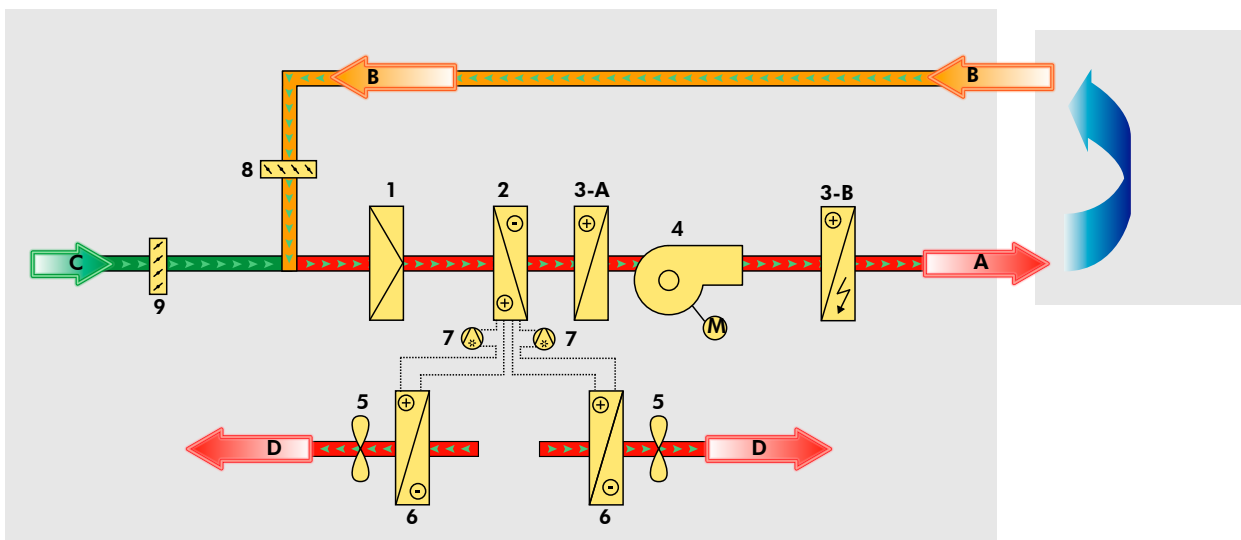


- | | | | |
|---|------------|---|-----------------------------|
| A | Supply air | C | outdoor air |
| B | Return air | D | Outdoor air to outdoor coil |

ECONOMISER - 3 FLAPS

It comprises of a set of 3 dampers with an intake fan that enables on the one hand, to combat the pressure loss from the return ducts and on the other hand, to extract vitiated air from the building in order to avoid excessive pressure build ups when operating in "Free Cooling" mode.

1	Filter	6	Outdoor coil
2	Indoor coil	7	Compressor with reversal cycle valve
3	Heating	8	Return air dampers
	3-A Hot water or Gas	9	Outdoor air dampers
	3-B Additional heating	10	Vitiated air dampers
4	Centrifugal fan	11	Extractor fan
5	Axial fan		

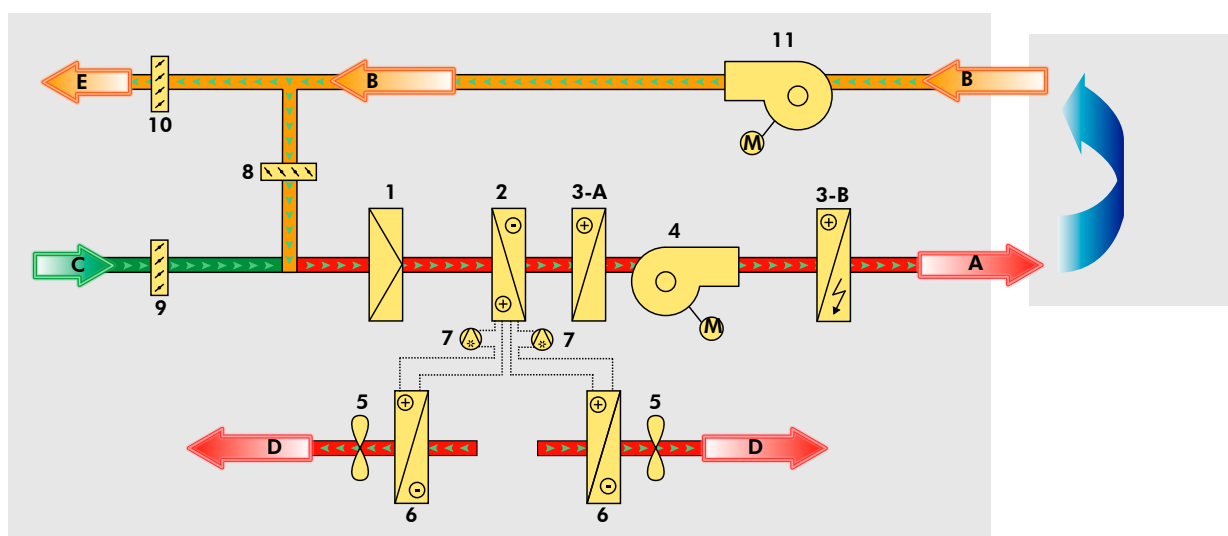

A	Supply air	D	Outdoor air to outdoor coil
B	Return air	E	Vitiated air extracted
C	outdoor air		

ELECTRIC HEAT

The electric coil is located directly at the blower outlet. It is not available in the case of a top discharge version (S4). Air deflector are supplied to guide the stream around the heating elements.

Safety devices (thermostats and pressostats) protect the machine from possible risks of overheating due to insufficient flow around the shielded elements.

WIRING DIAGRAM AND LEGEND

WIRING DIAGRAM

SEE APPENDIX

LEGEND

N 760

POWER SUPPLY

This supply is protected upstream by an FFG general supply fuse holder, to be provided by the installer, in accordance with "ELECTRICAL SPECIFICATIONS". The fuse holder shall be mounted close to the unit.

The electrical installation and the wiring of this unit shall comply with local electrical installation standards.

➤ Three phase 400 V~ + Neutral + Ground:

On terminals L1 ; L2 ; L3 ; N on the QO mains supply circuit switch.

On the ground screw for the earth cable.

WIRING DIAGRAM KEY DESCRIPTIONS

POWER SUPPLY DIAGRAMS:

FFG :	Protective fuses (not supplied)	Q5 :	Blower fan magneto-thermal circuit breaker
XO :	Phase distributor	Q6/7 :	Outdoor fans magneto-thermal circuit breaker
QO :	Mains supply circuit switch	Q8 :	Intake air fan magneto-thermal circuit breaker
KA1 :	Three-phase network control relay (phase sequence and cut-out)	Q9 :	Extractor fan magneto-thermal or magnetic circuit breaker
Q1/2/3/4 :	C1/2/3/4 compressors magneto-thermal circuit breaker	KM5/6/7/8/9 :	Fan power contactors
KM1/2/3/4 :	C1/2/3/4 compressors power circuit contactor	ACS5/8 :	Blower and intake air fan three-phase frequency regulator with RFI filter
C1/2/3/4 :	Compressors	ACS6/7 :	Outdoor fans three-phase frequency regulator with RFI filter
R1/2/3/4 :	C1/2/3/4 compressors crankcase heater	M5 :	Indoor fan motor
FT1 :	Control circuit magneto-thermal circuit breaker	M6/7 :	Outdoor fan motor
F2/4 :	Fuse-terminal + fuse	M8 :	Intake fan motor
FF14 :	Fuse-carrier	M9 :	Extractor fan motor
K14 :	Pump relay (heat recovery pump option)	AS5 :	Motor M5 "Soft start"
F3 :	Differential circuit breaker, power socket and interior lighting	AS8 :	Motor M8 "Soft start"
PO :	230V power socket	Q10/11/12/13 :	Heating elements magnetic circuit breakers
LS :	ON/OFF switch, ROOFTECH interior lighting	KM10/11/12/13 :	Heating elements power contactors
L :	Technical compartment interior lighting	CH.1 :	Small capacity heating option
T1/2/3 :	230V24V AC transformer (25VA)	CH.2 :	Large capacity heating option
FF5 :	Blower fan fuse-carrier	BURNER :	Option burner gas
FF6/7 :	Outdoor fans fuse-carrier		
FF8 :	Intake air fan fuse-carrier		

CONTROL AND REGULATION DIAGRAMS

pCO1 :	CAREL regulation	RAT :	Intake air temperature sensor
pCOe :	Additional CAREL regulation board(Economiser option)	CST1/2 :	Circuits 1 and 2 compressor air intake temperature sensor
PC1/2 :	Converter	OAT :	Outdoor air temperature sensor (option)
CONV1/2 :	Circuits 1 and 2 electronic regulator converters	SAT :	Blown air temperature sensor (option)
EEV1/2 :	Electronic regulator	RAH :	Intake air hygrometry sensor (option)
EP1/2 :	Circuits 1 and 2 low pressure sensors	IAQ :	Intake air quality sensor (option)
Q1/2/3/4 :	C1/2/3/4 compressors additional magneto-thermal circuit breaker	OAQ :	Outdoor air hygrometry sensor (option)
Q5 :	Blower fan additional magneto-thermal circuit breaker	SD :	Smoke detector (option)
Q10/11/12/13 :	Heating elements additional magnetic circuit breaker	ECM :	Economiser dampers motor (option)
OF1/OF2 :	MO1/MO2 motors internal protection	HWV :	Hot water battery valve (option)
FM :	Heating manual reset safety thermostat	CONV3 :	Hot water battery valve converter (option)
FA :	Heating automatic reset safety thermostat	CONV4 :	Variators ACS5/8 order 0-10V converter
KA1 :	Three-phase network control relay (phase sequence and cut-out) contact	HWC :	Anti-freezing, hot water battery warning
HP1/2 :	Circuits 1 and 2 automatic reset high-pressure pressostats	DFA1 :	Clogged filter warning ($\Delta P > 250\text{Pa}$)
LP1/2 :	Circuits 1 and 2 automatic reset low-pressure pressostats	DFA2 :	Clogged bag filter warning ($\Delta P > 500\text{Pa}$)
HPT1/2 :	Circuits 1 and 2 high-pressure transducer	AF :	Air pressostat ($\Delta P < 50\text{Pa}$)
LPT1/2 :	Circuits 1 and 2 low-pressure transducer	ON/OFF :	ON/OFF switch (not supplied)
OCT1/2 :	Circuits 1 and 2 condenser temperature sensor	SWS :	Winter/Summer switch
		KM1/2/3/4 :	C1/2/3/4 compressors power contactor
		KM5/6/7/8/9 :	Fan power contactors
		KM10/11/12/13 :	Heating elements power contactors
		EV1/2 :	Circuits 1 and 2 cycle inversion valve
		KA6/7 :	Circuits 1 and 2 heating demand auxiliary relays

RANGE AND SETTINGS OF THERMAL PROTECTION / NOMINAL INTENSITY OF THE CONTACTORS (CLASSE AC3)

Models	100		120		140		160		180		200		220	
	PE	GE	PE	GE	PE	GE	PE	GE	PE	GE	PE	GE	PE	GE
Q1 Range	20-25A		20-25A		24-32A		24-32A		25-40A		25-40A		25-40A	
Adjustment	21A		22A		25A		25A		30A		30A		40A	
Q2 Range	20-25A		20-25A		24-32A		24-32A		25-40A		25-40A		25-40A	
Adjustment	21A		22A		25A		25A		30A		30A		40A	
Q3 Range	20-25A		20-25A		24-32A		24-32A		25-40A		25-40A		25-40A	
Adjustment	21A		22A		25A		25A		30A		40A		40A	
Q4 Range	20-25A		20-25A		24-32A		24-32A		25-40A		25-40A		25-40A	
Adjustment	21A		22A		25A		25A		30A		40A		40A	
Q5 Range	13-18A		13-18A		20-25A		20-25A		20-25A		24-32A		24-32A	
Adjustment	15A		15A		21.5A		21.5A		21.5A		31A		31A	
Q6 Range	2.5-4A		2.5-4A		2.5-4A		2.5-4A		6-10A		6-10A		6-10A	
Adjustment	3.5A		3.5A		3.5A		3.5A		6.4A		6.4A		6.4A	
Q7 Range	2.5-4A		2.5-4A		2.5-4A		2.5-4A		6-10A		6-10A		6-10A	
Adjustment	3.5A		3.5A		3.5A		3.5A		6.4A		6.4A		6.4A	
Q8 Range	13-18A		13-18A		20-25A		20-25A		20-25A		20-25A		24-32A	
Adjustment	15A		15A		21.5A		21.5A		21.5A		21.5A		31A	
Q9 Range	4-6.3A		4-6.3A		6-10A		6-10A		6-10A		9-14A		9-14A	
Adjustment	4.6A		4.6A		8.4A		8.4A		8.4A		11.2A		11.2A	
Contactor AC3														
K1	25A		25A		32A		32A		40A		40A		40A	
K2	25A		25A		32A		32A		40A		40A		40A	
K3	25A		25A		32A		32A		40A		40A		40A	
K4	25A		25A		32A		32A		40A		40A		40A	
K5	18A		18A		25A		25A		25A		32A		32A	
K6	6A		6A		6A		6A		9A		9A		9A	
K7	6A		6A		6A		6A		9A		9A		9A	
K8	18A		18A		25A		25A		25A		25A		32A	
K9	12A		12A		12A		12A		12A		18A		18A	

COMPRESSORS CRANKCASE HEATER

Models		100	120	140	160	180	200	220
Power	W	90	65	90	65	65	75	75

PRESSOSTATS SETTING

Factory high pressure adjustment 42bars (609.17PSI)

Clogged filter ΔP warning (upstream/downstream filters) > 250 Pa

Airflow detector ΔP warning (upstream/downstream blower) < 50 Pa

ELECTRICAL CONNECTIONS

WARNING



BEFORE CARRYING OUT ANY WORK ON THE EQUIPMENT, MAKE SURE THAT THE ELECTRICAL POWER SUPPLY IS DISCONNECTED AND THAT THERE IS NO POSSIBILITY OF THE UNIT BEING STARTED INADVERTENTLY.

NON-COMPLIANCE WITH THE ABOVE INSTRUCTIONS CAN LEAD TO INJURY OR DEATH BY ELECTROCUTION.

The electrical installation must be performed by a fully qualified electrician, and in accordance with local electrical standards and the wiring diagram corresponding to the unit model.

Any modification performed without our prior authorisation may result in the unit's warranty being declared null and void.

The power supply cable section must be sufficient to provide the appropriate amperage to the unit's main power terminals, at start-up and under full load operating conditions.

The power supply cable shall be selected in accordance with the following criteria:

- 1. Power supply cable length.
- 2. Maximum unit starting current draw – the cables shall supply the appropriate amperage to the unit terminals for starting.
- 3. Power supply cables' installation mode. (do not leave cable weight hang on connecting lugs)
- 4. Cables' capacity to transport the total system current draw.

Starting current and total current draw are indicated on the unit's wiring diagram.

Short circuit protection shall be provided by others. This protection shall comprise fuses or circuit breakers with high breaking capacity, mounted on the distribution board.

If the remote controls include an ambient temperature sensor and/or a room stat with temperature setting, these shall be connected with shielded cable and shall not be installed in the same conduit as the power supply cable to avoid induced voltages and create faults in the unit's operation.

VERY IMPORTANT:

3N~400V-50HZ

The outdoor unit is equipped as standard with a phase sequence and cut-out controller located in the electrical box.

THIS PRODUCT IS EQUIPPED WITH A PHASE SEQUENCE CONTROLLER. THE LED's INDICATE THE FOLLOWING CONDITIONS:

Green LED = 1

Yellow LED = 1

Low voltage supply

The compressor rotation direction is correct

Green LED = 1

Yellow LED = 0

Phase inversion or phase absent (L1)

The compressor and the fans do not start.

Green LED = 0

Yellow LED = 0



Phase absent (L2 or L3)

the compressor and the fans do not start.

The electric connection of range RT is done in a single point on the level of the principal circuit breaker.

Electrical power supply cable should be inserted by the base or on the side of the unit.


In this case, cable holes need to be drilled in the panel located under the proximity switch in relation to the thickness of the power cables. This panel is equipped with a grommet intended for the interconnecting cables between the different units on a same installation.

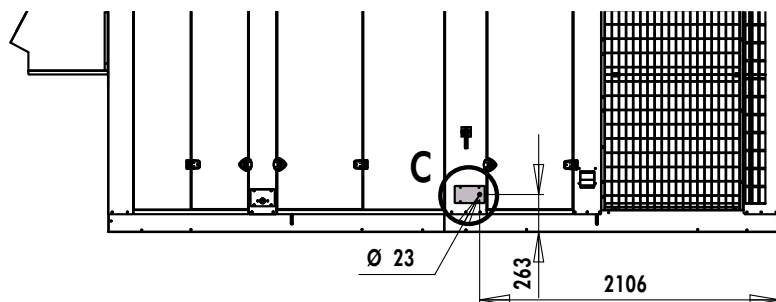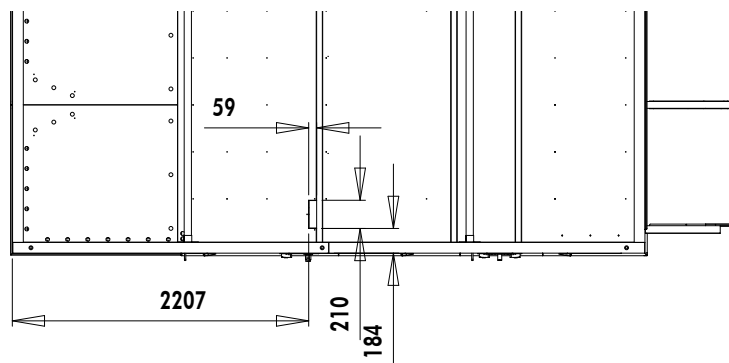

The installer is responsible for ensuring that the cable hole in the panel is sealed properly.

These units are equipped with a local switch used as general terminal board.

The switch can be padlocked.

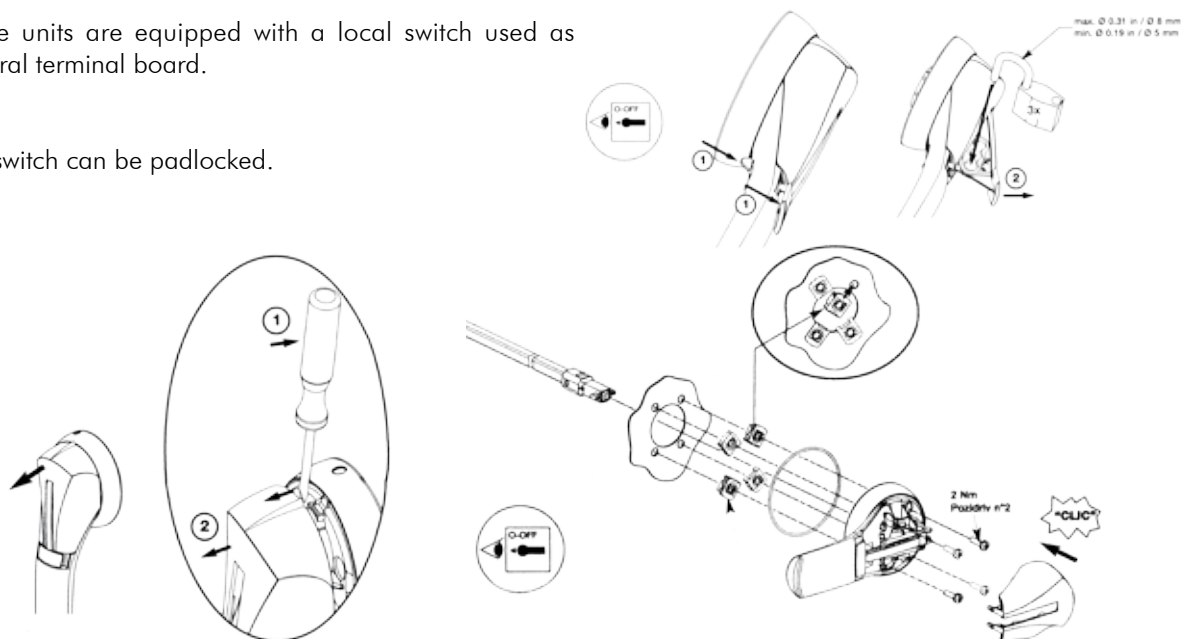

A circuit breaker or fuse holder (not supplied) must be installed on the main power supply of the unit in accordance with the circuit diagram; for the ratings, refer to the electrical specifications.

Maximum electric power
supply cable section:
240mm²
Copper wire cable only



COMMISSIONING

PRE-START CHECK LIST

ELECTRICAL CHECK

1. Electrical installation has been carried out according to unit wiring diagram and the Supply Authority Regulations.
2. size fuses or circuit breaker has been installed at the main switchboard.
3. Supply voltages as specified on unit wiring diagram.
4. All cables are properly identified and tight connected at the unit and check the tightness of all cable connections.
5. the cables and wires are clear of or protected from pipework and sharp edges.


VISUAL CHECK

1. Clearances around unit including outdoor air entry and discharge openings and service accesses.
2. Unit mounted as specified.
3. For loose or missing bolts or screws.
4. For refrigerant leaks in connections and components.

DUCTING


1. Connections flexible type, secure and detachable for service access.
2. Blower drive
 - Pulley adjustment correct for expected air quantity and static pressure.
 - Belt tension correct.
3. Check that the Biloc Sheaves on both the blower shaft and the motor shaft are correctly fitted to the bush and rotate without wobbling.
4. Ensure that the motor is securely bolted to the mounting plate parallel to the blower shaft.
5. Using a string line or straight edge ensure that both pulley grooves are correctly aligned.
6. Improper alignment of the pulleys and belt may cause vibration in the blower drive and result in premature wear and noise.

Belt alignment

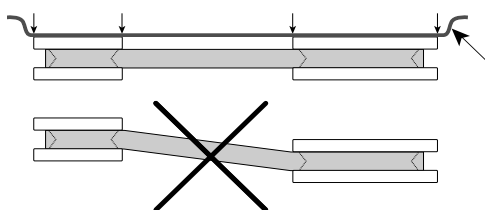

For a quick check, make sure that the small rope touch each end of the pulleys as shown on drawing opposite.

Belt tensioning
10 mm maxi.

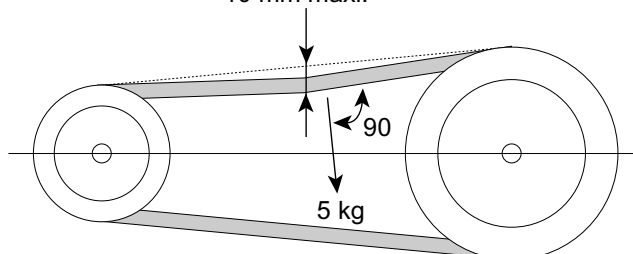

Comment: Some belts are equipped with the DYNAM tension system. The tension is correct when the distance between the two marks is equal to the value indicated on the belt.

AIR BALANCING

A variable pulley is fitted to the motor shaft in order adjust to the blower performance to the pressure drop at the duct work. The pulley must be adjusted when the measured external static pressure and air volume (motor current draw) at the exit of the unit differ from the nominal values at the unit.

CASE N°1:

There is less pressure drop in the ductwork than planned, i.e. motor current draw is higher than nominal and the external pressure is lower than nominal. The slower speed must be reduced to lower the treated airflow and re-establish the air balance point. It is imperative to adjust the pulley, otherwise the motor's internal protection will trigger because of overheating taking the entire unit out of operation.

CASE N°2:

In the opposite case, i.e. the motor current draw is lower and the external pressure measured is higher, this means that the ductwork pressure drop is too high. Enlarge the diameter the motor pulley. This will increase the speed of the blower and the air volume. The replacement with a larger motor may be necessary.



OPERATING CHECK LIST

GENERAL

Cheek for any unusual noises or vibration in the running components, particularly at the main blower.

PHASE ROTATION PROTECTION

If the phase at the power supply are not correct, the phase rotation protection device will prevent the machine from starting.

ELECTRICAL

SET POINTS

1. Set point of compressor current overload relay.
2. Set point of indoor blower motor current overload relay.

NOTE : The outdoor blower motor is equipped with an internal current overload safety device with automatic reset.

OPERATING VOLTAGE:

Recheck voltage at unit supply terminals.

CONTROL

1. Operate system and thermostat switches.
2. Check unit is wired for correct control of blower, cooling and heating modes.
3. Verify all sensor signal, using the controller display.

BLOWER & DRIVE

1. Check that the pulleys on both blower shaft and motor are correctly fastened to the bush and rotate without wobbling.
2. Check the alignment of the pulleys.
3. Cheek externaly the rotation direction of the blower.
4. Static Pressure and Air volum in the supply and return air ducts.
5. The indoor air quantity must be within the application limits of the main blower (see performances curves). The associated static pressure must be such that the motor is operating within its normal amper rating. With all panels in place measure current on each phase of the indoor blower motor using clip-on type ammeter. Compare the amperage to the nameplate full load current.

COMPRESSOR AND REFRIGERATION SYSTEM

1. Make sure that the compressor crankcase heater has been on for at least 12 hours before starting compressor.
2. Running check: Start the compressor. Check for any unusual noise or vibration.
3. Operating Pressures: Operate the unit for at last 20 minutes and ensure that the refrigerant pressures are stabilised, and cheek that they are within the normal operating ranges.
4. Operating Temperature: Check discharge, suction and liquid temperatures.
5. Discharge temperature on cooling cycle should normally not exceed 105°C.
6. Suction superheat should between 5K and 12K.

FINAL CHECK

1. All panels and fan guards are in place and secured.
2. Unit clean and free of remainder installation material.

FINAL TASKS

Place the plugs back on the valves and check that they are properly tightened.

If needed, fix the cables and the pipes on the wall with clamping collars.

Operate the air conditioner in the presence of the user and explain all functions.

Show him how to remove, clean and place back the filters.

IN CASE OF WARRANTY - MATERIAL RETURN PROCEDURE

Material must not be returned without permission of our After Sales Department.

To return the material, contact your nearest sales office and ask for a "return voucher". The return voucher shall be sent with the returned material and shall contain all necessary information concerning the problem encountered.

The return of the part is not an order for replacement. Therefore, a purchase order must be entered through your nearest distributor or regional sales office. The order should include part name, part number, model number and serial number of the unit involved.

Following our personal inspection of the returned part, and if it is determined that the failure is due to faulty material or workmanship, and in warranty, credit will be issued on customer's purchase order. All parts shall be returned to our factory, transportation charges prepaid.

ORDERING SERVICE AND SPARE PARTS ORDER

The part number, the order confirmation and the unit serial number indicated on the name plate must be provided whenever service works or spare parts are ordered.

For any spare part order, indicate the date of unit installation and date of failure. Use the part number provided by our service spare parts, if it not available, provide full description of the part required.

MAINTENANCE



The user is responsible for ensuring that it is in a proper working condition and that technical installation as well as the regular maintenance operations are performed by properly trained technicians and in accordance with the instructions contained in this manual.

REGULAR MAINTENANCE

These units have been designed to require only minimal servicing, thanks to the use of a maximum number of lubricated-for-life components. Nevertheless, certain regular servicing operations are necessary to guarantee optimal system operation.

Servicing must be performed by experienced and qualified personnel only.

WARNING : Isolate unit from main power supply before working on unit.

GENERAL INSPECTION

Carry out a visual inspection of the complete installation in service.

Check the general cleanness of the installation, and check if the condensate evacuations is not blocked, specially on the indoor coil, before the cooling season.

Check the condition of the condensate tray by pulling it out of the casing.

ACCESS PANELS

All the access panels are equipped with progressive tightening handles.



BLOWER DRIVE SYSTEM

blower shaft and motor bearings are of permanently lubricated, sealed type and require no regular maintenance other than a check on their general condition. The blower belt tension should be checked regularly and belt surfaces inspected for cracks or excessive wear.

COILS

The refrigeration system is hermetically sealed and should require no regular maintenance. However, it is recommended to leak test the refrigerant system and check the general operating conditions and control devices on a regular basis. The operating pressures should be checked particularly as they are an excellent guide for maintenance. After any intervention requiring the opening of the refrigerant circuit, the system must be completely vacuum drained by using the 3 take-offs (VP) installed for this purpose (VP) (Refer to the appended refrigerant circuit diagram).

Clean the heat exchanger using a special product for aluminium-copper heat exchangers, and rinse with water. Do not use hot water or steam, as this could cause the pressure of the refrigerant to rise.



Check that the surface of the aluminium fins of the heat exchanger is not damaged by impacts or scratches, and clean with an appropriate tool if necessary.

The air filter located on the air intake must be cleaned or replaced at regular intervals to ensure that unit operate properly,.

A clogged filter causes a reduction in the airflow across the heat exchanger and this reduces the performance output.

The filters located on slide rails upstream of the evaporator enable the filters to be removed from the outside of the unit housing.

ELECTRICAL SECTION

Check that the main power supply cable is not damaged or altered in such a way as to affect the insulation

Check that the interconnecting cables between the two units are not damaged or altered, and that they are correctly connected.

The contact surfaces of relays and contactors should be inspected regularly by an electrician and replaced as judged necessary. On these occasions the control box should be blown out with compressed air to remove any gathering of dust.

Check the earth grounding connection.

CAUTION



BEFORE CARRYING OUT ANY OPERATION ON THE EQUIPMENT, CHECK THAT THE ELECTRICAL POWER SUPPLY IS SWITCHED OFF AND THAT IT CANNOT BE SWITCHED ON INADVERTENTLY.

IT IS RECOMMENDED THAT THE DISCONNECT SWITCH BE PADLOCKED

SERVICING CHECKLIST

CASING

1. Clean the outer panels.

When cleaning aluminium, follow the same requirements as for other metallic surfaces:

- Remove any dirt of mineral or organic origin.
- Do not attack the surface of the metal.

Cleaning and maintenance products must be:

- Compatible with aluminium and its alloys.
- Non toxic for users.
- Non polluting or, failing this, treated prior to disposal to comply with current environmental regulations.

CONDENSATE DRAIN PAN

1. Check that the drainage orifices, conduits and siphon are not blocked.
2. Eliminate all accumulated dirt.
3. Check that no traces of rust are present.

REFRIGERATION CIRCUIT

1. Check the presence of gas leaks.
2. Check that the copper tube or the capillary tube do not rub against any metal or vibrate.
3. Check that the compressors do not generate any abnormal noises or vibrations.
4. Check the compressor discharge temperature.
5. Check that the crankcase heater is energised during the OFF cycle.

INDOOR COILS

1. Clean the fin surfaces as required.
2. Observe the condition of the blower and motors.
3. Clean or replace the filters.


OUTDOOR COIL

1. Check the cleanliness of the fin surfaces.
2. Check the condition of the fan and the fan motor.

PROTECTION DEVICES

1. Check the proper operation of the high pressure protection devices.
2. Clean the smoke detector

Remove any dust that has accumulated on the fins of the sensor head, using a vacuum cleaner or an anti-static cloth.

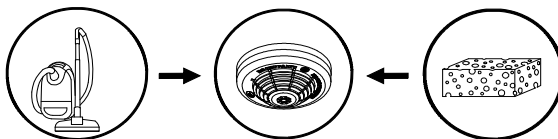

Clean the sensor assembly with a sponge or a slightly damp cloth.

ELECTRICAL EQUIPMENT

1. Check nominal current draw and the condition of the fuses.
2. Check the tightness of the screw terminals.
3. Perform a visual check of the condition of the contacts.
4. Check the tightness of all cable connections.

Replace the panels and add any missing screws.

TROUBLE SHOOTING

Problem	Probable cause	Solution
Unit operates continuously but without performing	Insufficient refrigerant charge.	Top up the refrigerant fluid charge.
	Clogged filter dryer.	Replace the filter.
	Reduced output from one or both circuits.	Check the 4-ways valves and change them if necessary.
Frozen suction line	The overheating setting on the thermostatic expansion valve is too low.	Increase the setting.
	refrigerant charge too low.	Check the refrigerant fluid charge.
Evaporator freezing	Filters clogged.	Replace filters.
	Insufficient charge.	Check the refrigerant fluid charge.
	Evaporator air intake temperature too low.	Check the economiser setting.
Excessive noise	Vibrating pipe work.	Attach the pipe work correctly. Check the pipe work attachments.
	Whistling noise from the thermostatic expansion valve.	Add the refrigerant charge. Check and replace the filter dryer if necessary.
	Noisy compressor.	Check the pressure difference of the 4-ways valves.
	No pressure increase.	Seized bearings. Replace the compressor. Check the tightness of the compressor attachment nuts.
Low oil level in the compressor	Presence of one or several oil or gas leaks in the circuit.	Locate and repair the leaks and add oil.
	Mechanical compressor damage.	Contact an approved Service Centre.
	Crankcase oil heater resistance fault.	Check the electrical circuit and the condition of the resistance. Replace defective parts if necessary.
One or both compressors do not operate.	No power at compressor.	Check the electrical circuit and seek out any grounding and/or short- -circuits. Check the fuses.
	High pressure pressostat activated.	Reset the pressostat from the control panel and restart the unit. Check for dirty condenser coil or defective fan.
	Control circuit fuse blown.	Check the control circuit and look for any grounding and/or short-circuits. Replace the fuses.
	Connection problem.	Check the tightness of all the electrical connection terminals.
	Electrical circuits thermal protection cuts in.	Check the operation of the control and safety devices. Check amperage of compressor and discharge pressure.
	Incorrect wiring.	Check the wiring of the control and safety devices.
	Mains voltage too low.	Check the power line.If the problem is due to the network, inform the Electricity Company.
	Compressor motor short-circuited.	Check the continuity of the motor winding.
	Compressor seized.	Replace the compressor.
Low pressure pressostat being activated	Presence of a leak.	Identify and repair the leak.
	Insufficient refrigerant fluid charge.	Add refrigerant charge.
	Low air volume on evaporator.	check the blower and duct.
High pressure pressostat being activated	Incorrect operation of the high pressure pressostat.	Check the operation of the pressostat. Replace it if required.
	Outlet valve partially closed.	Open the valve. Replace it if required.
	Non-condensable particles in the circuit.	Bleed the circuit.
	Condenser fan(s) not operating.	Check the wiring and the motors. Repair and replace if required.
Liquid line too hot	Insufficient refrigerant charge.	Locate and eliminate the causes of charge losses and top up the refrigerant fluid charge.
Liquid line frozen	Clogged filter dryer.	Replace the filter cartridge.

Problem	Probable cause	Solution
Fans do not operate	Electrical circuit problems.	Check the connections.
	Internal circuit thermal cut-out activated.	Contact an approved Service Centre.
Fan surging	Duct network pressure too low.	Generate an additional pressure loss (refer to aeraulic curves).
Reduced output in both Heating and Cooling mode	Compressor operating fault.	Contact an approved Service Centre.
	Low indoor air volume.	Check filter, blower and duct.
	Outdoor coil dirty.	Clean the coil.
	Insufficient refrigerant charge.	Add refrigerant charge.
Electric heater is not operating	No power supply.	Check the main fuse and the auxiliary fuses.
	Heater circuit open (overheat).	Check the air flow or filter.

APPENDIX
ANNEXE
ANLAGE
ALLEGATO
ANEXO

APPENDIX

DIMENSIONS.....	III
RTC 100 - 120 - 140 - 160 - 180 - 200 - 220.....	III
RTC 100 - 120 - 140 - 160	VII
RTC 180 - 200 - 220	IX
ROOFT CURB / RTC 100 - 120 - 140 - 160.....	XI
ROOFT CURB ERP / RTC 100 - 120 - 140 - 160	XII
DUCT OUTLET DIMENSIONS	XIII
S1	XIII
S2	XIII
S4	XIV
R1	XIV
R2	XV
R3	XV
R4	XVI

REFRIGERANT CIRCUIT DIAGRAM	XVII
RTC 100 - 120 - 140 - 160 - 180 - 200 - 220.....	XVIII
WIRING DIAGRAM.....	XIX
CONTROL.....	XXI
POWER	XXIX
AERAILIC ADJUSTMENT (WITHOUT OPTION)..	XXXVI
RTC 100.....	XXXVI
RTC 120 - 140 - 160	XXXVIII
RTC 180 - 20 - 220	XL

ANNEXE

DIMENSIONS.....	III
RTC 100 - 120 - 140 - 160 - 180 - 200 - 220.....	III
RTC 100 - 120 - 140 - 160	VII
RTC 180 - 200 - 220	IX
COSTIERE / RTC 100 - 120 - 140 - 160.....	XI
COSTIERE ERP / RTC 100 - 120 - 140 - 160	XII
DIMENSIONS DEPART DE GAINES	XIII
S1	XIII
S2	XIII
S4	XIV
R1	XIV
R2	XV
R3	XV
R4	XVI

SCHEMA DU CIRCUIT FRIGORIFIQUE.....	XVII
RTC 100 - 120 - 140 - 160 - 180 - 200 - 220.....	XVIII
SCHEMAS ELECTRIQUES.....	XIX
COMMANDE.....	XXI
PUISSANCE	XXIX
CARACTERISTIQUES AERAILIQUES	
(SANS OPTION)	XXXVI
RTC 100.....	XXXVI
RTC 120 - 140 - 160	XXXVIII
RTC 180 - 20 - 220	XL

ANLAGE

ABMESSUNGEN.....	III
RTC 100 - 120 - 140 - 160 - 180 - 200 - 220.....	III
RTC 100 - 120 - 140 - 160	VII
RTC 180 - 200 - 220	IX
DACHRAHMEN / RTC 100 - 120 - 140 - 160.....	XI
DACHRAHMEN ERP / RTC 100 - 120 - 140 - 160.....	XII
ABMESSUNGEN DER KANALABGÄNGE	XIII
S1	XIII
S2	XIII
S4	XIV
R1	XIV
R2	XV
R3	XV
R4	XVI

KÄLTEKREISLAUFDIAGRAMM.....	XVII
RTC 100 - 120 - 140 - 160 - 180 - 200 - 220.....	XVIII
STROMLAUFPLANS	XIX
STEUERUNG.....	XXI
LEISTUNG	XXIX
REGELUNG DES LÜFTERSYSTEMS	
(OHNE OPTION).....	XXXVI
RTC 100.....	XXXVI
RTC 120 - 140 - 160	XXXVIII
RTC 180 - 20 - 220	XL

ALLEGATO

DIMENSIONI	III
RTC 100 - 120 - 140 - 160 - 180 - 200 - 220.....	III
RTC 100 - 120 - 140 - 160	VII
RTC 180 - 200 - 220	IX
SCANALATURA PERIMETRALE / RTC 100 - 120 - 140 - 160.....	XI
SCANALATURA PERIMETRALE ERP / RTC 100 - 120 - 140 - 160.....	XII
DIMENSIONI TELLE USCITE DI CONDOTTA	XIII
S1	XIII
S2	XIII
S4	XIV
R1	XIV
R2	XV
R3	XV
R4	XVI

SCHEMA DEL CIRCUITO REFRIGERANTE.....	XVII
RTC 100 - 120 - 140 - 160 - 180 - 200 - 220.....	XVIII
SCHEMA ELETTRICO.....	XIX
COMANDO	XXI
POTENZA	XXIX
REGOLAZIONE DEL SISTEMA DI TRATTAMENTO	
DELL'ARIA (SENZA OPZIONE)	XXXVI
RTC 100.....	XXXVI
RTC 120 - 140 - 160	XXXVIII
RTC 180 - 20 - 220	XL

ANEXO

DIMENSIONES.....	III
RTC 100 - 120 - 140 - 160 - 180 - 200 - 220.....	III
RTC 100 - 120 - 140 - 160	VII
RTC 180 - 200 - 220	IX
PETO / RTC 100 - 120 - 140 - 160.....	XI
PETO ERP / RTC 100 - 120 - 140 - 160	XII
DIMENSIONES DE LAS SALIDAS DE CONDUCTOS	XIII
S1	XIII
S2	XIII
S4	XIV
R1	XIV
R2	XV
R3	XV
R4	XVI

ESQUEMA DEL CIRCUITO FRIGORÍFICO.....	XVII
RTC 100 - 120 - 140 - 160 - 180 - 200 - 220.....	XVIII
ESQUEMA ELECTRICO	XIX
MANDO.....	XXI
POTENCIA.....	XXIX
AJUSTE DEL ISTEMA AEROLICO	
(SIN OPCIÓN).....	XXXVI
RTC 100.....	XXXVI
RTC 120 - 140 - 160	XXXVIII
RTC 180 - 20 - 220	XL

DIMENSIONS

DIMENSIONS


ABMESSUNGEN

DIMENSIONI




DIMENSIONES

RTC 100 - 120 - 140 - 160 - 180 - 200 - 220



BASE MODULE
MODULE DE BASE
GRUNDMODUL
MODULO DI BASE
MÓDULO BÁSICO

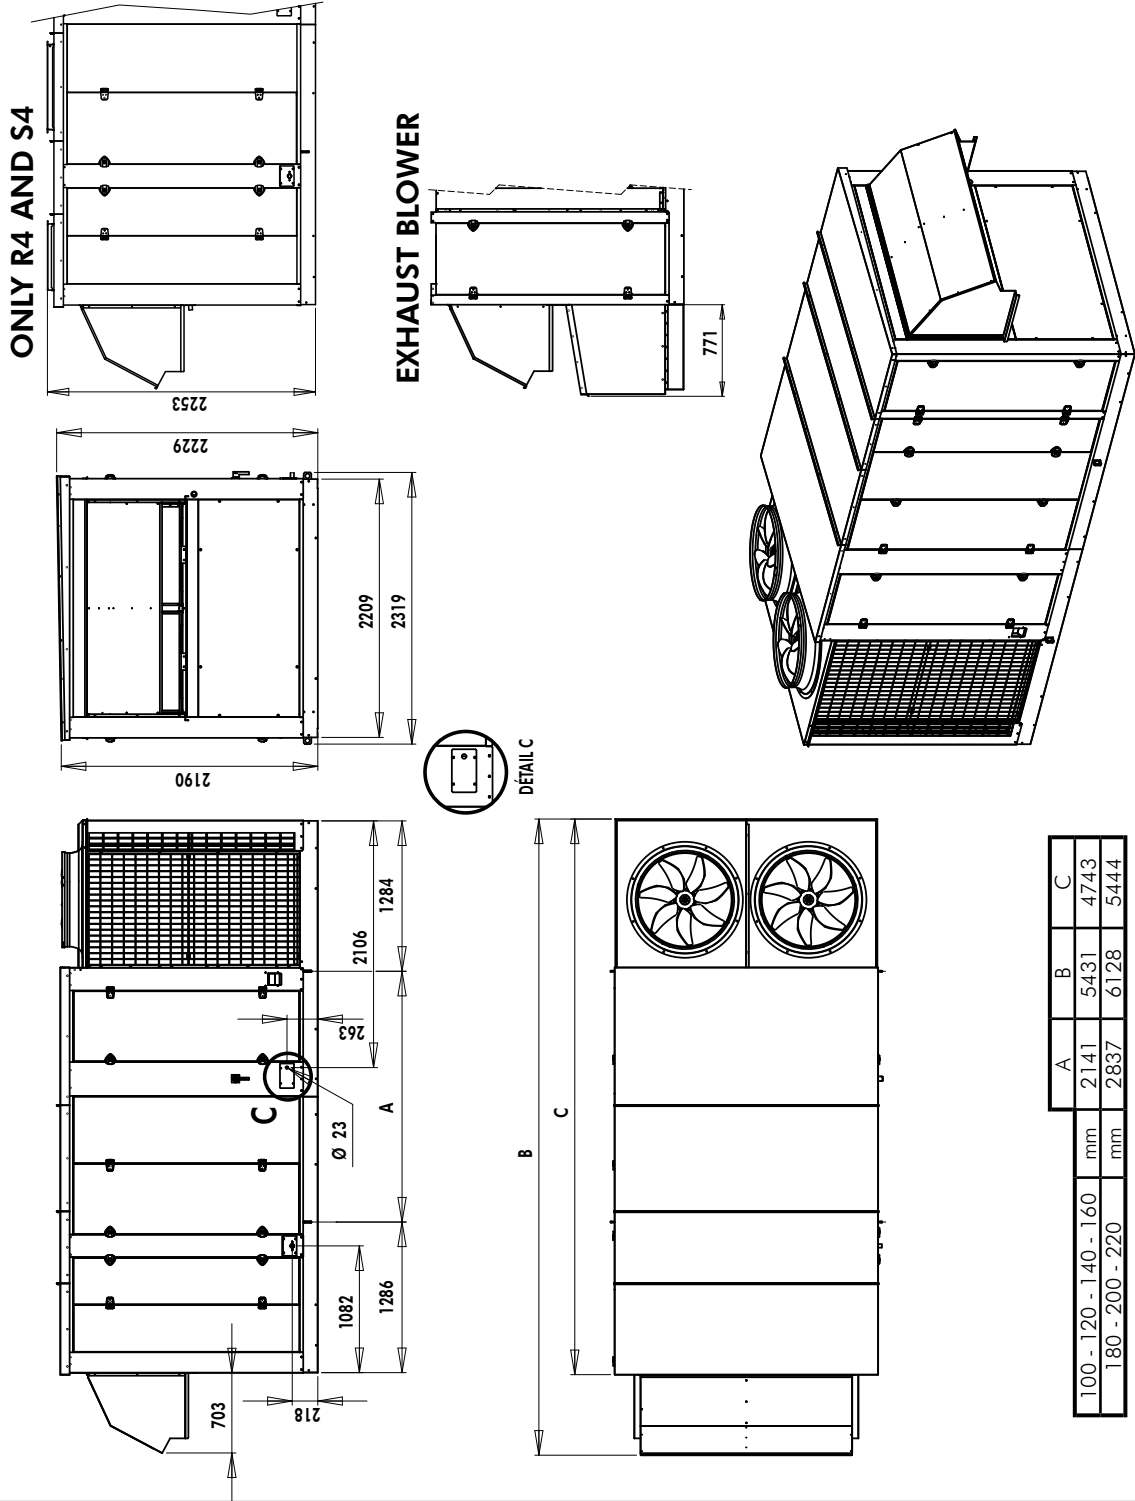

BASE MODULE WITH EU7 FILTER
MODULE DE BASE AVEC FILTRE EU7
GRUNDMODUL MIT FILTER EU7
MODULO DI BASE CON FILTRO EU7
MÓDULO BÁSICO CON FILTRO EU7

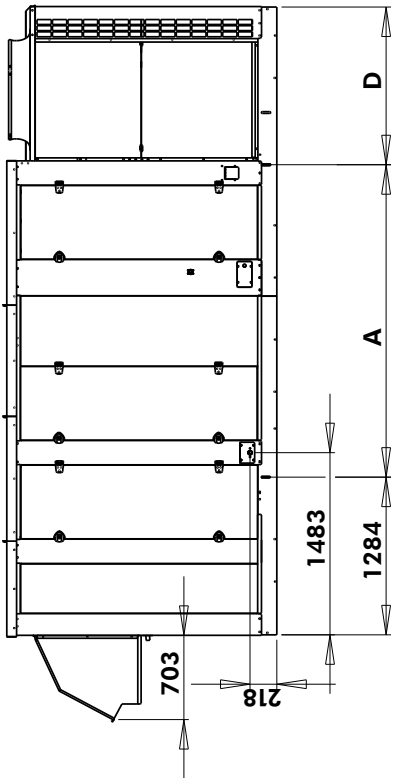
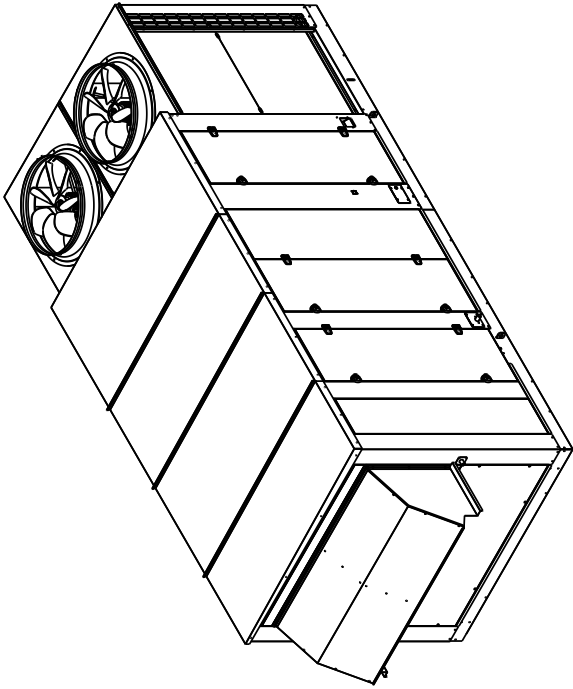
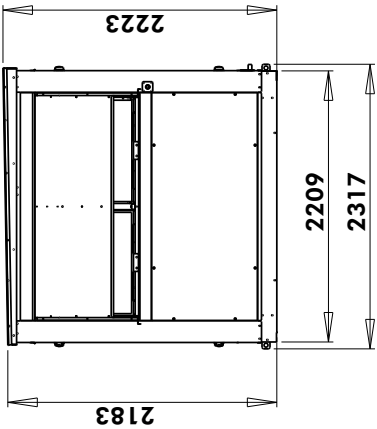


EXHAUST BLOWER

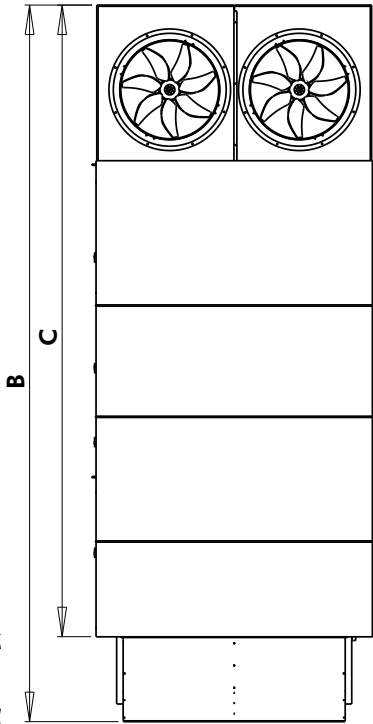
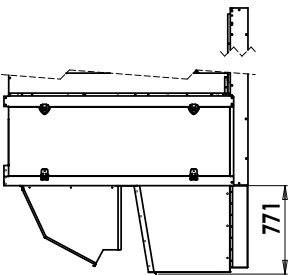


	A	B	C	D
100 - 120 - 140 - 160	2544	5834	5142	1284
180 - 200 - 220	3039	6531	5843	1487

BASE MODULE WITH BURNER GAS
MODULE DE BASE AVEC BRULEUR GAZ
GRUNDMODUL MIT GASBRENNER
MODULO DI BASE CON BRUCIATORE GAS
MÓDULO BÁSICO CON QUEMADOR GAS

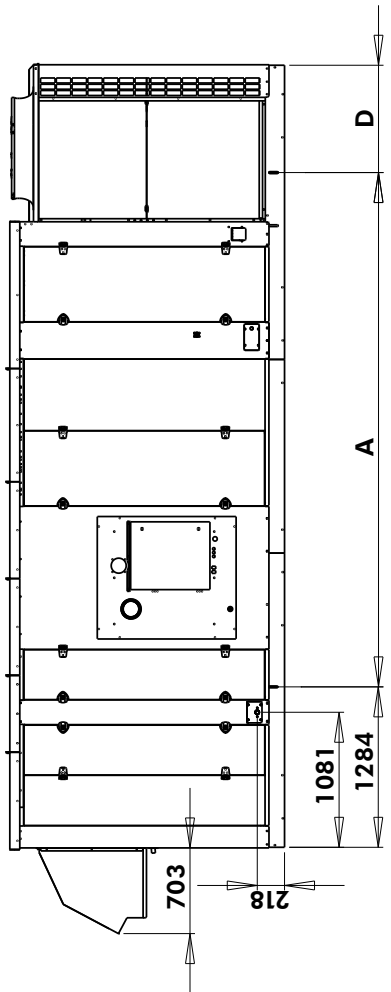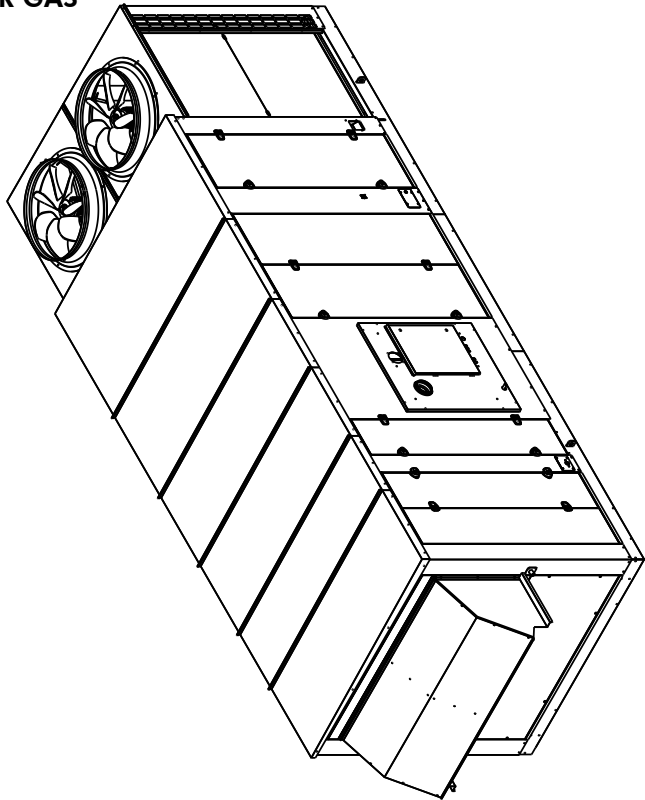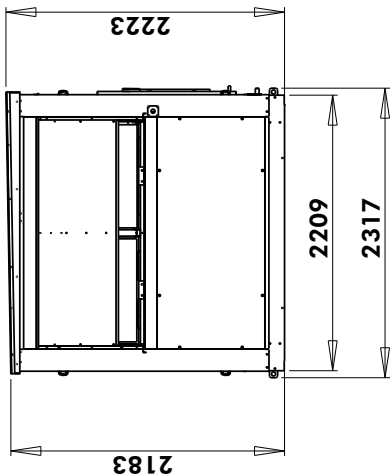


EXHAUST BLOWER

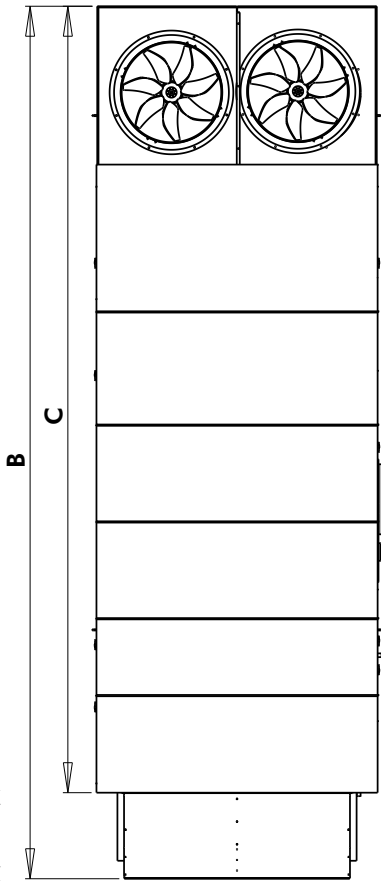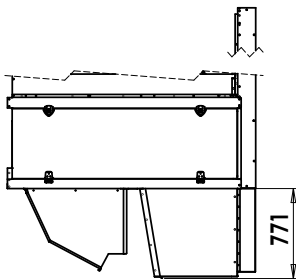

	A	B	C	D
100 - 120 - 140 - 160	mm	4116	6982	6293
180 - 200 - 220	mm	4186	7682	6993
				859
				1487


APPENDIX / ANNEXE / ANLAGE / ALLEGATO / ANEXO

BASE MODULE WITH EU7 FILTER AND BURNER GAS
MODULE DE BASE AVEC FILTRE EU7 ET BRULEUR GAZ
GRUNDMODUL MIT FILTER EU7 UND GASBRENNER
MODULO DI BASE CON FILTRO EU7 E BRUCIATORE GAS
MÓDULO BÁSICO CON FILTRO EU7 Y QUEMADOR GAS

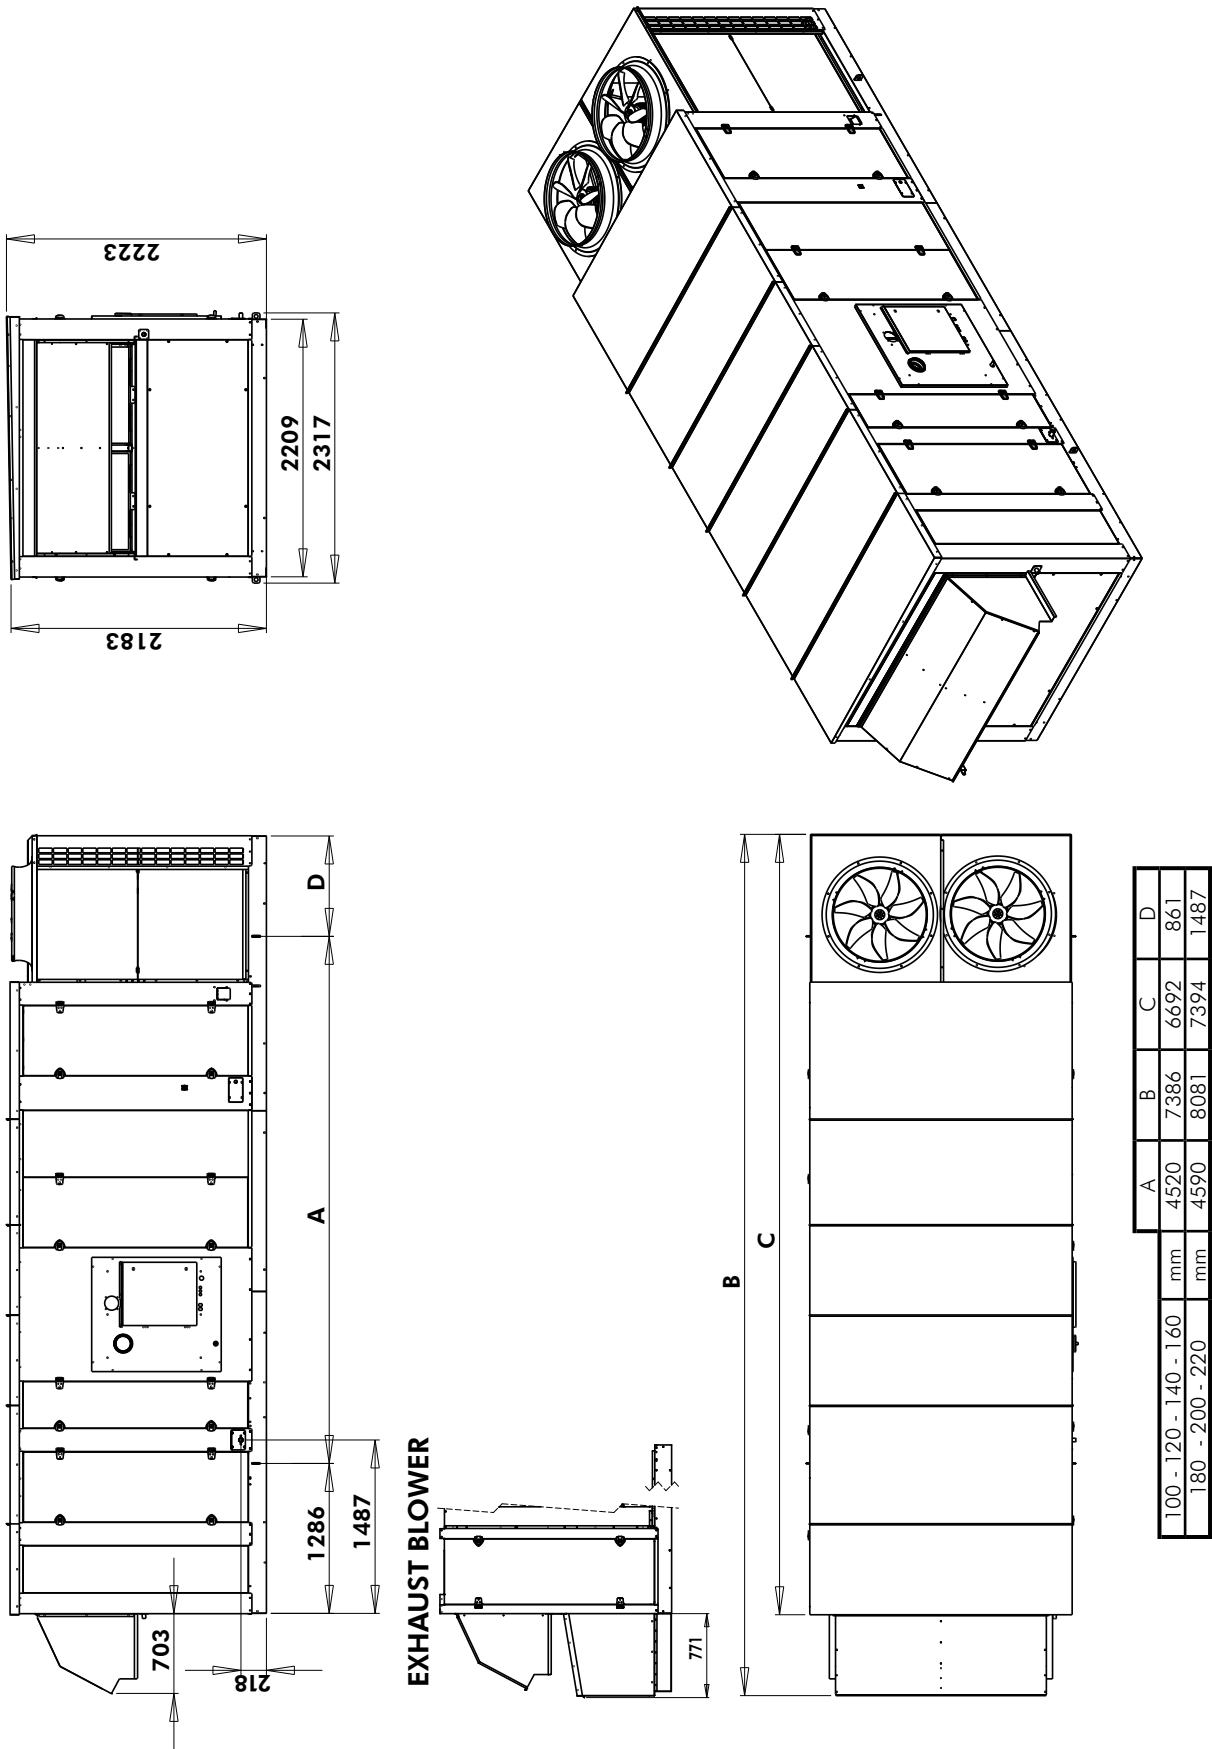


RTC 100 - 120 - 140 - 160

BASE MODULE 3 FLAPS WITH OR WITHOUT EU7 FILTER
 MODULE DE BASE 3 VOILETS AVEC OU SANS FILTRE EU7
 GRUNDMODUL 3 SCHIEBER MIT ODER OHNE FILTER EU7
 MODULO DI BASE 3 SPORTELLI CON O SENZA FILTRO EU7
 MÓDULO BÁSICO 3 LAMAS CON O SIN FILTRO EU7

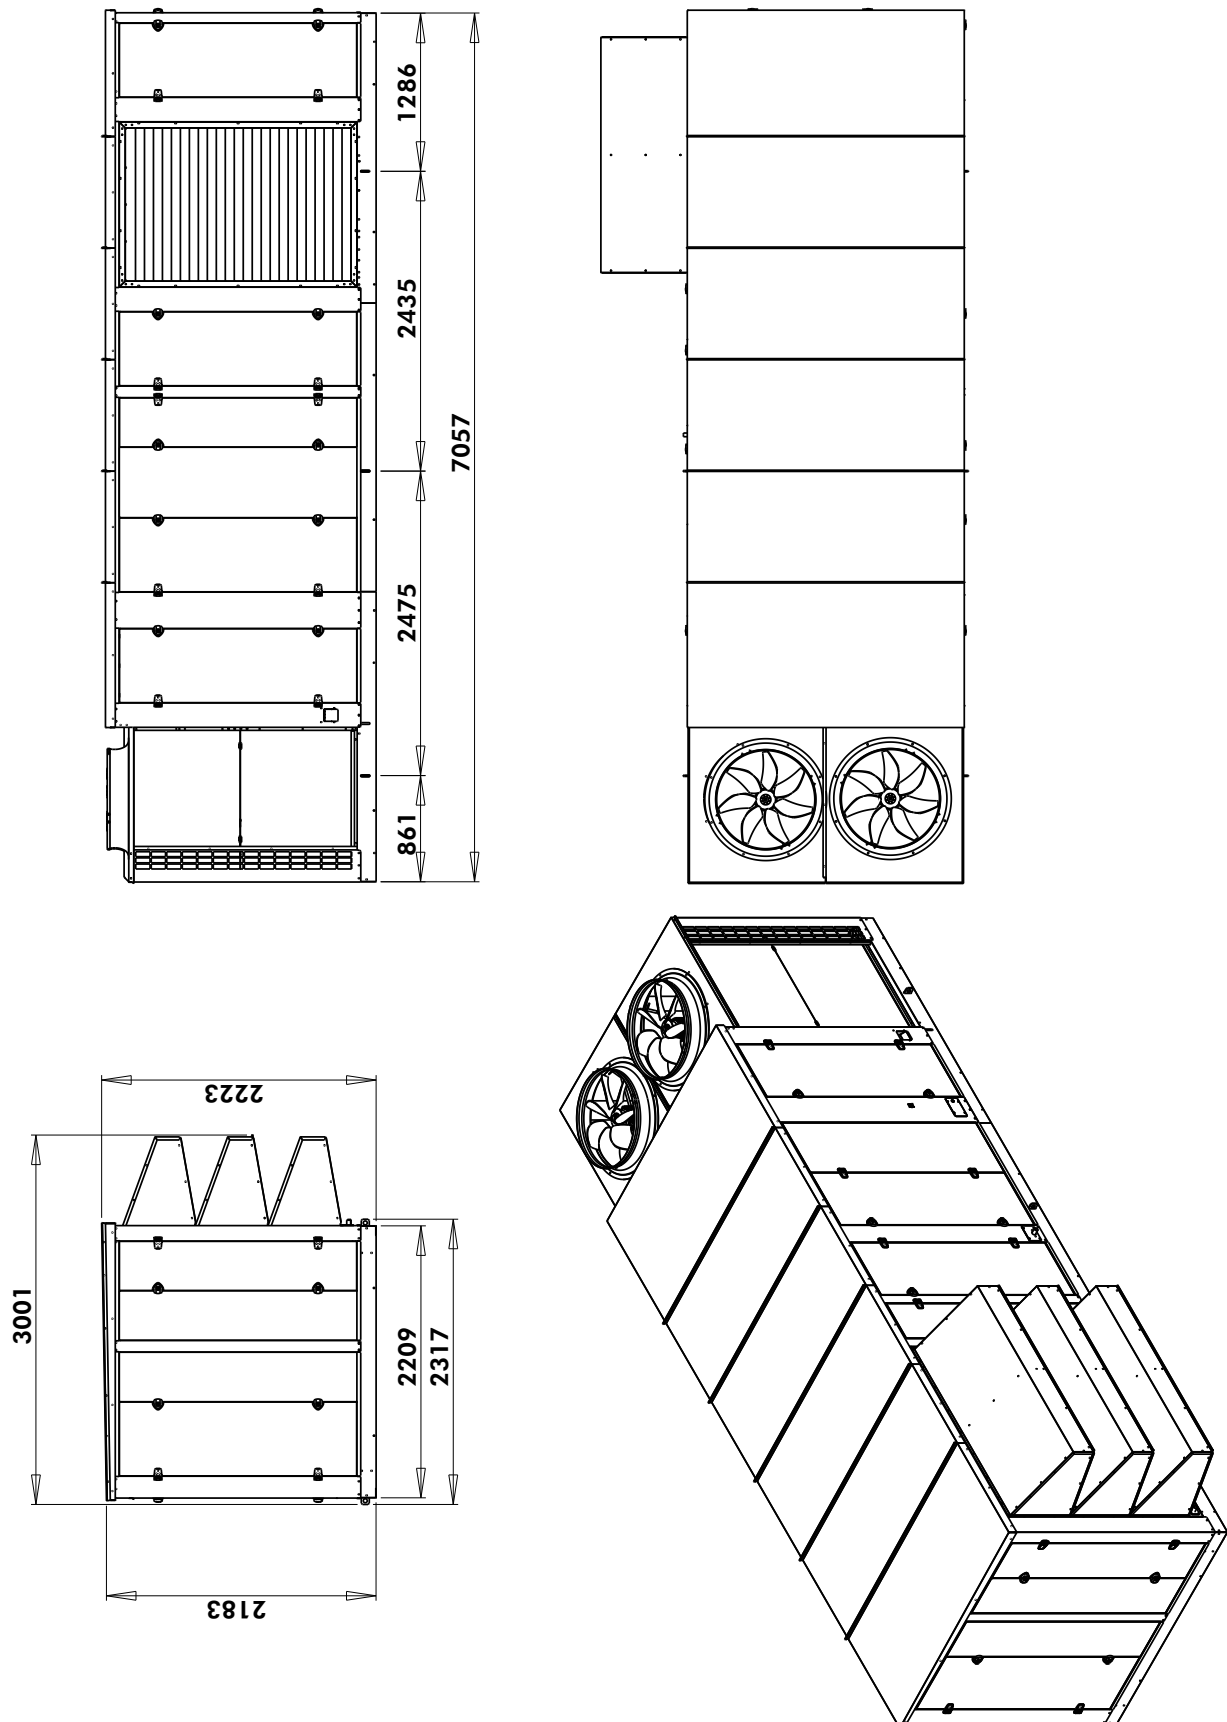





APPENDIX / ANNEXE / ANLAGE / ALLEGATO / ANEXO

BASE MODULE 3 FLAPS WITH OR WITHOUT EU7 FILTER AND BURNER GAS
 MODULE DE BASE 3 VOILETS AVEC OU SANS FILTRE EU7 ET BRULEUR GAZ
 GRUNDMODUL 3 SCHIEBER MIT ODER OHNE FILTER EU7 UND GASBRENNER
 MODULO DI BASE 3 SPORTELLI CON O SENZA FILTRO EU7 E BRUCIATORE GAS
 MÓDULO BÁSICO 3 LAMAS CON O SIN FILTRO EU7 Y QUEMADOR GAS

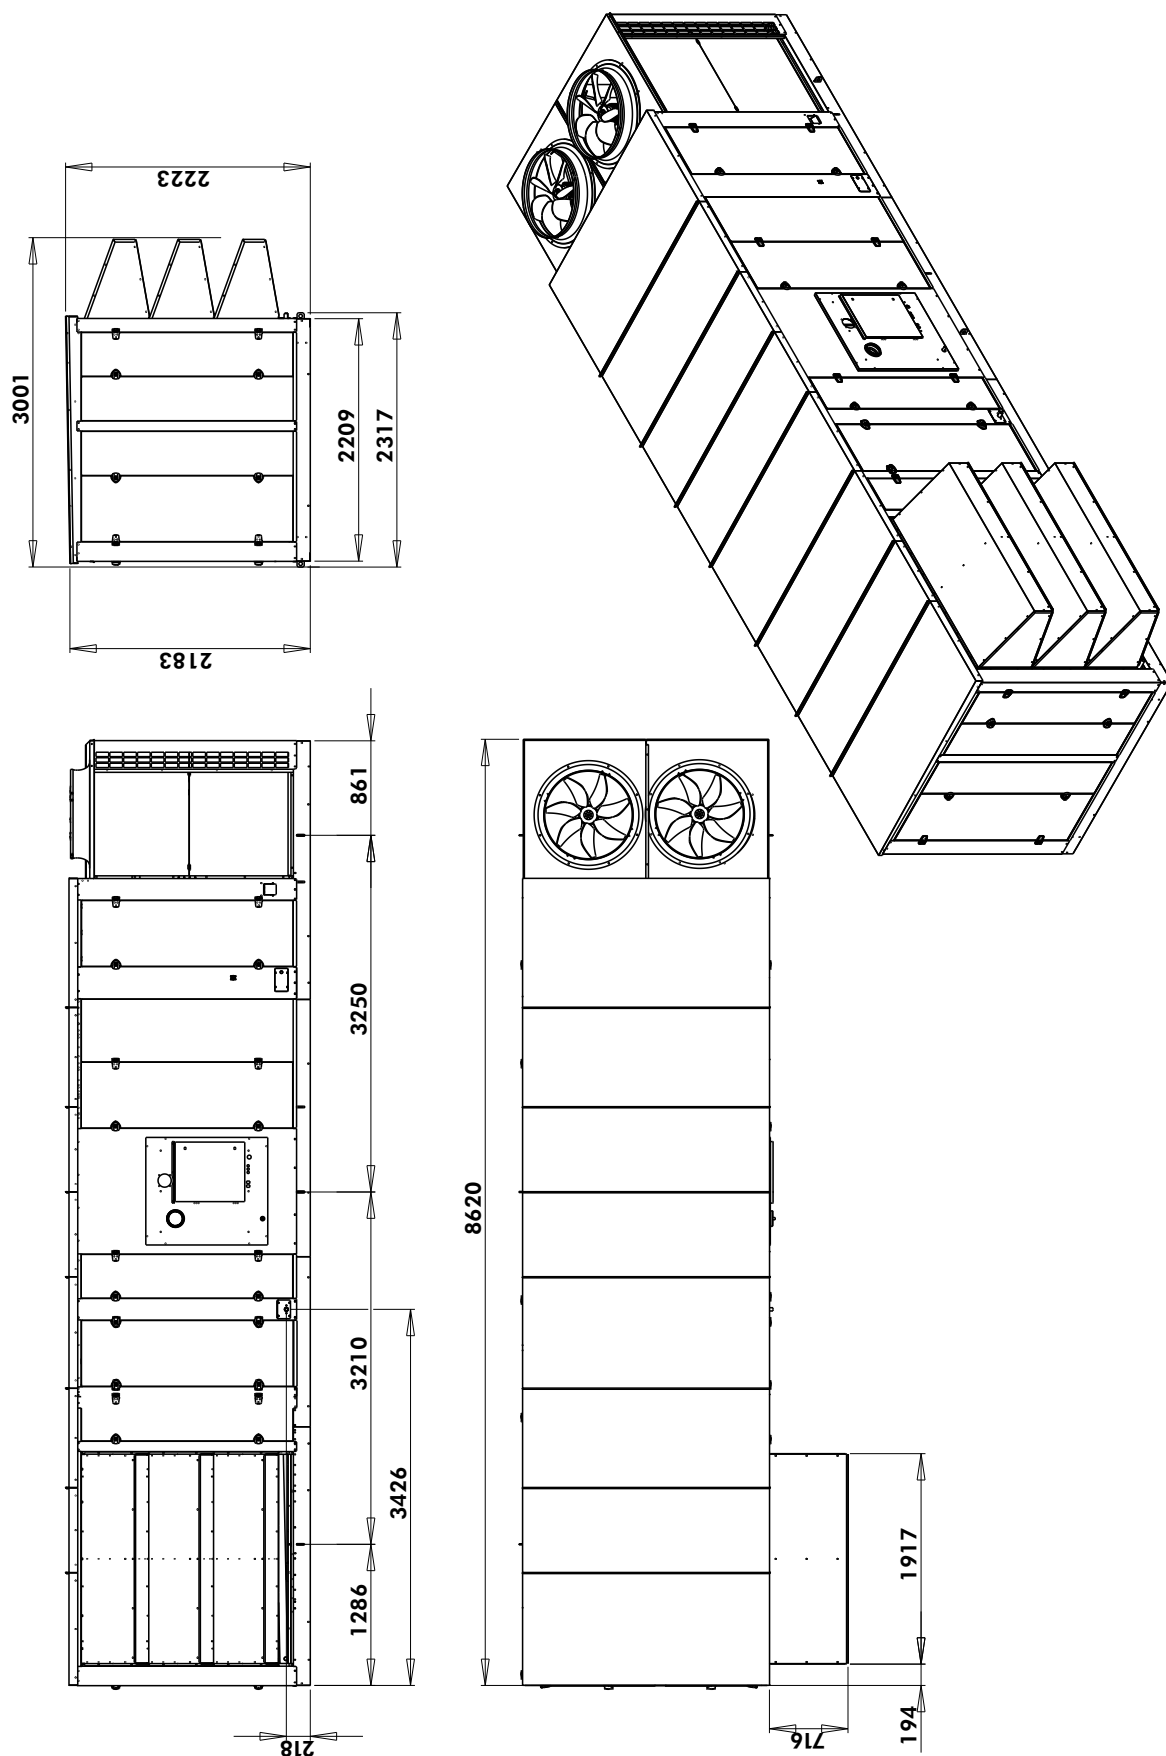


RTC 180 - 200 - 220

BASE MODULE 3 FLAPS WITH OR WITHOUT EU7 FILTER
 MODULE DE BASE 3 VOILETS AVEC OU SANS FILTRE EU7
 GRUNDMODUL 3 SCHIEBER MIT ODER OHNE FILTER EU7
 MODULO DI BASE 3 SPORTELLI CON O SENZA FILTRO EU7
 MÓDULO BÁSICO 3 LAMAS CON O SIN FILTRO EU7

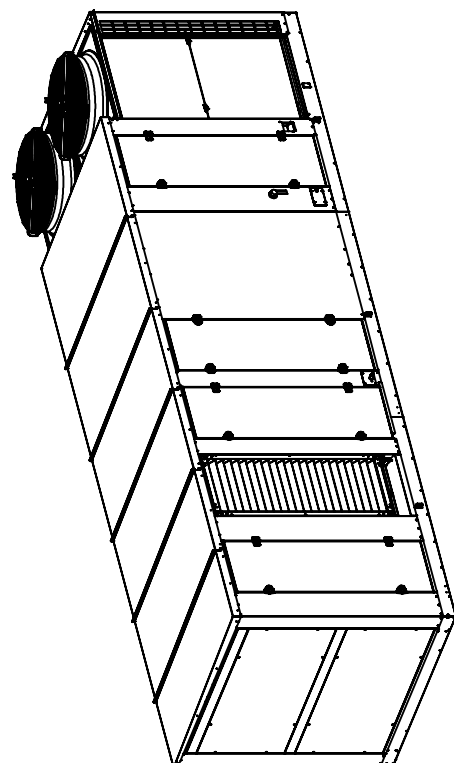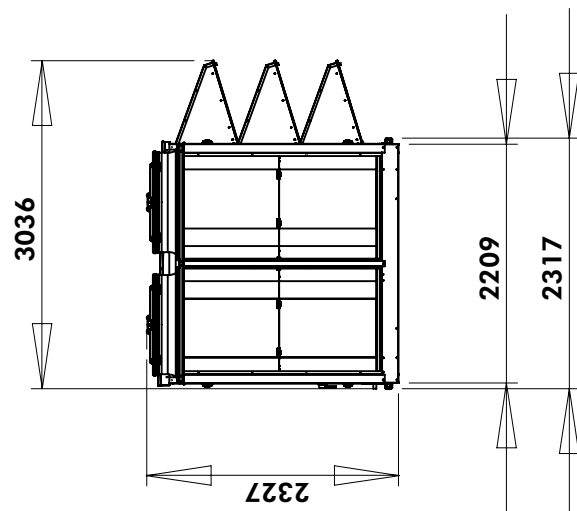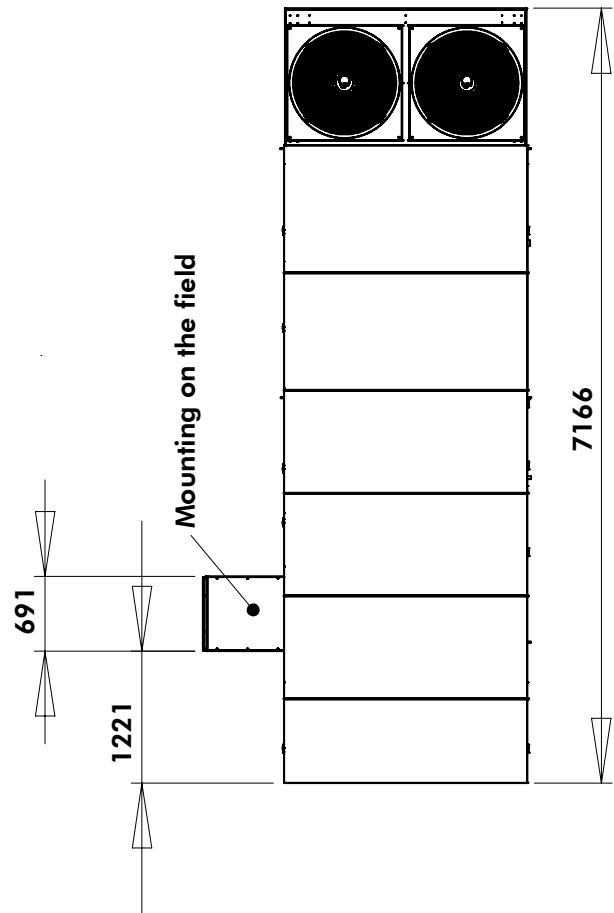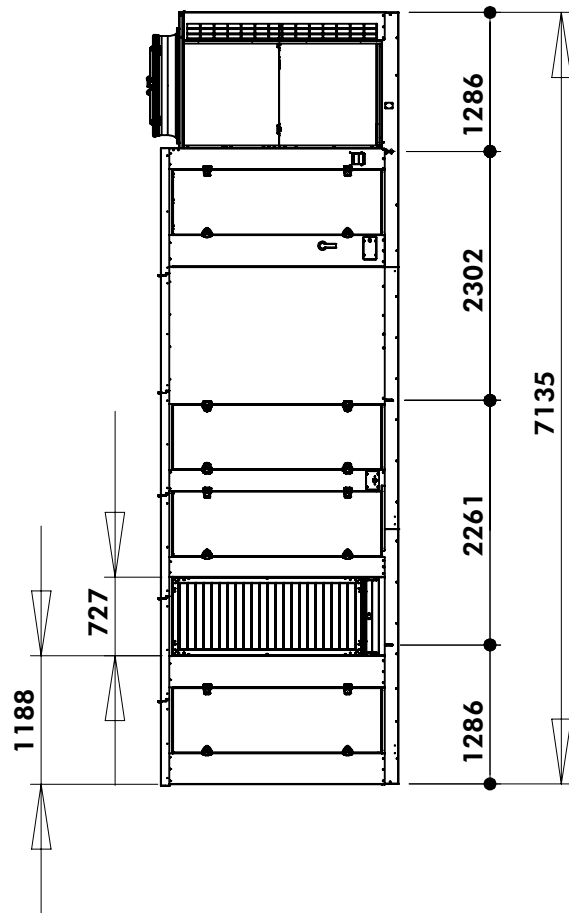


APPENDIX / ANNEXE / ANLAGE / ALLEGATO / ANEXO

BASE MODULE 3 FLAPS WITH OR WITHOUT EU7 FILTER AND BURNER GAS
 MODULE DE BASE 3 VOILETS AVEC OU SANS FILTRE EU7 ET BRULEUR GAZ
 GRUNDMODUL 3 SCHIEBER MIT ODER OHNE FILTER EU7 UND GASBRENNER
 MODULO DI BASE 3 SPORTELLI CON O SENZA FILTRO EU7 E BRUCIATORE GAS
 MÓDULO BÁSICO 3 LAMAS CON O SIN FILTRO EU7 Y QUEMADOR GAS

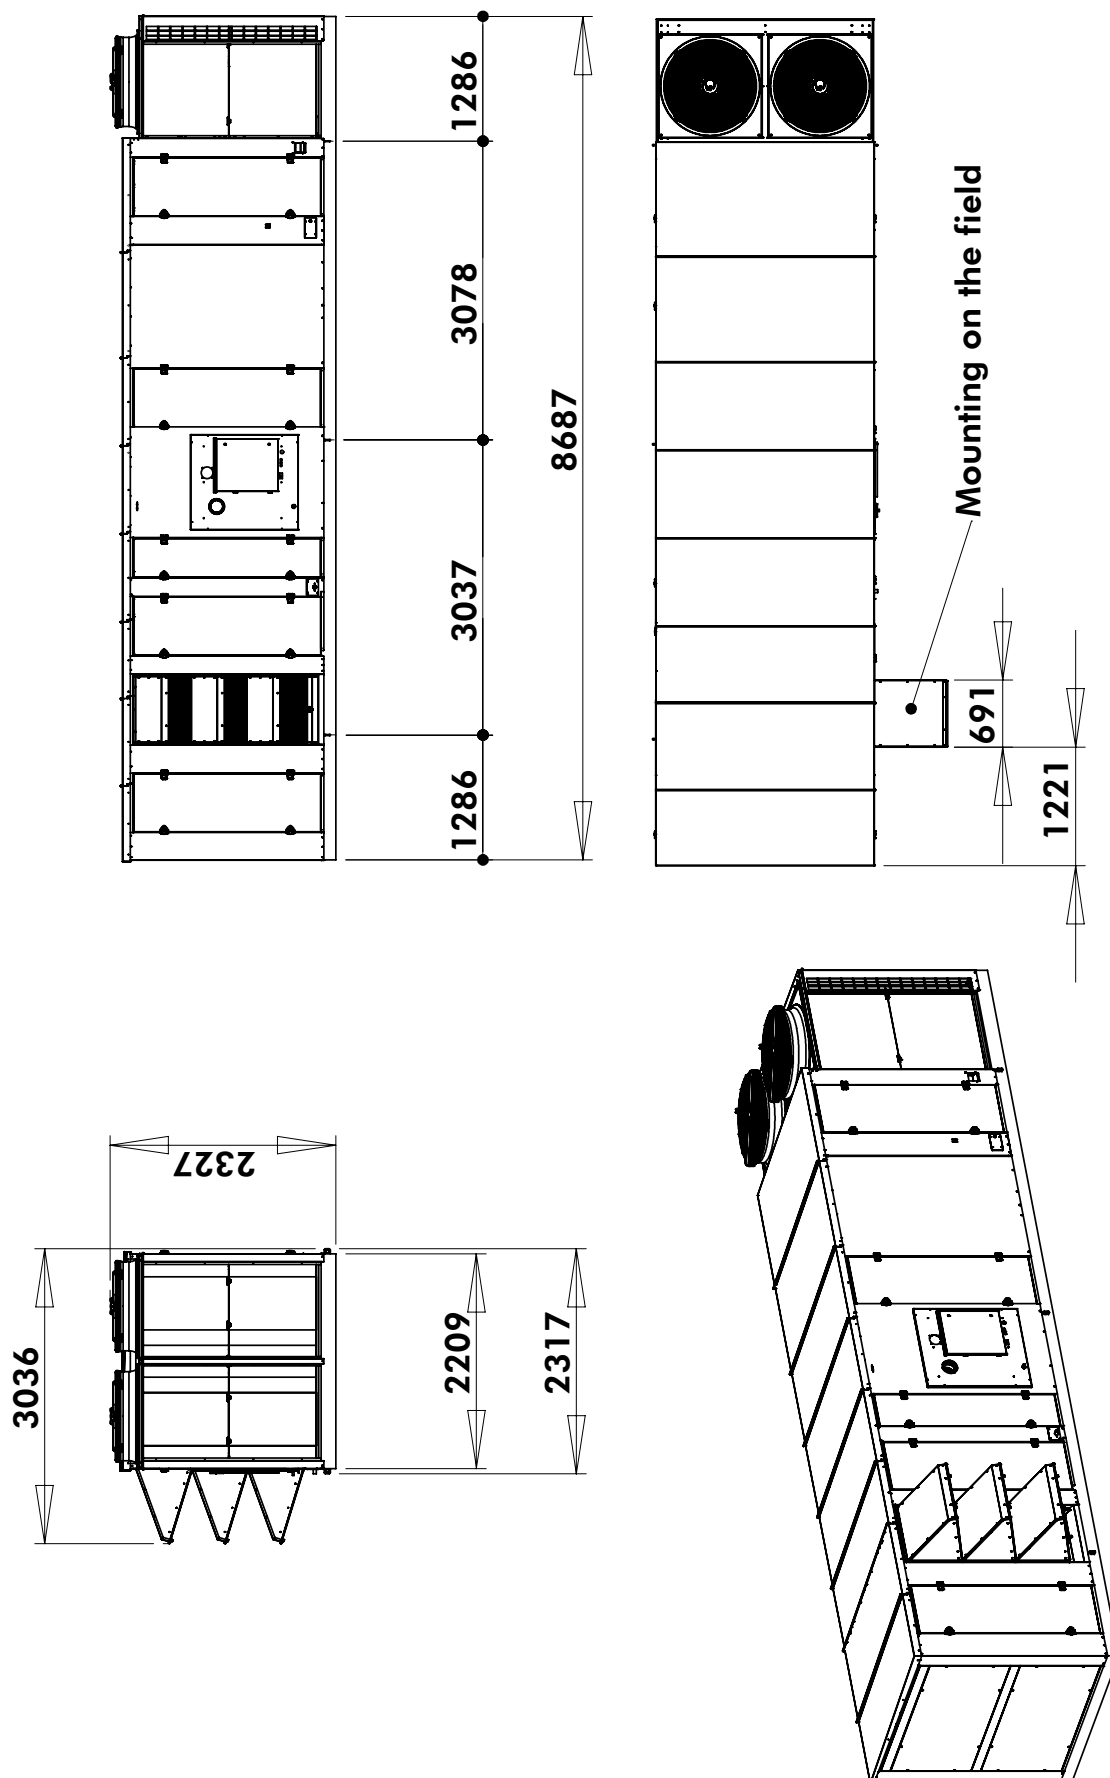

ROOFT CURB - BASE MODULE RTC 100/120/140/160
COSTIERE - MODULE DE BASE RTC 100/120/140/160
DACHRAHMEN - GRUNDMODUL RTC 100/120/140/160
SCANALATURA PERIMETRALE - MODULO DI BASE RTC 100/120/140/160
PETO - MÓDULO BÁSICO RTC 100/120/140/160

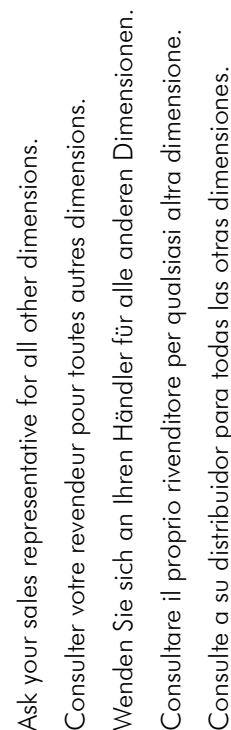

APPENDIX / ANNEXE / ANLAGE / ALLEGATO / ANEXO


ROOFT CURB ERP - BASE MODULE RTC 100/120/140/160

COSTIERE ERP - MODULE DE BASE RTC 100/120/140/160

DACHRAHMEN ERP - GRUNDMODUL RTC 100/120/140/160

SCANALATURA PERIMETRALE ERP - MODULO DI BASE RTC 100/120/140/160

PETO ERP - MÓDULO BÁSICO RTC 100/120/140/160

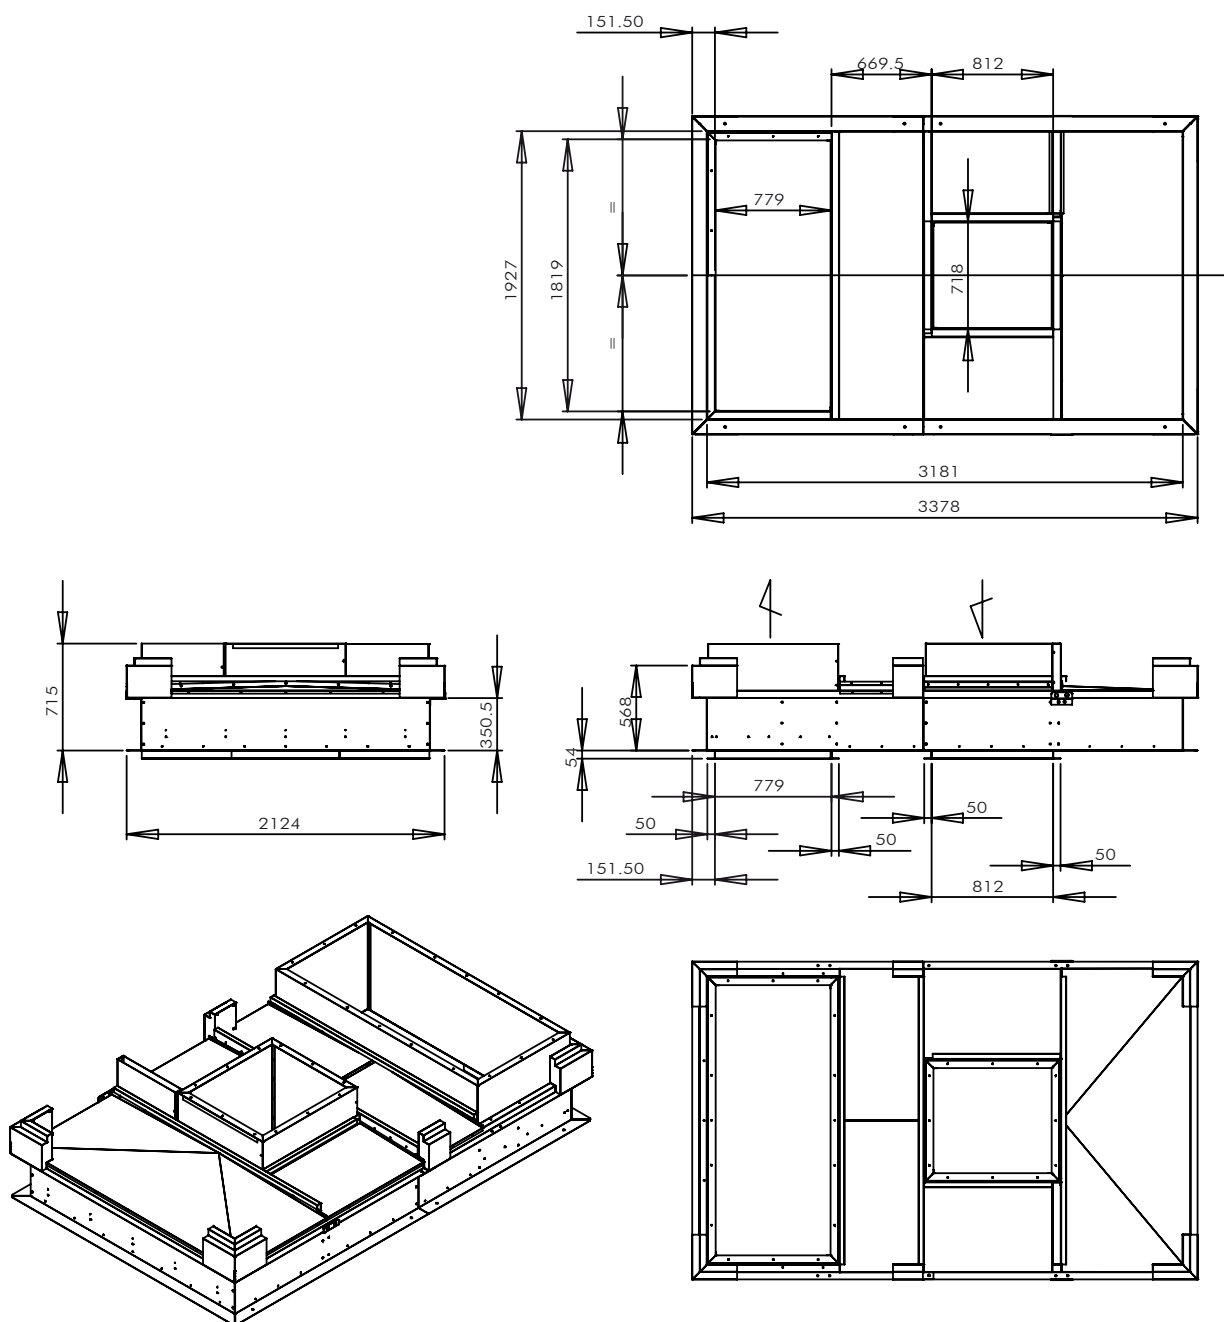

DUCT OUTLET DIMENSIONS


DIMENSIONS DEPART DE GAINES

ABMESSUNGEN DER KANALABGÄNGE


DIMENSIONI TELLE USCITE DI CONDOTTA

DIMENSIONES DE LAS SALIDAS DE CONDUCTOS

S1

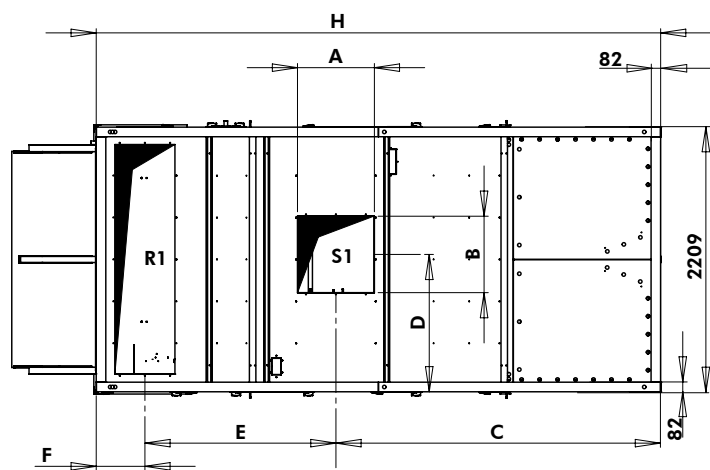


		A	B
100	mm	638	638
120 - 140 - 160	mm	726	726
180 - 200 - 220	mm	898	898

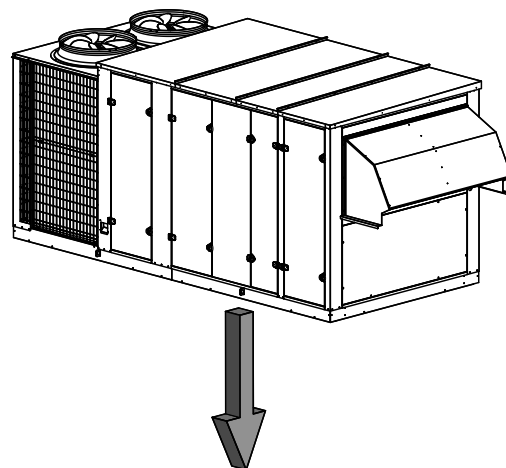


			C	D	E	F	H
100	BASE MODULE	mm	2711	1104.5	1595	406.5	4712
100	BASE MODULE + EU7 FILTER	mm	2711	1104.5	2000	403.5	5115
120	BASE MODULE + BURNER GAS	mm	2711	1104.5	3145	406.5	6292
140	BASE MODULE + BURNER GAS + EU7 FILTER	mm	2711	1104.5	3552	403.5	6666
160	BASE MODULE 3 FLAPS WITH OR WITHOUT EU7 FILTER	mm	2711	1104.5	3777	568.5	7057
160	BASE MODULE 3 FLAPS WITH OR WITHOUT EU7 FILTER + BURNER GAS	mm	2711	1104.5	5327	568.5	8606
180	BASE MODULE	mm	2949	1326.5	2054	406.5	5409
180	BASE MODULE + EU7 FILTER	mm	2949	1326.5	2457	406.5	5811
200	BASE MODULE + BURNER GAS	mm	2949	1326.5	3604	406.5	6960
220	BASE MODULE + BURNER GAS + EU7 FILTER	mm	2949	1326.5	4010	406.5	7362
220	BASE MODULE 3 FLAPS WITH OR WITHOUT EU7 FILTER	mm	2949	1326.5	3525	666	7135
220	BASE MODULE 3 FLAPS WITH OR WITHOUT EU7 FILTER + BURNER GAS	mm	2949	1326.5	5076.5	666	8687


S2

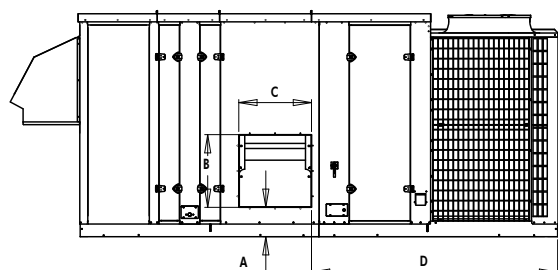

		A	B	C	D
100	mm	548	643	643	2467
120 - 140 - 160	mm	289	717	717	2427
180 - 200 - 220	mm	383.5	901	901	2457

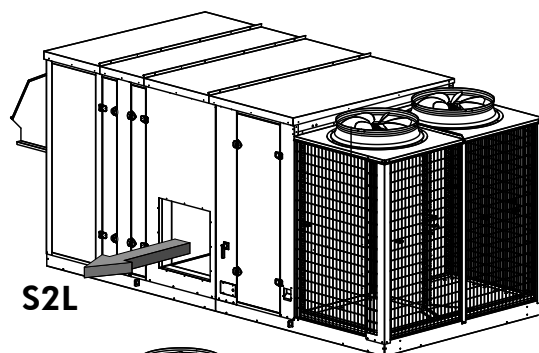


S2L

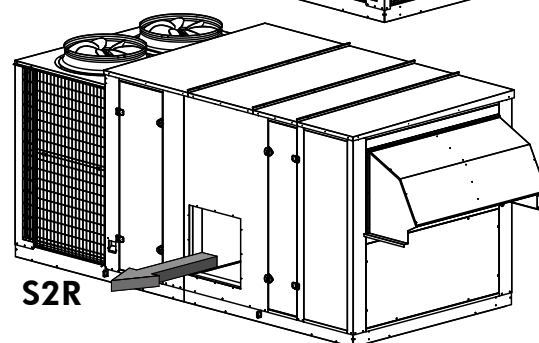


S2R



S4

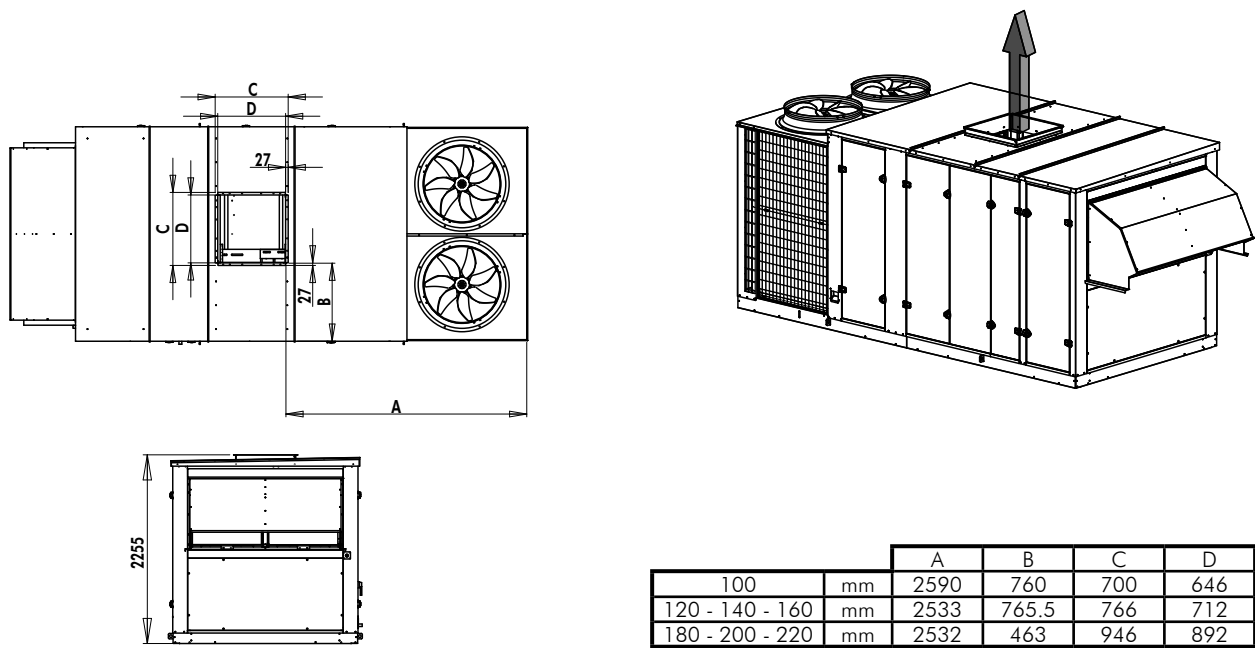



R1

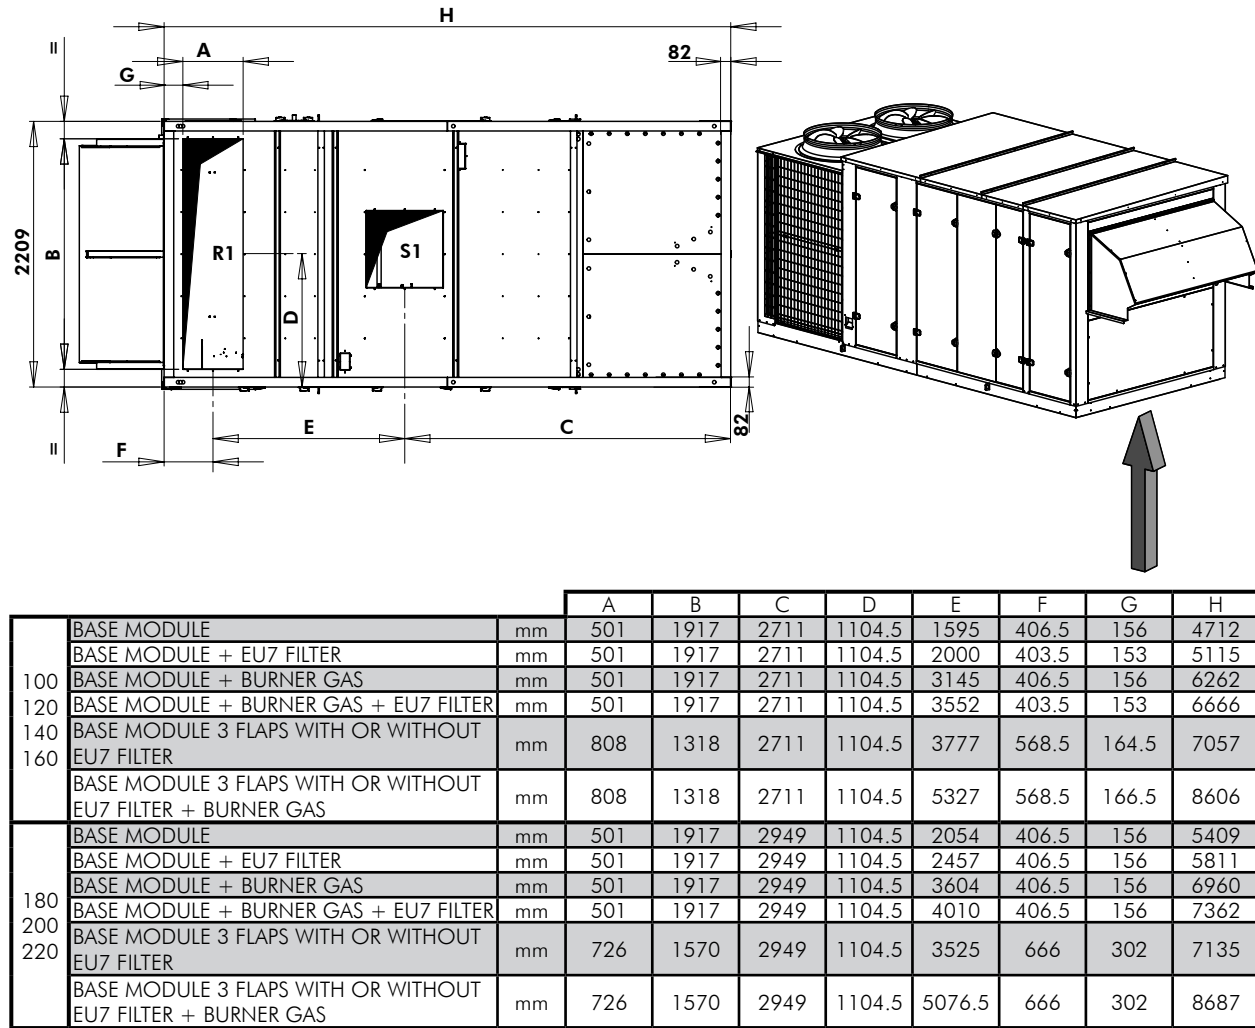

R2

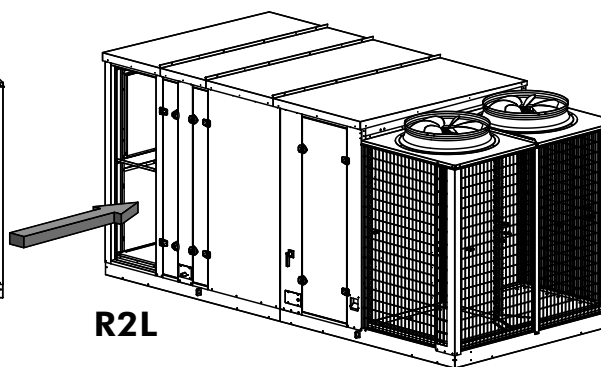
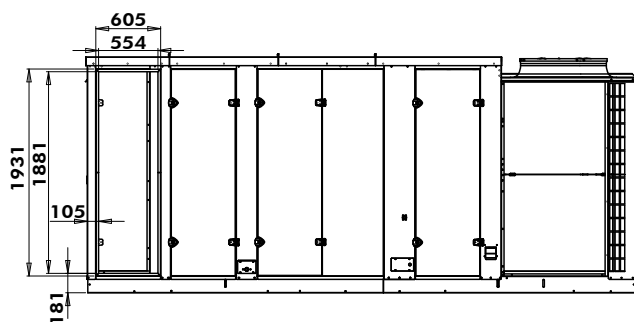


R2L


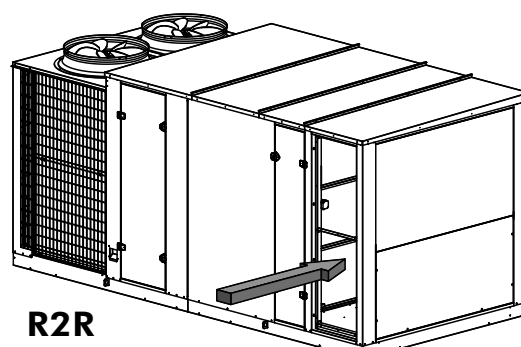
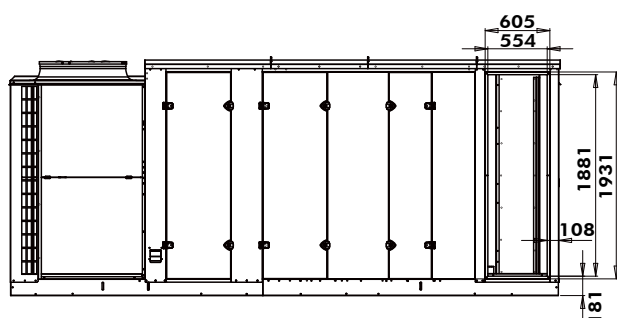


R2R

R3

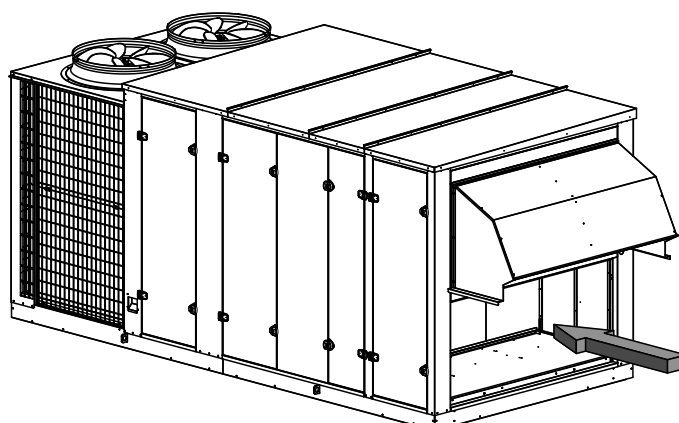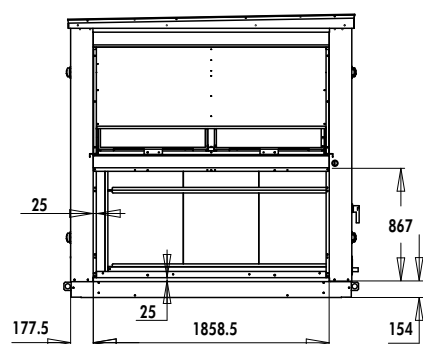


R4
BASE MODULE

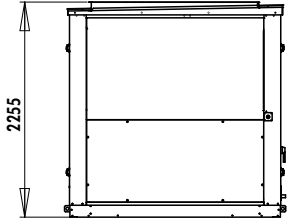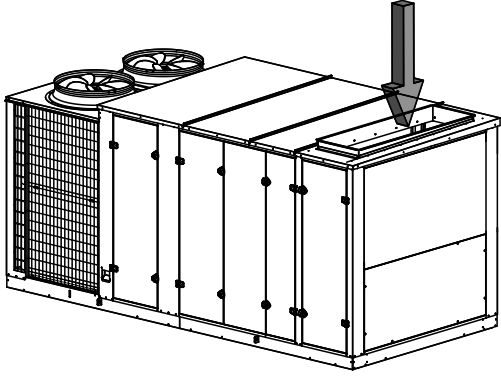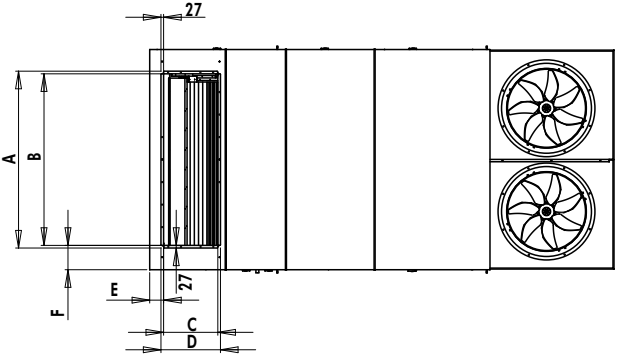


			A	B	C	D	E	F
100	BASE MODULE	mm	1807	1753	554	608	142	249
120	BASE MODULE	mm	1807	1753	554	608	142	249
140	BASE MODULE 3 FLAPS	mm	1554	1500	670	724	165	147
160	BASE MODULE 3 FLAPS	mm	1554	1500	670	724	165	147
180	BASE MODULE	mm	1807	1753	554	608	142	249
200	BASE MODULE	mm	1807	1753	554	608	142	249
220	BASE MODULE 3 FLAPS	mm	1807	1753	554	608	142	249


RTC 100 - 120 - 140 - 160
BASE MODULE 3 FLAPS

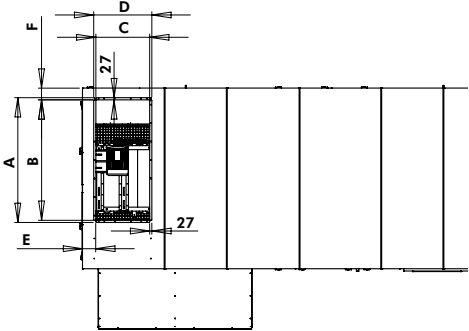


FRESH AIR ON THE LEFT SIDE
FRESH AIR ON THE RIGHT SIDE ON REQUEST

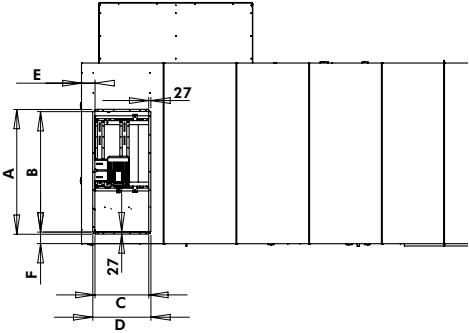

RTC 180 - 200 - 220
BASE MODULE 3 FLAPS

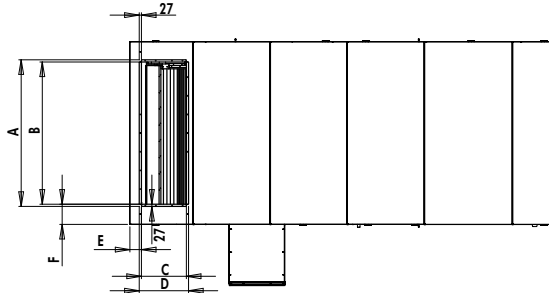

FRESH AIR ON THE LEFT SIDE
FRESH AIR ON THE RIGHT SIDE ON REQUEST

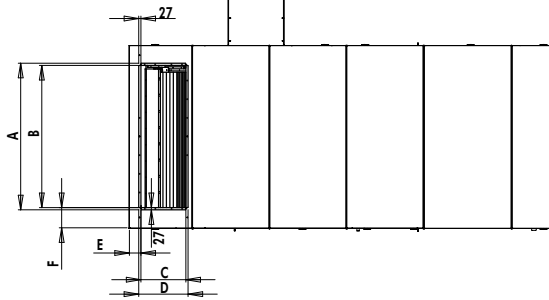

REFRIGERANT CIRCUIT DIAGRAM

SCHEMA DU CIRCUIT FRIGORIFIQUE

KÄLTEKREISLAUFDIAGRAMM

SCHEMA DEL CIRCUITO REFRIGERANTE

ESQUEMA DEL CIRCUITO FRIGORÍFICO

C1 : Compressor 1
 C2 : Compressor 2
 CD1 : Condenser 1
 CD2 : Condenser 2
 EV1 : Evaporator 1
 EV2 : Evaporator 2
 FC1 : Propellor fan 1
 FC2 : Propellor fan 2
 FS : Centrifugal fan
 HP1 : Condensing Pressure Tap 1
 HP2 : Condensing Pressure Tap 2
 DF1 : Drier Filter 1
 DF2 : Drier Filter 2
 B1 : Liquid Tank 1
 B2 : Liquid Tank 2
 M I1 : Moisture Indicator 1
 M I2 : Moisture Indicator 2
 EEV1 : Electronic Expansion Valve 1
 EEV2 : Electronic Expansion Valve 2
 V1 : 4 way valve 1
 V2 : 4 way valve 2
 VP : Vacuum draining take-off


C1 : Compresseur 1
 C2 : Compresseur 2
 CD1 : Condenseur 1
 CD2 : Condenseur 2
 EV1 : Evaporateur 1
 EV2 : Evaporateur 2
 FC1 : Ventilateur hélicoïde 1
 FC2 : Ventilateur hélicoïde 2
 FS : Ventilateur centrifuge
 HP1 : Prise de pression HP 1
 HP2 : Prise de pression HP 2
 DF1 : Filtre déshumidificateur 1
 DF2 : Filtre déshumidificateur 2
 B1 : Bouteille de réserve 1
 B2 : Bouteille de réserve 2
 M I1 : voyant liquide 1
 M I2 : voyant liquide 2
 EEV1 : Détendeur électronique 1
 EEV2 : Détendeur électronique 2
 V1 : Vanne d'inversion 1
 V2 : Vanne d'inversion 2
 VP : Prise de tirage au vide

C1 : Kompressor 1
 C2 : Kompressor 2
 CD1 : Verflüssiger 1
 CD2 : Verflüssiger 2
 EV1 : Verdampfer 1
 EV2 : Verdampfer 2
 FC1 : Axialventilator 1
 FC2 : Axialventilator 2
 FS : Zentrifugalventilator
 HP1 : Druckanschlusstelle Hochdruck 1
 HP2 : Druckanschlusstelle Hochdruck 2
 DF1 : Wasserabscheidungsfilter 1
 DF2 : Wasserabscheidungsfilter 2
 B1 : Flasche mit Flüssigkeitsreserve 1
 B2 : Flasche mit Flüssigkeitsreserve 2
 M I1 : Flüssigkeitsschauglas 1
 M I2 : Flüssigkeitsschauglas 2
 EEV1 : Elektronisches Druckminderventil 1
 EEV2 : Elektronisches Druckminderventil 2
 V1 : Umkehrventil 1
 V2 : Umkehrventil 2
 VP : Anschluss zum Evakuieren

C1 : Compessore 1
 C2 : Compessore 2
 CD1 : Condensator 1
 CD2 : Condensator 2
 EV1 : Evaporatore 1
 EV2 : Evaporatore 2
 FC1 : Elicoidale ventilatore 1
 FC2 : Elicoidale ventilatore 2
 FS : Centrifugo ventilatore
 HP1 : Presa di pressione HP 1
 HP2 : Presa di pressione HP 2
 DF1 : Filtro disidratatore 1
 DF2 : Filtro disidratatore 2
 B1 : Bombola di riserva 1
 B2 : Bombola di riserva 2
 M I1 : spia liquido 1
 M I2 : spia liquido 2
 EEV1 : Regolatore elettronico di pressione 1
 EEV2 : Regolatore elettronico di pressione 2
 V1 : Valvola di inversione 1
 V2 : Valvola di inversione 2
 VP : Presa di tiraggio a vuoto

C1 : Compresor 1
 C2 : Compresor 2
 CD1 : Condensador 1
 CD2 : Condensador 2
 EV1 : Evaporador 1
 EV2 : Evaporador 2
 FC1 : Helicoidal ventilator 1
 FC2 : Helicoidal ventilator 2
 FS : Centrifugo ventilator
 HP1 : Toma de presión AP 1
 HP2 : Toma de presión AP 2
 DF1 : Filtro deshumidificador 1
 DF2 : Filtro deshumidificador 2
 B1 : Botella de reserva 1
 B2 : Botella de reserva 2
 M I1 : indicador luminoso líquido 1
 M I2 : indicador luminoso líquido 2
 EEV1 : Reductor electrónico de presión 1
 EEV2 : Reductor electrónico de presión 2
 V1 : Válvula de inversión 1
 V2 : Válvula de inversión 2
 VP : Toma de vacío

RTC 100 - 120 - 140 - 160 - 180 - 200 - 220

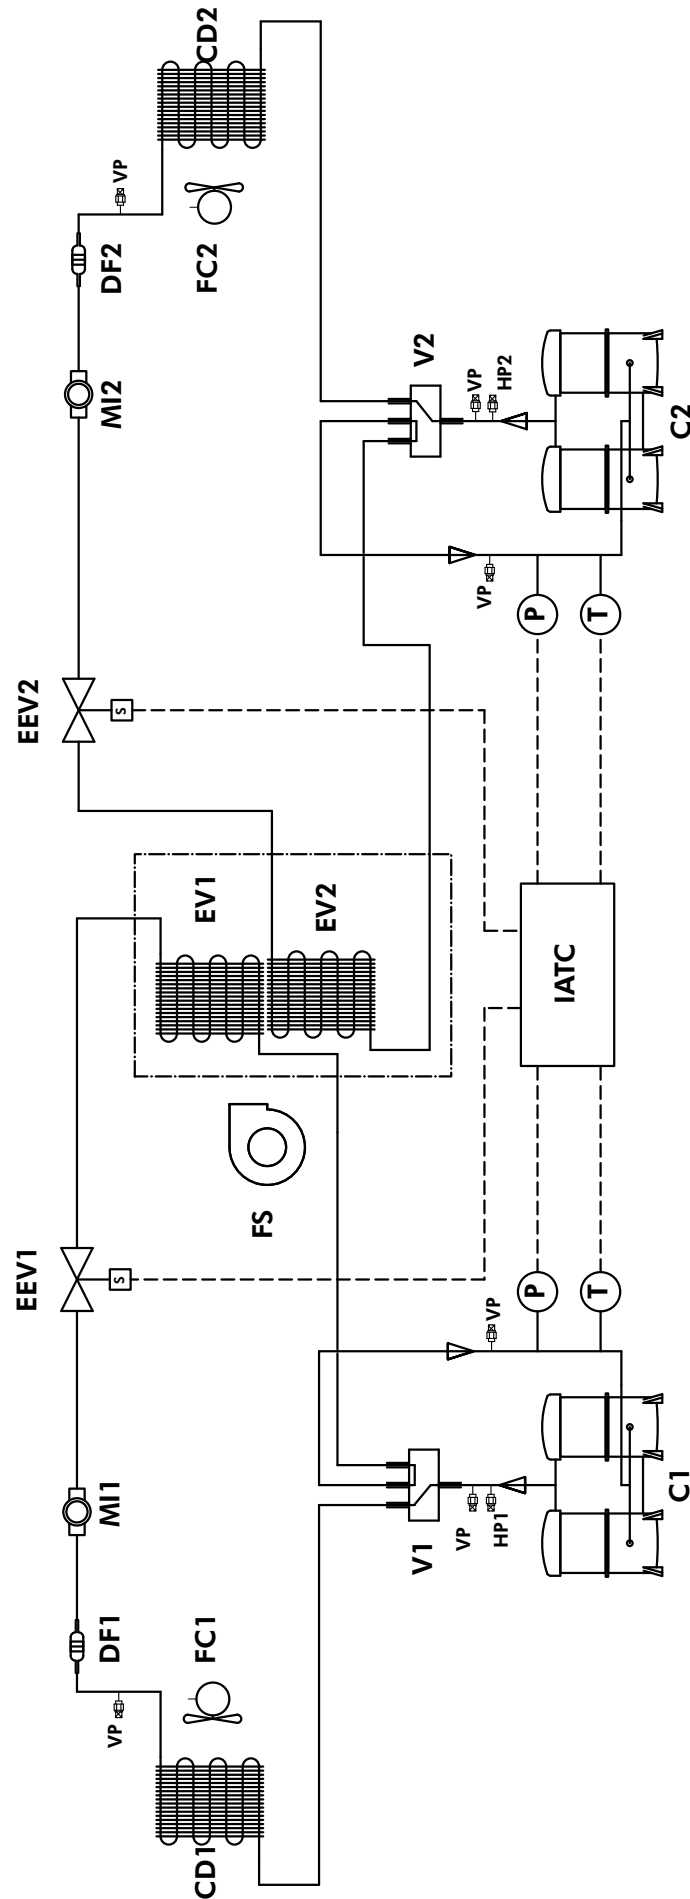

WIRING DIAGRAM

SCHEMAS ELECTRIQUES

STROMLAUFPLANS

SCHEMA ELETRICO

ESQUEMA ELECTRICO

TAKE CARE!

These wiring diagrams are correct at the time of publication. Manufacturing changes can lead to modifications. Always refer to the diagram supplied with the product.

ATTENTION

Ces schémas sont corrects au moment de la publication. Les variantes en fabrication peuvent entraîner des modifications. Reportez-vous toujours au schéma livré avec le produit.

ACHTUNG!

Diese Stromlaufplans sind zum Zeitpunkt der Veröffentlichung gültig. In Herstellung befindliche Varianten können Änderungen mit sich bringen. In jedem Fall den mit dem Produkt gelieferten Stromlaufplan hinzuziehen.

ATTENZIONE !

Questi schemi sono corretti al momento della pubblicazione. Le varianti apportate nel corso della fabbricazione possono comportare modifiche. Far sempre riferimento allo schema fornito con il prodotto.

ATENCIÓN !

Esto esquemas son correctos en el momento de la publicación. Pero las variantes en la fabricación pueden ser motivo de modificaciones. Remítase siempre al esquema entregado con el producto.

**POWER SUPPLY MUST BE SWITCHED OFF BEFORE STARTING TO
WORK IN THE ELECTRIC CONTROL BOXES!**



**MISE HORS TENSION OBLIGATOIRE AVANT TOUTE INTERVENTION
DANS LES BOITIERS ELECTRIQUES.**


**VOR JEDEM EINGRIFF AN DEN ANSCHLUßKÄSTEN UNBEDINGT
DAS GERÄT ABSCHALTEN!**


**PRIMA DI OGNI INTERVENTO SULLE CASSETTE ELETTRICHE
ESCLUDERE TASSATIVAMENTE L'ALIMENTAZIONE !**


**PUESTA FUERA DE TNESIÓN OBLIGATORIA ANTES DE CUALQUIER
INTERVENCIÓN EN LAS CAJAS ELÉCTRICAS!**


100		120-140-160-180		200-220		100		120-140-160	
RTCH	RTCH + BURNER	RTCH	RTCH + BURNER	RTCH	RTCH + BURNER	RTCL	RTCL + BURNER	RTCL	RTCL + BURNER
RTCH	RTCH + BRULEUR GAZ	RTCH	RTCH + BRULEUR GAZ	RTCH	RTCH + BRULEUR GAZ	RTCL	RTCL + BRULEUR GAZ	RTCL	RTCL + BRULEUR GAZ
RTCH	RTCH + GASBRENNER	RTCH	RTCH + GASBRENNER	RTCH	RTCH + GASBRENNER	RTCL	RTCL + GASBRENNER	RTCL	RTCL + GASBRENNER
RTCH	RTCH + BRUCIATORE GAS	RTCH	RTCH + BRUCIATORE GAS	RTCH	RTCH + BRUCIATORE GAS	RTCL	RTCL + BRUCIATORE GAS	RTCL	RTCL + BRUCIATORE GAS
RTCH	RTCH + QUEMADOR GAS	RTCH	RTCH + QUEMADOR GAS	RTCH	RTCH + QUEMADOR GAS	RTCL	RTCL + QUEMADOR GAS	RTCL	RTCL + QUEMADOR GAS
SE3904	SE3543	SE3455	SE3543	SE3893	SE3894	SE3905	SE3544	SE3541	SE3544
SE34561	SE34561	SE34561	SE34561	SE3892	SE3892	SE3542	SE3542	SE3542	SE3542
SE34562	SE34562	SE34562	SE34562	SE34562	SE34562	SE34562	SE34562	SE34562	SE34562
SE34563	SE34563	SE34563	SE34563	SE34563	SE34563	SE34563	SE34563	SE34563	SE34563
SE3906		SE34564		SE34564		SE34564		SE34564	
CONTROL COMMANDE STEUERUNG POTENZA POTENCIA Mono 230V 50Hz +/- 10%									
POWER PUISSANCE LEISTUNG POTENZA POTENCIA Tri 400V+N 50Hz +/- 10%									


CONTROL

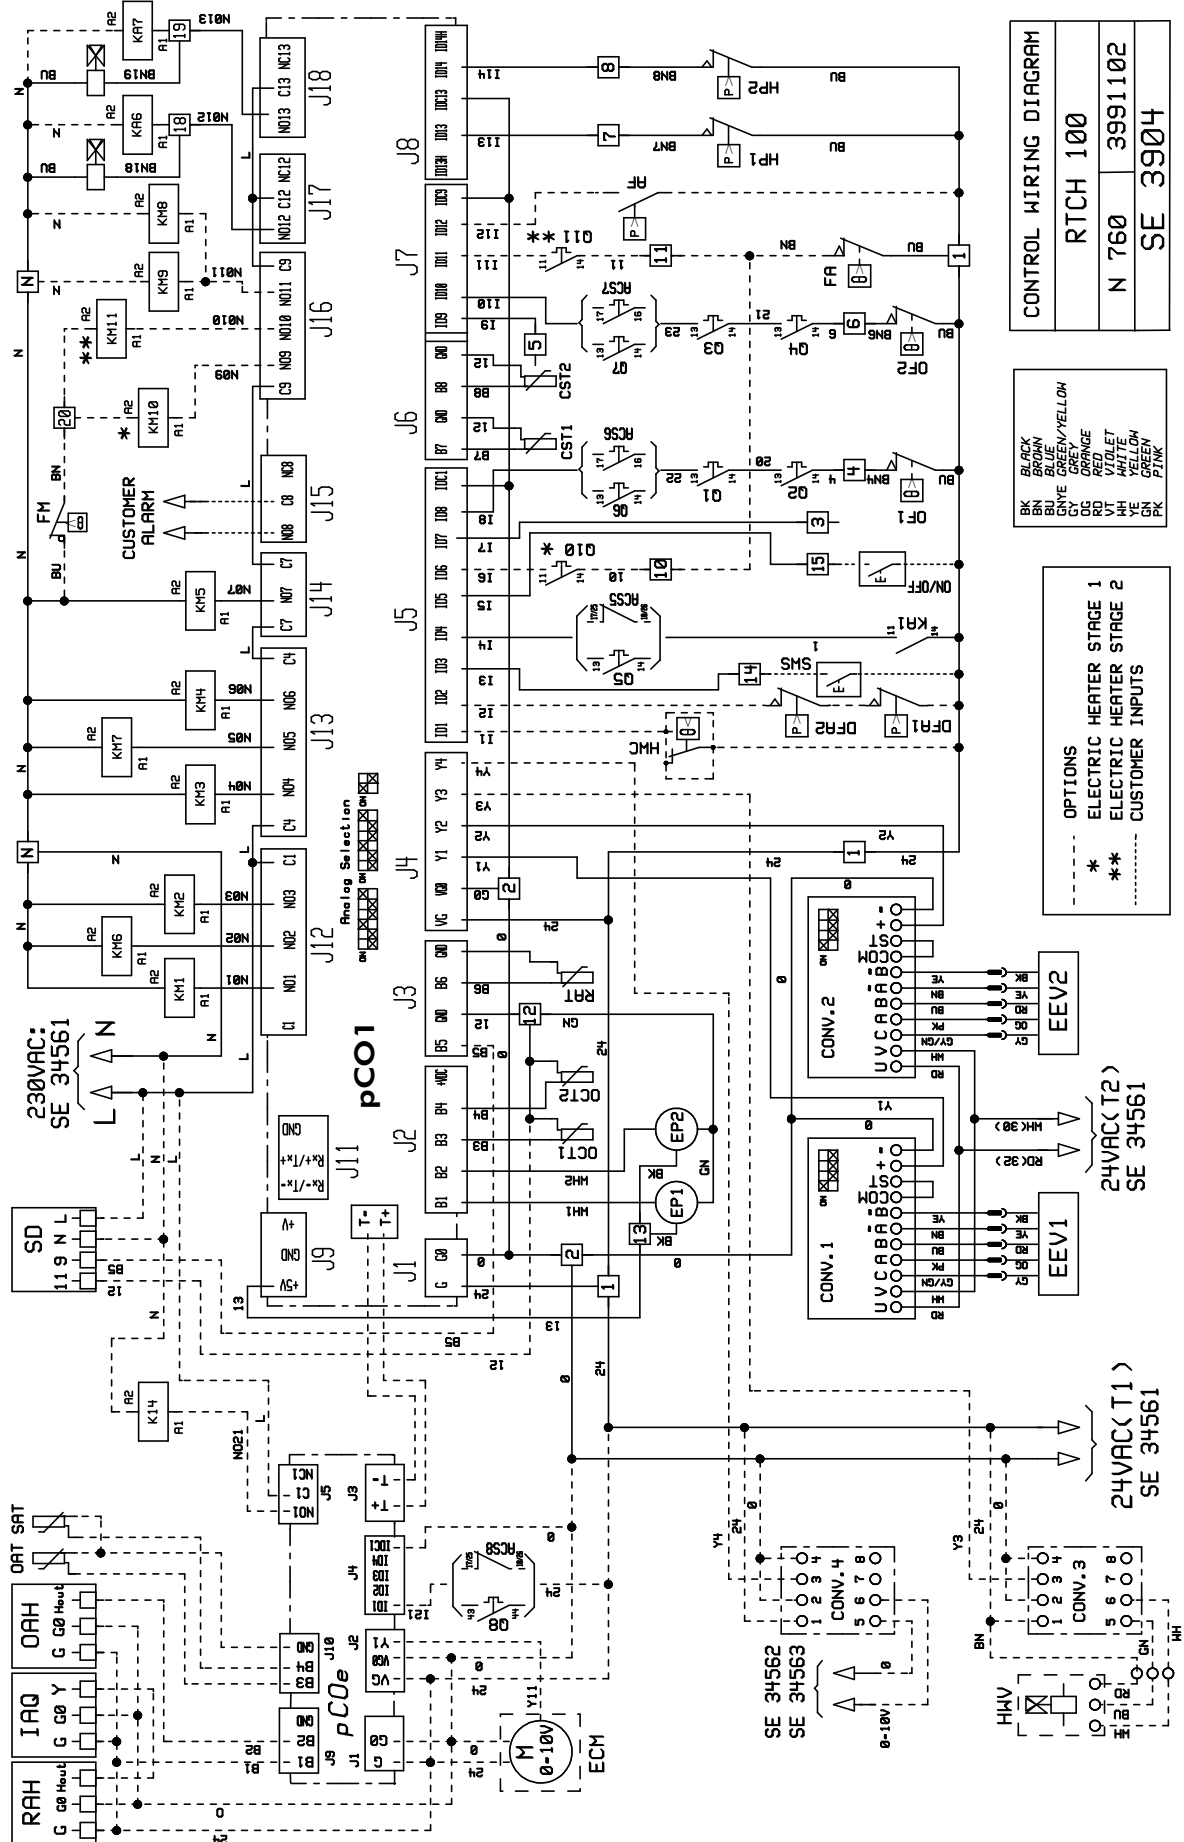


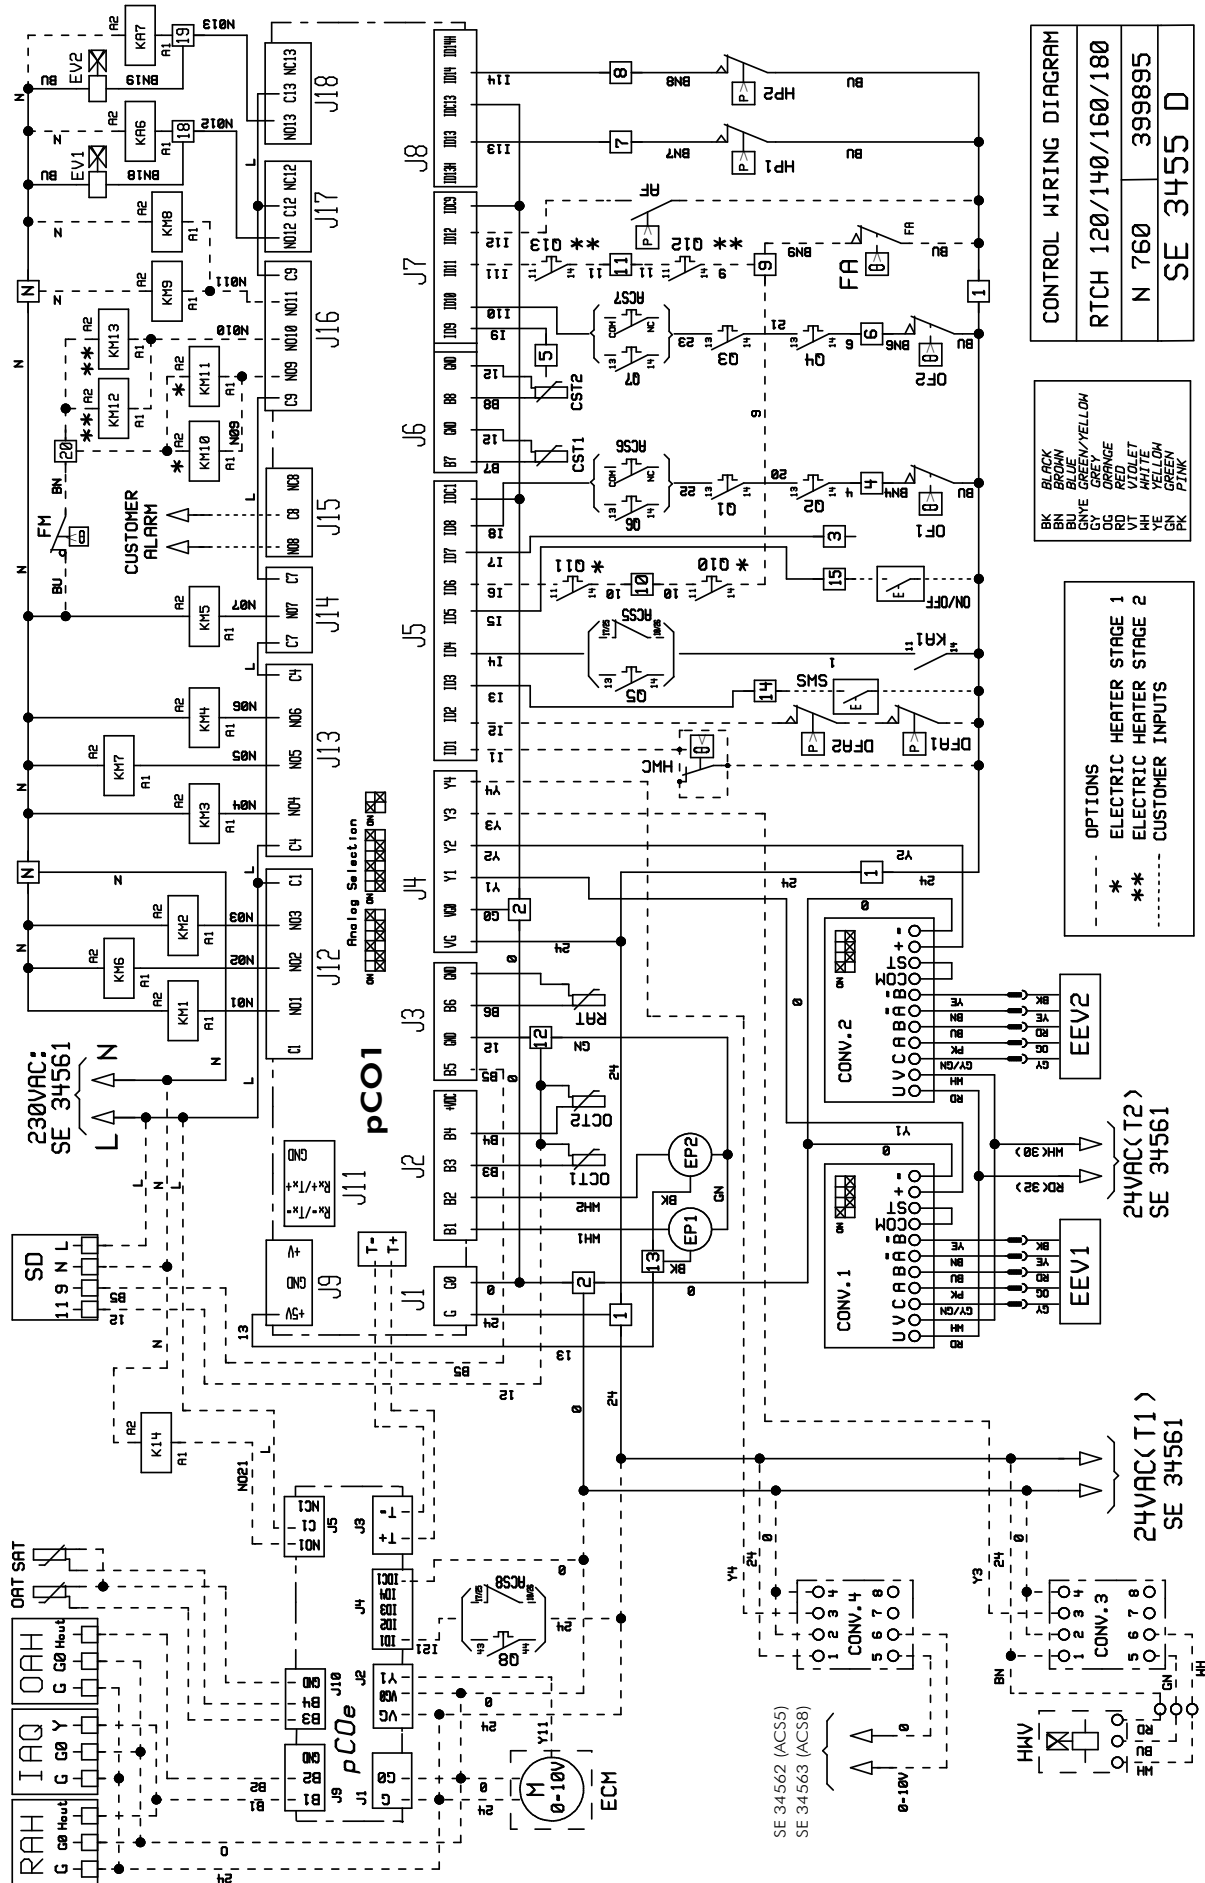


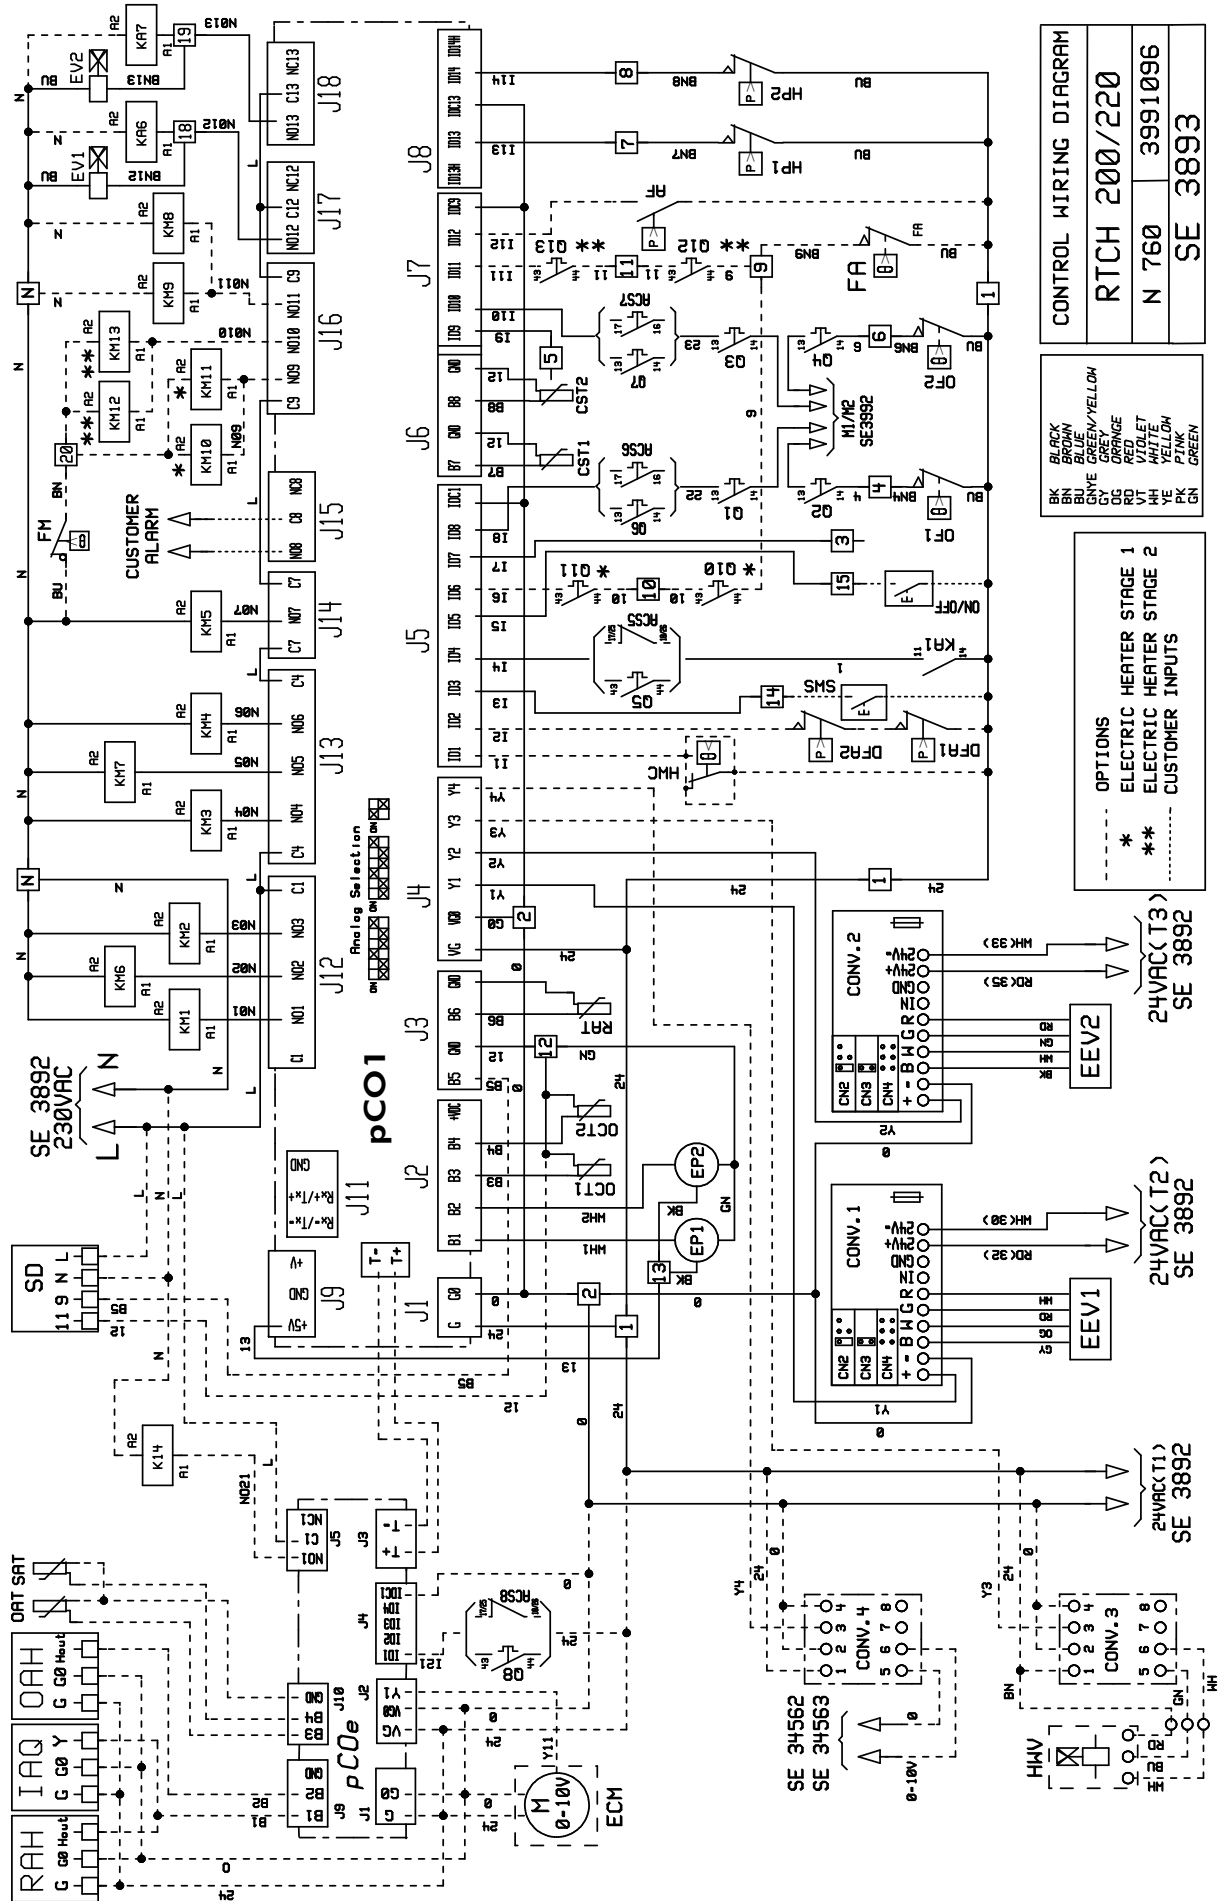


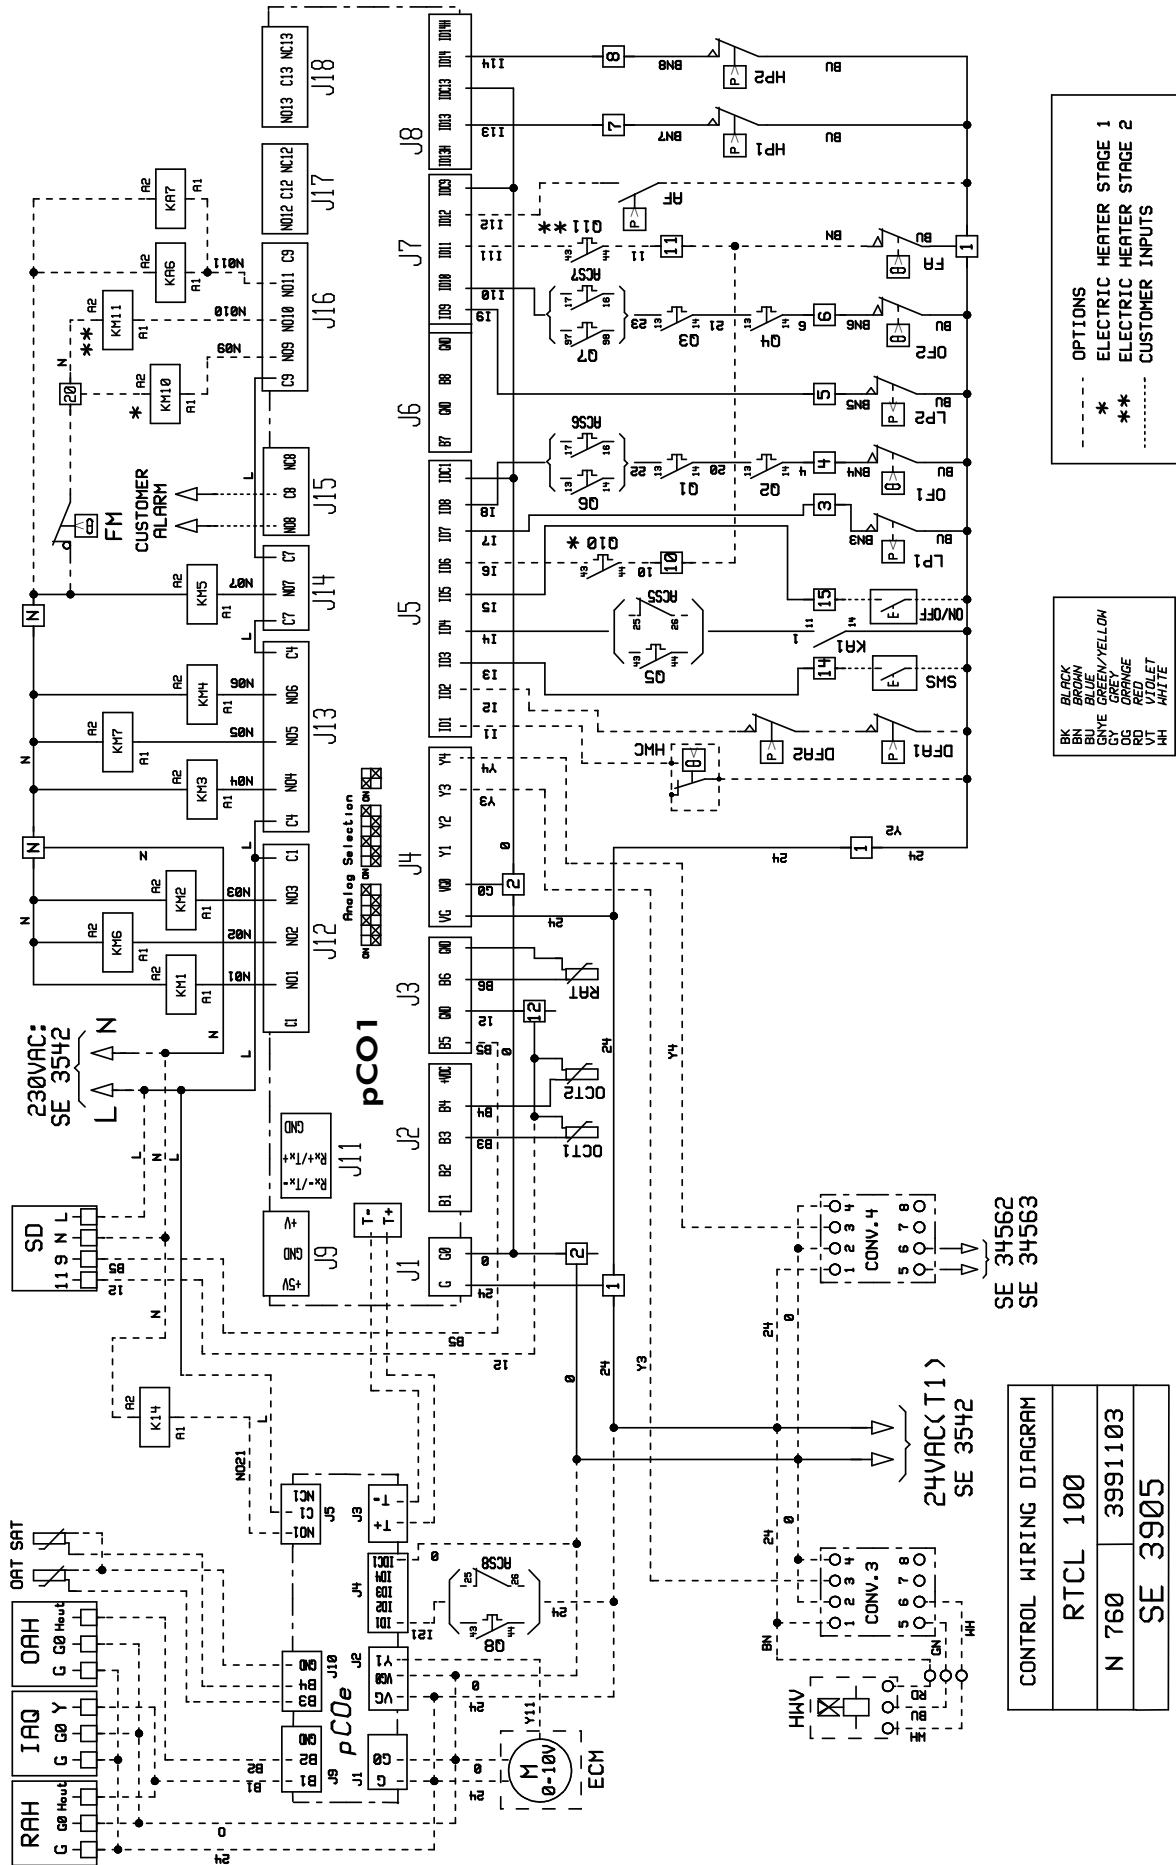

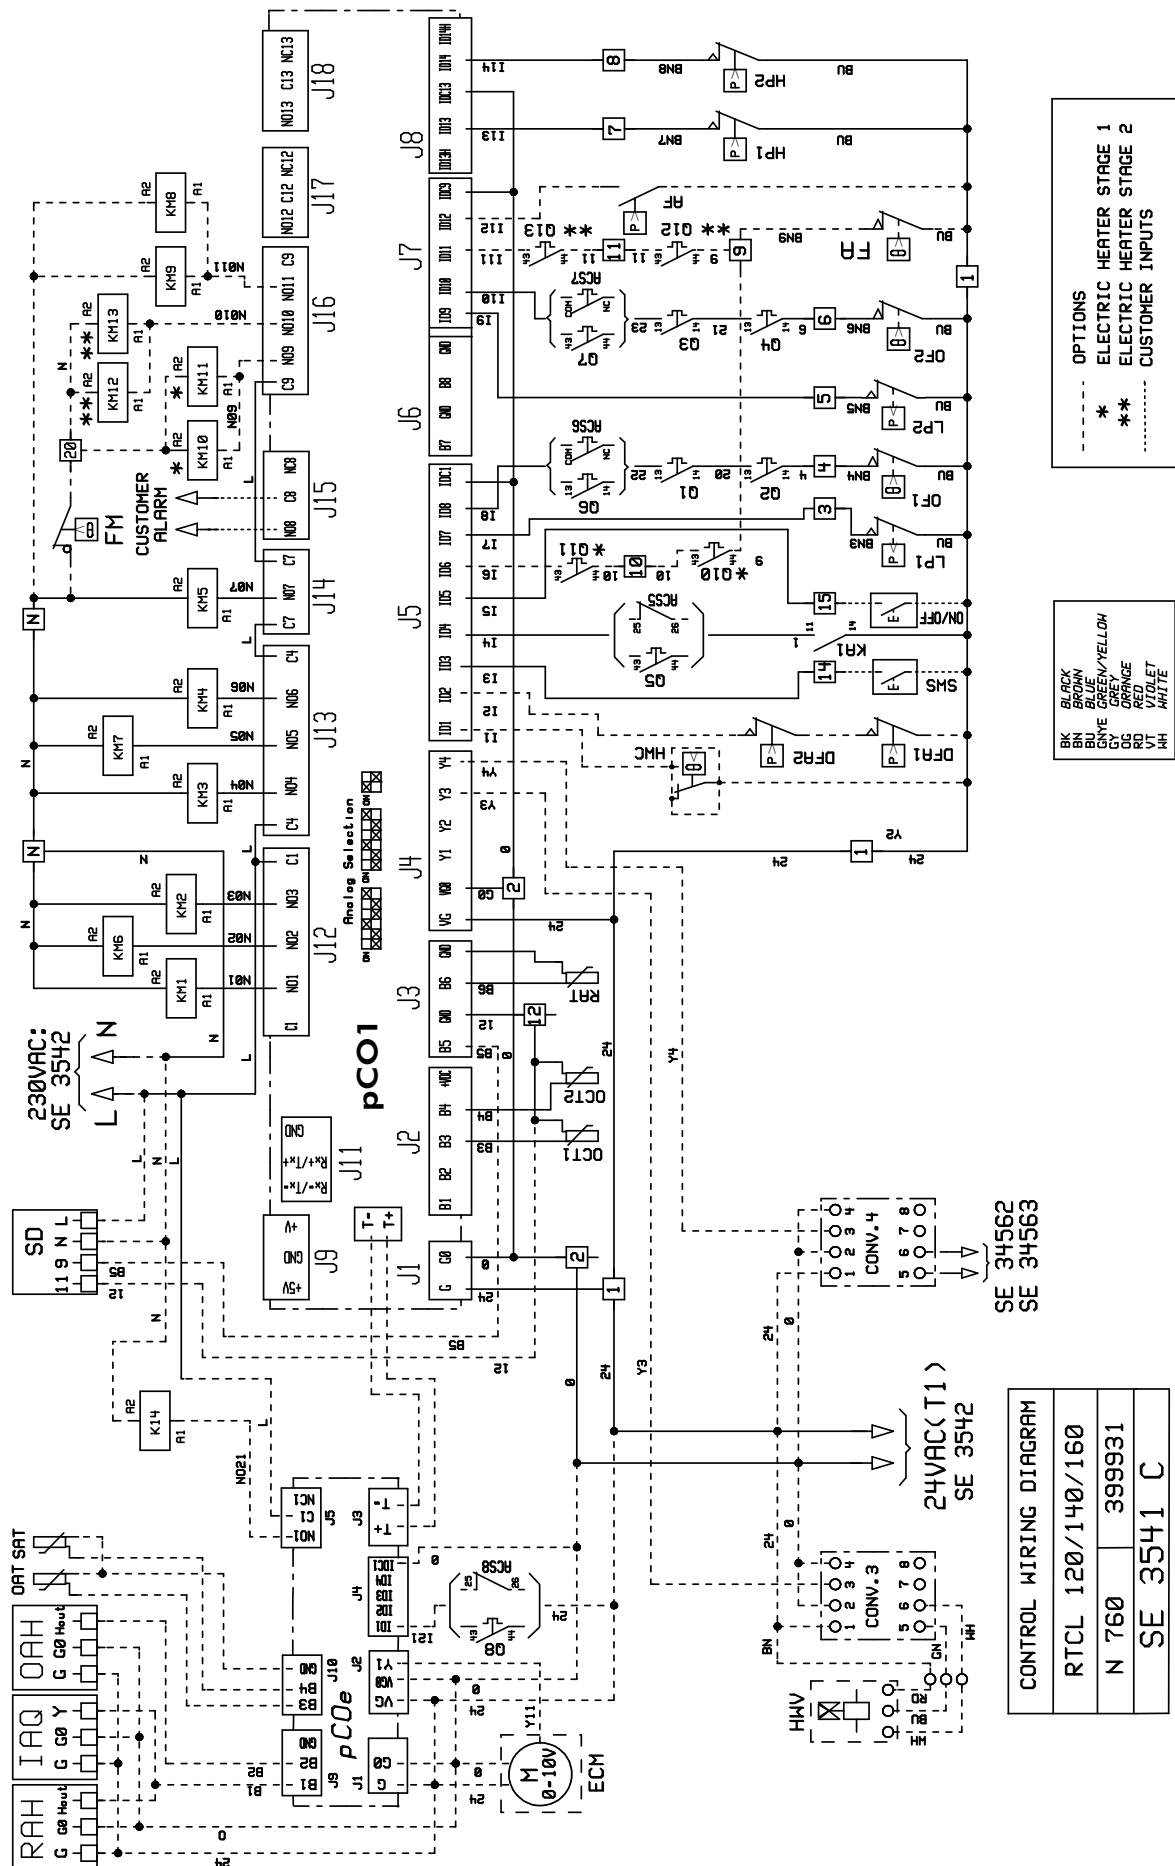


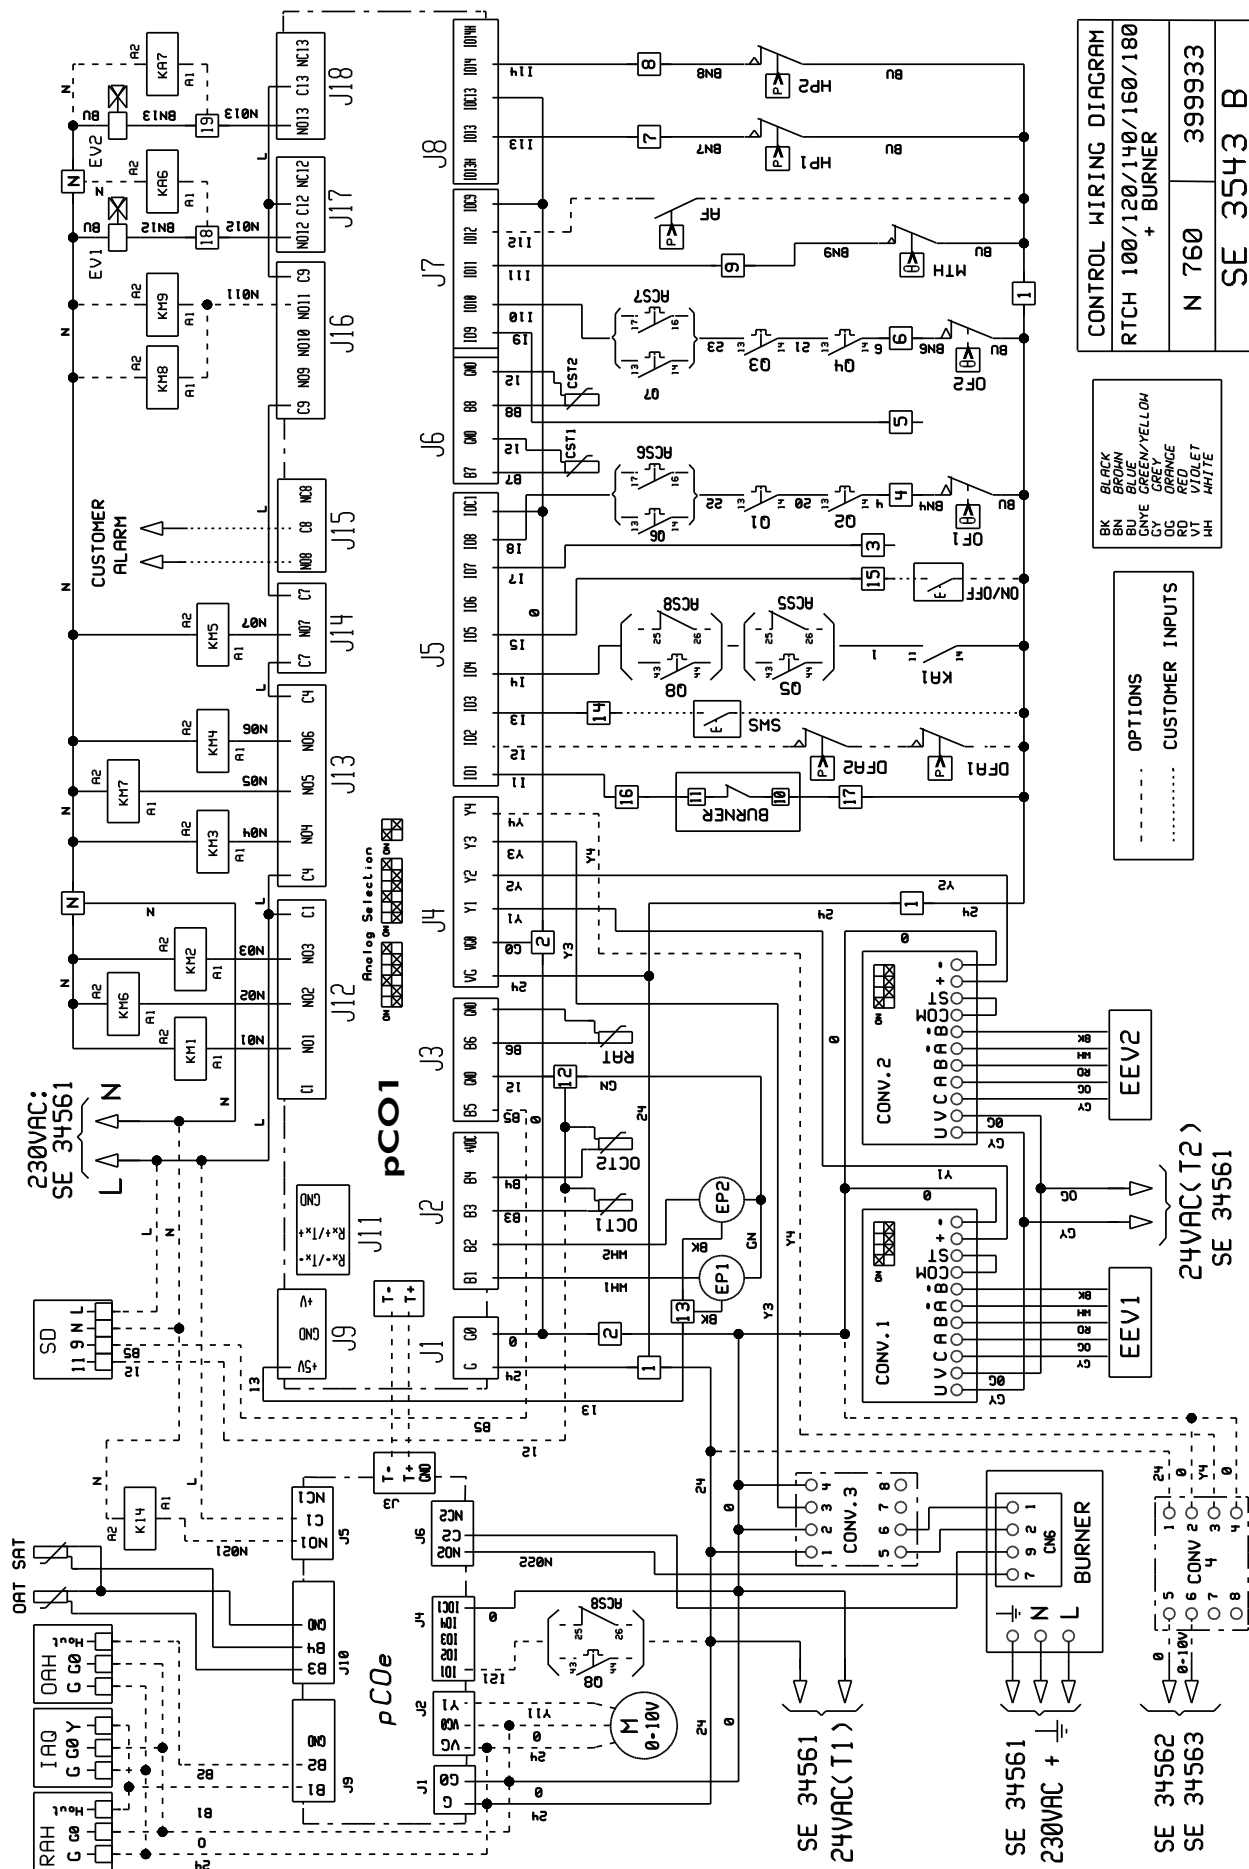


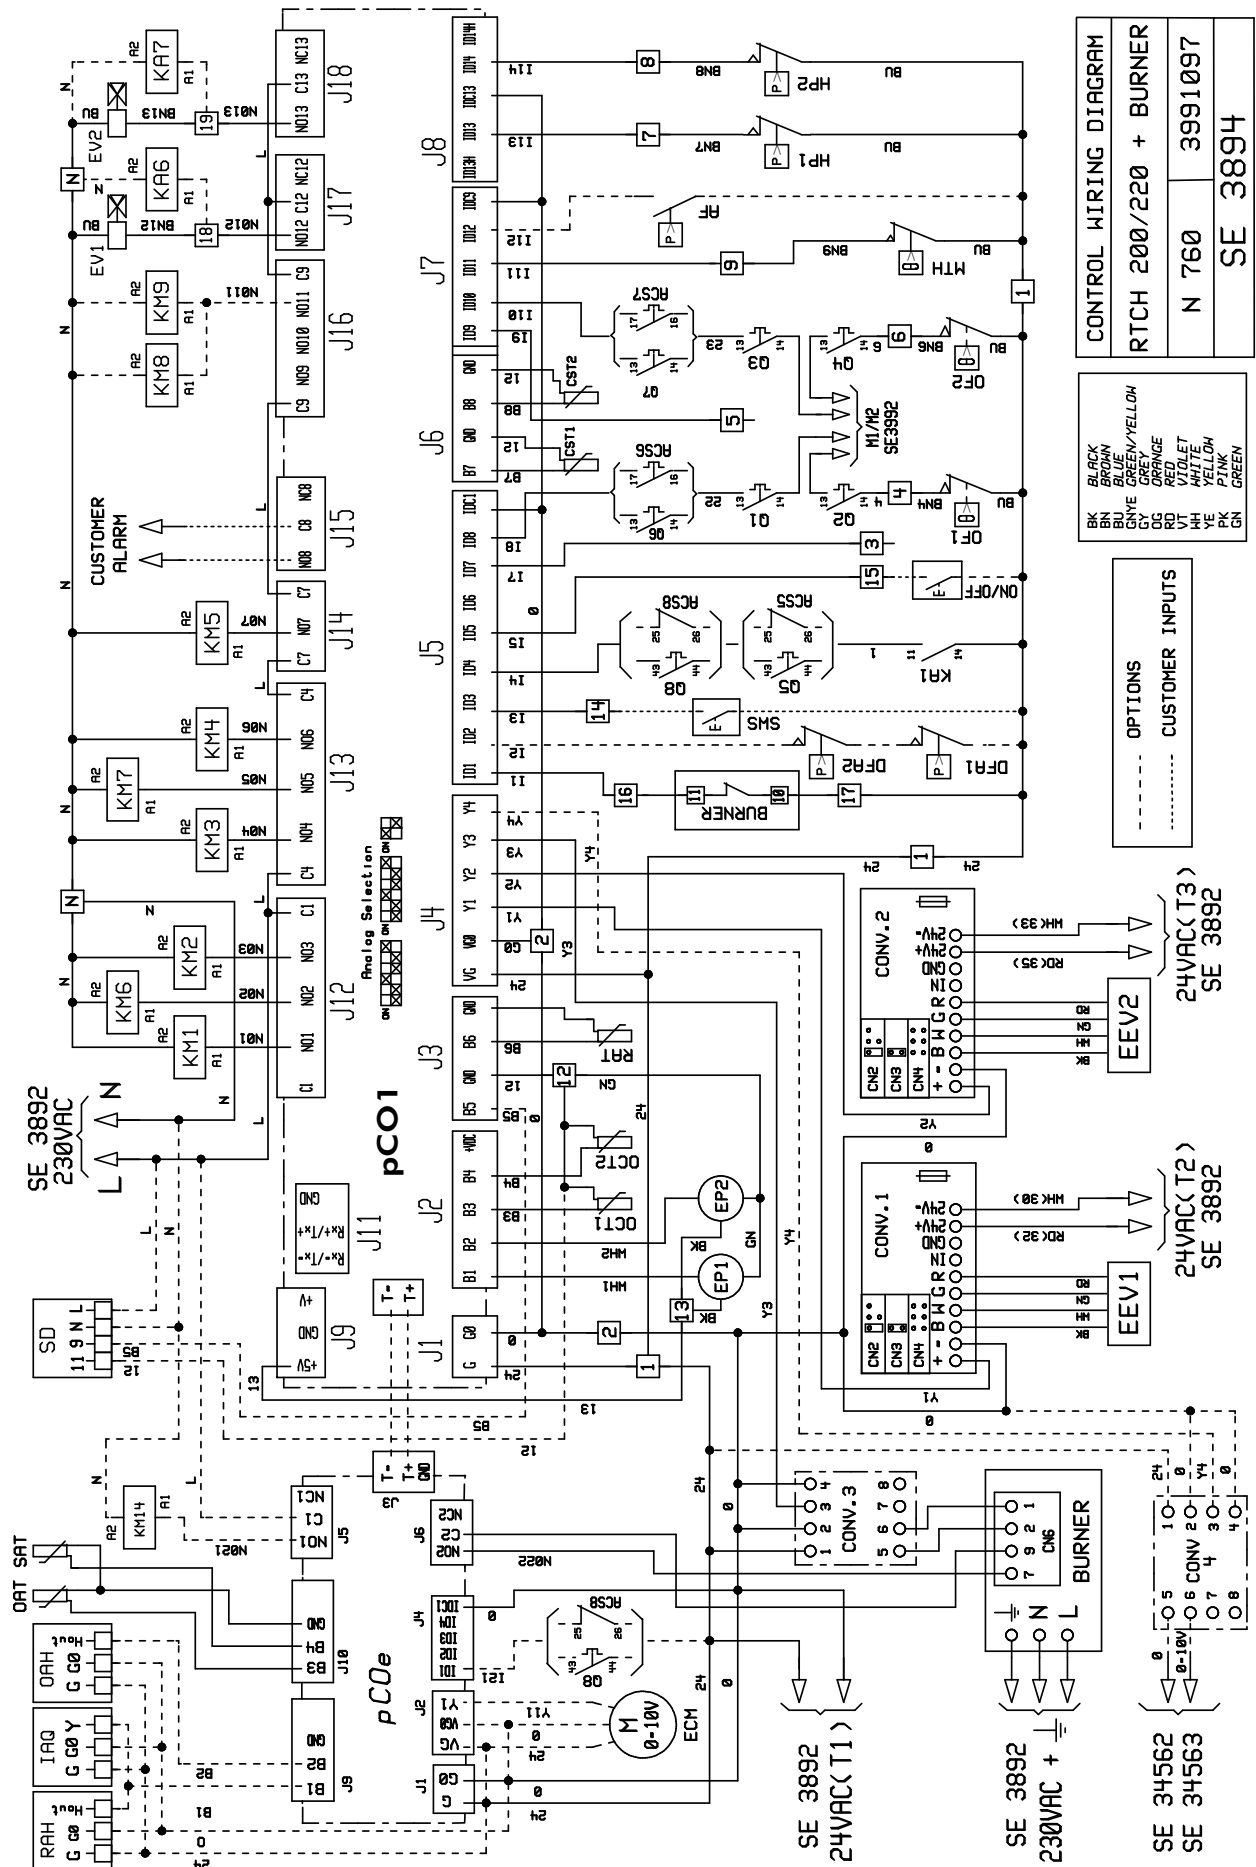


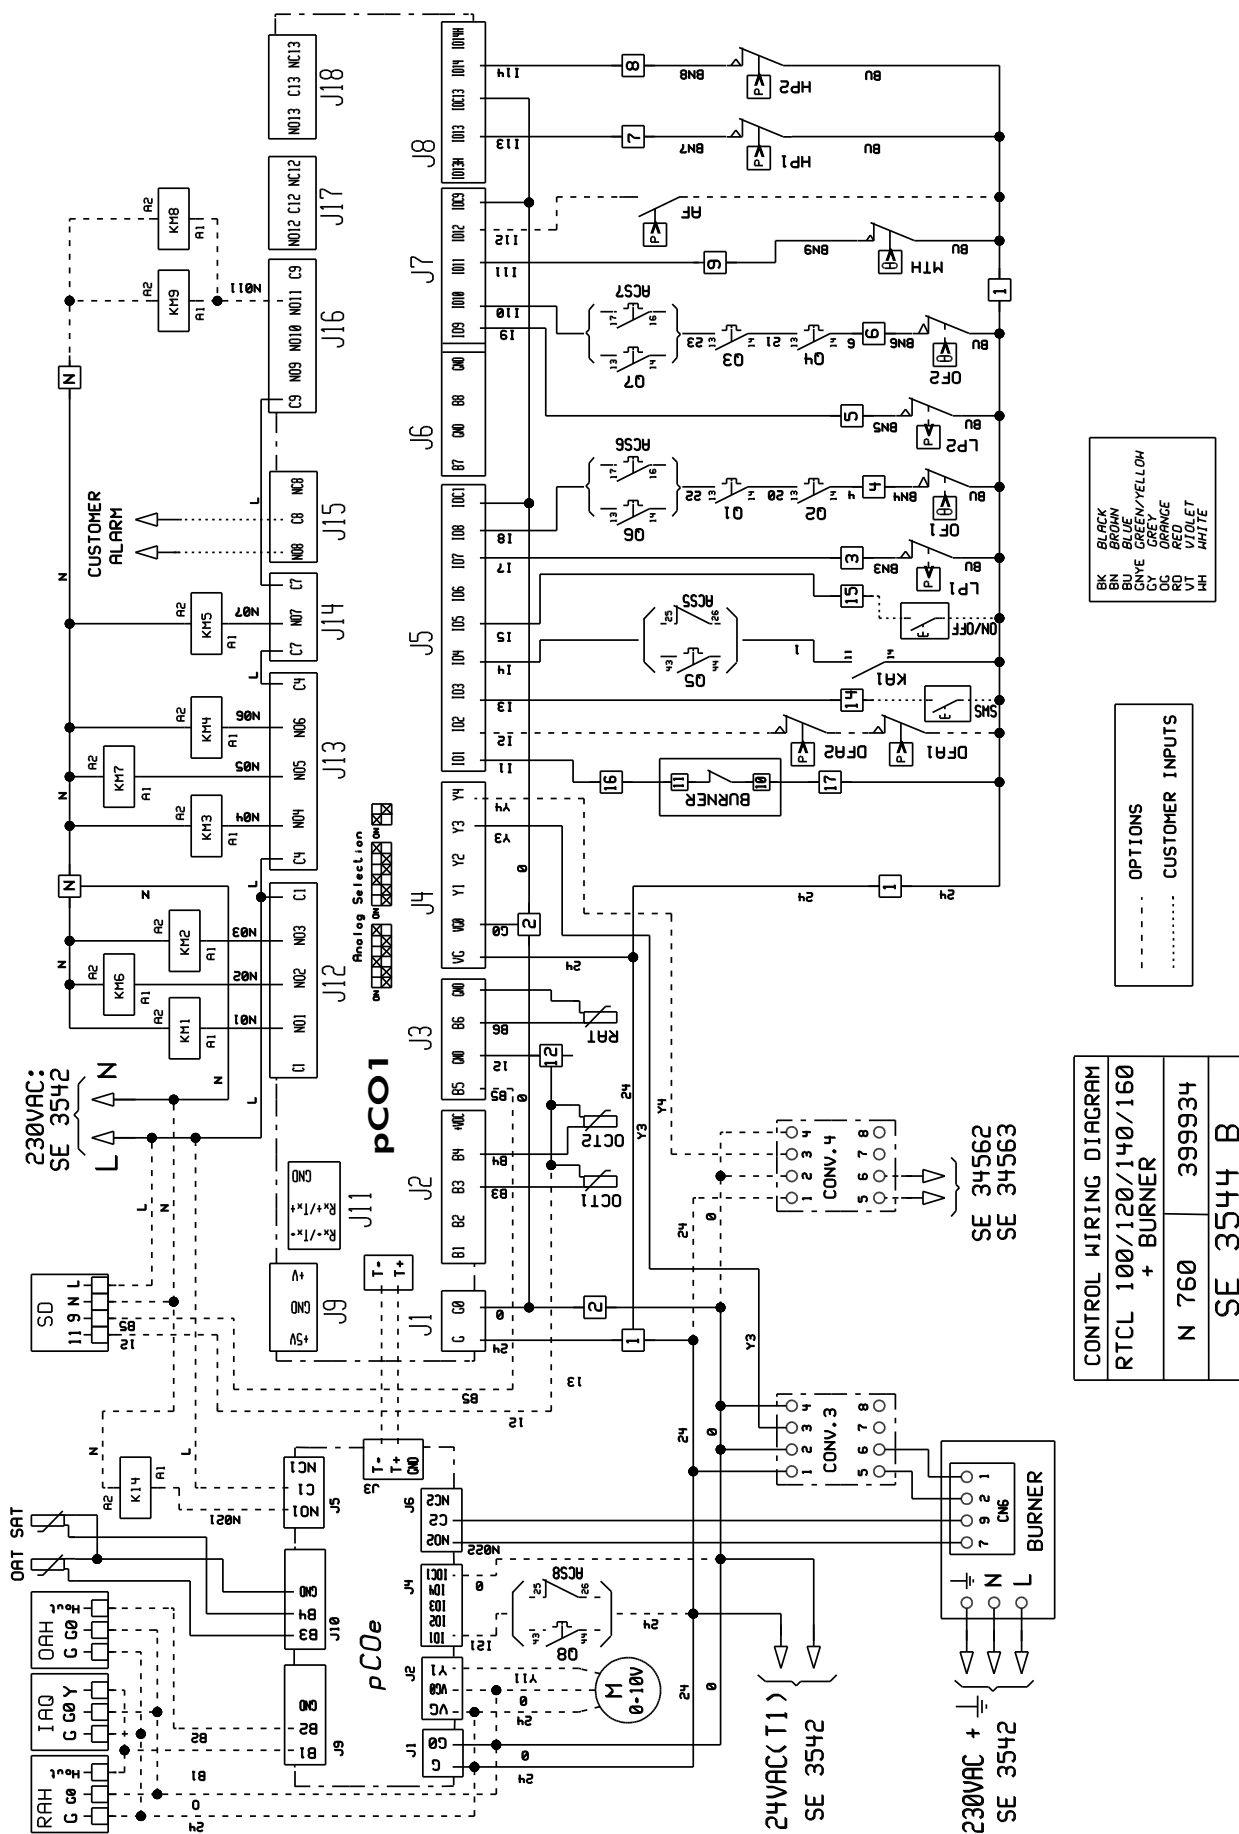

POWER

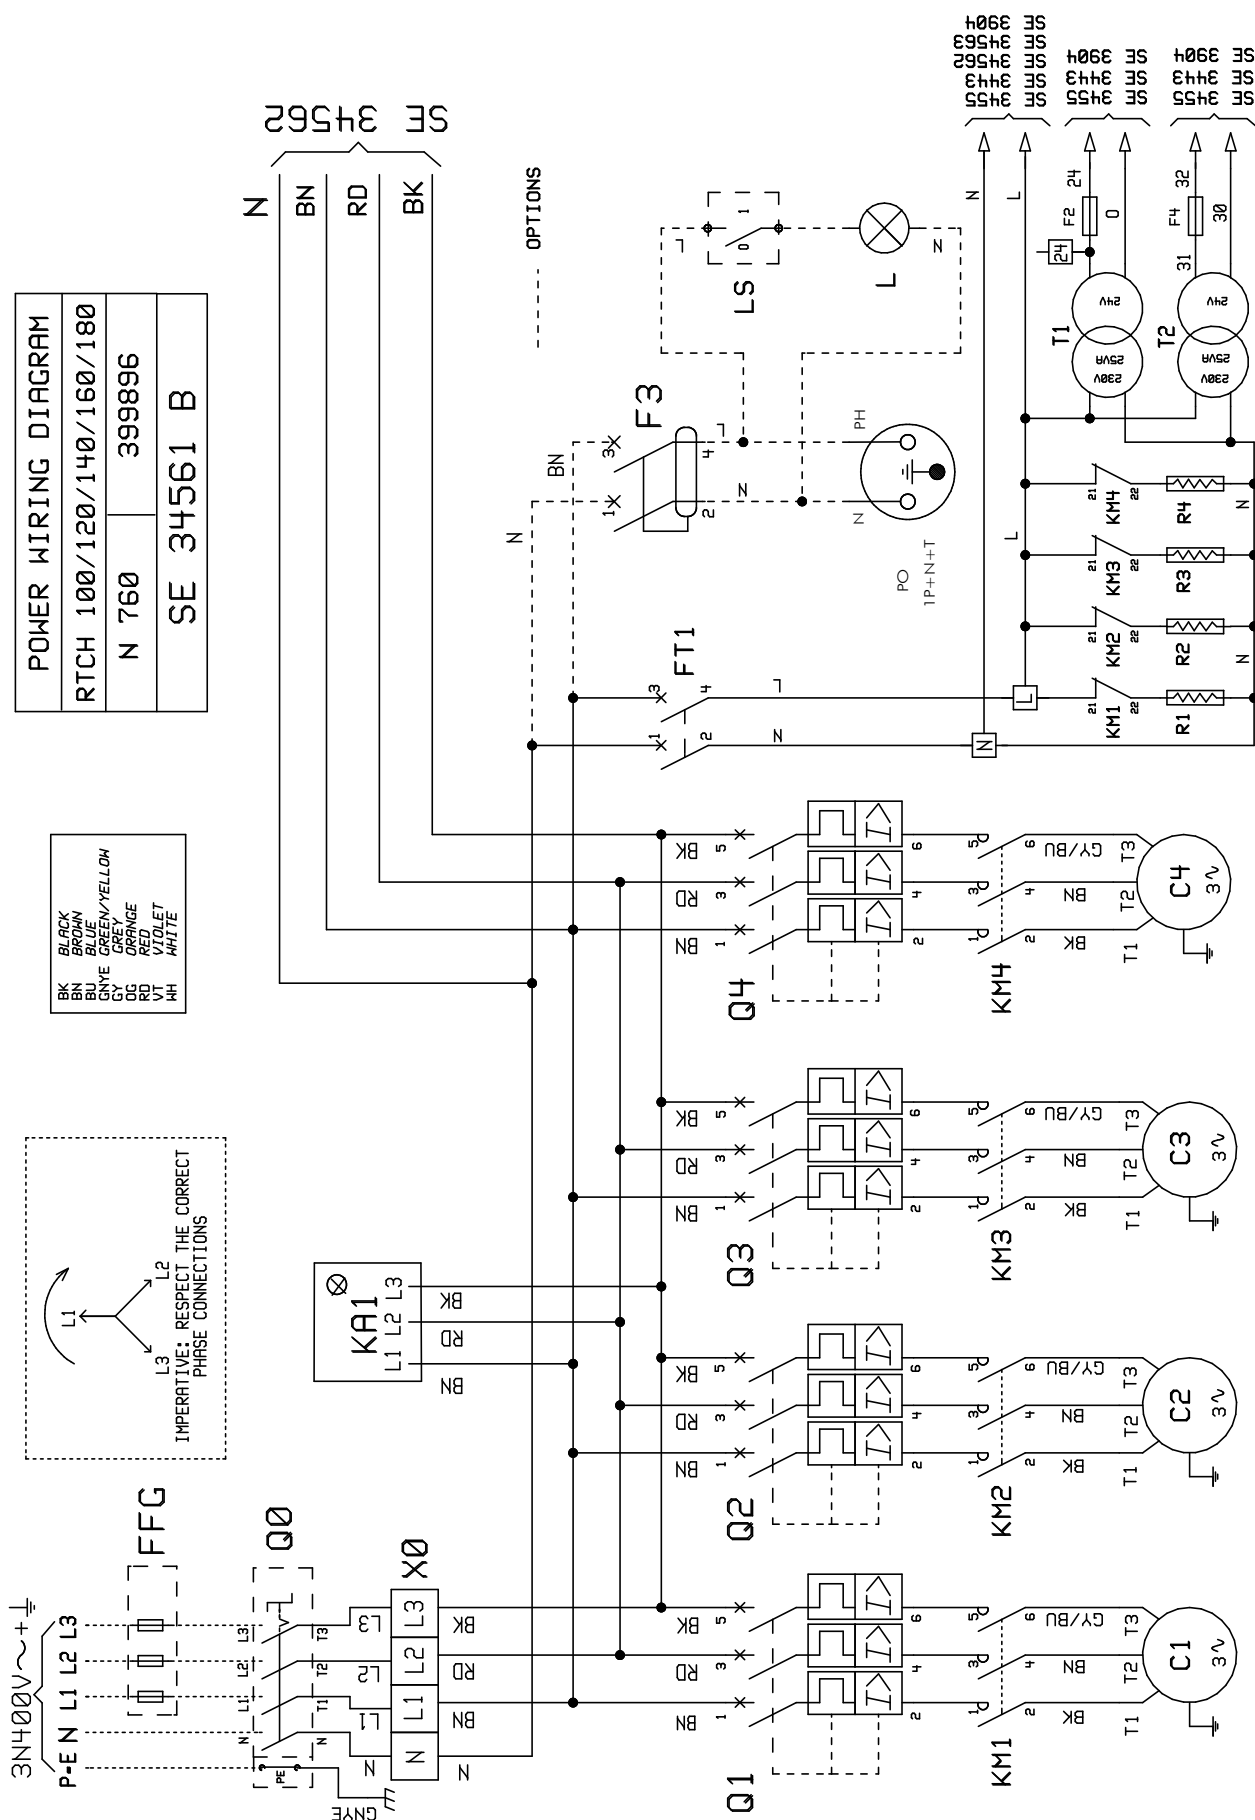

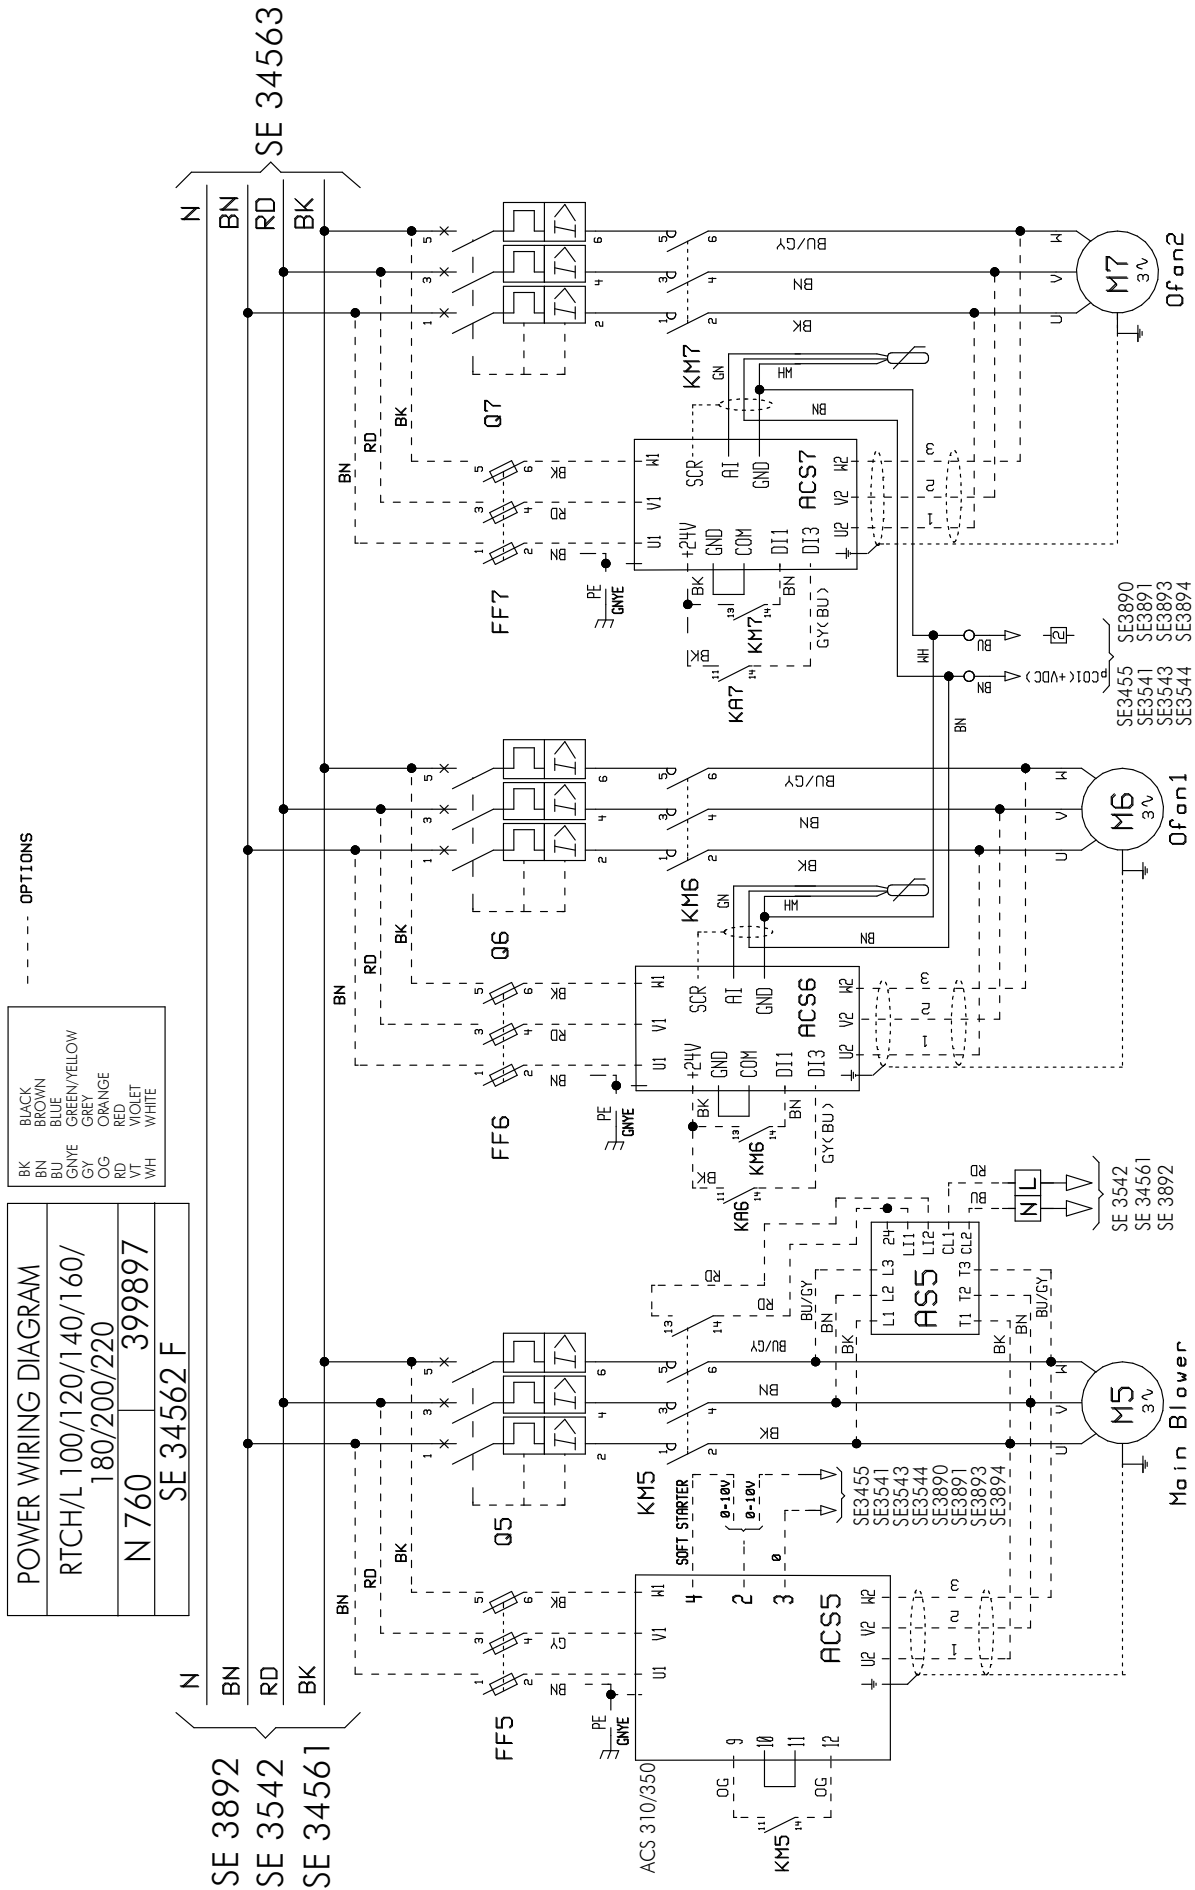

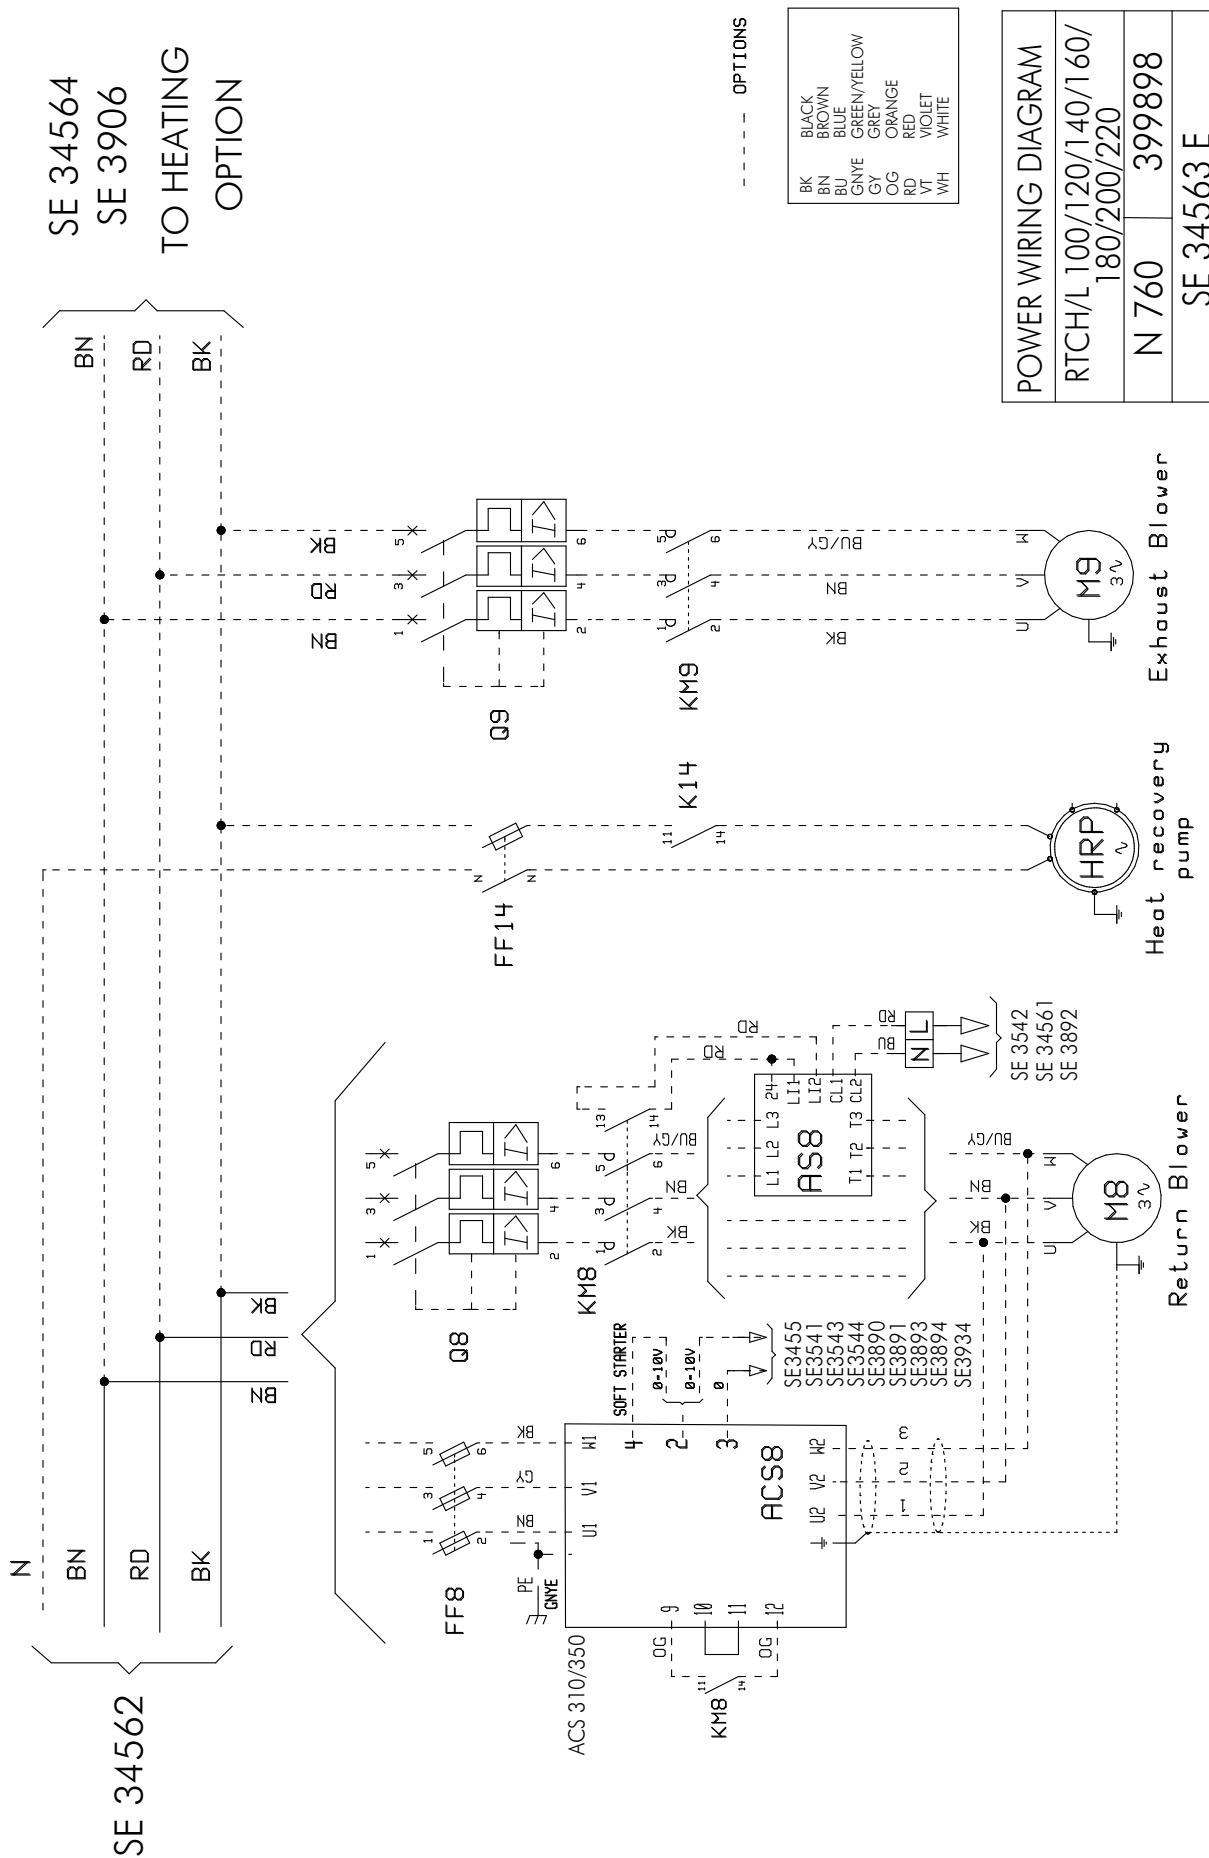



SE 34563
BN
RD
BK

POWER WIRING DIAGRAM	
RTCH/L 100	
N 760	3991104
SE 3906	

BK	BLACK
BN	BROWN
BU	BLUE
GY	GREEN/YELLOW
GY	GREEN
OR	ORANGE
GR	GREY
RD	RED
VT	VIOLET
WH	WHITE




----- OPTIONS

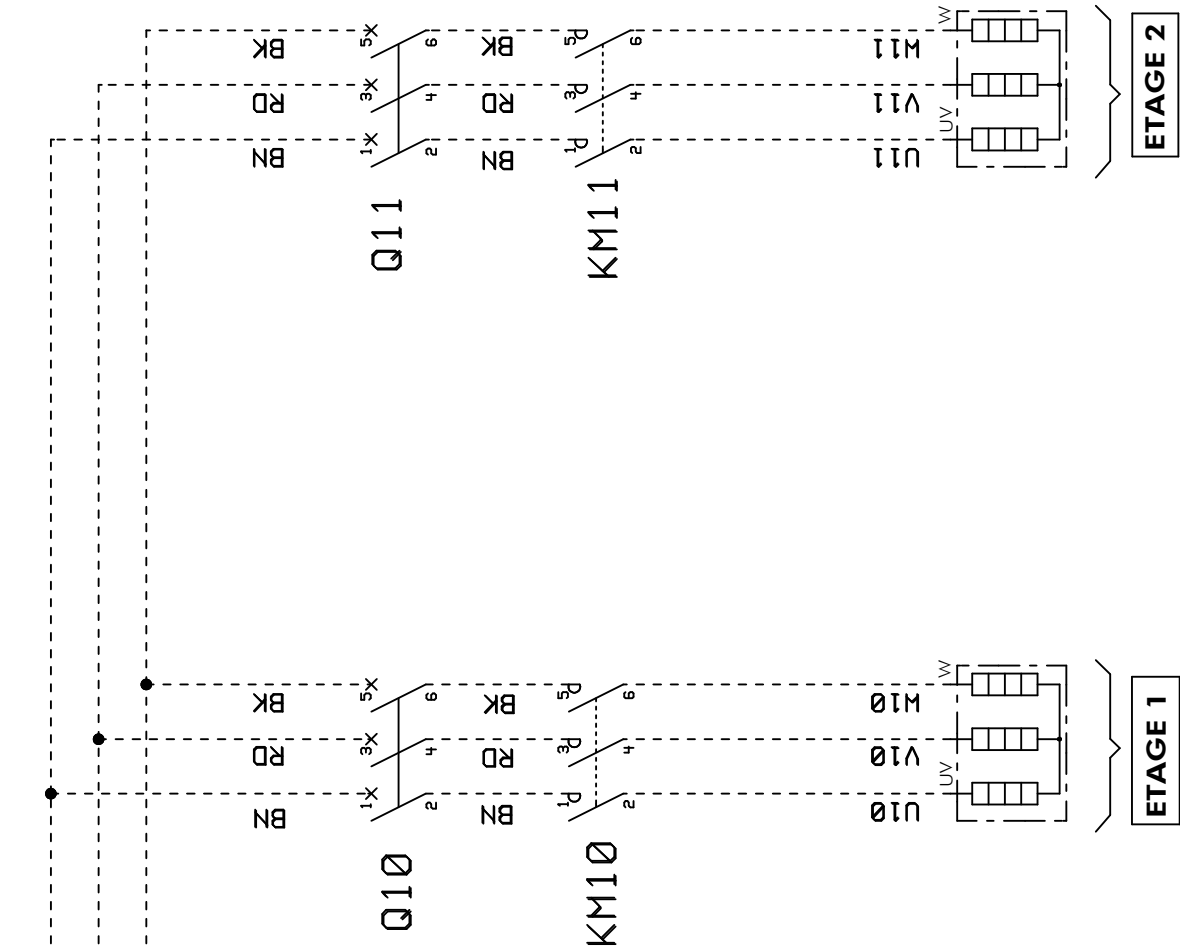

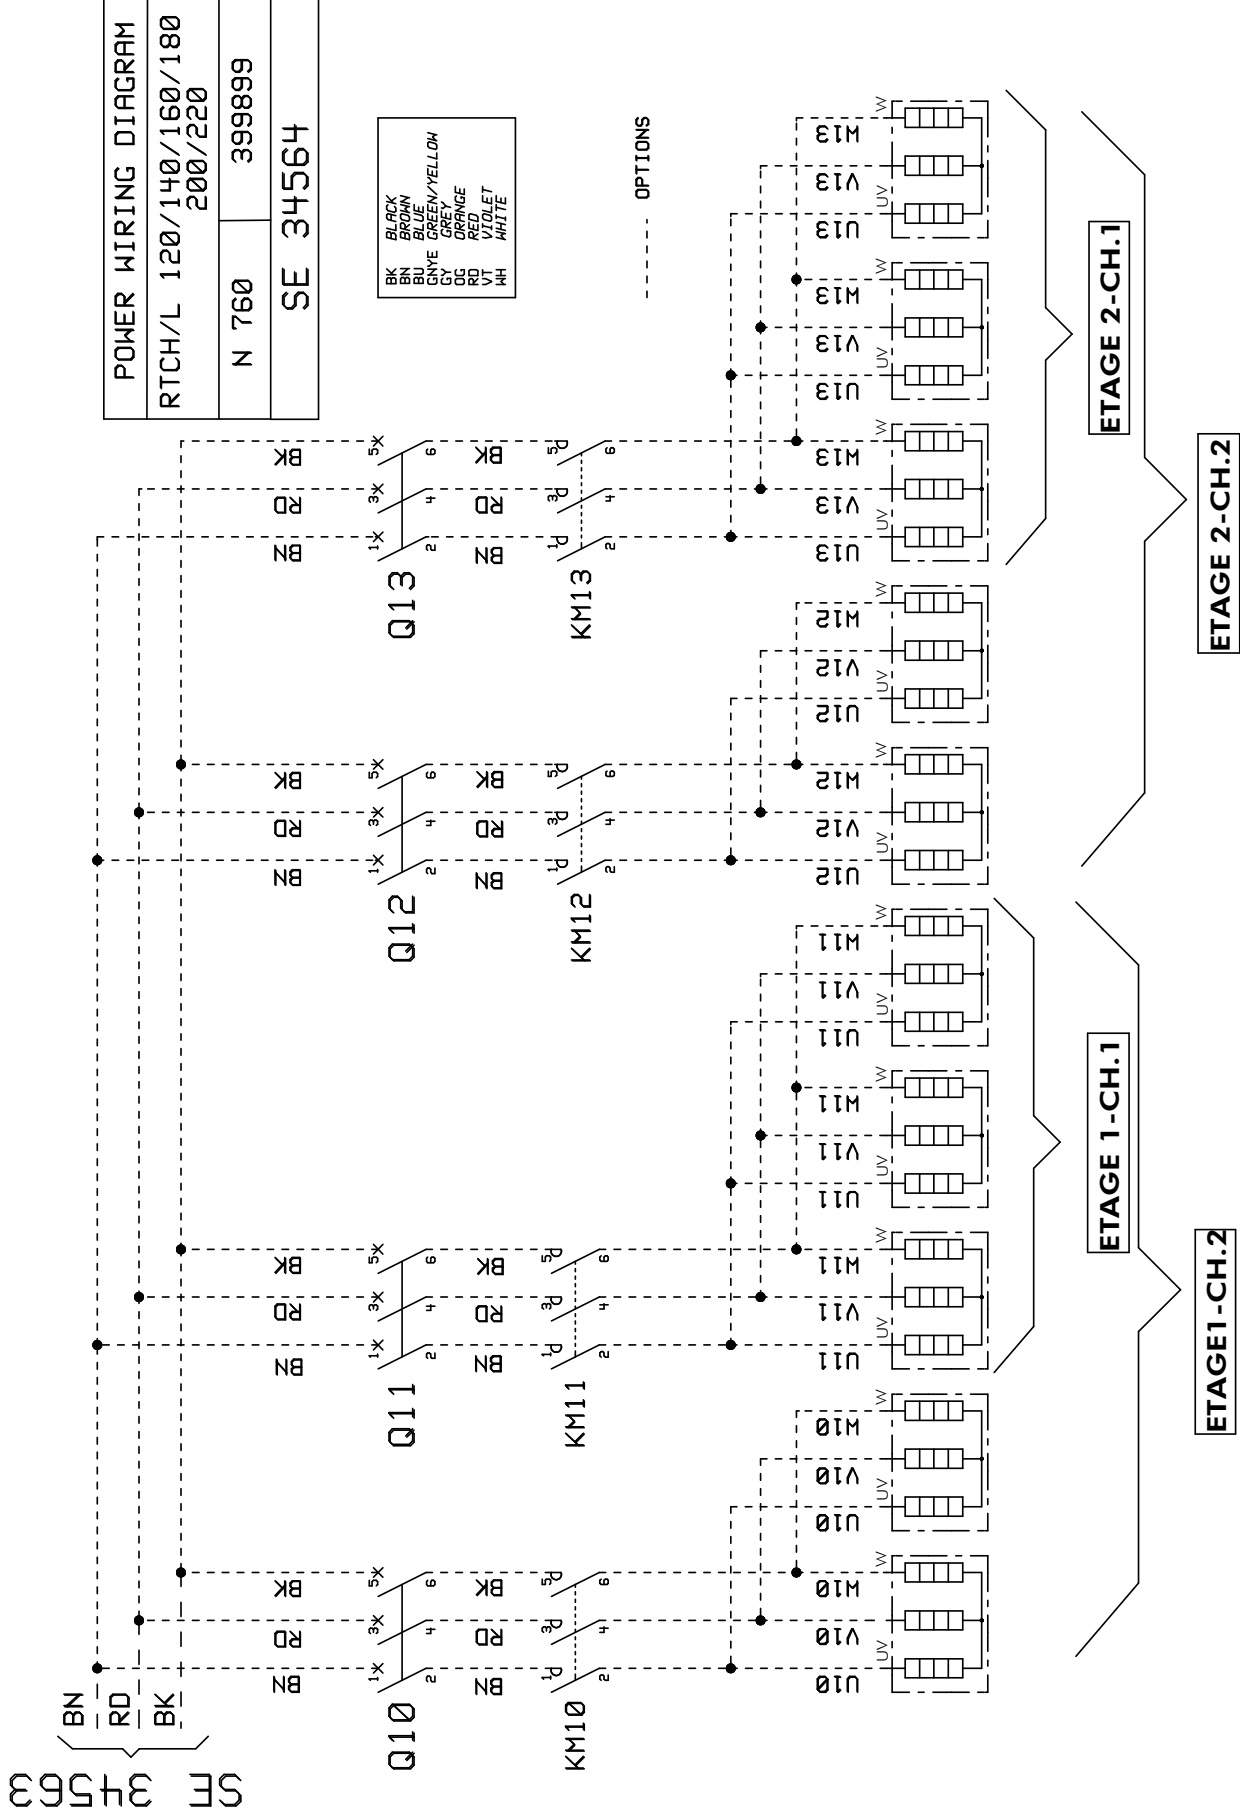




POWER WIRING DIAGRAM	
RTCH 200/220	
N 760	3991095
SE 3892	

BK	BLACK
BN	BROWN
BU	BLUE
GY	GREEN/YELLOW
OG	GREY
OR	ORANGE
VD	VIOLET
WH	WHITE

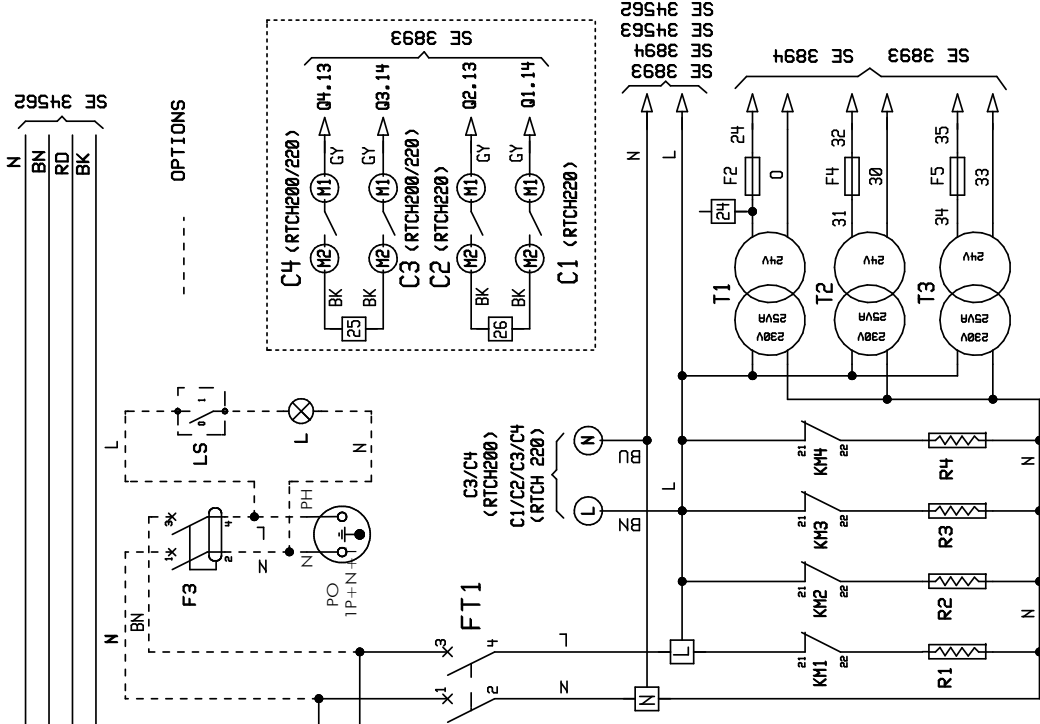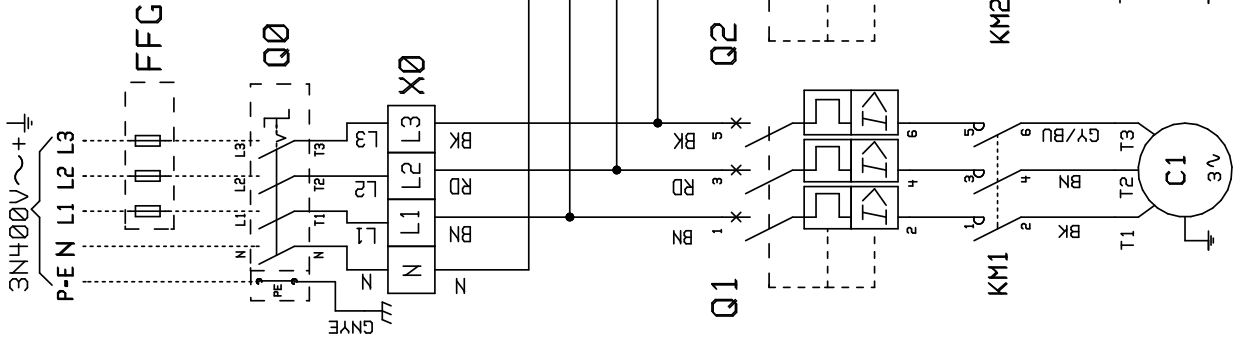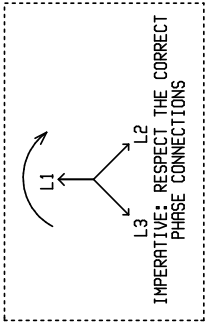

POWER WIRING DIAGRAM	
RTCL 100/120/140/160	
N 760	399932
SE 3542 A	

BK	BLACK
BN	BROWN
BL	BLUE
GY	GREEN/YELLOW
OR	ORANGE
RD	RED
VT	VIOLET
WH	WHITE

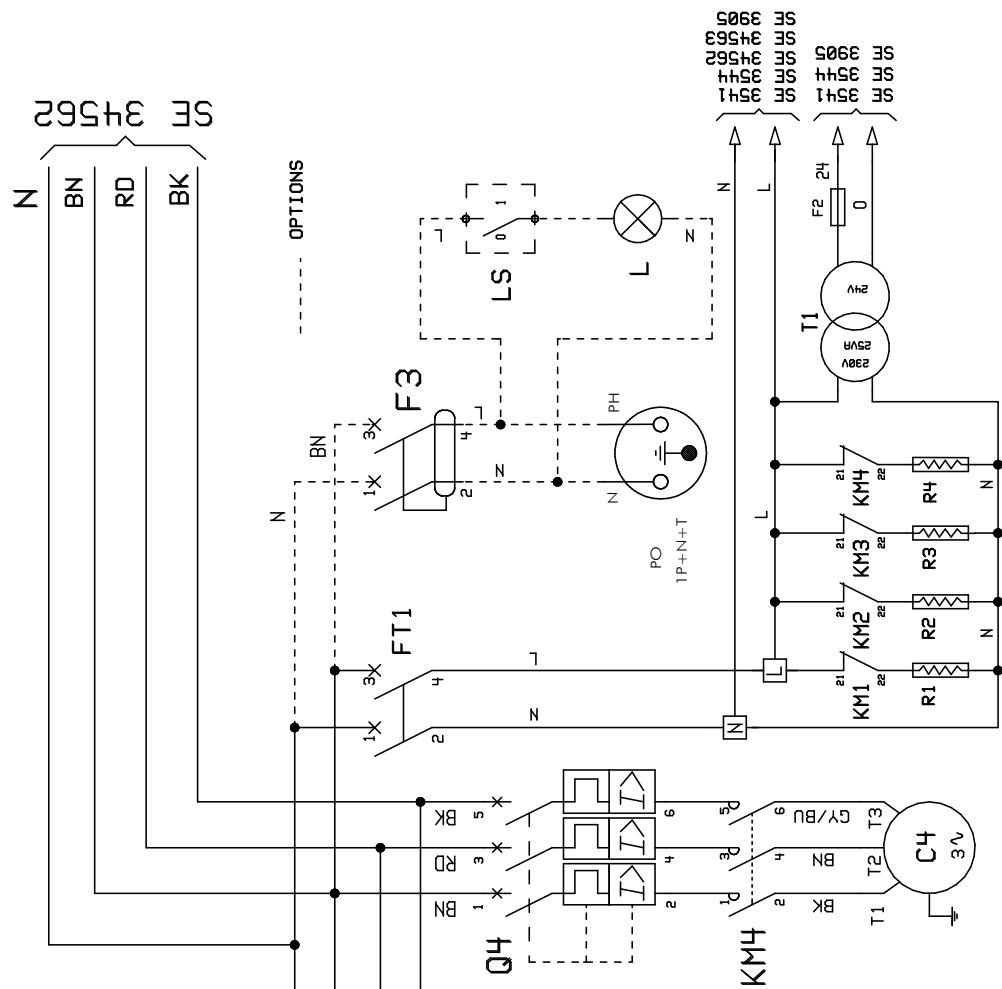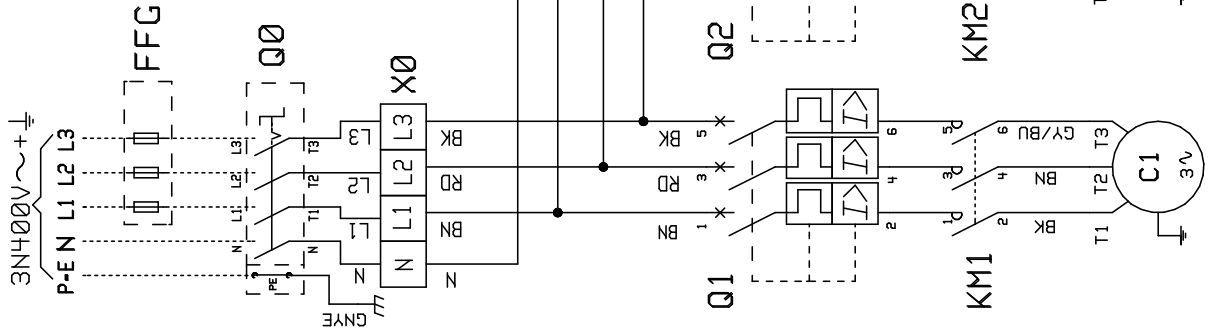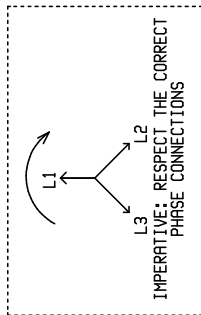

APPENDIX / ANNEXE / ANLAGE / ALLEGATO / ANEXO

AERAILIC ADJUSTMENT (WITHOUT OPTION)

CARACTERISTIQUES AERAILIQUES (SANS OPTION)


REGELUNG DES LÜFTERSYSTEMS (OHNE OPTION)

REGOLAZIONE DEL SISTEMA DI TRATTAMENTO DELL'ARIA (SENZA OPZIONE)

AJUSTE DEL ISTEMA AEROLICO (SIN OPCIÓN)


RTC 100

ADH500

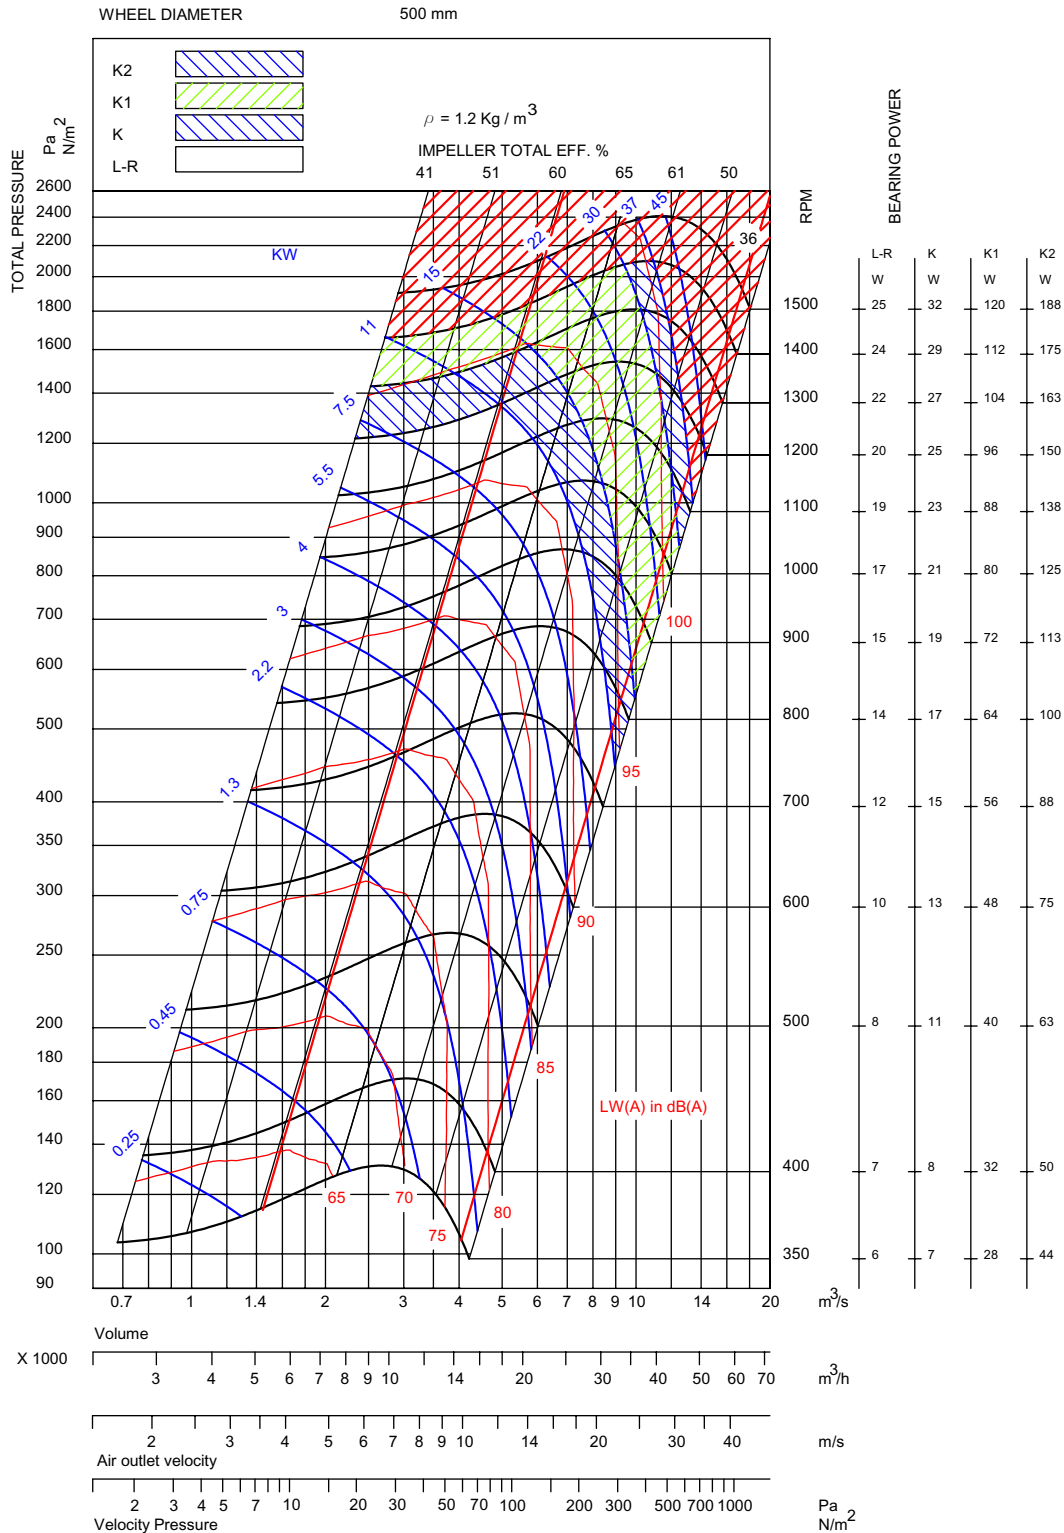


Performance shown is for installation type B, free inlet - ducted outlet, and doesn't include the effects of appurtenances in the airstream.
Power rating kW doesn't include drive losses.
The AMCA Certified Ratings Seal applies to Air Performance only.

RDH500

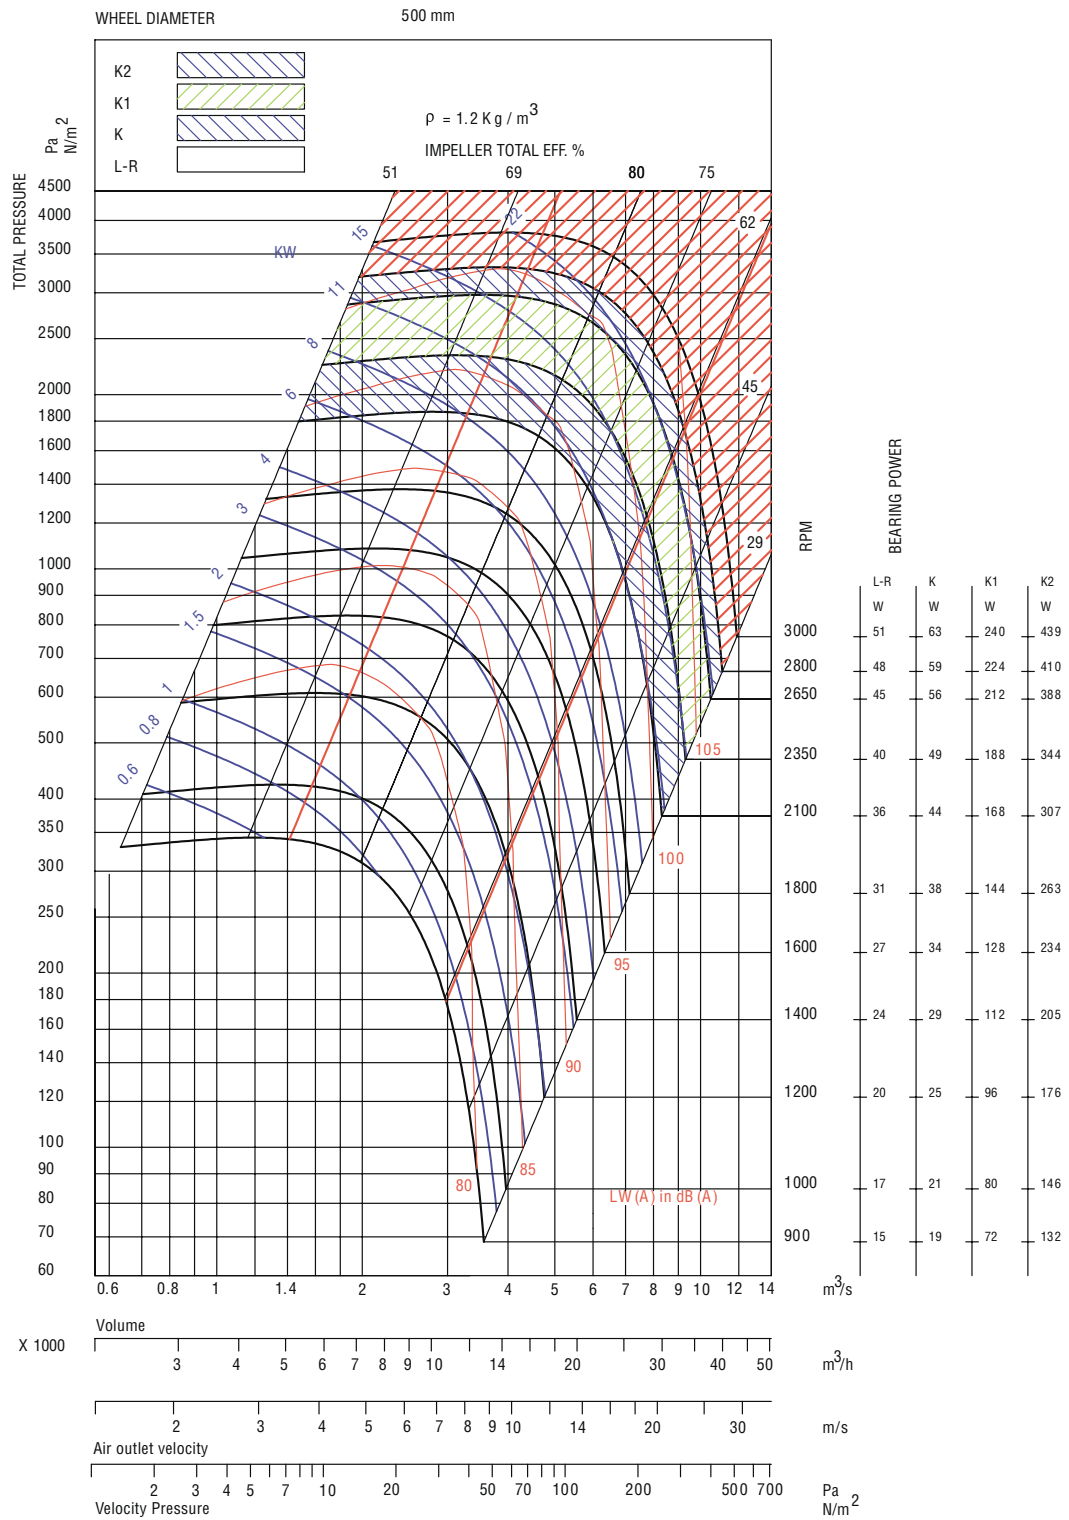


Performance shown is for installation type B, free inlet- ducted outlet, and doesn't include the effect of appuntenances in the airstream.
 Power rating kW doesn't include drive losses.
 The AMCA Certified Ratings Seal applies to Air Performance only.

ADH560

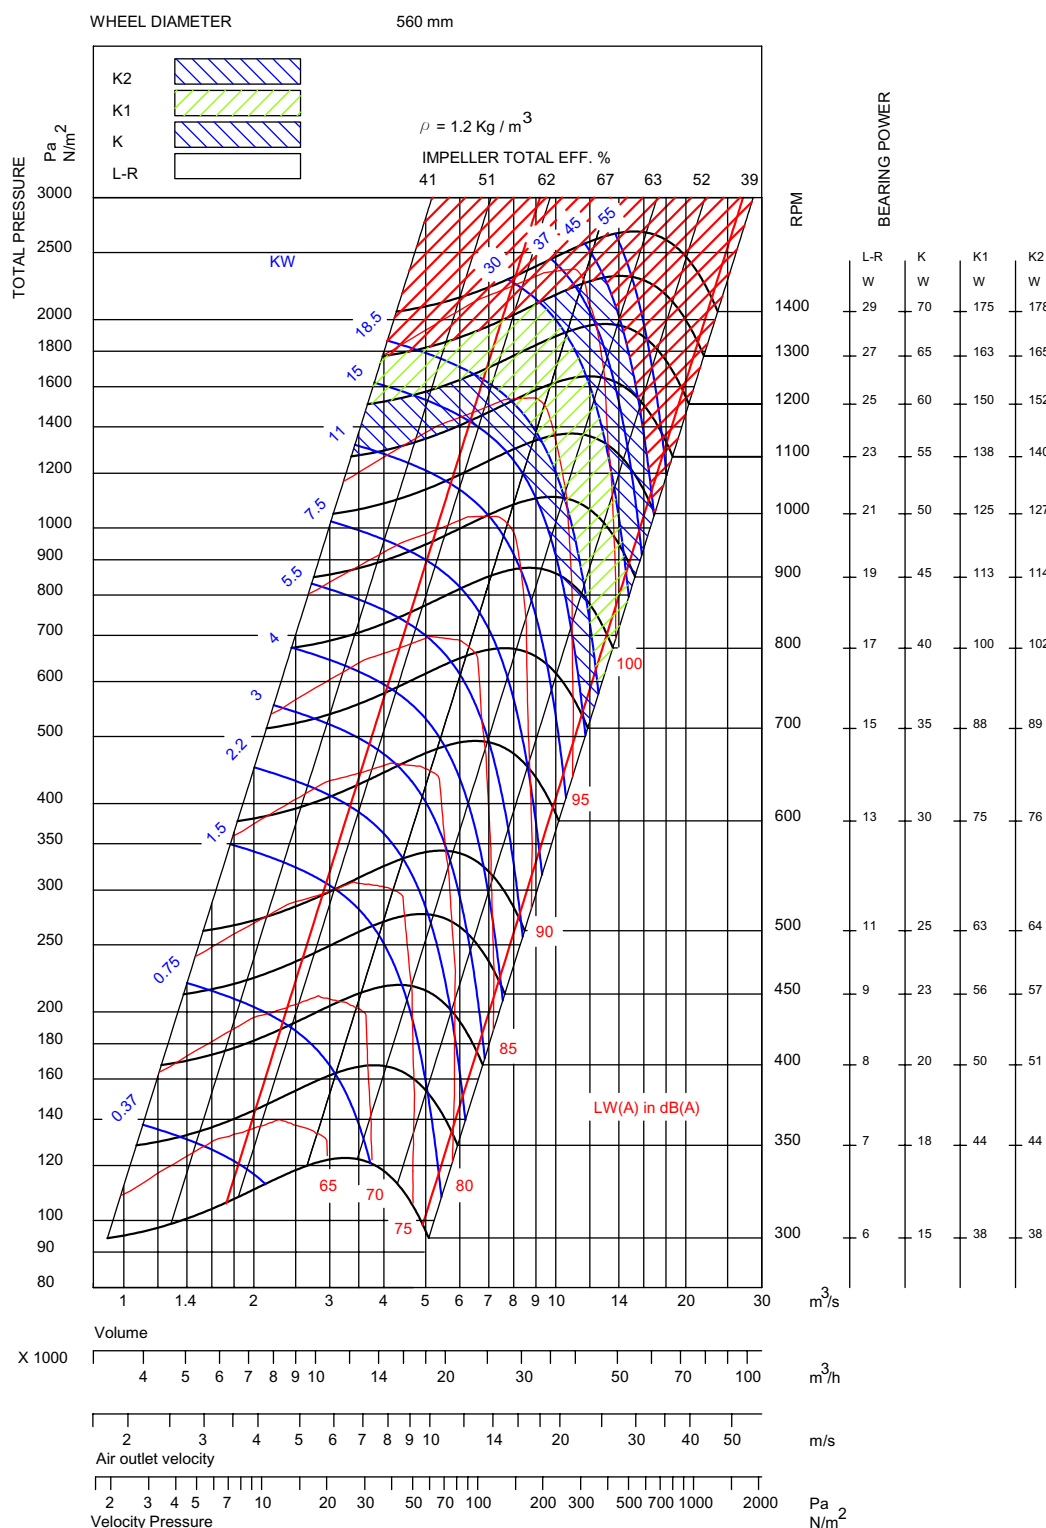


Performance shown is for installation type B, free inlet - ducted outlet, and doesn't include the effects of appurtenances in the airstream.
Power rating kW doesn't include drive losses.
The AMCA Certified Ratings Seal applies to Air Performance only.

RDH560

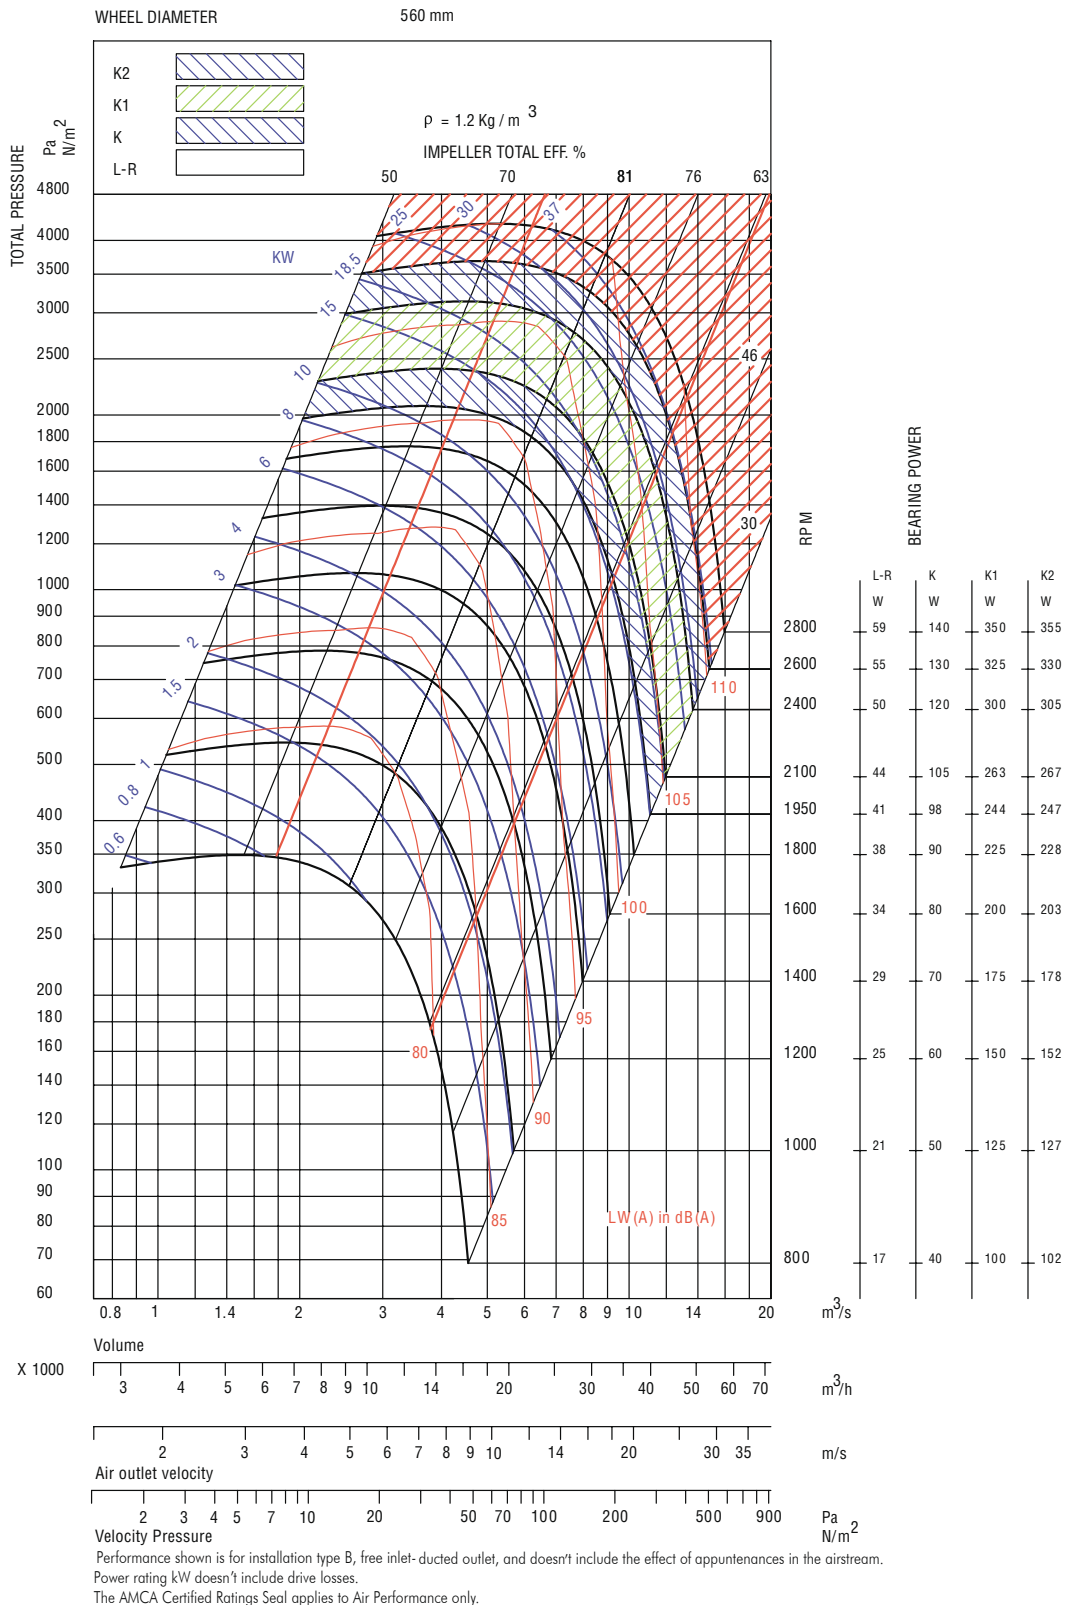


ADH710

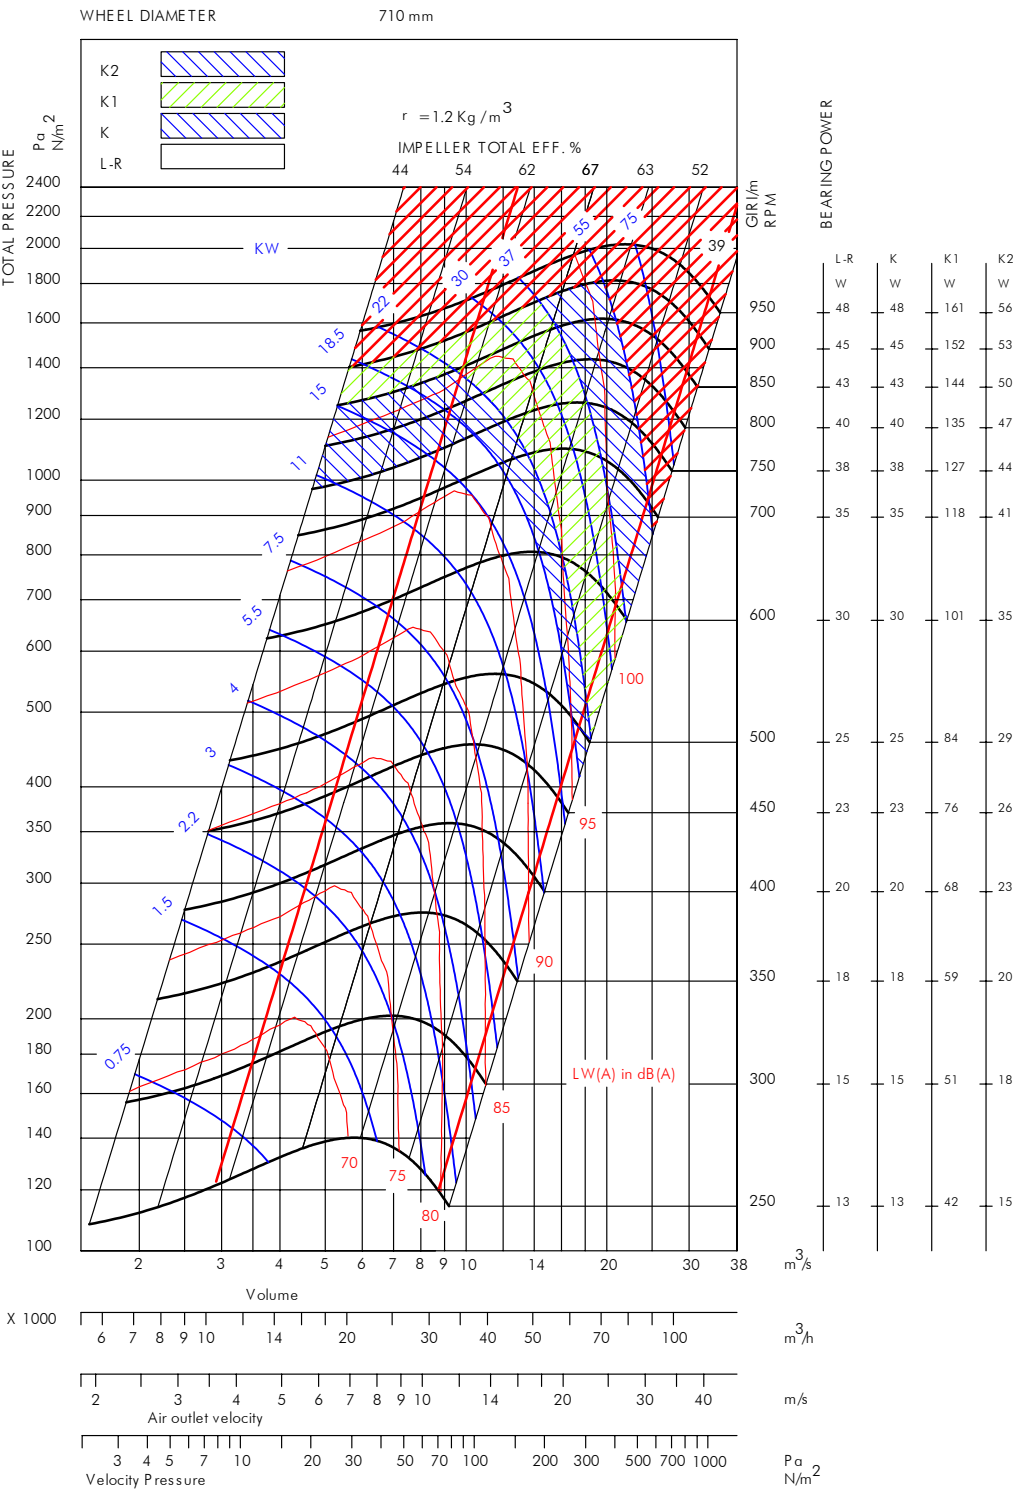


Performance shown is for installation type B, free inlet- ducted outlet, and doesn't include the effect of appuntenances in the airstream.
Power rating kW doesn't include drive losses.
The AMCA Certified Ratings Seal applies to Air Performance only.

RDH710

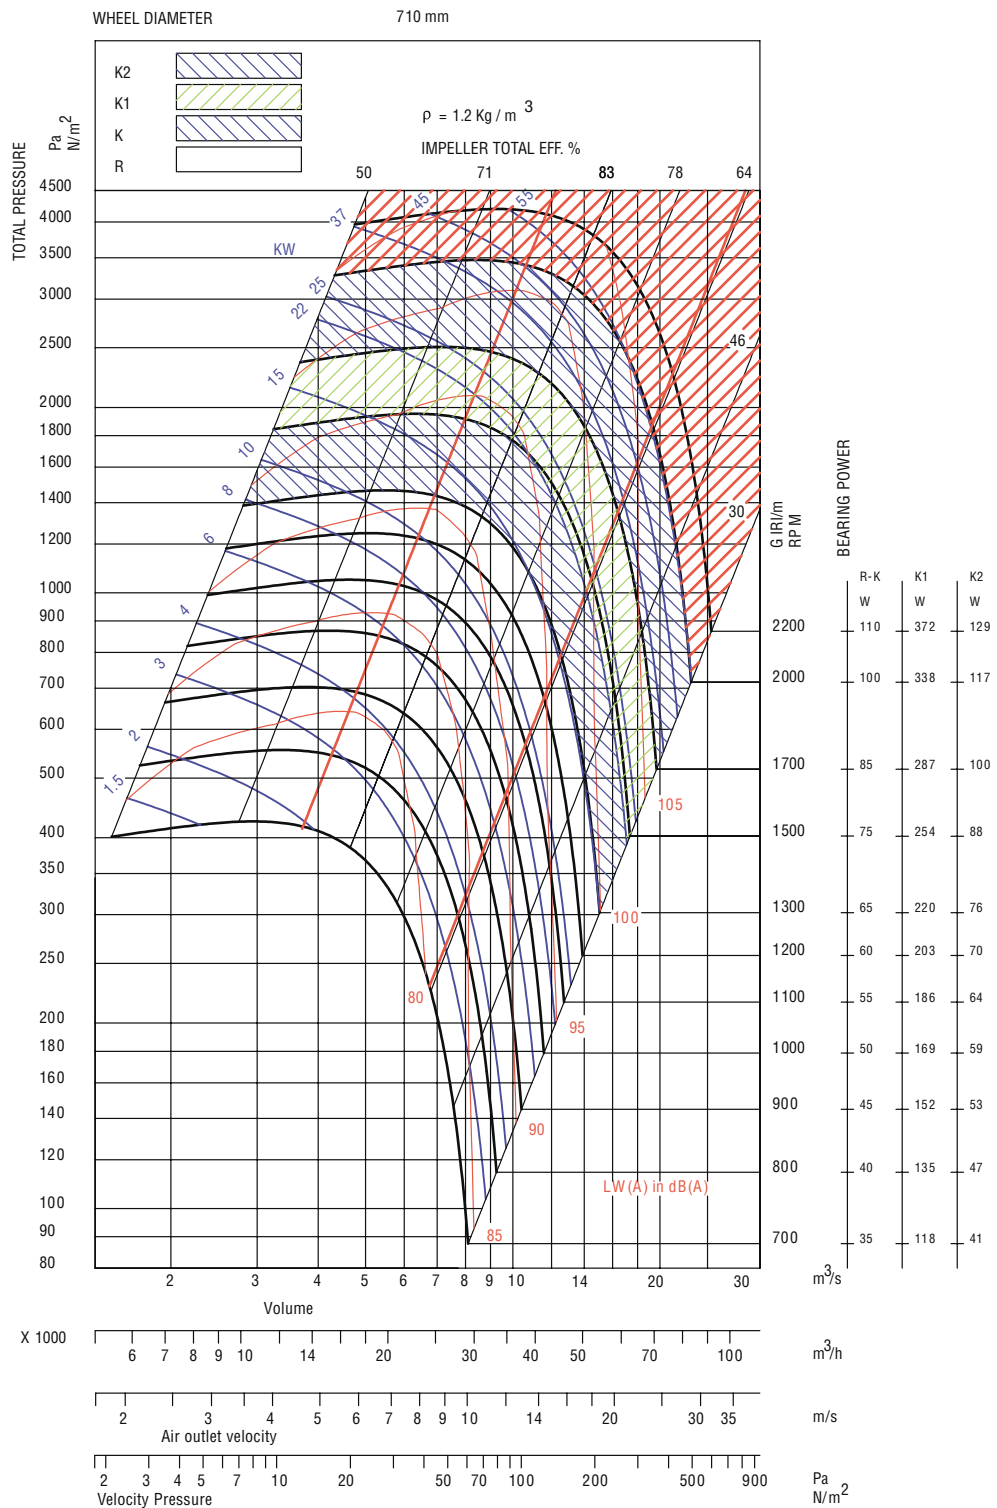

Performance shown is for installation type B, free inlet- ducted outlet, and doesn't include the effect of appuntenances in the airstream.
Power rating kW doesn't include drive losses.
The AMCA Certified Ratings Seal applies to Air Performance only.

ADH630

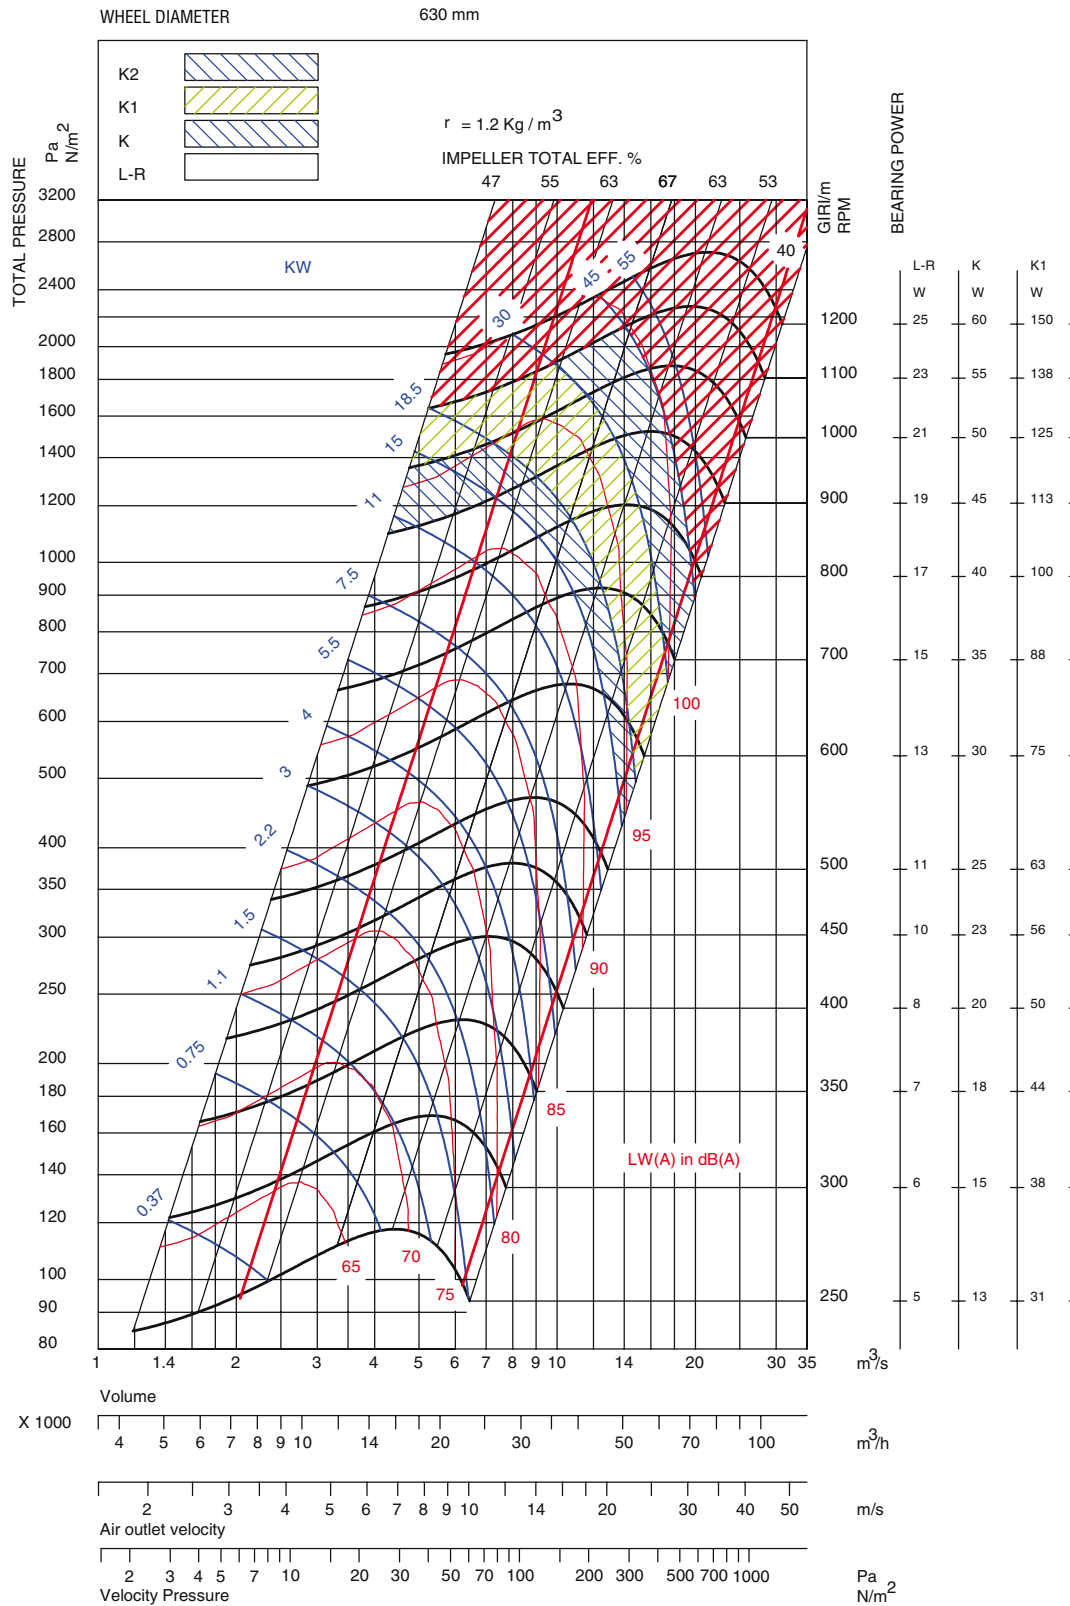

Performance shown is for installation type B, free inlet-
Power rating kW doesn
The AMCA Certified Ratings Seal applies to Air Performance only.

APPENDIX / ANNEXE / ANLAGE / ALLEGATO / ANEXO

START UP FORM / FICHE DE DEMARRAGE

This Appliance has been handed-over

Site:

User:

by (Name of Technician):

Company:

Date: Signature

ALL OPERATIONS, SAFETY MAINTENANCE AND RECOMMANDATIONS HAVE BEEN EXPLAINED TO THE USER

Please, return one Copy of this Form to our ASTS department

THIS DOCUMENT IS MANDATORY TO START UNIT WARRANTY

SIZE RTL/RTCL		Unit S/N	
SIZE RTH/RTCH		Comp 1 S/N	
		Comp 2 S/N	
		Comp 3 S/N	
		Comp 4 S/N	

Options	Yes	No
Air filter		
Dirty filter switch		
Air flow switch		
Economiser		
Electric heat		
hot water coil		
All season kits		
Smoke detector		

Installation	a =	m	Comp1 oil level	☐	
d =	m		Comp2 oil level	☐	
		c =	m	Comp3 oil level	☐
		b =	m	Comp4 oil level	☐

R407C	R410
-------	------

Software version

Unit installation	Floor		Roof		Roofcurb	
Rotation sens	Comp 1	Comp 2	Comp 3	Comp 4		
Rotation sens	Outdoor fan (OFAN)	Main blower (IFAN)	Exhaust blower			

Power supply	L1-L2		✓	L1-L3		✓	PC Board IATC		✓
	L1-N		✓	L2-L3		✓			

IFAN - Indoor blower			
	OK	NON	Motor pulley type (reference)
Motor fixation			Blower pulley type (reference)
Blower fixation			Belt reference
Pulley alignment			Int on motor plate / Overload setting
Pulley fixation			Current (Ph1/Ph2/Ph3)
Belt tensionning			Measured airflow

Safety device check Circuit 1	OK	Value	Safety device check Circuit 2	OK	Value
Low pressure Switch (LP)					
High pressure Switch (HP)					

OFAN	1			2			3			4		
	Ph1	Ph2	Ph3	Ph1	Ph2	Ph3	Ph1	Ph2	Ph3	Ph1	Ph2	Ph3
Absorbed current (A)												

APPENDIX / ANNEXE / ANLAGE / ALLEGATO / ANEXO

COOLING MODE	Comp 1			Comp 2			Comp 3			Comp 4		
	Ph1	Ph2	Ph3	Ph1	Ph2	Ph3	Ph1	Ph2	Ph3	Ph1	Ph2	Ph3
Absorbed current (A)												
COOLING MODE	Circuit 1						Circuit 2					
RAT (Room T°)	°C						°C					
OAT (Outdoor T°)	°C						°C					
SAT (Supply T°)	°C						°C					
OCT (Condensing T°)	°C						°C					
RAH (Room humidity)	%rH						%rH					
OAH (Outdoor humidity)	%rH						%rH					
IAQ (Air quality sensor)	%						%					
Enthal room	KJ/Kg						KJ/Kg					
Enthal out	KJ/Kg						KJ/Kg					
Cons Enthal	°C						°C					
LP (Evaporating pressure)	Bar						Bar					
T° (evap)	°C						°C					
T° (asp/suction)	°C						°C					
SH (Superheat)	°C						°C					
LP (Condensing pressure)	Bar						Bar					
T° (cond)	°C						°C					
T° liquide	°C						°C					
T° s/s refroid	°C						°C					

HEATING MODE	Comp 1			Comp 2			Comp 3			Comp 4		
	Ph1	Ph2	Ph3	Ph1	Ph2	Ph3	Ph1	Ph2	Ph3	Ph1	Ph2	Ph3
Absorbed current (A)												
HEATING MODE	Circuit 1						Circuit 2					
RAT (Room T°)	°C						°C					
OAT (Outdoor T°)	°C						°C					
SAT (Supply T°)	°C						°C					
OCT (Condensing T°)	°C						°C					
RAH (Room humidity)	%rH						%rH					
OAH (Outdoor humidity)	%rH						%rH					
IAQ (Air quality sensor)	%						%					
Enthal room	KJ/Kg						KJ/Kg					
Enthal out	KJ/Kg						KJ/Kg					
Cons Enthal	°C						°C					
LP (Evaporating pressure)	Bar						Bar					
T° (evap)	°C						°C					
T° (asp/suction)	°C						°C					
SH (Superheat)	°C						°C					
LP (Condensing pressure)	Bar						Bar					
T° (cond)	°C						°C					
T° liquide	°C						°C					
T° s/s refroid	°C						°C					

Comments / Others measurement if options mounted:

Signature

EC Compliance declaration

Under our own responsibility, we declare that the product designated in this manual comply with the provisions of the EEC directives listed hereafter and with the national legislation into which these directives have been transposed.

Déclaration CE de conformité

Nous déclarons sous notre responsabilité que les produits désignés dans la présente notice sont conformes aux dispositions des directives CEE énoncées ci-après et aux législations nationales les transposant.

EG-Konformitätserklärung

Wir erklären in eigener Verantwortung, dass die in der vorliegenden Beschreibung angegebenen Produkte den Bestimmungen der nachstehend erwähnten EG-Richtlinien und den nationalen Gesetzesvorschriften entsprechen, in denen diese Richtlinien umgesetzt sind.

Dichiarazione CE di conformità

Dichiariamo, assumendone la responsabilità, che i prodotti descritti nel presente manuale sono conformi alle disposizioni delle direttive CEE di cui sott e alle legislazioni nazionali che li recepiscono

Declaración CE de conformidad

Declaramos, bajo nuestra responsabilidad, que los productos designados en este manual son conformes a las disposiciones de las directivas CEE enunciadas a continuación, así como a las legislaciones nacionales que las contemplan.

RTCL 100 - 120 - 140 - 160
RTCH 100 - 120 - 140 - 160 - 180 - 200 - 220

MACHINERY DIRECTIVE 2006 / 42 / EEC
LOW VOLTAGE DIRECTIVE (DBT) 2006 / 95 / EEC
ELECTROMAGNETIC COMPATIBILITY DIRECTIVE 2004 / 108 / EEC
BURNING GASEOUS FUEL 90 / 396 / EEC
PRESSURISE EQUIPMENT DIRECTIVE (DESP) 97 / 23 / EEC
SUB-MODULE A1 CATEGORY II:

NOTIFIED BODY: TÜV RHEINLAND – 62 BIS, AVENUE HENRI GINOX – 92120 MONTROUGE - FRANCE
THE PRODUCTS ARE PROVIDED WITH CE 0035 MARKING OF CONFORMITY

DIRECTIVE MACHINES 2006 / 42 / C.E.E.
DIRECTIVE BASSE TENSION (DBT) 2006 / 95 / C.E.E.
DIRECTIVE COMPATIBILITE ELECTROMAGNETIQUE 2004 / 108 / C.E.E
APPAREIL A GAZ 90 / 396 / C.E.E
DIRECTIVE DES EQUIPEMENTS SOUS PRESSION (DESP) 97 / 23 C.E.E.
SOUS-MODULE A1 CATEGORIE II :

AVEC SURVEILLANCE PAR LE TÜV RHEINLAND – 62 BIS, AVENUE HENRI GINOX – 92120 MONTROUGE - FRANCE
LES PRODUITS SONT FOURNIS AVEC LE MARQUAGE DE CONFORMITE CE 0035

RICHTLINIE MASCHINEN 2006 / 42 / EG
RICHTLINIE NIEDERSpannung (DBT) 2006 / 95 / EG
RICHTLINIE ELEKTROMAGNETISCHE VERTRÄGLICHKEIT 2004 / 108 / EG
GASVERBRAUCHSEINRICHTUNG 90 / 396 / EG
RICHTLINIE FÜR AUSTRÜSTUNGEN UNTER DRUCK (DESP) 97 / 23 / EG
UNTER MODUL A1, KATEGORIE II :

MIT KONTROLLE DURCH DEN TÜV RHEINLAND – 62 BIS, AVENUE HENRI GINOX – 92120 MONTROUGE - FRANCE
DIE PRODUKTE WERDEN MIT DER MARKIERUNG CONFORMITE CE 0035 GELIEFERT.

DIRETTIVA MACHINE 2006 / 42 / CEE
DIRETTIVA BASSA TENSIONE (DBT) 2006 / 95 / CEE
DIRETTIVA COMPATIBILITA ELETTRONMAGNETICA 2004 / 108 / CEE
APPARECCHIO A GAS 90 / 396 / CEE
DIRETTIVA DEGLI IMPIANTI SOTTO PRESSIONE (DESP) 97 / 23 / CEE
SOTTOMODULO A1, CATEGORIA II :

CON SUPERVISION POR EL TÜV RHEINLAND – 62 BIS, AVENUE HENRI GINOX – 92120 MONTROUGE - FRANCE
I PRODOTTI SONO FORNITI CON LA MARCATURA DI CONFORMITE CE 0035.

DIRETTIVA MAQUIAS 2006 / 42 / CEE
DIRECTIVA BAJA TENSION (DBT) 2006 / 95 / CEE
DIRECTIVA COMPATIBILIDAD ELECTROMAGNETICA 2004 / 108 / CEE
APARATO DE GAS 90 / 396 / CEE
DIRECTIVA DE LOS EQUIPOS A PRESION (DESP) 97 / 23 / CEE
BAJA MODULO A1, CATEGORIA II :


CON SORVEGLIANZA DAL TÜV RHEINLAND – 62 BIS, AVENUE HENRI GINOX – 92120 MONTROUGE - FRANCE
LOS PRODUCTOS SE PROPORCIONAN CON EL MARCADO DE CONFOR CE 0035.

And that the following paragraphs of the harmonised standards have been applied.
Et que les paragraphes suivants les normes harmonisées ont été appliqués.
Und dass die folgenden Paragraphen der vereinheitlichten Normen Angewandt wurden.
E che sono stati applicati i seguenti paragrafi delle norme armonizzate.
Y que se han aplicado los siguientes apartados de las normas armonizadas.

EN 60 204-1
EN 61 000-3-12

EN 61 000-6-2
EN 378-1

EN 61 000-6-4
EN 378-2


A Tilières sur Avre
77570 - FRANCE
Le: 15/07/2010
Sébastien Blard
Quality Manager
AIRWELL Industrie France

AIRWELL INDUSTRIE FRANCE

Route de Verneuil
27570 Tillières-sur-Avre
FRANCE

☎ : +33 (0)2 32 60 61 00

☎ : +33 (0)2 32 32 55 13



As part of our ongoing product improvement programme, our products are subject to change without prior notice. Non contractual photos.

Dans un souci d'amélioration constante, nos produits peuvent être modifiés sans préavis. Photos non contractuelles.

In dem Bemühen um ständige Verbesserung können unsere Erzeugnisse ohne vorherige Ankündigung geändert werden. Fotos nicht vertraglich bindend.

A causa della politica di continua miglioria posta in atto dal costruttore, questi prodotti sono soggetti a modifiche senza alcun obbligo di preavviso. Le foto pubblicate non danno luogo ad alcun vincolo contrattuale.

Con objeto de mejorar constantemente, nuestros productos pueden ser modificados sin previo aviso. Fotos no contractuales.

