

Airwell

Service Manual

YUDE Series

lı	Outdoor Units		
CADE024	DBDE024	FADE024	YUDE024
CADE030	DBDE030	FADE030	YUDE030
CADE036	DBDE036	FADE036	YUDE036
CADE036	DBDE036	FADE036	YUDE036T







REFRIGERANT

R410A

HEAT PUMP

June-2013

SM YUDE 1-A.1 GB

Version:1

LIST OF EFFECTIVE PAGES

Note: Changes in the pages are indicated by a "Revision#" in the footer of each effected page (when none indicates no changes in the relevant page). All pages in the following list represent effected/ non effected pages divided by chapters.

Dates of issue for original and changed pages are:

Total number of pages in this publication is 117 consisting of the following:

Page	Revision	Page	Revision	Page	Revision
No.	No. #	No.	No. #	No.	No. #

^{*} Zero in this column indicates an original page.

Table of Contents

1.	INTRODUCTION	1-1
2.	PRODUCT DATA SHEET	2-1
3.	RATING CONDITIONS	3-1
4.	OUTLINE DIMENSIONS	4-1
5.	PERFORMANCE DATA	5-1
6.	AIRFLOW CURVES	6-1
7.	ELECTRICAL DATA	7-1
8.	WIRING DIAGRAMS	8-1
9.	REFRIGERATION DIAGRAMS	9-1
10.	TUBING CONNECTIONS	10-1
11.	CONTROL SYSTEM	11-1
12.	TROUBLESHOOTING	12-1
13.	EXPLODED VIEWS AND SPARE PART LISTS	13-1
14.	APPENDIX	. 14-1

INTRODUCTION 1.

1.1 General

The YUDE series DC inverter is major designed for light commercial air-conditioning needs with the DC inverter technology, this series of products provides the most comfort and energy saving. This new line come with the comply to the new ECO Design regulation of 2014.

- The outdoor can match following indoors:
- -Indoor Floor/Ceiling DCI: 3 sizes including 24/30/36kBtu/h
- -Indoor Cassette DCI: 3 sizes including 24/30/36Btu/h
- -Indoor Ducted DCI:3 sizes including 24/30/36kBtu/h
- The outdoor unit has two options of 1 phase/3 phases:
- 1 Phase: 3 sizes including 24/30/36kBtu/h
- 3 Phase: 36kBtu/h

1.2 **Main Features**

- DCI R410A models
- Auto mode.
- SEER / SCOP A-A level for all models.
- Cooling
- Heating
- Dehumidification
- Sleep mode
- ON/OFF timer
- Auto swing (cassette and floor ceiling)
- 4-dimension swing(cassette only)
- · Intelligent deicing
- Memory from power failure
- · Cold air prevention in heating
- Self diagnostic (Error indications) for ease of maintenance
- Outdoor -15 C for cooling



1.3. Indoor Unit

The CADE indoor unit is ceiling mounted, the FADE indoor unit is ceiling or floor mounted, the DBDE indoor unit is a low silhouette ducted unit and can be easily fitted to many types of residential and commercials applications.

It includes:

- · Coil with hydrophilic aluminum fins.
- · Motorized flaps (step motors) for CADE and FADE
- · Advanced electronic control box assembly

1.4 Filtration

The series presents air filters:

· Easily accessible, and re-usable pre-filters (mesh)

1.5 Control

The microprocessor indoor controller, and an infrared remote control and wired controller, supplied as standard, provide complete operating function and programming. For further details please refer to the Operation Manual, Appendix A.

1.6 **Outdoor Unit**

The outdoor units can be installed as floor or wall mounted units by using a wall supporting bracket. The metal sheets are protected by anti- corrosion paint work allowing long life resistance. All outdoor units are pre-charged. For further information please refer to the Product Data Sheet, Chapter 2.

It includes:

- Compressor mounted in a soundproofed compartment:
- Axial fan.
- Outdoor coil with hydrophilic louver fins for RC units.
- · Outlet air fan grill.
- Service valves "flare" type connection.

1.7 **Tubing Connections**

Flare type interconnecting tubing to be produced on site. For further details please refer to the Installation Manual, Chapter 10.

1.8 **Accessories**

RCWE Wall Mounted Remote Control

The RCWE remote control is mounted on the wall, and controls the unit either as an infrared remote control or as a wired controller. The wired controller can control up to 10 indoor units with the same program settings and adjustment.

For further details please refer to the Technical Service Manual.

1.9 **Inbox Documentation**

Each unit is supplied with its own installation and operation manuals.



1.10 Matching Table

	INDOOR UNITS						
OUTDOOR	AWSI-DBDE024-N11	AWSI-DBDE030-N11	AWSI-DBDE036-N11				
UNITS	AWSI-CADE024-N11	AWSI-CADE030-N11	AWSI-CADE036-N11				
	AWSI-FADE024-N11	AWSI-FADE030-N11	AWSI-FADE036-N11				
AWAU-YUDE024-H11	1						
AWAU-YUDE030-H11		1					
AWAU-YUDE036-H11			1				
AWAU-YUDE036-H13			1				



PRODUCT DATA SHEET 2.

AWSI-DBDE024-N11 // AWAU-YUDE024-H11 2.1

	el Indoor Unit			AWAU-DBDE024-N11			
	el Outdoor Unit				AWAU-YUDE024-H11		
Insta	allation Method of F	Pipe			Fla	red	
Cha	racteristics			Units	Cooling	Heating	
						Average	
	acity (1)			kW	7,0(2,2-8,5)	8,0(2,4-9,5)	
Pdes				kW	7,0	7,0	
	R / SCOP (2)			W/W	5.1	3.8	
	rgy efficiency class				A	А	
	ual energy consum	ption		kWh	480	2579	
Tbiv				°C	N/A	-7	
Tol				°C	N/A	-15	
	er supply			V/Ph/Hz		Single/50Hz	
Circ	uit breaker rating(In		utdoor)	A		-20	
	Fan type & quant	ity			Centrifu	gal fan-2	
	Fan speeds		H/M/L	RPM			
	Air flow (3)		H/M/L	m3/hr	1400/1300/1200/1000	1400/1300/1200/1000	
	External static pro		Min-Max	Pa	<u> </u>	-100)	
	Sound power leve		H/M/L	dB(A)		4	
씸	Sound pressure I		H/M/L	dB(A)		/44/40	
0	Moisture removal			l/hr		,3	
NDOOR	Condensate drain	n tube I.I		mm	!	mm	
=	Dimensions		WxHxD	mm	l	68x558	
	Weight			kg	34		
	Package dimensions WxHxD			mm	1348x597x283		
	Packaged weight			kg		9	
	Units per pallet			units		7	
	Stacking height			units	7		
	Refrigerant contro				EEV De la contra		
	Compressor type				Rotary DC Inverter		
	Fan type & quant	ity	1		Axia	il x 1	
	Fan speeds		H/L	RPM			
	Air flow		H/L	m3/hr	<u> </u>	00	
	Sound power leve		H/L	dB(A)		5	
	Sound pressure I	evel(5)	H/L	dB(A)		7	
	Dimensions		WxHxD	mm		90x427	
씸	Weight			kg	6		
DOOR	Package dimensi		WxHxD	mm		55x488	
	Packaged weight			kg		2	
OU	Units per pallet			Units		3	
	Stacking height			Units	L	2	
	Refrigerant type				R4	10A	
	tubing length)	• •	ndard connecting	kg(5m)		.2	
	Additional charge			gr / 1m		0m 60g/m	
		Liquid		In.(mm)		9.53)	
	Connections	Suction		In.(mm) m.		15.88)	
			3 - 3		Max.30		
			eight difference	m.	<u> </u>	x.15	
	ration control type				Remote control/Wi	red Remote control	
	ting elements			kW		-	
Othe	ers					-	

⁽¹⁾ Rating conditions in accordance with ISO 5151 and ISO 13253 (for ducted units).

⁽²⁾ SEER / SCOP calculation accordance with EN14825.

⁽³⁾ Airflow in ducted units; at nominal external static pressure.

⁽⁴⁾ Sound power in ducted units is measured at air discharge.(5) Sound pressure level measured at 1.4 meter distance from unit.



AWSI-FADE024-N11 // AWAU-YUDE024-H11 2.2

	el Indoor Unit			AWAU-FADE024-N11			
	el Outdoor Unit				AWAU-YUDE024-H11		
Insta	allation Method of F	Pipe			Fla		
Characteristics				Units	Cooling	Heating	
0	: 4 (1)			1-10/		Average	
	acity (1)			kW	7,0(2,4-8,2)	8,0(2,4-9,0)	
Pde				kW	7,0	7,0	
	R / SCOP (2)			W/W	5.1	3.8	
	rgy efficiency class			1100	A 100	A	
	ual energy consum	ption		kWh	480	2579	
Tbiv				°C	N/A	<u>-7</u>	
Tol				°C	N/A	-15	
	er supply			V/Ph/Hz	220-240V/S		
Circ	uit breaker rating(Ir		utdoor)	Α	10-		
	Fan type & quant	ity	1.1/8.4/1	DDM	Centrifuç	gal fan-2	
	Fan speeds		H/M/L	RPM	4000/4000/000/000	1000/1000/1000/1000	
	Air flow (3)		H/M/L	m3/hr	1200/1000/900/800	1200/1000/900/800	
	External static pro		Min-Max	Pa	(
	Sound power leve		H/M/L	dB(A)	6		
S	Sound pressure I		H/M/L	dB(A)	49/48/		
INDOOR	Moisture removal		<u> </u>	l/hr	2		
2	Condensate drain	i tube i.i		mm	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		
_	Dimensions		WxHxD	mm	1220x2		
	Weight		kg	40			
	Package dimensions WxHxD			mm	1343x823x315		
	Packaged weight			kg	50		
	Units per pallet			units	6		
	Stacking height			units	6 		
	Refrigerant contro						
	Compressor type				Rotary DC Inverter		
	Fan type & quant	ity	11/1	DDM	Axia	II X I	
	Fan speeds		H/L	RPM	40	00	
	Air flow	- 1(4)	H/L	m3/hr	40		
	Sound power leve		H/L	dB(A)		5	
	Sound pressure l	evei	H/L	dB(A)	5		
	Dimensions		WxHxD	mm	980x79		
DOOR	Weight Package dimensi	<u> </u>	WxHxD	kg	1002.40	<u>7</u> 55x488	
ŏ	Package diffierish		WXUXD	mm	7		
2	Units per pallet			kg Units	(
OUT	Stacking height			Units		2	
	Refrigerant type			Ullits	R4 ²		
					IN4	IOA	
	tubing length)	· .	ndard connecting	kg(5m)	2.		
	Additional charge			gr / 1m		m 60g/m	
		Liquid		In.(mm)		9.53)	
	Connections	Suction		In.(mm)	5/8"(1	<i></i>	
	between units	Max.tubing length		m.	Max.30		
	Max.height difference		m.		x.15		
	ration control type				Remote control/Wi	red Remote control	
	ting elements			kW	-	-	
Othe	ers				•	-	

⁽¹⁾ Rating conditions in accordance with ISO 5151 and ISO 13253 (for ducted units).(2) SEER / SCOP calculation accordance with EN14825.

⁽³⁾ Airflow in ducted units; at nominal external static pressure.

⁽⁴⁾ Sound power in ducted units is measured at air discharge.

⁽⁵⁾ Sound pressure level measured at 1.4 meter distance from unit.



2.3 AWSI-CADE024-N11 // AWAU-YUDE024-H11

	el Indoor Unit			AWAU-CADE024-N11		
Model Outdoor Unit					AWAU-YUDE024-H11	
Insta	allation Method of P	ipe			Flai	
Cha	racteristics			Units	Cooling	Heating Average
Capa	acity (1)			kW	7,0(2,4-8,5)	8,0(2,4-9,5)
Pdes				kW	7,0	7,2
	R / SCOP (2)			W/W	5.1	3.8
	gy efficiency class				A	A
	ual energy consum	ption		kWh	480	2653
Tbiv				°C	N/A	-7
Tol				°C	N/A	-15
Pow	er supply			V/Ph/Hz	220-240V/S	ingle/50Hz
	uit breaker rating(In	door-O	utdoor)	Α	10-	
	Fan type & quanti		,		Centrifug	al fan-2
	Fan speeds		H/M/L	RPM		
	Air flow (3)		H/M/L	m3/hr	1300	1300
	External static pre	essure	Min-Max	Pa	Ö	1
	Sound power leve		H/M/L	dB(A)	62	2
🗠	Sound pressure le	evel (5)	H/M/L	dB(A)	47/46/	42/38
NDOOR	Moisture removal			l/hr	2,	5
월	Condensate drain	tube I.I)	mm	25n	nm
=	Dimensions		WxHxD	mm	840x84	0x240
	Weight			kg	20	6
	Package dimensions WxHxD			mm	963x96	3x325
	Packaged weight			kg	33	2
	Units per pallet			units	6	i
	Stacking height			units	6	;
	Refrigerant contro				EE	V
	Compressor type,	model			Rotary DC Inverter	
	Fan type & quanti	ty			Axial x 1	
	Fan speeds		H/L	RPM		
	Air flow		H/L	m3/hr	400	
	Sound power leve		H/L	dB(A)	6	
	Sound pressure le	evel ⁽⁵⁾	H/L	dB(A)	5	
	Dimensions		WxHxD	mm	980x79	
œ	Weight			kg	6	
DOOR	Package dimension	ons	WxHxD	mm	1083x8	
	Packaged weight			kg	7:	
0	Units per pallet			Units	6	
	Stacking height			Units	2	
	Refrigerant type				R41	0A
	Refrigerant charg tubing length)	Refrigerant charge (standard connecting tubing length)			2.	2
	Additional charge	per 1 m	neter	gr / 1m	5m <l<30< td=""><td>m 60g/m</td></l<30<>	m 60g/m
		Liquid I		In.(mm)	3/8"(9	
	Connections	Suction		ln.(mm)	5/8"(1	
			bing length	m.	Max	
l		Max.he	eight difference	m.	Мах	
Оре	ration control type				Remote control/Wir	ed Remote control
	ting elements			kW	-	
Othe	ers				-	

⁽¹⁾ Rating conditions in accordance with ISO 5151 and ISO 13253 (for ducted units).(2) SEER / SCOP calculation accordance with EN14825.

⁽³⁾ Airflow in ducted units; at nominal external static pressure.

⁽⁴⁾ Sound power in ducted units is measured at air discharge.

⁽⁵⁾ Sound pressure level measured at 1.4 meter distance from unit.



AWSI-DBDE030-N11 // AWAU-YUDE030-H11

Mod	el Indoor Unit				AWAU-DBDE030-N11		
Mod	el Outdoor Unit				AWAU-YUDE030-H11		
Insta	allation Method of Pi	ipe				red	
Characteristics				Units	Cooling	Heating	
						Average	
	acity ⁽¹⁾			kW	8,3(2,4-8,7)	9,2(2,4-9,9)	
Pdes				kW	8,3	7,6	
	R / SCOP (2)			W/W	5.1	3.8	
	rgy efficiency class			1.144	A	A	
	ual energy consump	otion		kWh	570	2800	
Tbiv				°C	N/A	-7	
Tol				°C	N/A	-15	
	er supply	1	(1)	V/Ph/Hz		Single/50Hz	
Circi	uit breaker rating(Inc		utdoor)	A		-25	
	Fan type & quantit	ty	1.1/8.4/1	DDM	Centrifu	gal fan-2	
	Fan speeds		H/M/L	RPM	4400/4000/4000/4000	4.400/4000/4000/4000	
	Air flow (3)		H/M/L	m3/hr	1400/1300/1200/1000	1400/1300/1200/1000	
	External static pre		Min-Max	Pa	37(0	,	
	Sound power leve		H/M/L	dB(A)		4	
R	Sound pressure le	evel (5)	H/M/L	dB(A)		/44/40	
NDOOR	Moisture removal			l/hr		,3	
	Condensate drain	tube I.I		mm		mm	
=	Dimensions		WxHxD	mm		68x558	
	Weight		kg	34			
	Package dimensions WxHxD			mm	1348x597x283		
	Packaged weight			kg		9	
	Units per pallet			units	7		
	Stacking height			units	7		
	Refrigerant contro				EEV Rotary DC Inverter		
	Compressor type,						
	Fan type & quantit	ty			Axia	al x 1	
	Fan speeds		H/L	RPM			
	Air flow	1(4)	H/L	m3/hr		00	
	Sound power leve		H/L	dB(A)		5	
	Sound pressure le	evel(5)	H/L	dB(A)		8	
	Dimensions		WxHxD	mm		90x427	
K	Weight		\\\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\	kg		1	
DOOR	Package dimension	ons	WxHxD	mm		55x488	
	Packaged weight			kg		6	
OUT	Units per pallet			Units		3	
	Stacking height			Units	l	2	
	Refrigerant type				K4	10A	
	tubing length)	ge (sta	ndard connecting	kg(5m)	2	.4	
	Additional charge			gr / 1m)m 60g/m	
		Liquid I		In.(mm)		9.53)	
	<u> </u>	Suction		In.(mm)		15.88)	
			bing length	m.	Max.30		
		Max.he	eight difference	m.	Max.15		
	ration control type				Remote control/Wi	red Remote control	
	ting elements			kW		-	
Othe	ers					-	

⁽¹⁾ Rating conditions in accordance with ISO 5151 and ISO 13253 (for ducted units).

⁽²⁾ SEER / SCOP calculation accordance with EN14825.

⁽³⁾ Airflow in ducted units; at nominal external static pressure.

⁽⁴⁾ Sound power in ducted units is measured at air discharge.

⁽⁵⁾ Sound pressure level measured at 1.4 meter distance from unit.



AWSI-FADE030-N11 // AWAU-YUDE030-H11 2.5

	el Indoor Unit			AWAU-FADE030-N11			
	el Outdoor Unit				AWAU-YUDE030-H11		
Insta	allation Method of F	Pipe			Fla	red	
Cha	racteristics			Units	Cooling	Heating Average	
Cap	acity (1)			kW	8,5(2,6-9,2)	9,2(2,4-9,9)	
Pdes				kW	8,5	7,6	
	R / SCOP (2)			W/W	5.1	3.8	
	rgy efficiency class				A	A	
	ual energy consum			kWh	583	2800	
Tbiv	Ţ,	•		°C	N/A	-7	
Tol				°C	N/A	-15	
Pow	er supply			V/Ph/Hz	220-240V/S	Single/50Hz	
	uit breaker rating(In	ndoor-O	utdoor)	Α		-25	
	Fan type & quanti				Centrifu	gal fan-2	
	Fan speeds		H/M/L	RPM			
	Air flow (3)		H/M/L	m3/hr	1500/1400/1200/1000	1500/1400/1200/1000	
	External static pre		Min-Max	Pa		0	
	Sound power leve	el ⁽⁴⁾	H/M/L	dB(A)	6	62	
œ	Sound pressure le	evel (5)	H/M/L	dB(A)	49/46	/44/38	
NDOOR	Moisture removal			l/hr	3	,0	
₫	Condensate drain	tube I.I)	mm	1	7	
2	Dimensions		WxHxD	mm	1420x2	245x700	
	Weight		kg	48			
	Package dimensions WxHxD		mm	1548x828x345			
	Packaged weight			kg	56		
	Units per pallet				6		
	Stacking height			units	6		
	Refrigerant contro	ol .			EEV		
	Compressor type				Rotary DC Inverter		
	Fan type & quanti					al x 1	
	Fan speeds		H/L	RPM			
	Air flow		H/L	m3/hr	40	000	
	Sound power leve	el ⁽⁴⁾	H/L	dB(A)	6	55	
	Sound pressure le		H/L	dB(A)	5	58	
	Dimensions		WxHxD	mm	980x7	90x427	
~	Weight			kg	7	' 1	
TDOOR	Package dimension	ons	WxHxD	mm	1083x8	355x488	
2	Packaged weight			kg	7	' 6	
5	Units per pallet			Units		6	
O	Stacking height			Units		2	
	Refrigerant type				R4	10A	
	Refrigerant chargetubing length)	Refrigerant charge (standard connecting			2	.4	
	Additional charge	per 1 m	neter	gr / 1m	5m <l<30< td=""><td>)m 60g/m</td></l<30<>)m 60g/m	
		Liquid I		In.(mm)		(9.53)	
	Connections	Suction		In.(mm)		15.88)	
	between units		bing length	m.		x.30	
	Max.height difference		m.	Max.15			
Ope	ration control type		-			red Remote control	
	ting elements			kW		-	
Othe						-	

⁽¹⁾ Rating conditions in accordance with ISO 5151 and ISO 13253 (for ducted units).

⁽²⁾ SEER / SCOP calculation accordance with EN14825.

⁽³⁾ Airflow in ducted units; at nominal external static pressure.

⁽⁴⁾ Sound power in ducted units is measured at air discharge.

⁽⁵⁾ Sound pressure level measured at 1.4 meter distance from unit.



2.6 AWSI-CADE030N11 // AWAU-YUDE030-H11

Mod	el Indoor Unit			AWAU-CADE030-N11			
	el Outdoor Unit				AWAU-YUDE030-H11		
Insta	allation Method of F	⊃ipe			Flared		
Characteristics			Units	Cooling	Heating		
Can	acity (1)			kW	8,3(2,6-9,2)	Average 9,2(2,4-9,9)	
Pdes				kW	8,3	<u>9,2(2,4-9,9)</u> 7,6	
	R / SCOP ⁽²⁾			W/W	5.1	3.8	
				VV/ VV			
	rgy efficiency class			kWh	570	A 2800	
Tbiv	ual energy consum	iption		°C	570 N/A	2800 -7	
Tol				°C	N/A N/A	- <i>1</i> -15	
	or ounnly			V/Ph/Hz	220-240V/S	<u> </u>	
	er supply	adaar O	utdoor\		220-2407/8		
Circi	uit breaker rating(li		uldoor)	Α			
	Fan type & quant	ity	LI/NA/I	DDM	Centrifuç	jai ian-z	
	Fan speeds Air flow (3)		H/M/L	RPM	4500	4500/	
			H/M/L	m3/hr	1500	1500/	
	External static pr		Min-Max	Pa	0	·	
	Sound power leve		H/M/L	dB(A)	6:		
INDOOR	Sound pressure I		H/M/L	dB(A)	49/48/		
ŏ	Moisture remova		<u> </u>	l/hr	3,	<u>0</u>	
N	Condensate drain	n tube I.I		mm	25		
_	Dimensions		WxHxD	mm	840x84		
	Weight		kg	31			
	Package dimensions WxHxD			mm	963x963x409		
	Packaged weight			kg	3		
	Units per pallet			units	5		
	Stacking height			units	<u>5</u> EEV		
	Refrigerant contr						
	Compressor type				Rotary DC Inverter		
	Fan type & quant	ity	1.171	DDM	Axia	I X 1	
	Fan speeds		H/L	RPM			
	Air flow	1(4)	H/L	m3/hr	40		
	Sound power leve		H/L	dB(A)	6		
	Sound pressure I	evel	H/L	dB(A)	5000.70		
	Dimensions		WxHxD	mm	980x79		
R	Weight		W 11 5	kg	7		
00	Package dimensi		WxHxD	mm	1083x8		
TDOOR	Packaged weight			kg	70		
OO.	Units per pallet			Units	6		
0	Stacking height			Units	2		
	Refrigerant type				R41	UA	
	tubing length)		ndard connecting	kg(5m)	2.		
	Additional charge			gr / 1m	5m <l<30< td=""><td></td></l<30<>		
		Liquid		In.(mm)	3/8"(9		
	Connections	Suction		In.(mm)	5/8"(1		
	between units Max.tu		bing length	m.	Max.30		
		Max.he	eight difference	m.	Max		
	ration control type				Remote control/Wir	red Remote control	
	ting elements			kW			
Othe	ers						

⁽¹⁾ Rating conditions in accordance with ISO 5151 and ISO 13253 (for ducted units).

 ⁽²⁾ SEER / SCOP calculation accordance with EN14825.
 (3) Airflow in ducted units; at nominal external static pressure.

⁽⁴⁾ Sound power in ducted units is measured at air discharge.(5) Sound pressure level measured at 1.4 meter distance from unit.



2.7 AWSI-DBDE036-N11 // AWAU-YUDE036-H11

Mod	el Indoor Unit			AWAU-DBDE036-N11		
Mod	el Outdoor Unit			AWAU-YUDE036-H11		
Insta	allation Method of F	Pipe				red
Characteristics				Units	Cooling	Heating
Ciia	racteristics			Ullits	Cooling	Average
Сар	acity (1)			kW	10,0(3,2-11,5)	12,0(2,9-14,5)
Pdes				kW	10,0	10,4
	R / SCOP (2)			W/W	5.1	3.8
Ene	rgy efficiency class	3			A	Α
Annı	ual energy consum	ption		kWh	687	3832
Tbiv				°C	N/A	-7
Tol				°C	N/A	-15
	er supply			V/Ph/Hz	220-240V/S	
Circ	uit breaker rating(In		utdoor)	Α		-32
	Fan type & quant	ity			Centrifu	gal fan-2
	Fan speeds		H/M/L	RPM		
	Air flow (3)		H/M/L	m3/hr	2100/1950/1800/1700	2100/1950/1800/1700
	External static pr		Min-Max	Pa	37(0	-150)
	Sound power leve		H/M/L	dB(A)	_	4
ĸ	Sound pressure I		H/M/L	dB(A)	!	/48/44
NDOOR	Moisture removal			l/hr	2	,3
ğ	Condensate drain	า tube I.โ)	mm		mm
_	Dimensions		WxHxD	mm	1226x2	90x775
	Weight			kg	46	
	Package dimensions WxHxD			mm	1338x877x305	
	Packaged weight			kg	63	
	Units per pallet			units	(3
	Stacking height			units	6	
	Refrigerant contr				EE	
	Compressor type				Rotary DC Inverter	
	Fan type & quant	ity			Axia	ıl x 1
	Fan speeds		H/L	RPM		
	Air flow		H/L	m3/hr	<u> </u>	00
	Sound power leve		H/L	dB(A)		0
	Sound pressure I	evel ⁽⁵⁾	H/L	dB(A)		3
	Dimensions		WxHxD	mm		00x440
ĸ	Weight			kg		2
rDOOR	Package dimensi		WxHxD	mm		35 x493
ě	Packaged weight			kg	i e	00
OUT	Units per pallet			Units		5
O	Stacking height			Units		2
	Refrigerant type				R4	10A
	Refrigerant char tubing length)	Refrigerant charge (standard connecting tubing length)			3	,5
	Additional charge			gr / 1m	5m <l<30< td=""><td>)m 60g/m</td></l<30<>)m 60g/m
		Liquid I		In.(mm)		9.53)
	Connections	Suction		In.(mm)		5.88)
	between units		bing length	m.	Max.30	
		Max.he	eight difference	m.		x.15
Оре	ration control type				Remote control/Wi	red Remote control
	ting elements			kW		-
Othe	ers					-

⁽¹⁾ Rating conditions in accordance with ISO 5151 and ISO 13253 (for ducted units).

⁽²⁾ SEER / SCOP calculation accordance with EN14825.

⁽³⁾ Airflow in ducted units; at nominal external static pressure.

⁽⁴⁾ Sound power in ducted units is measured at air discharge.

⁽⁵⁾ Sound pressure level measured at 1.4 meter distance from unit.



AWSI-FADE036-N11 // AWAU-YUDE036-H11 2.8

Mod	el Indoor Unit			AWAU-FADE036-N11			
Mod	el Outdoor Unit				AWAU-YUDE036-H11		
Insta	allation Method of F	Pipe				ired	
01				11	O a a lina m	Heating	
Cna	racteristics			Units	Cooling	Average	
Capa	acity (1)			kW	10,0(3,2-11,5)	12,0(2,9-14,5)	
Pdes				kW	10,0	10,4	
	R / SCOP (2)			W/W	5.1	3.8	
	gy efficiency class	i			Α	Α	
	ual energy consum			kWh	687	3832	
Tbiv				°C	N/A	-7	
Tol				°C	N/A	-15	
	er supply			V/Ph/Hz		Single/50Hz	
	uit breaker rating(Ir	ndoor-O	utdoor)	Α		-32	
0.10	Fan type & quant		ataoory	,,		gal fan-2	
	Fan speeds	ity	H/M/L	RPM	Continu		
	Air flow (3)		H/M/L	m3/hr	1900/1630/1520/1350	1900/1630/1520/1350	
	External static pro	ASSIIFA	Min-Max	Pa		0	
	Sound power leve		H/M/L	dB(A)		55	
ا ہے ا	Sound pressure l		H/M/L	dB(A)		/51/46	
NDOOR	Moisture removal		1 1/1VI/L	I/hr		,8	
O	Condensate drain		<u> </u>			, <u>o</u> 7	
Ž	Dimensions	i tube i.i	WxHxD	mm		,	
_			WXUXD	mm	1420x245x700		
	Weight Work of the project of the pr			kg	48 1548x828x345		
	Package dimensions WxHxD			mm	56		
	Packaged weight			kg	6		
	Units per pallet			units	6		
	Stacking height			units	EEV		
	Refrigerant contro				Rotary DC Inverter		
	Compressor type				-		
	Fan type & quant	ity	11/1	DDM	AXIA	al x 1	
	Fan speeds		H/L	RPM		200	
	Air flow	1(4)	H/L	m3/hr		300	
	Sound power leve		H/L	dB(A)		70	
	Sound pressure l	evel(3)	H/L	dB(A)		3	
	Dimensions		WxHxD	mm		100x440	
ᄶ	Weight		14/ 11/ 5	kg		02	
DOOR	Package dimensi		WxHxD	mm		235 x493	
🖺	Packaged weight			kg		00	
ОПТ	Units per pallet			Units		6	
	Stacking height			Units	I .	2	
	Refrigerant type				R4	10A	
		ge (sta	ndard connecting	kg(5m)	વ	,5	
	tubing length)				3	,~	
	Additional charge			gr / 1m)m 60g/m	
		Liquid l		In.(mm)		9.53)	
	Connections	Suction	n line	In.(mm)	5/8"(1	15.88)	
	between units	Max.tu	bing length	m.	Max	x.30	
	Max.height difference		m.	Ma	x.15		
Ope	ration control type					red Remote control	
	ting elements			kW		-	
Othe					,	-	

⁽¹⁾ Rating conditions in accordance with ISO 5151 and ISO 13253 (for ducted units).

⁽²⁾ SEER / SCOP calculation accordance with EN14825.

⁽³⁾ Airflow in ducted units; at nominal external static pressure.

⁽⁴⁾ Sound power in ducted units is measured at air discharge.

⁽⁵⁾ Sound pressure level measured at 1.4 meter distance from unit.



2.9 **AWSI-CADE036-N11 // AWAU-YUDE036-H13**

				AWAU-CADE036-N11		
Incto	el Outdoor Unit			AWAU-YUD		
Installation Method of Pipe				Flar		
Char	racteristics		Units	Cooling	Heating Average	
Capa	acity (1)		kW	10,0(3,2-11,5)	12,0(2,9-14,5)	
Pdes			kW	10,0	10,4	
SEER / SCOP (2)			W/W	5.1	3.8	
Ener	gy efficiency class			A	A	
	ual energy consumption		kWh	687	3832	
Tbiv			°C	N/A	-7	
Tol			°C	N/A	-15	
Powe	er supply		V/Ph/Hz	220-240V/S	ingle/50Hz	
Circu	uit breaker rating(Indoor-	Outdoor)	Α	10-3		
	Fan type & quantity	,		Centrifug	al fan-2	
Ī	Fan speeds	H/M/L	RPM	Ĭ		
Ī	Air flow (3)	H/M/L	m3/hr	1850	1850	
Ī	External static pressure		Pa	0		
F	Sound power level (4)	H/M/L	dB(A)	63	3	
ne t	Sound pressure level (5)	H/M/L	dB(A)	51/49/4		
NDOOR	Moisture removal	I	I/hr	3,8		
2	Condensate drain tube	.D	mm	25m		
≥ ↑	Dimensions	WxHxD	mm	840x84		
F	Weight		kg	31		
F	Package dimensions WxHxD		mm	963x96		
F	Packaged weight		kg	38		
F	Units per pallet		units	5		
ŀ	Stacking height		units	5		
\dashv	Refrigerant control		u i i i	EE		
F	Compressor type, mode	\[Rotary DC Inverter		
F	Fan type & quantity	,1		Axial x 1		
F	Fan speeds	H/L	RPM	7 (7)		
F	Air flow	H/L	m3/hr	530	00	
F	Sound power level ⁽⁴⁾	H/L	dB(A)	70		
F	Sound pressure level ⁽⁵⁾	H/L	dB(A)	63		
F	Dimensions	WxHxD	mm	1107x110		
	Weight	TTALIAB	kg	92		
8	Package dimensions	WxHxD	mm	1158x123		
DOOR	Packaged weight	WALIAD	kg	10		
	Units per pallet		Units	6		
5	Stacking height		Units	2		
ŀ	Refrigerant type		- Cinto	R41		
F	Refrigerant charge (s	andard connecting				
	tubing length)		kg(5m)	3,8		
[Additional charge per 1		gr / 1m	5m <l<30r< td=""><td>m 60g/m</td></l<30r<>	m 60g/m	
	Liqui		In.(mm)	3/8"(9		
	Connections Sucti	on line	In.(mm)	5/8"(15	5.88)	
İ	between units Max.	ubing length	m.	Max		
		neight difference	m.	Max		
Oper	ration control type	_		Remote control/Wire		
	ing elements		kW	-		
Othe	-			-		

⁽¹⁾ Rating conditions in accordance with ISO 5151 and ISO 13253 (for ducted units).(2) SEER / SCOP calculation accordance with EN14825.

⁽³⁾ Airflow in ducted units; at nominal external static pressure.

⁽⁴⁾ Sound power in ducted units is measured at air discharge.

⁽⁵⁾ Sound pressure level measured at 1.4 meter distance from unit.



3. RATING CONDITIONS

Rating conditions in accordance with ISO 5151 and ISO 13253 (for ducted units).

Cooling:

Indoor: 27°C DB 19°C WB

Outdoor: 35 °C DB

Heating:

Indoor: 20°C DB

Outdoor: 7°C DB 6°C WB


3.1 Operating Limits


R410A

		Indoor	Outdoor	
Cooling	Upper limit	32°C DB 23°C WB	48°C DB	
Cooling	Lower limit	21°C DB 15°C WB	-15°C DB	
Heating	Upper limit	27°C DB	24°C DB 18°C WB	
Heating	Lower limit	10°C DB	-15°C DB	
Voltage	1PH	198 –	264 V	
Voltage	3РН	360 – 440 V		

4. OUTLINE DIMENSIONS

4.1 CADE024-030-036

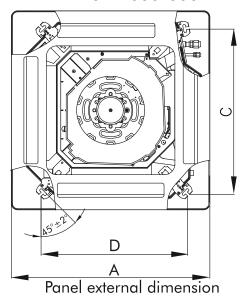


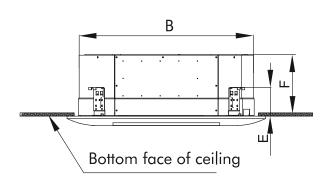

Unit:mm

Model	Α	В	С	D	Е	F
CADE024	950	840	780	680	160	240
CADE030/036	950	840	780	680	160	320


4.2 DBDE 024-030-036

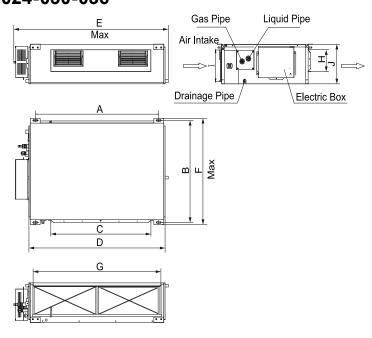

Unit: mm

	Α	В	С	D	E	F	G	Н	I	J
DBDE024	1101	515	820	1159	1239	558	1002	160	235	268
DBDE030	1101	515	820	1159	1239	558	1002	160	235	268
DBDE036	1011	748	820	1115	1226	775	979	160	231	290


4.3 FADE024-030-036

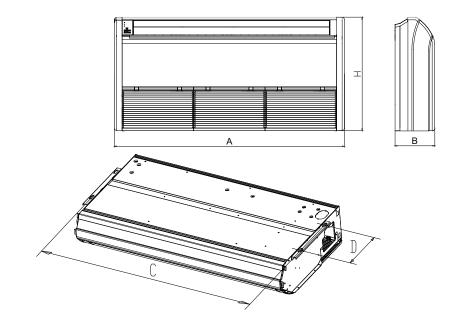

Unit: mm

Model	А	В	С	D	Н
FADE024	1220	225	1158	280	700
FADE030	1420	245	1354	280	700
FADE036	1420	245	1354	280	700


Outdoor Unit: 4.4

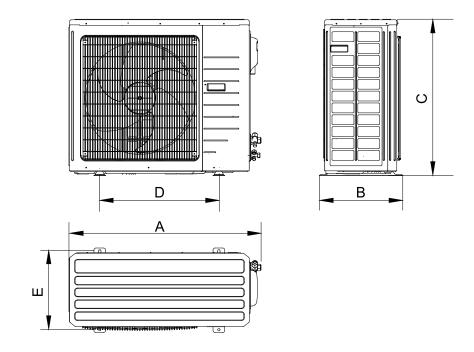

Unit: mm

Model	Α	В	С	D	E
YUDE024	980	427	790	610	390
YUDE030	980	427	790	610	390
YUDE036	1107	440	1100	631	400


5. PERFORMANCE DATA

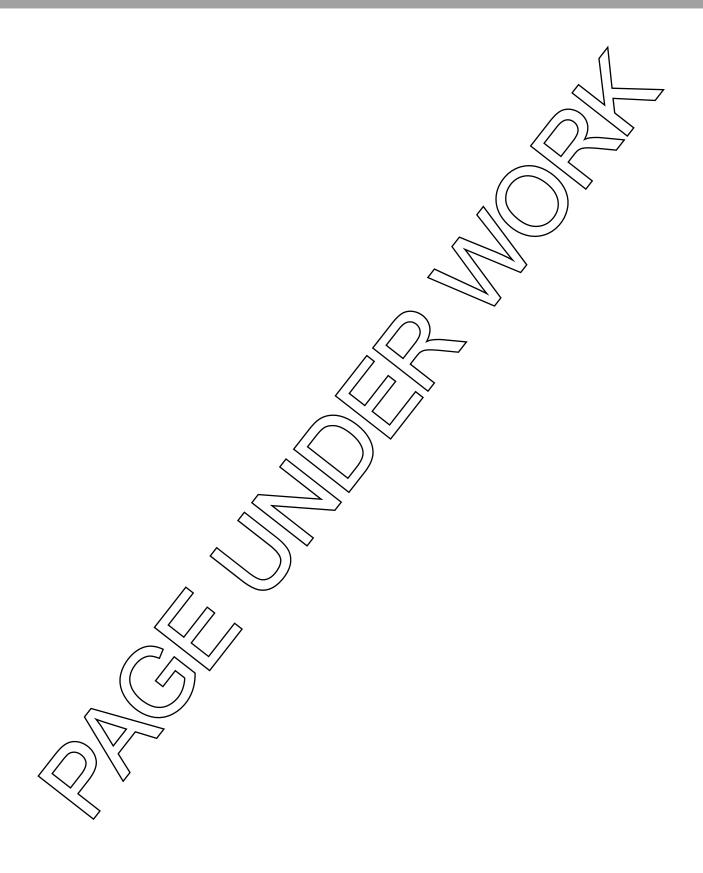




6. **AIRFLOW CURVES**

6.1 Model: AWSI-DBDE024-N11

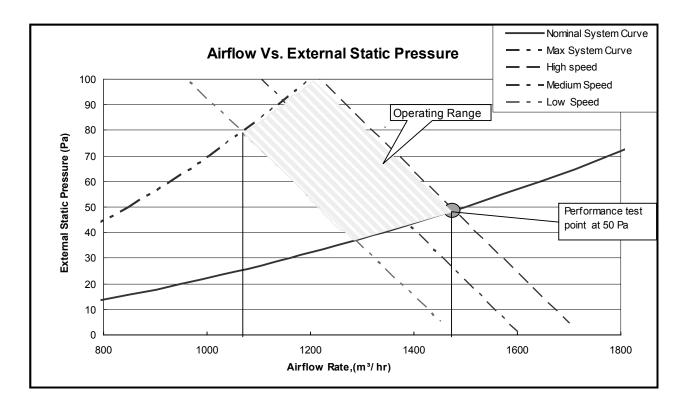


6.2 Model: AWSI-DBDE030-N11

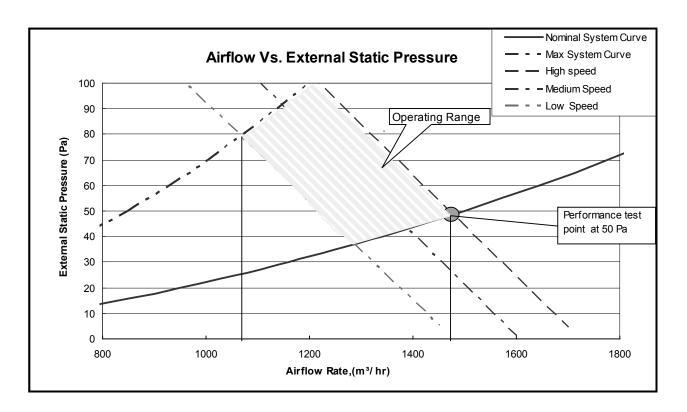



6.3 Model: AWSI-DBDE036-N11

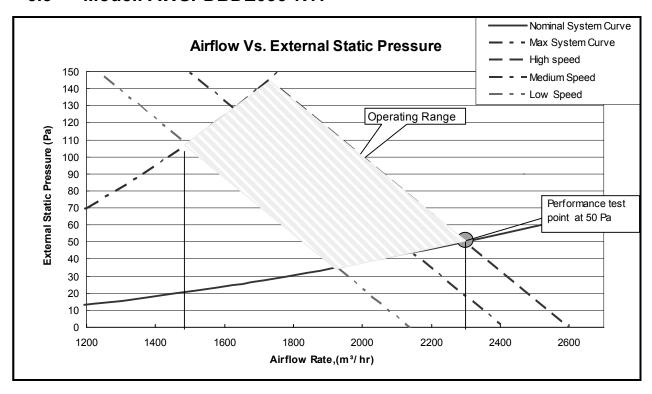



ELECTRICAL DATA 7.

MODEL	AWAU-YUDE024-H11	AWAU-YUDE030-H11	AWAU-YUDE036-H11	AWAU-YUDE036-H13	
Dower Supply		Sep	arately		
Power Supply		1~/220-240V/50Hz		3~/380-415V/ 50Hz	
Capability of Air Switch(A) (Indoor)	10A				
Capability of Air Switch(A) (Outdoor)	20A	25A	32A	32A	
Power Supply Wiring No. X Cross Section mm² (ODU)		5x2.5mm2			
Power Supply Wiring No. X Cross Section mm² (IDU)	3 x1.5mm2				
Interconnecting Cable Model No. X Cross Section mm ²	2x0.75mm2				


NOTE

Power wiring cord should comply with local lows and electrical regulations requirements.




8. WIRING DIAGRAMS


8.1 AWAU-YUDE024-H11, AWAU-YUDE030-H11

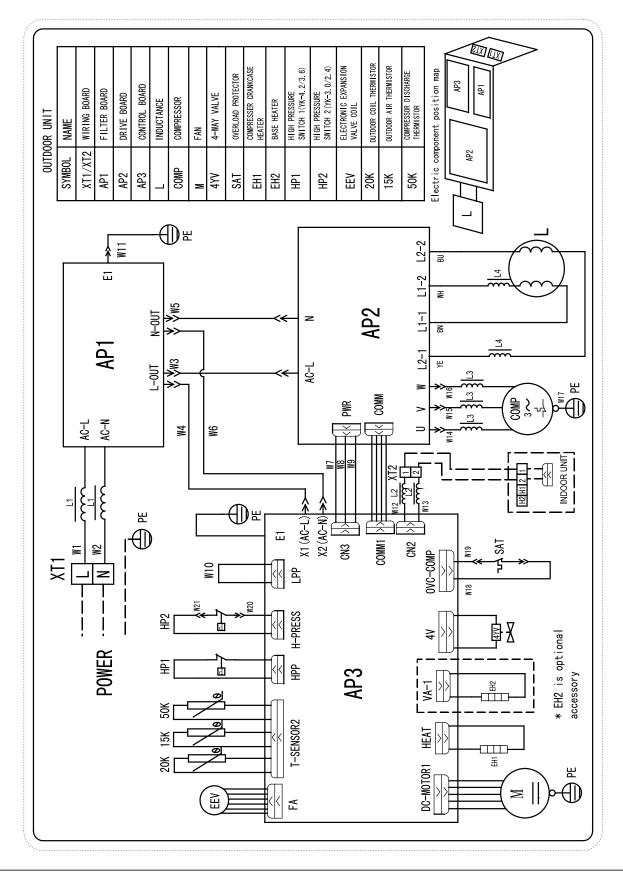


8.2 AWAU-YUDE036-H11

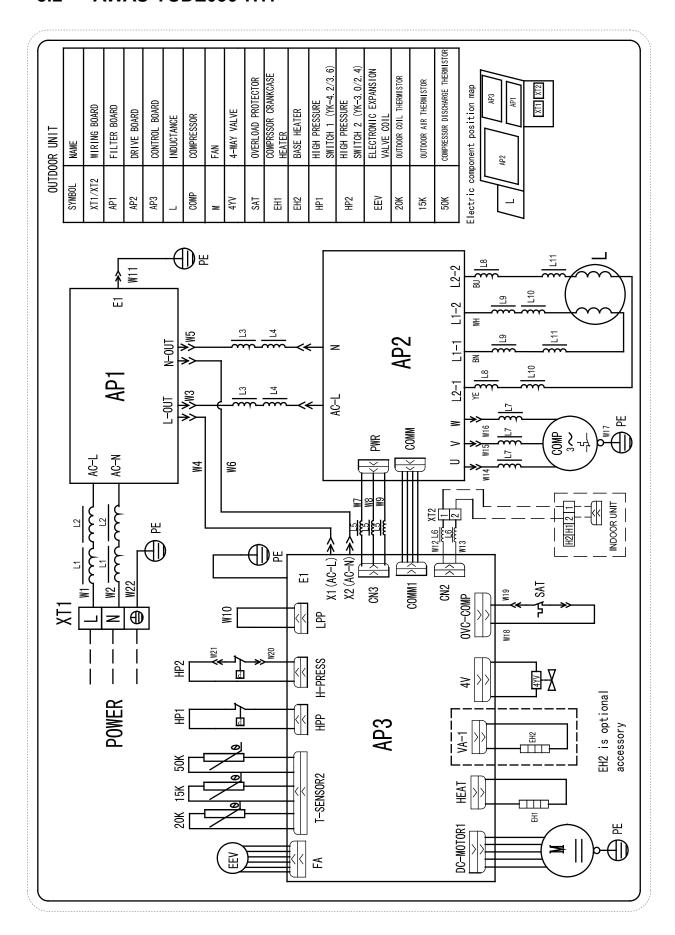


8.3 AWAU-YUDE036-H13 (TBD)

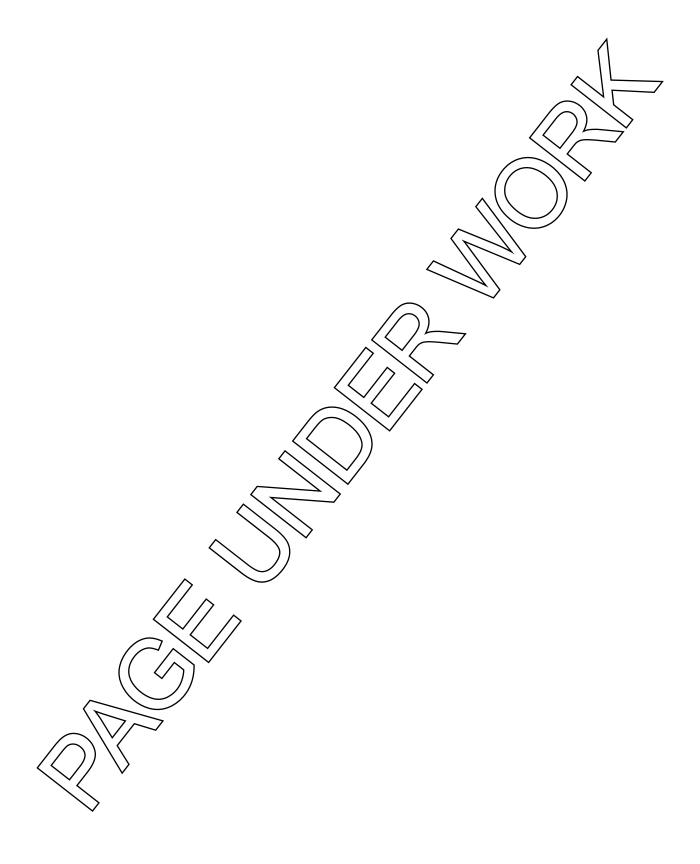


8.4 AWSI-CADE024/030/036-N11

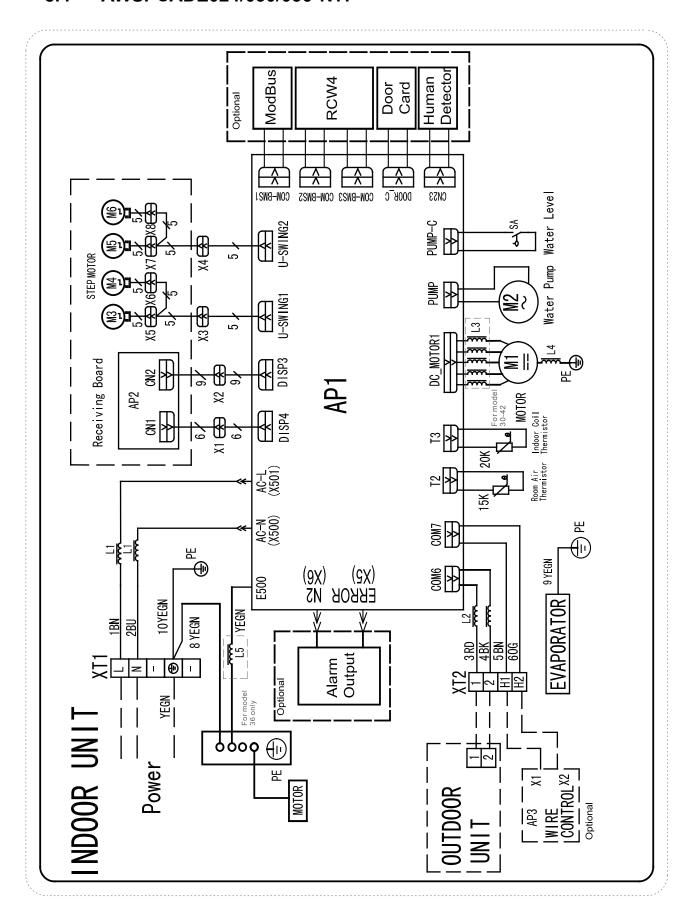

8.5 AWSI-FADE024/030/036-N11

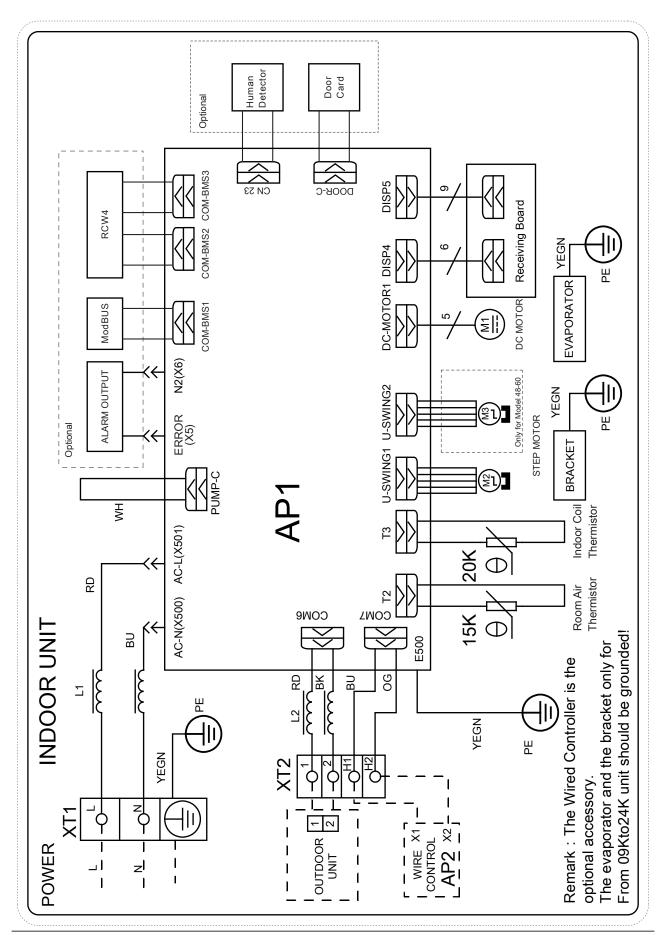


8.6 AWSI-DBD024/030/036-N11

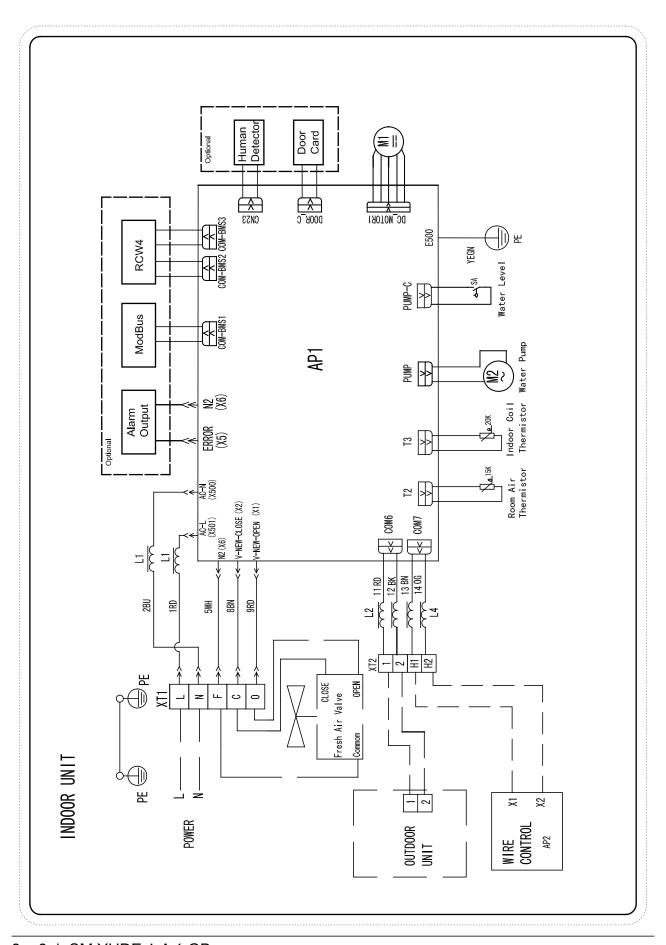



9. REFRIGERATION DIAGRAMS

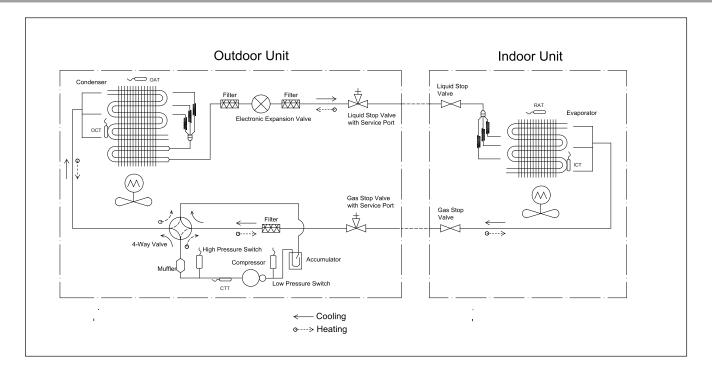



Note:

CTT: Compressor Discharging Temperature Sensor

OCT: Outdoor Coil Temperature Sensor OAT: Outdoor Air Temperature Sensor ICT: Indoor Coil Temperature Sensor RAT: Room Air Temperature Sensor

10. TUBING CONNECTIONS

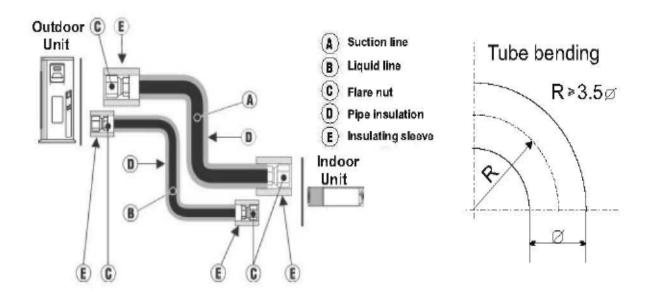

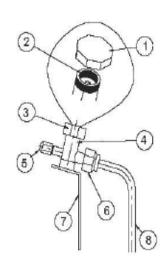

TUBE (Inch) TORQUE (Nm)	1/4"	3/8"	1/2"	5/8"	3/4"
Flare Nuts	15-18	40-45	60-65	70-75	80-85
Valve Cap	13-20	13-20	18-25	18-25	40-50
Service Port Cap	11-13	11-13	11-13	11-13	11-13

- Valve Protection Cap-end
- 2. Refrigerant Valve Port (use Allen wrench to open/close)
- 3. Valve Protection Cap
- Refrigerant Valve
- 5. Service Port Cap
- 6. Flare Nut
- 7. Unit Back Side
- 8. Copper Tube

When the outdoor unit is installed above the indoor unit an oil trap is required every 5m along the suction line at the lowest point of the riser. In case the indoor unit is installed above the outdoor, no trap is required.



11. CONTROL SYSTEM

11.1 Electronic Control

11.1.1 Abbreviations

Abbreviation	Definition
A/C	Air Condition
BMS	Building Management System
PWR	System Power
CTT	Compressor Top Temperature sensor
DCI	DC Inverter
EEV	Electronic Expansion Valve
HE	Heating Element
НМІ	Human Machine Interface
HST	Heat Sink Temperature sensor
Hz	Hertz (1/sec) – electrical frequency
ICT	Indoor Coil Temperature (RT2) sensor
IDU	Indoor Unit
MCU	Micro Controller Unit
OAT	Outdoor Air Temperature sensor
ОСТ	ODU Coil Temperature sensor
ODU	Outdoor Unit
OFAN	Outdoor Fan
PFC	Power Factor Corrector
RAC	Residential A/C
RC	Reverse Cycle (Heat Pump)
RGT	Return Gas Temperature sensor
RPS	Rounds per second (mechanical speed)
RV	Reverse Valve
SB,STBY	Stand By
SUCT	Compressor Suction Temperature sensor
S/W	Software
TBD	To Be Defined
TMR	Timer

11.1.2 System Operation Concept

The control function is divided between indoor and outdoor unit controllers. Indoor unit is the system 'Master', requesting the outdoor unit for cooling/heating capacity supply. The outdoor unit is the system 'Slave' and it must supply the required capacity unless it enters into a protection mode avoiding it from supplying the requested capacity.

Target frequency is transferred via indoor to outdoor communication, and the calculation is based on room temperature and set point temperature.

11.1.3 Compressor Frequency Control

The Compressor Frequency Control is based on the PI scheme.

When starting the compressor, or when conditions are varied due to the change of the room condition, the frequency must be initialized according to the ΔD value of the indoor unit and the Q value of the indoor unit. Q value: Indoor unit output determined from indoor unit capacity, air flow rate and other factors.



1. P control

Calculate ΔD value in each sampling time (20 seconds), and adjust the frequency according to its difference from the frequency previously calculated.

2. I control

If the operating frequency is not change more than a certain fixed time, adjust the frequency up and down according to the ΔD value.

Obtaining the fixed **\D** value

When the **D** value is small- decrease the frequency

When the **\D** value is large- increase the frequency

3. Frequency management when other controls are functioning

When frequency is drooping;

Frequency management is carried out only when the frequency droops.

For limiting lower limit

Frequency management is carried out only when the frequency rises.

4. Maximum and minimum limits of frequency by PI control

The frequency upper and lower limits are set depending on indoor unit.

When low noise commands come from the indoor unit or when outdoor unit low noise or quiet commands come from indoor unit, the upper limit frequency must be lowered than the usual setting.

11.1.3.1 Frequency range

The compressor frequency limitation is set by the following table

Mode	Minimum Frequency(MinFreq)						
Mode	YUDE024	YUDE030	YUDE036	YUDE036T			
Cooling	20	20	20	20			
Heating	20	20	20	20			

11.1.3.2 Frequency Changes Control

Frequency change rate is 1 Hz/sec.

11.1.3.3 Minimum On and Off Time

Prohibit turning ON the compressor for 3 minutes after turning it off.(except during deicing protection)



11.1.4 Indoor Fan Control

4 Indoor fan speeds are determined for each model.

In high/ medium/ low indoor fan user setting, unit will operate fan in selected speed.

In Auto Fan user setting, fan speed will be adjusted automatically according to the difference between actual room temperature(RAT) and user set point temperature(SPT).

Indoor Fan speed		High	Medium	Low
RAT-SPT	Cooling	>=2	(0,2)	<=0
	Heating	<=1	(1,3)	>=3

In DRY mode, the automatic fan speed is forced to be low.

11.1.4.1 Turbo Speed

In COOL and HEAT mode (not available in AUTO, DRY, FAN mode), press the Turbo button, the super high fan speed is selected on Remote control and the indoor fan rotates at high speed.

11.1.5 Outdoor Fan Control

11.1.5.1 OFAN Speed Type

The outdoor fan motor is DC motor with 10 defined speeds.

11.1.5.2 General rules

- 1. The outdoor fan is ON when compressor ON during cooling, dring and heating mode.
- 2. When the unit is off by remote control, in safety stops and stop after reaching to the temperature point, the outdoor fan stops;
- 3. The outdoor fan is ON 30 sec ahead compressor start
- 4. Outdoor fan OFF will delay 60sec when compressor is OFF during cooling, dring and heating mode.

11.1.5.3 OFAN control in cooling mode:

If HPS2 is cut off (Pressure higher than 3.0Mpa), the OFAN will go to high fan speed. If the HPS2 is recovery (pressure is 2.4MPa), the OFAN speed will reduce by 1 speed until the pressure is reaching 3.0MPa.

This control is performed every 1 hour or pressure is below 2.4MPa.

11.1.5.4 OFAN control in heating mode:

OFAN will keep high fan speed

11.1.6 Refrigerant control

11.1.6.1 EEV is used for all model

- 1. EEV operation after power-on: When power on, EEV will open 240steps and then move back with 540steps. This position will be recognized as 0. Then EEV will open to 480 steps and be ready for system operating.
- 2. EEV openloop depends on OAT,RAT,SPT and compressor frequency after compressor starts to operate.
- 3. Target CTT control will be performed after compressor operates for 5min.
- 4. The EEV opening will be updated every 5s.



11.1.7 Reversing Valve (RV) Control

Reversing valve is on in heat mode.

RV ON will delay 10 sec when compressor is ON and Switching of RV state is done only after compressor is off for over 2 minutes.

11.2 Fan Mode


In this mode, the indoor fan may run at high, medium, low and automatic speed. The compressor, outdoor fan and 4-way valve will be OFF.

In this mode, the range of setting temperature is 16~30C

11.3 Cool Mode

If Load>0, the unit starts cooling operation. In this case, the compressor and outdoor fan will operate and the indoor fan will run at the setting speed.

If Load≤0, the compressor will stop operation and the outdoor fan will delay 60 seconds to stop. While the indoor fan will run at the setting speed.

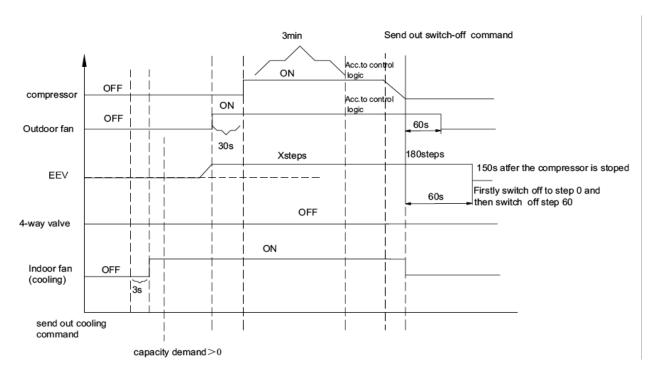

11.3.1 Indoor Fan operation under Cool Mode

The indoor fan will run at high speed for 5 seconds before it is put into operation according to the setting then run at the setting speed.


In Auto Fan user setting, fan speed will be adjusted automatically according to the SPT and RAT, refer to 11.1.5



11.4 Heat Mode

If Load >0, the unit will operate in heating mode. The compressor, outdoor fan and 4-way valve will operate and the indoor fan will delay 1'30" to start at the latest

If LoadAT≤0, the compressor will stop operation and the outdoor fan will delay 60 seconds to stop. And the indoor fan will blow for 60s at low fan speed for cassette and floor ceiling model and at setting fan speed for duct model. During this period, the fan speed can't be switched.

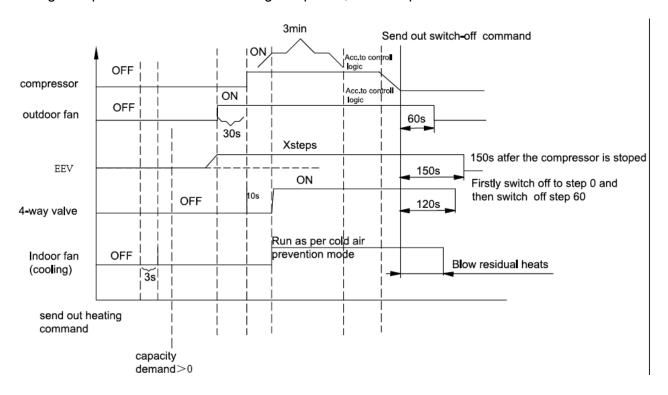

11.4.1 Indoor Fan Control in Heat Mode

Indoor fan speed depends on the indoor coil temperature

Anti-cold air function

When starting the heating mode, anti-cold air function will be activated and indoor fan can run at low speed or stop running. This function will terminate after the unit runs for 1.5min.

Residual heat blowing function

During heating, when the stopping condition for the compressor is reached. The indoor fan will blow for 60s at low fan speed for floor ceiling model and at setting fan speed for duct model. For cassette unit the indoor fan will operate continuously in low fan speed until compressor restarting.

During this period, the fan speed can't be switched.

For manual OFF condition, the residual heat blowing function will last 60s for all indoor models.

11.5 Auto Cool/Heat Mode

In AUTO mode, the system selects the running mode (COOL/HEAT/FAN) automatically according to the room temperature. The display shows the actual running mode and setting temperature. There will be 30s delay for mode conversion.


- 1. When RAT≥26 degree, the cooling mode is selected.
- 2. When RAT≤20 degree, the unit runs in heating mode
- 3. When 20 degree <RAT< 26 degree, upon initial startup, the unit will enter auto mode and run in automatic fan mode. If the other mode changes into auto mode, the previous running mode will remain.



11.6 Dry Mode

The dry mode is basically same as cooling mode. The difference is that:

- a) The indoor fan is fixed at low speed.
- b) Max. Capacity output: A×90%

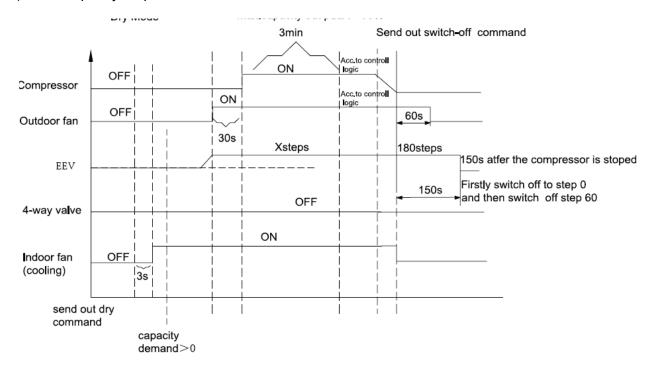

11.7 Oil return

When the unit is operating in low frequency for long time, the compressor will be forced to decrease frequency for 4 min to make sure the oil, which accumulated into the system, back to compressor. During the oil return operation, the IDU has no any indication

11.8 Protections

There are 4 protection codes.

Normal (Norm) – unit operate normally.

Stop Rise (SR) – compressor frequency can not be raised but does not have to be decreased.

HzDown – Compressor frequency is reduced by 2Hz/s

Stop Compressor (SC) – Compressor is stopped.



11.8.1 Indoor Coil Defrost Protection

Conditions for Start Controlling

Judge the controlling start with the ICT (Indoor Coil Temperature) in cool and dry mode after compressor is on for 15min to allow the operating frequency limitation and then prevent freezing of the indoor heat exchanger.

Compressor will stop when ICT \leq ICT_{defrost} for continuous 3 mins, it can resume running automatically when ICT \geq 10.

Model	ICT _{defrost}
Duct	-2
Floor ceiling	-4
Cassette	-5

11.8.2 High Pressure Protection of Compressor by high pressure switch

When high pressure protection is detected for 3 seconds continuously, the high pressure switch is 4.2Mpa, the unit will stop and report the fault, it can not resume running automatically and display malfunction, it can resume by pressing ON/OFF.

11.8.3 Compressor over Heating Protection

If the discharge temperature rises above a certain level, the operating frequency upper limit is set to keep this temperature from going up further.

Compressor will stop when CTT reaches 130.

The unit can only resume running until the compressor has stopped for 3 minutes and the CTT is lower than 90.

If the unit stops as such protection for 3 times, it can not resume running automatically and display malfunction, it can resume by pressing ON/OFF.

11.8.4 Compressor over Current Protection

Detect an input current by the CT during the compressor is running, and set the frequency upper limit from such input current. In case of heat pump model, this control is the upper limit control function of the frequency which takes priority of the lower limit of four way valve activating compensation.

Model	Current(A)
YUDE024	45
YUDE030	45
YUDE036	38
YUDE036T	11.5

11.8.5 Outdoor Coil Deicing Protection

This protection is for Heat Pump Only


This protection is carried out by the cooling cycle (reverse cycle). The defrosting time or outdoor heat exchanger temperature must be more than its setting values when finishing the deicing protection. In the deicing protection, IFAN is forced OFF.



11.8.5.1 Deicing Starting Conditions

The starting conditions must be made with the outdoor air temperature (OAT) and outdoor coil temperature (OCT). Under the conditions that the system is in heating operation, after the time for defrosting is judged to be satisfied, if the temperature for deicing is satisfied after detections for continuous 3minutes, the deicing operation will start.

Deicing interval time is changed as a function of deicing time. If deicing time is shorter than former deicing time, the deicing interval time will be increased. If deicing time is longer than former deicing time, the deicing interval time will be decreased.

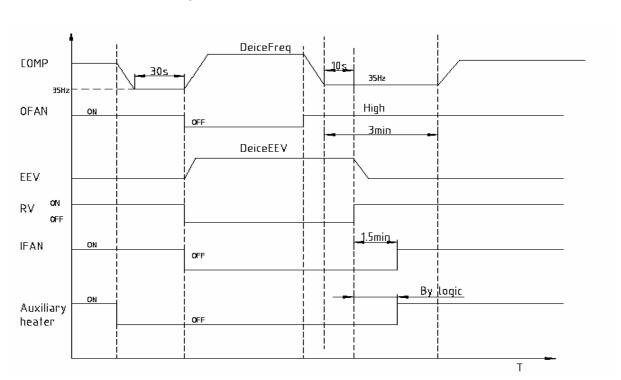

11.8.5.2 Deicing Protection Procedure

11.8.5.3 Exiting Deicing

The deicing operation can exit when any of the conditions below is satisfied:


- 1. OCT>=10°C
- 2. OCT>=6°C lasts for more than 80s
- 3. The continuous running time of deicing reaches to 10min.

11.8.6 Condensate Water Over Flow Protection for cassette

Outdoor unit receives "overflow' signal from the indoor side.

In cooling and dry mode, the pump is always on with the compressor on. And the pump will be on for 10 min after the compressor is off, in heating mode, the pump is off except that the overflow fault occurs.



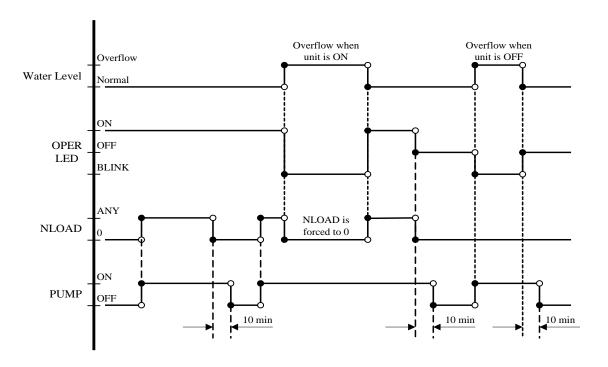

11.8.7 Communication malfunction

If the ODU does not receive correct signal from indoor unit for 30 seconds continuously, or if the indoor unit does not receive message from outdoor unit for 1 minute, the unit will stop as communication malfunction protection; if communication malfunction resume and compressor has stopped for 3min, the unit will resume running.

11.8.8 IPM module protection

When the compressor starts, if there is over current or control voltage low for IPM module as some abnormal results, IPM will detect module protection signal as the unit is on. Once the module protective signal is detected, stop the unit with module protection immediately. If the module protection is resumed and compressor has stopped for 3min, the unit will be allowed to operate.

If the module protection continuously occurs for 3 times, it should not be resumed automatically, and you should press the ON/OFF button to resume.

11.8.9 Module overheating protection

If the module temperature is higher than 100°C, the unit will stop. If module temperature is lower than 100°C, and compressor has stopped for 3min, the unit will resume operating.

If the unit stops as module overheating protection for 6 times, it can not resume running automatically and display malfunction, it can resume by pressing ON/OFF.

11.8.10 Compressor overload protection

The Over Load Protector is used to detect the compressor's shell temperature. If the compressor temperature rises above a certain level, the compressor OLP will be cut off. Which will happen within 3 seconds continuously, the unit will stop and report fault.

The unit will restart after 3 min if the fault is eliminated. If the unit stops as such protection for 3 times in 30 min, it can not resume running automatically and display malfunction, it can resume by pressing ON/OFF.




11.9 Operating the Unit from the ON/OFF Button

The ON/OFF button allows to operate the unit in AUTO mode, the microcomputer will monitor the room temperature and select the (COOL, HEAT, FAN) mode automatically, and temperature/Fan speed settings can not be changed.

11.10 Indoor Unit Controllers and Indicators

The following is schematic drawing for the display:


CADE:

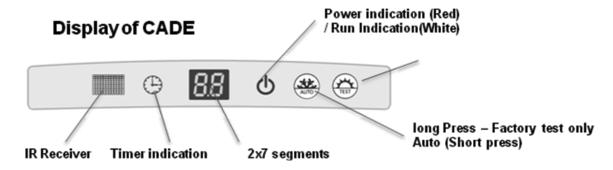

Power Indication	Lights up when the Air Conditioner is Power ON ,	
Run Indication	Lights up when the compressor is ON.	
Timer Indication	Lights up when the Timer is set	
Auto	Press the Auto button the unit will run auto mode automatically when the unit is off. Press the AUTO button, the air conditioner will stop when it is on	
Test	When pressing it, the air conditioner will be forced to operate or stop. Do not press it when air conditioner is in normal operation.	
2x7-Segments display	 In normal situation, the setting temperature is displayed. Shows indoor temperature when receiving the corresponding demand from controller. It resumes displaying setting temperature 5s later. Shows the alarm code whenever there is an alarm. (Refer to Diagnostics part). 	



FADE:

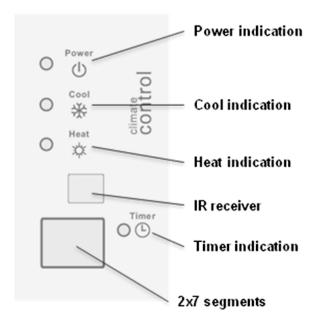

Power indication	Lights up when the unit is connected to power	
Timer indication	Lights up when the Timer is set	
Cool indication	Lights up when the unit is running in cooling mode	
Heat indication	Lights up when the unit is running in heat mode	
2x7-Segments display	 In normal situation, the setting temperature is displayed. Shows indoor temperature when receiving the corresponding demand from controller. It resumes displaying setting temperature 5s later Shows the alarm code whenever there is an alarm. (Refer to Diagnostics part) 	

11.11 Forced Mode (Compulsory operating function).

Entering into forced mode:

After the unit is powered for 5mins, press the light button on remote controller for 3 times in 3s successively to enter into Freon recovery mode. Fo will be displayed. When Freon recovery mode operated for 25mins, all loads will operate in cooling mode. (The setting fan speed is high fan speed and the setting temperature is 16C)

Exiting forced mode:


Any signal from remote controller or button will exit the forced mode, and then the unit will operate at the current setting command.

Forced mode will also be exited after operating for 25mins and then the unit will be turned off.

11.12 Characteristics of sensor


11.12.1 **RAT/OAT**



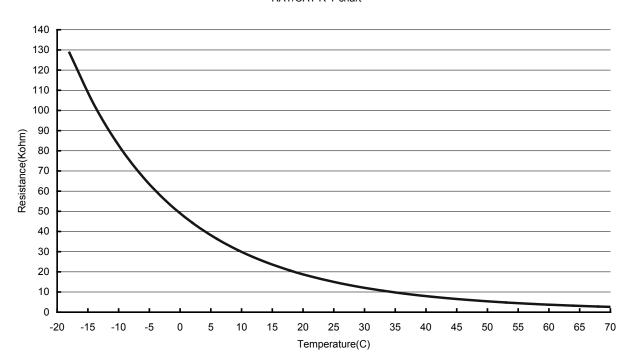


11.12.2 ICT/OCT

ICT/OCT R-T Chart

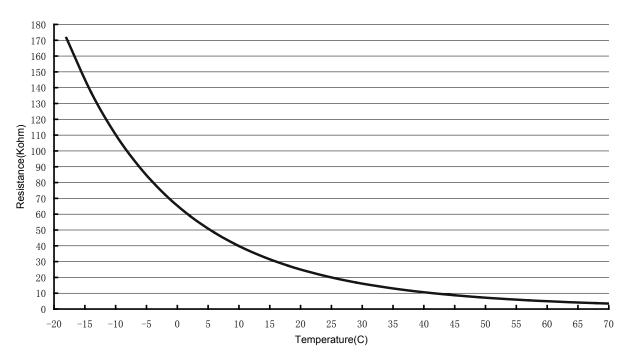

11.12.3 CTT



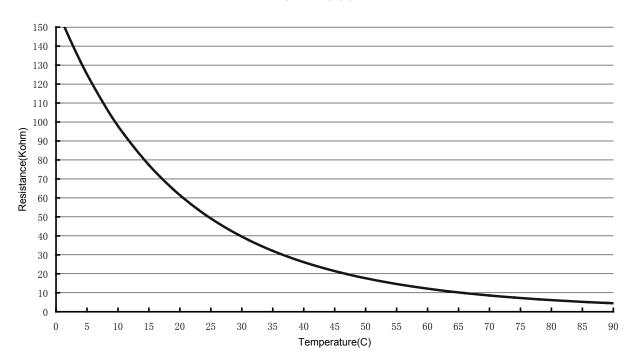



12. TROUBLESHOOTING

12.1 ELECTRICAL & CONTROL TROUBLESHOOTING

12.1.1 Precautions before Performing Inspection or Repair

Be cautious during installation and maintenance. Do operation following the regulations to avoid electric shock and casualty or even death due to drop from high attitude.

* **Static maintenance** is the maintenance during de-energization of the air conditioner. For static maintenance, make sure that the unit is de-energized and the plug is disconnected.

*Dynamic maintenance is the maintenance during energization of the unit. Before dynamic maintenance, check the electricity and ensure that there is ground wire on the site. Check if there is electricity on the housing and connection copper pipe of the air conditioner with voltage tester. After ensure insulation place and the safety, the maintenance can be performed.

Take sufficient care to avoid directly touching any of the circuit parts without first turning off the power. At time such as when the circuit board is to be replaced, place the circuit board assembly in a vertical position. Normally, diagnose troubles according to the trouble diagnosis procedure as described below.(Refer to the check points in servicing written on the wiring diagrams attached to the indoor/outdoor units.)

Precautions when inspecting the control section of the outdoor unit:

A large-capacity electrolytic capacitor is used in the outdoor unit controller (inverter). Therefore, if the power supply is turned off, charge(charging voltage DC280V to 380V) remains and discharging takes a lot of time. After turning off the power source, if touching the charging section before discharging, an electrical shock may be caused.

The outdoor unit can not be started up until the unit is de-energized for 20min

12.1.2 Confirmation

- 12.1.2.1 Confirmation of Power Supply Confirm that the power breaker operates(ON) normally;
- 12.1.2.2 Confirmation of Power Voltage Confirm that power voltage is AC220~240V +/-10% for single phase and AC380-415V+/-10% for three phase. If power voltage is not in this range, the unit may not operate normally.

12.1.3 Judgment by Indoor/Outdoor Unit Diagnostics

Diagnostic from IDU Display:

If the malfunction still exists 4min later after stop of unit due to compressor protection, error code will be directly displayed though indoor display. In other situations, error code can be displayed by pressing LIGHT button 6 times within 4s.

The fault code could be shown in following way:

The Fault codes can be displayed by 2*7 segments (on IDU Display board)

Blinking of IDU LEDs (RUN, COOL, HEAT) can also show the information of fault code.

All fault code could be shown on RCWE

The ODU can only show ODU fault by 2x7 segments on outdoor Main Board.



12.1.3.1 Indoor Unit Diagnostics

12.1.3.2 Indoor Unit Diagnostics and Corrective Actions

12.1.3.3 Outdoor Unit Diagnostics

Indoor indicators				
IDU 2*7segments / RCWE ODU 2x7 segments		Failure	Possible Reasons/Corrective actions	
E0	-	Water pump failure	Connection of pump is loosen Pump is damaged	
E1	E1	High-pressure switch protection	Refrigerant was superabundant Poor heat exchange (including blockage and bad radiating environment) Too high ambient temperature	
E2	ı	Defrost protection	 Poor air-return in indoor unit Fan speed is abnormal Evaporator is dirty The ambient temperature is too low 	
E3	E3	Low pressure switch protection	Refrigerant leakage Poor heat exchange (including blockage and bad radiating environment) EEV connection problem or damage	
E4	E4	Compressor over heating protection	 EEV connection problem or damage Refrigerant leakage Poor heat exchange 	
E4	E4	Compressor over heating protection	 EEV connection problem or damage Refrigerant leakage Poor heat exchange 	
E6	E6	Communication malfunction	Wiring mistakes IDU or ODU PCB problem	
E9	-	Water overflow protection	 Pump is damaged The drain pipe is block 	
F0	-	RAT failure		
F1	-	ICT failure		
F2	F2	OCT failure	Senor was broken or damaged PCB temperature detection circuit has	
F3	F3	OAT failure	problem	
F4	F4	CTT failure	<u> </u>	
F5	-	RCT failure		
PH	PH	DC over voltage protection	AC power supply is higher than 265V Outdoor PCB circuit malfunction	
P8	P8	Heat sink overheating protection	Insufficient grease on heatsink or poor connection of heatsink to PCB Outdoor PCB problem.	
Pc	Pc	Current sensor failure	PCB is damaged	
P7	P7	HST failure	PCB is damaged	
P5	P5	Compressor phase current detection problem	Phase current detection circuit for compressor has problem.	
			^	



	1	<u> </u>	4
PL	PL	DC under voltage protection	 AC power supply voltage is less than 150VAC Outdoor PCB circuit malfunction
Lc	Lc	Compressor startup failure	Compressor wiring mistake Over charged system System not balanced before compressor starting Compressor problem
Нс	Нс	PFC protection	 PFC module assembly problem Poor heat exchange of Heatsink PFC reactor problem Abnormal power voltage PFC circuit problem on PCB
P0	P0	IPM reset	
H7	H7	Desynchronizing of compressor	 Abnormal power input voltage Compressor wiring mistake Liquid and gas valve are not open EEV damaged or not proper working Poor heat exchange Over charged system
Ld	Ld	Lack phase protection of compressor	 Phase current detection circuit for compressor has problem Comp wiring mistake
H5	H5	IPM protection	 Abnormal power input voltage Compressor wiring mistake Liquid and gas valve are not open EEV damaged or not proper working Poor heat exchange Over charged system
LF	LF	Compressor over speed	Compressor wiring mistake The compressor wire go cross the relative current sensor IPM damage
Pd	Pd	Sensor connection protection	
PE	PE	Temperature shift protection	
P9	P9	AC contactor protection	
Н3	НЗ	Compressor over load protection	Connection of compressor OLP is loosen (the resistance for this terminal should be less than 10hm) EEV connection problem or damaged/Capillary problem Refrigerant leakage
LP	LP	Mismatch between IDU and ODU	 Wiring mistakes IDU or ODU PCB problem IDU jumper setting is wrong
PA	PA	AC over current protection	Supply voltage is unstable Supply voltage is too low and load is too high
PF	PF	Driver board ambient temperature sensor failure	
PP	PP	AC under voltage/ AC over voltage	Supply voltage is unstable PCB is damaged
PU	PU	Charging malfunction of capacitor	Reactor open Charging relay or other components damaged on PCB



12.1.4 Checking the refrigeration system

Checking system pressures and other thermodynamic measures should be done when system is in Test Mode (in Test mode, system operates in fixed settings). The performance curves given in this manual are given for unit performance in test mode when high indoor fan speed is selected.

Entering test mode please refer to section 11- Control system.

12.2 Simple procedures for checking the Main Parts

12.2.1 Checking Mains Voltage.

Confirm that the Mains voltage is between 198 and 264 VAC. If Mains voltage is out of this range, abnormal operation of the system is expected. If in range check the Power (Circuit) Breaker and look for broken or loosed cable lugs or wiring mistake(s).

12.2.2 Checking Power Input.

If Indoor unit power LED is unlighted, power down the system and check the fuse of the Indoor unit. If the fuse is OK replace the Indoor unit controller. If the fuse has blown, replace the fuse and power up again.

Checking Power Input procedure for the Outdoor unit is the same as with the Indoor unit.

12.2.3 Checking the Outdoor Fan Motor.

Check the output voltage between two wires (RED and BLACK) of connector Controller DC-MOTOR, normal voltage is 310VDC.

12.2.4 Checking the Compressor.

The compressor is brushless permanence magnetic DC motor. Three coil resistance is same. Check the resistance between three poles. The normal value should be below 0.7 ohm.


12.2.5 Checking the Reverse Valve (RV).

Running in heating mode, check the voltage between two pins of reverse valve connector, normal voltage is 220~240VAC.



EXPLODED VIEWS AND SPARE PART LISTS 13.

13.1 Exploded view of Indoor unit: AWSI-DBDE024/030-N11

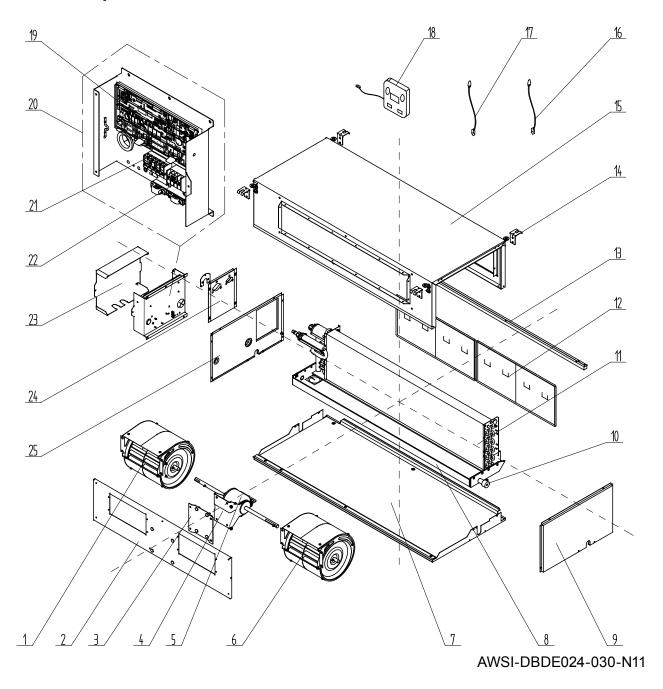



13.2 Spare part list of Indoor Unit: AWSI-DBDE024-N11


NO.	Part Code	Part Description	qty
1	G15012454	Motor(left) SYP-160/200J	1
2	G01325200039	Blower Mounting Plate Sub-Assy	1
3	G01805200164	Support Sub-assy	1
4	G01804100140	Supporter	1
5	G15705200006	Brushless DC Motor	1
6	G15012458	Motor(right) SYP-160/200J	1
7	G01265304	Bottom Cover	1
8	G01285317	Water Tray Foam	1
9	G01314155	Left Side Plate	1
10	G76712455	Choke Plug of Drain Pipe	2
11	G01025200050	Evaporator Assy	1
12	G11125303	Filter Sub-assy	2
13	G02285301	Filter runner Assy	1
14	G02112446	Hook	4
15	G01265226	Upper Cover Plate Assy	1
16	G3900012128	Tube sensor	1
17	G3900012123	Ambient Temperature Sensor	1
18	G30294000007_K93693	RCWE wired Remote Control	1
19	G30224000030	Main Board	1
20	G01395200212	Electric Box Assy	1
21	G4201025301	Terminal Board	1
22	G42010194	Terminal Board	1
23	G01425200043	Electric Box Cover	1
24	G01265200098	Cover Plate Sub-Assy	1
25	G01315200057	Right Side Plate Sub-Assy	1
	G30510460_K93693	Remote Controller	1



13.3 Spare part list of Indoor Unit: AWSI-DBDE030-N11

NO.	Part Code	Part Description	qty
1	G15012454	Motor(left) SYP-160/200J	1
2	G01325200039	Blower Mounting Plate Sub-Assy	1
3	G01805200164	Support Sub-assy	1
4	G01804100140	Supporter	1
5	G15705200006	Brushless DC Motor	1
6	G15012458	Motor(right) SYP-160/200J	1
7	G01265304	Bottom Cover	1
8	G01285317	Water Tray Foam	1
9	G01314155	Left Side Plate	1
10	G76712455	Choke Plug of Drain Pipe	2
11	G01025200050	Evaporator Assy	1
12	G11125303	Filter Sub-assy	2
13	G02285301	Filter runner Assy	1
14	G02112446	Hook	4
15	G01265226	Upper Cover Plate Assy	1
16	G3900012128	Tube sensor	1
17	G3900012123	Ambient Temperature Sensor	1
18	G30294000007_K93693	RCWE wired Remote Control	1
19	G30224000030	Main Board	1
20	G01395200212	Electric Box Assy	1
21	G42010194	Terminal Board	1
22	G4201025301	Terminal Board	1
23	G01425200043	Electric Box Cover	1
24	G01265200098	Cover Plate Sub-Assy	1
25	G01315200057	Right Side Plate Sub-Assy	1
	G30510460_K93693	Remote Controller	1

13.4 Exploded view of Indoor unit: AWSI-DBDE036-N11

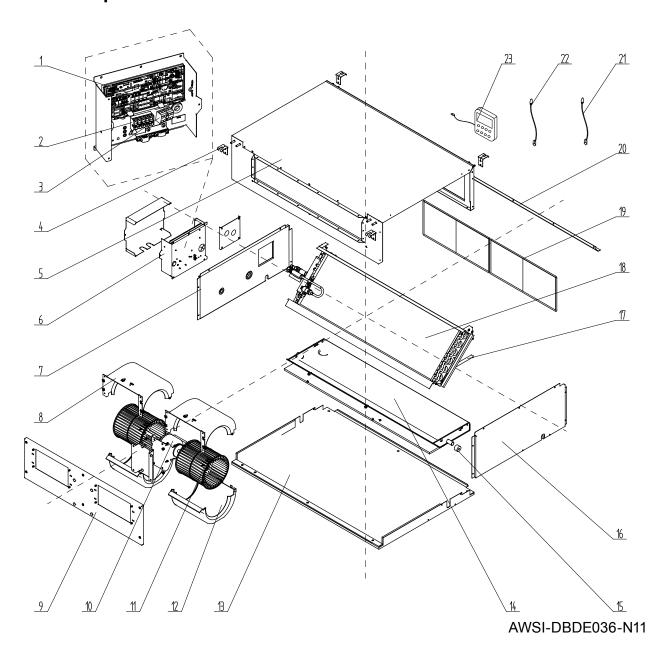




13.5 Spare part list of Indoor Unit: AWSI-DBDE036-N11

NO.	Part Code	Part Description	qty
1	G30224000030	Main Board	1
2	G4201025301	Terminal Board	1
3	G42010194	Terminal Board	1
4	G02112466	Hook	4
5	G01265200086	Top Cover Board Assy	1
6	G01395200212	Electric Box Assy	1
7	G01315200100	Right Side Plate Sub-Assy	1
8	G26904100051	Volute Casing (Upper)	2
9	G01325200044	Blower Mounting Plate Sub-Assy	1
10	G15709400006	Brushless DC Motor	1
11	G10424100001	Centrifugal Fan Blade	2
12	G26904100052	Volute Casing (Lower)	2
13	G15265301	Bottom Cover	1
14	G01285323	Water Tray Components	1
15	G76712455	Choke Plug of Drain Pipe	2
16	G01315306	Left Side Plate	1
17	G018953022	Evaporator Support Plate	1
18	G01025200052	Evaporator Assy	1
19	G111253031	Filter Sub-Assy	2
20	G01375301	Side Plate of Air intake	1
21	G390001921G	Temperature Sensor	1
22	G3900012123	Ambient Temperature Sensor	1
23	G30294000007_K93693	RCWE wired Remote Control	1
	G30510460_K93693	Remote Controller	1

13.6 Exploded view of Indoor unit:AWSI-CADE024/030/036-N11

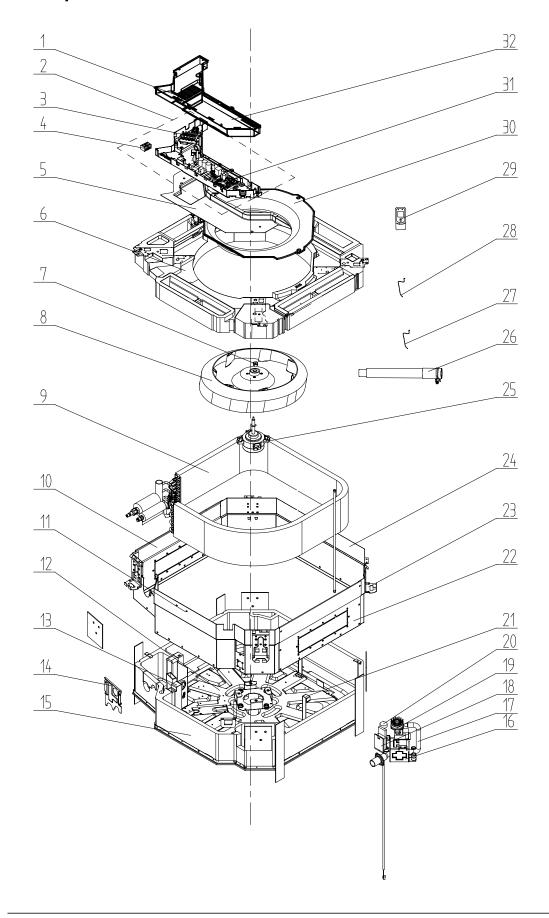



13.7 Spare part list of Indoor Unit: AWSI-CADE024-N11

NO.	Part Code	Part Description	qty
1	G20122054	Electric Box Cover Sub-Assy1	1
2	G01399400057	Electric Box Assy	1
3	G4201025801	Terminal Board	1
4	G4201025301	Terminal Board	1
5	G01412721	Electric Box Base Plate	1
6	G20182701	Water Tray Assy	1
7	G10312701	Fan Fixer	1
8	G10312705	Centifugal Fan	1
9	G01029400045	Evaporator Assy	1
10	G01302715	Left Side Plate Assy	1
11	G01302718	Front Side Plate	1
12	G01222701	Base Plate Assy	1
13	G01074042	Connection Sheet Assy	1
14	G01382715	Tube Exit Plate Assy	1
15	G52012722	Bottom Foam Assy	1
16	G01329416	Water Pump Mounting Rack	1
17	G05230026	Drain Pipe for Water Pump	1
18	G01252713	Pump Backup Cover Plate Assy	1
19	G43130324	Water Pump	1
20	G45018012	Water Level Switch	1
21	G01072703	Evaporator of Fixed Mount	2
22	G01302716	Right Side Plate	1
23	G01332701	Major Mounting Plate	4
24	G01302714	Rear Side Plate	1
25	G15709400004	Brushless DC Motor	1
26	G05232702	Drain Hose Assy	1
27	G390001912	Room Sensor	1
28	G390001921G	Temperature Sensor	1
29	G30510460_K93693	Remote Controller	1
30	G10372701	Diversion Circle	1
31	G30224000028	Main Board	1
32	G20122055	Electric Box Cover Sub-Assy2	1
	G30294000007_K93693	RCWE wired Remote Control	1



13.8 Spare part list of Indoor Unit: AWSI-CADE030-N11

NO.	Part Code	Part Description	qty
1	G20122054	Electric Box Cover Sub-Assy1	1
2	G01399400057	Electric Box Assy	1
3	G4201025801	Terminal Board	1
4	G4201025301	Terminal Board	1
5	G01412721	Electric Box Base Plate	1
6	G20182701	Water Tray Assy	1
7	G10312701	Fan Fixer	1
8	G10310101	Centrifugal Fan	1
9	G01029400042	Evaporator Assy	1
10	G01302711	Left Side Plate Assy	1
11	G01302713	Front Side Plate	1
12	G01222701	Base Plate Assy	1
13	G01072732	Evaporator Linkage	1
14	G01382715	Tube Exit Plate Assy	1
15	G52012721	Bottom Foam Assy	1
16	G01332721	Water Pump Mounting Rack	1
17	G05230026	Drain Pipe for Water Pump	1
18	G01252713	Pump Backup Cover Plate Assy	1
19	G43130324	Water Pump	1
20	G45018012	Water Level Switch	1
21	G01072707	Evaporator of Fixed Mount	2
22	G01302712	Right Side Plate Assy	1
23	G01332701	Major Mounting Plate	4
24	G01302709	Rear Side Plate	1
25	G15709400003	Brushless DC Motor	1
26	G05232702	Drain Hose Assy	1
27	G390001912	Room Sensor	1
28	G390001921G	Temperature Sensor	1
29	G30510460_K93693	Remote Controller	1
30	G10372722	Diversion Circle	1
31	G30224000028	Main Board	1
32	G20122055	Electric Box Cover Sub-Assy2	1
	G30294000007_K93693	RCWE wired Remote Control	1




13.9 Spare part list of Indoor Unit: AWSI-CADE036-N11

NO.	Part Code	Part Description	qty
1	G20122054	Electric Box Cover Sub-Assy1	1
2	G01399400057	Electric Box Assy	1
3	G4201025801	Terminal Board	1
4	G4201025301	Terminal Board	1
5	G01412721	Electric Box Base Plate	1
6	G20182701	Water Tray Assy	1
7	G10312701	Fan Fixer	1
8	G10310101	Centrifugal Fan	1
9	G01029400042	Evaporator Assy	1
10	G01302711	Left Side Plate Assy	1
11	G01302713	Front Side Plate	1
12	G01222701	Base Plate Assy	1
13	none	Connected Board Assy of Evaporator	0
14	G01382715	Tube Exit Plate Assy	1
15	G52012721	Bottom Foam Assy	1
16	G01332721	Water Pump Mounting Rack	1
17	G05230026	Drain Pipe for Water Pump	1
18	G01252713	Pump Backup Cover Plate Assy	1
19	G43130324	Water Pump	1
20	G45018012	Water Level Switch	1
21	G01072707	Evaporator of Fixed Mount	2
22	G01302712	Right Side Plate Assy	1
23	G01332701	Major Mounting Plate	4
24	G01302709	Rear Side Plate	1
25	G15709400003	Brushless DC Motor	1
26	G05232702	Drain Hose Assy	1
27	G390001912	Room Sensor	1
28	G390001921G	Temperature Sensor	1
29	G30510460_K93693	Remote Controller	1
30	G10372722	Diversion Circle	1
31	G30224000028	Main Board	1
32	G20122055	Electric Box Cover Sub-Assy2	1
	G30294000007_K93693	RCWE wired Remote Control	1



13.10 Exploded view of Indoor unit:AWSI-FADE024-N11

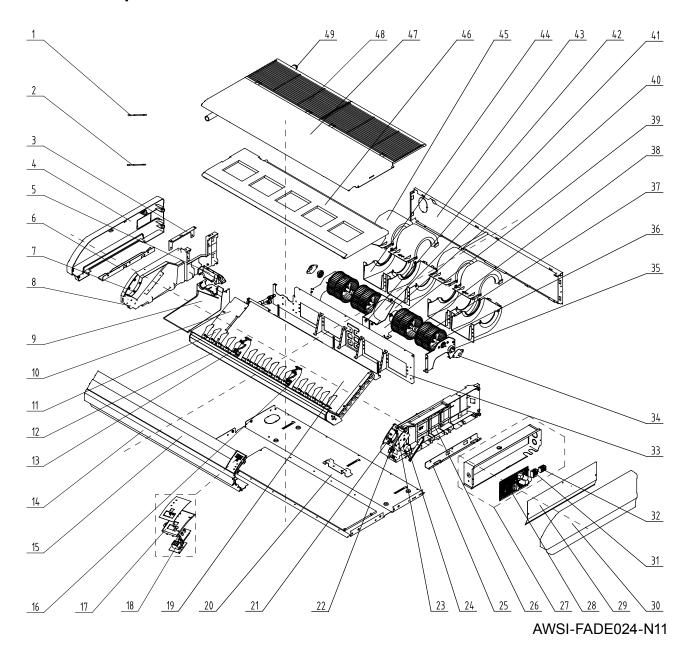




13.11 Spare part list of Indoor unit:AWSI-FADE024-N11

NO.	Part Code	Part Description	qty
1	G3900020720G	Tube sensor	1
2	G39000191	Room Sensor	1
3	G02229406	Connection Board	1
4	G26909444	Right Cover Plate	1
5	G26909442	Fixed Plate	1
6	G01809402	Right Pensile Bracket	1
7	G10542704	Axile Bush	2
8	G01319429	Right Side Plate Sub-Assy	1
9	G02284106P	Water Releasing Flume	1
10	G01349421	Connected Board (Evaporator)	1
11	G10619404	Air Louver	16
12	G0180941601	Guide Louver Support	1
13	G26909430	Rotating Shaft	4
14	G01349414P	Front Connection Board	1
15	G10619403	Guide Louver	2
16	G26909449	Supporter	2
17	G26909426R	Fixed Mount	1
18	G30294000009	Display Board	1
19	G01029400046	Evaporator Assy	1
20	G01319400008	Rear Side Plate Assy	1
21	G26909413	Rotating Shaft	1
22	G26909411	Connecting Rod	1
23	G26909412	Rotating Shaft	1
24	G1521240206	Step Motor	1
25	G01809401	Left Pensile Bracket	1
26	G01319428	Left Side Plate Sub-Assy	1
27	G01399400071	Electric Box Assy	1
28	G30224000029	Main Board	1
29	G01429420	Electric Box Cover	1
30	G26909443	Left Cover Plate	1
31		Terminal Board	
32	G4201025301	Terminal Board	1
	G42010178		1
33	G01249416	Mid-clapboard sub-assy	1
34	G01792408	Support Of Motor Bearing	2
35	G76512404	O-Gasket of Bearing	2
36	G73018000037	Rotary Axis Sub-Assy	2
37	G10425200	Centrifugal fan	4
38	G73018731	Joint Slack	2
39	G01809400024	Supporter	1
40	G70818000001	Clamping Band Assembly	1
41	G15704100001	DC brushless Motor	1
42	G01809400023	Supporter	1
43	G01349422	Rear connect plate	1
44	G26905205	Front volute casing	4
45	G26905206	Rear volute casing	4
46	G01289404	Water Tray Assy	1
47	G01269409	Top Cover Board Sub-assy	1
48	G01579403	Front Grill sub-assy	2
49	G05235434	Drainage Pipe Sub-assy	1
	G30510460_K93693	Remote Controller	1
	G30294000007_K93693	RCWE wired Remote Control	1

13.12 Exploded view of Indoor unit:AWSI-FADE030/036-N11

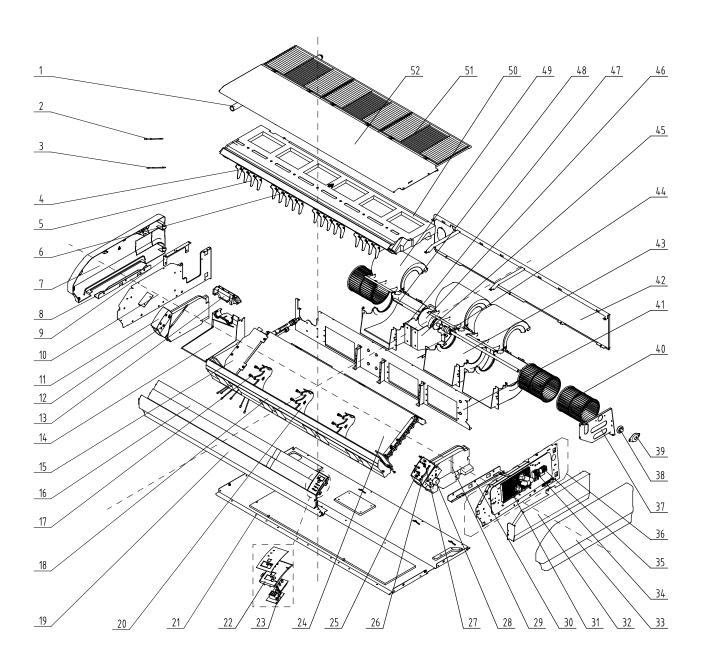

AWSI-FADE030-036-N11



13.13 Spare part list of Indoor unit:AWSI-FADE030-N11


NO.	Part Code	Part Description	qty
1	G05235434	Drainage Pipe Sub-assy	1
2	G3900020720G	Tube sensor	1
3	G39000191	Room Sensor	1
4	G10582008	Swing Lever	2
5	G26909418	Air Louver	18
6	G10582009	Swing Lever	2
7	G26909422	Right Cover	1
8	G01809402	Right Pensile Bracket	1
9	G02229406	Connection Board	1
10	G01319408	Right Side Plate Sub-Assy	1
11	G12509425	Right foam assy	1
12	G10542704	Axile Bush	2
13	G26909442	Fixed Plate	1
14	G26909441	Water Groove	1
15	G01349413	Connection Board	1
16	G26909432	Guide Louver	2
17	G26909430	Rotating Shaft	6
18	G12509424	Front foam assy	1
19		Front panel	1 1
20	G01349408P G26909409		3
21		Supporter Rear Side Plate Assy	3
	G01319400005		
22	G26909426R	Fixed Mount	1
23	G30294000009	Display Board	1
24	G01029400041	Evaporator Assy	
25	G26909413	Rotating Shaft	1
26	G26909411	Connecting Rod	1
27	G26909412	Rotating Shaft	1
28	G1521240206	Step Motor	1
29	G12509408	Left Foam Assy	1
30	G01809401	Left Pensile Bracket	1
31	G30224000029	Main Board	1
32	G01429410P	Electric Box Cover	1
33	G26909416	Left Cover	1
34	G42010178	Terminal Board	1
35	G4201025301	Terminal Board	
36	G01399400058	Electric Box Assy	1
37	G01809404	Bracket 1	1
38	G76512404	O-Gasket of Bearing	1
39	G01792408	Support Of Motor Bearing	1
40	G1041410101	Centrifugal fan	3
41	G01249400002	Clapboard Sub-Assy	
42	G01349418	Rear connect plate	1
	G01349410	Rear connect plate	1
43	G26905208	Front volute casing	3
44	G73018731	Joint Slack	1
45	G01809400027	Motor Support Sub-Assy	1
46	G15705200005	Brushless DC Motor	1
47	G01809400028	Motor Support Sub-Assy	1
48	G73018052	Rotary Axis Sub-Assy	1
49	G26909419	Rear volute casing	3
50	G01289405	Water tray assy	1
51	G01579402	Front Grill sub-assy	3
52	G01269405	Top Cover Board Sub-assy	1
	G30510460 K93693	Remote Controller	1
	G30294000007 K93693	RCWE wired Remote Control	1



13.14 Spare part list of Indoor unit:AWSI-FADE036-N11

NO.	Part Code	Part Description	qty
1	G05235434	Drainage Pipe Sub-assy	1
2	G3900020720G	Tube sensor	1
3	G39000191	Room Sensor	1
4	G10582008	Swing Lever	2
5	G26909418	Air Louver	18
6	G10582009	Swing Lever	2
7	G26909422	Right Cover	1
8	G01809402	Right Pensile Bracket	1
9	G02229406	Connection Board	1
10	G01319408	Right Side Plate Sub-Assy	1
11	G12509425	Right foam assy	1
12	G10542704	Axile Bush	2
13	G26909442	Fixed Plate	1 1
14	G26909441	Water Groove	1
15	G01349413	Connection Board	1
16	G26909432	Guide Louver	2
17	G26909430	Rotating Shaft	6
18	G12509424	Front foam assy	1
19	G12509424 G01349408P	Front panel	1
20			3
21	G26909409 G01319400005	Supporter Poor Sido Plato Appy	<u>_</u>
22		Rear Side Plate Assy	
	G26909426R	Fixed Mount	1
23	G30294000009	Display Board	1
24	G01029400050	Evaporator Assy	
25	G26909413	Rotating Shaft	1
26	G26909411	Connecting Rod	1
27	G26909412	Rotating Shaft	1
28	G1521240206	Step Motor	1
29	G12509408	Left Foam Assy	1
30	G01809401	Left Pensile Bracket	1
31	G30224000029	Main Board	1
32	G01429410P	Electric Box Cover	1
33	G26909416	Left Cover	1
34	G42010178	Terminal Board	1
35	G4201025301	Terminal Board	
36	G01399400058	Electric Box Assy	1
37	G01809404	Bracket 1	1
38	G76512404	O-Gasket of Bearing	1
39	G01792408	Support Of Motor Bearing	1
40	G1041410101	Centrifugal fan	3
41	G01249400002	Clapboard Sub-Assy	
42	G01349418	Rear connect plate	1
	G01349410	Rear connect plate	1
43	G26905208	Front volute casing	3
44	G73018731	Joint Slack	1
45	G01809400027	Motor Support Sub-Assy	1
46	G15705200005	Brushless DC Motor	1
47	G01809400028	Motor Support Sub-Assy	1
48	G73018052	Rotary Axis Sub-Assy	1
		· · · · · · · · · · · · · · · · · · ·	
49	G26909419	Rear volute casing	3
50	G01289405	Water tray assy	1
51	G01579402	Front Grill sub-assy	3
52	G01269405	Top Cover Board Sub-assy	1
	G30510460_K93693	Remote Controller	1
	G30294000007_K93693	RCWE wired Remote Control	1

13.15 Exploded view of Outdoor unit:AWAU-YUDE024/030-H11

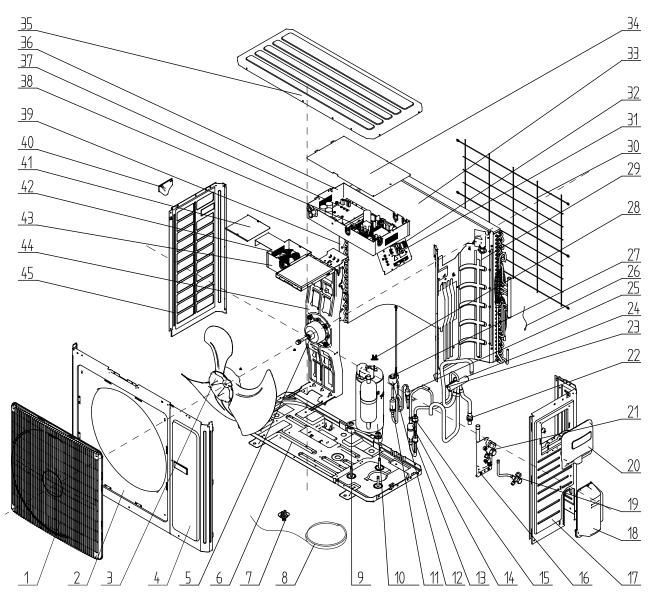

AWAU-YUDE024-030-H11



13.16 Spare Part List:AWAU-YUDE024-H11

NO.	Part Code	Part Description	qty
1	G22415003	Front Grill	1
2	G01435004P	Cabinet	1
3	G10335014	Axial Flow Fan	1
4	G01305086P	Front Side Plate	1
5	G15702802	Fan Motor	1
6	G0119520001301P	Chassis Sub-Assy	1
7	G06123401	Drainage Connecter	1
8	G7651873209	electrical heater	1
9	G76713066	Compressor Gasket	3
10	G0010505701	Compressor and Fittings	1
11	G07220016	Bidirection Strainer	1
12	G4304413208	Electronic Expansion Valve Fittings	1
13	G4602000902	Pressure Protect Switch	1
14	G07245012	Silencer	1
15	G46020003	Pressure Protect Switch	1
16	G0171501201P	Valve Support Sub-Assy	1
17	G01315200069P	Right Side Plate Sub-Assy	1
18	G22245003	Valve cover	1
19	G07100005	Valve	1
20	G26235001	Big Handle	1
21	G07133157	Cut-off Valve	1
22	G07215201	Filter	1
23	G4300040033	Magnet Coil	1
24	G4300008201	4-way Valve	1
25	G07225088	Filter	1
26	G3900028020G	Temperature Sensor	1
27	G07334447	Electronic Expansion Valve	1
28	G00180030	Compressor Overload Proctector(External)	1
29	G01245200010	Clapboard Sub-Assy	1
30	G01475008	Rear Grill	1
31	G420111451	Terminal Board	1
32	G420101852	Terminal Board	1
33	G01125200184	Condenser Assy	1
34	G01425281	Electric Box Cover	1
35	G01255007	Top Cover Sub-Assy	1
36	G01395200173	Electric Box Assy	1
37	G30221000010	Main Board	1
38	G30224000026	Main Board	1
39	G01175092	Condenser support plate	1
40	G26235401	Left Handle	1
41	G01425279	Electric Box Cover	1
42	G43128003	PFC Inductance	1
43	G01395200176	Inductance Box Sub-Assy	1
44	G01805200166	Motor Support Assy	1
45	G01305043P	Left Side Plate	1




13.17 Spare Part List:AWAU-YUDE030-H11

NO.	Part Code	Part Description	qty
1	G22415003	Front Grill	1
2	G01435004P	Cabinet	1
3	G10335014	Axial Flow Fan	1
4	G01305086P	Front Side Plate	1
5	G15702802	Fan Motor	1
6	G01195200013P	Chassis Sub-assy	1
7	G06123401	Drainage Connecter	1
8	G7651873209	electrical heater	1
9	G76713066	Compressor Gasket	3
10	G0010505701	Compressor and Fittings	1
11	G07220016	Bidirection Strainer	1
12	G4304413208	Electronic Expansion Valve Fittings	1
13	G4602000902	Pressure Protect Switch	1
14	G07245012	Silencer	1
15	G46020003	Pressure Protect Switch	1
16	G0171501201P	Valve Support Sub-Assy	1
17	G01315200069P	Right Side Plate Sub-Assy	1
18	G22245003	Valve cover	1
19	G07100005	Valve	1
20	G26235001	Big Handle	1
21	G07133157	Cut-off Valve	1
22	G07215201	Filter	1
23	G4300040033	Magnet Coil	1
24	G4300008201	4-way Valve	1
25	G07225088	Filter	1
26	G3900028020G	Temperature Sensor	1
27	G07334447	Electronic Expansion Valve	1
28	G00180030	Compressor Overload Proctector(External)	1
29	G01245200006	Clapboard Sub-Assy	1
30	G01475008	Rear Grill	1
31	G420111451	Terminal Board	1
32	G420101852	Terminal Board	1
33	G01125200182	Condenser Assy	1
34	G01425281	Electric Box Cover	1
35	G01255007	Top Cover Sub-Assy	1
36	G01395200178	Electric Box Assy	1
37	G30221000010	Main Board	1
38	G30224000038	Main Board	1
39	G01175092	Condenser support plate	1
40	G26235401	Left Handle	1
41	G01425279	Electric Box Cover	1
42	G43128003	PFC Inductance	1
43	G01395200176	Inductance Box Sub-Assy	1
44	G01805200160	Motor Support Assy	1
45	G01305043P	Left Side Plate	1



13.18 Exploded view of Outdoor unit:AWAU-YUDE036-H11

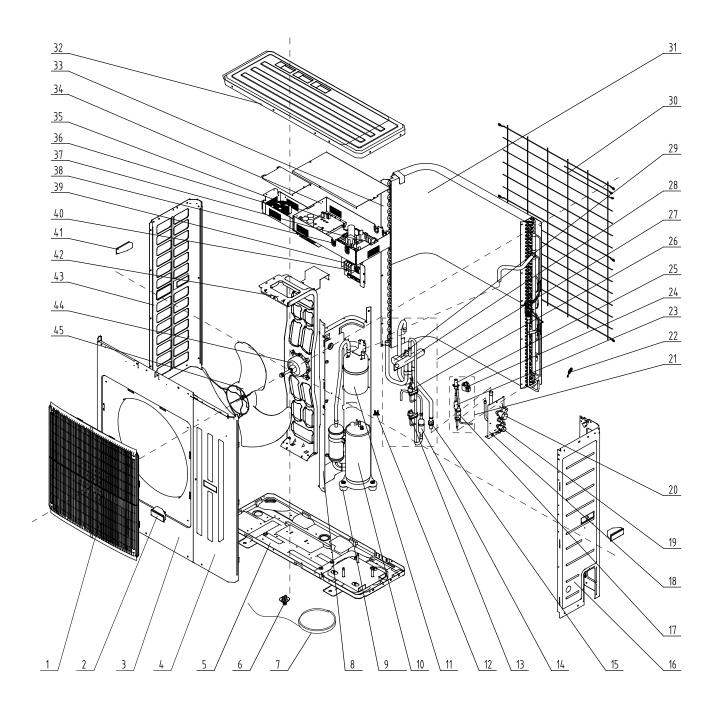

AWAU-YUDE036-H11



13.19 Spare Part List:AWAU-YUDE036-H11

NO.	Part Code	Part Description	qty
1	G22415005	Front Grill	1
2	G26235253	Handle	2
3	G01435007P	Cabinet	1
4	G01305508	Front Side Plate Sub-Assy	1
5	G01195315P	Chassis Sub-assy	1
6	G26113009	Drainage Joint	1
7	G7651873209	electrical heater	1
8	G01245253	Clapboard Sub-Assy	1
9	G76713066	Compressor Gasket	1
10	G00205200003	Compressor	1
11	G07255201	Gas-liquid Separator Sub-Assy	1
12	G00180030	Compressor Overload Proctector(External)	1
13	G46020003	Pressure Protect Switch	1
14	G07245012	Silencer	1
15	G07245012	Filter	1
16	G01315200068P	Right Side Plate Sub-Assy	1
17	G07210045	Strainer	1
18	G01715257P	Valve Support Sub-Assy	1
19	G071302391	Cut off Valve	1
20	G071332591	Cut-off Valve	1
21	G43045200007	Electronic Expansion Valve Sub-Assy	1
22	†		1
23	G39008000049G	Temperature Sensor Strainer	·
	G07213032		1
24	G43000344	Electronic Expansion Valve Coil	1
25	G07334194	Electronic Expansion Valve	1
00	G07135176	Electronic Expansion Valve	1
26	G4602000902	Pressure Protect Switch	1
27	G04045200038	4-Way Valve Assy	1
28	G43000338	4-way Valve	1
29	G4300040045	Magnet Coil(4-way Valve)	1
	G4300040033	Magnet Coil	1
30	G01475012	Rear Grill	1
31	G01125200196	Condenser Assy	1
32	G0125500901P	Top Cover	1
33	G01895242	Condenser support plate	1
34	G01395200180	Electric Box Assy	1
35	G30221000003	Main Board	1
36	G43120011	PFC Inductance	1
37	G30224000037	Main Board	1
38	G30221000007	Filter Board	1
39	G42011242	Terminal Board	1
40	G420101852	Terminal Board	1
41	G26235253	Left Handle	1
	G26235401	Left Handle	1
42	G01805200190	Motor Support Sub-Assy	1
43	G01305064P	Left Side Plate	1
44	G1570280201	Fan Motor	1
45	G10335010	Axial Flow Fan	1
	G00183032	Compressor Overload Protector	1
	G00183051	Compressor Overload Protector(External)	1
	G26905202	Sensor support	1

APPENDIX



SERVICE MANUAL
YUDE Series

