

TECHNICAL MANUAL RCW4 vs RCW3

Wiring RCW4 vs RCW3


→ Object :

This bulletin is explaining the method to connect mix wired remote controller RCW4 (accessory code 7ACEL1613) vs RCW3 (part code G30294219_K51264).

RCW4



RCW3

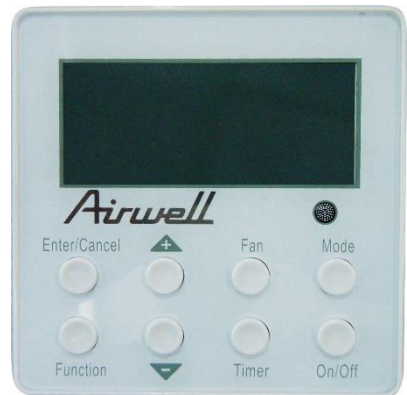

Method :

Reminder :

Wired remote RCW4



Quantity by installation = 1

Wired remote RCW3




Quantity by installation = 1
per indoor unit

For the wiring, it is requested to order cable G40113325.



Quantity by installation = 1 per indoor unit

Wiring :

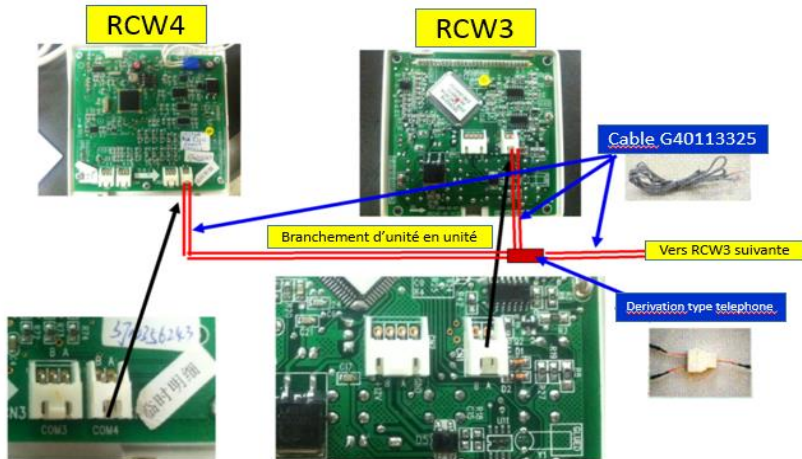

[SETTING OF WIRED REMOTE CONTROLLERS RCW3 & RCW4]

→ RCW3 setting

All the remote RCW3 must set separately !

Step 1 : RCW3 is OFF status.


Step 2 : Hold simultaneously "Function" and "mode" during 5 secondes till hearing a Bip sound.



Step 3 : Set for each indoor unit a different address by using arrows buttons..

Step 4 : Press Enter/Cancel button to validate setting.

→ RCW4 setting

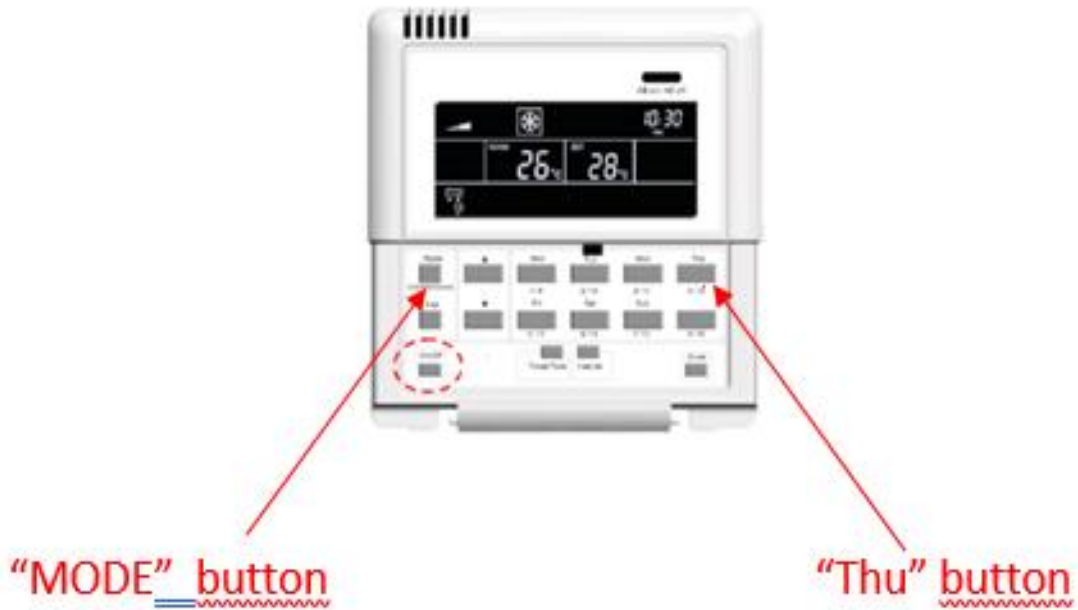

Step 1 : RCW4 is OFF status.

Step 2 : Start automatic addressing hold simultaneously "Mode" & "Thu" buttons during 5 secondes.

Step : Addressing procedure is requesting about 10 minutes and will end when on the RCW4 will display all indoor units addresses.