

Service Manual

WNG/LEX DCI Inverter Series

Indoor Units	Outdoor Units
WNG 25 DCI	ONG 25 DCI
WNG 35 DCI	ONG 35 DCI
LEX 25 DCI	ONG 25 DCI
LEX 35 DCI	ONG 35 DCI



REFRIGERANT		
R410A	HEAT PUMP	

MARCH - 2006



LIST OF EFFECTIVE PAGES

Note: Changes in the pages are indicated by a "Revision#" in the footer of each effected page (when none indicates no changes in the relevant page). All pages in the following list represent effected/ non effected pages divided by chapters.

Dates of issue for original and changed pages are:

Original 0 March 2006

Total number of pages in this publication is 76 consisting of the following:

Page	Revision	Page	Revision	Page	Revision
No.	No. #	No.	No. #	No.	No. #

Title	0
A	0
i	0
1-1 - 1-4	0
2-1 - 2-3	0
3-1	0
4-1 - 4-3	0
5-1 - 5-13	0
6-1 - 6-4	0
7-1	0
8-1-8-2	0
9-1-9-2	0
10-1	0
11-1-11-19	0
12-1-12-6	0
13-1-13-6	0
14-1-14-6	0
15-1-15-10	0
Appendix -A	0

· Zero in this column indicates an original page.

^{*}Due to constant improvements please note that the data on this service manual can be modified with out notice.

^{**}Photos are not contractual




Table of Contents

1.	INTRODUCTION	1-1
2.	PRODUCT DATA SHEET	2-1
3.	RATING CONDITIONS	3-1
4.	OUTLINE DIMENSIONS	4-1
5.	PERFORMANCE DATA	5-1
6.	PRESSURE CURVES	6-1
7.	ELECTRICAL DATA	7-1
8.	WIRING DIAGRAMS	8-1
9.	REFRIGERATION DIAGRAMS	9-1
10.	TUBING CONNECTIONS	10-1
11.	CONTROL SYSTEM	11-1
12.	TROUBLESHOOTING	12-1
13.	EXPLODED VIEWS AND SPARE PARTS LISTS	13-1
14	ΔΡΡΕΝΟΙΧ Δ	14-



1. INTRODUCTION

1.1 General

The new **WNG DCI / LEX DCI INVERTER** split wall mounted range has expanded, comprising two additional RC (heat pump) models:

- WNG 25 DCI
- WNG 35 DCI
- LEX 25 DCI
- LEX 35 DCI

The indoor WNG units are available as LED or LCD display types, and the indoor LEX units are available as LED display type featuring esthetic design, compact dimensions, and low noise operation.

1.2 Main Features

The WNG DCI INV and LEX DCI INV series benefits from the most advanced technological innovations, namely:

- · DC inverter technology.
- R410A.
- High COP.
- · Lego concept.
- Pre-Charged units up to the max' allowing tubing distance.
- Networking system connectivity.
- A dry contact for clock or power shedding functions (configurable).
- Base heater connection.
- Cooling operation at outdoor temperature down to -10°C.
- Heating operation at outdoor temperature down to -15°C.
- Supports Indoor Air Quality features, such as Ionizer, Active Electrostatic Filter.
- Indoor large diameter cross flow fan, allowing low noise level operation.
- Bended indoor coil with treated aluminum fins and coating for improved efficiency.
- Easy access to the interconnecting tubing and wiring connections, so that removing the front grill or casing is not necessary.
- Refrigerant pipes can be connected to the indoor unit from 5 different optional directions.
- Water condensate tray is equipped with two optional drain connections.
- Automatic treated air sweep.
- Low indoor and outdoor noise levels.
- Easy installation and service.



1.3 Indoor Unit

The indoor unit is wall mounted, and can be easily fitted to many types of residential and commercials applications.

• WNG 25, 35

New design is available in LCD and LED versions.

Old design is available in LED version only.

• LEX 25, 35

New design is available in LED version.

Indoor Unit features:

Feature	WNG 25, 35	LEX 25, 35		
Display	LCD or LED	LED		
Ionizer	YE	S		
ESF	YE	S		
Fresh air	Optional			
Indoor fan motor	Variable speed (PG)			
Horizontal motorized louver	YES			
Vertical motorized louver	Optional			
Heating element	NO			
M2L Cable port	YES			
Dry contact	Presence detector or (jumpe	r selected) power shedding		

1.4 Filtration

The WNG DCI INV/LEX DCI series presents several types of air filters:

- Easily accessible, and re-usable pre-filters (mesh)
- Pre-charged electrostatic filter (disposable)
- Active carbon filter (disposable)
- ESF. Active Electro Static re-usable filter (optional)

1.5 Ionizer (Optional)

A special design lonizer protected by unique patents integrated into the indoor unit, generating negative ions to the room providing comfort and upgraded indoor air quality.



1.6 Control

The microprocessor indoor controller, and an infrared remote control, supplied as standard, provide complete operating function and programming.

Remote controllers: RC-2/3/4/5/7, RC-4i-1, RCW, µBMS.

Networking system Airconet version 4.2 and up, MIU SW version H8 and up. For further details please refer to the Operational Manual, Appendix A.

1.7 Outdoor Unit

The WNG DCI INV / LEX DCI INV outdoor units can be installed as floor or wall mounted units by using a wall supporting bracket. The metal sheets are protected by anti- corrosion paint work allowing long life resistance. All outdoor units are precharged. For further information please refer to the Product Data Sheet, Chapter 2.

- ONG 25 DCI
- ONG 35 DCI

Outdoor Unit Feature

Feature	ONG 25, 35 DCI
Display	3 LED's
Base Heater	Optional
Outdoor Fan	Variable speed DC Inverter
M2L cable Port	No

1.8 Tubing Connections

Flare type interconnecting tubing to be produced on site. For further details please refer to the Installation Manual, Chapter 9.

1.9 Accessories

Item	Description
MIU (WNG/LEX)	MODBUS interface unit
MIU (K)	MODBUS interface unit
RS485 Adapter	To be used as an interface with RCW or µBMS remote controllers
Base Heater	
M2L cable Port	

For further details please refer to Optional Accessories, Chapter 17.

1.10 Inbox Documentation

Each unit is supplied with its own installation and operation manuals.



1.11 Matching Table

1.11.1 R410A



The above table lists outdoor units and WNG/LEX indoor units which can be matched together. In addition the listed outdoor units can be matched with other types of indoor units such as cassettes.

For further information please refer to the relevant Service Manual.

2. **PRODUCT DATA SHEET**

2.1 **WNG 25 DCI**

		R410A WNG/O	NG3 SPLIT D	CINVERTER		
tem			Model	WNG-25 DCI / ONG3-25 DCI		
				Cooling	Heating	
apacity			Btu/hr	8530 (4780-12280)	11600 (5120-17060	
			Kcal/hr	2150(1200-3100)	2920(1290-4300)	
			W	2500 (1400-3600)	3400 (1500-5000)	
otal Input	(Cooling / Heating)		W	595 (420-1000)	810 (390-1600)	
	ling) / C.O.P(Heating)		W/W	4.2	4.2	
	urrent(Cooling/Heating)		A	2.7	3.8	
tarting Cu	urrent		A		.50	
ower Sup	oply (ph, cy, voltage)				50HZ , 220-240V	
ehumidifi			L/h		.0	
	External finish				Polish	
	Ionizer			,	ptional)	
	Electrostatic Filter		dB(A)		ptional)	
	Heat exchanger		. ,		louver fin coil	
	Fan (drive)			, ,	flow * 1	
	Fan motor output		W		20	
INDOOR UNIT	Airflow (Hi-Me-Lo)		m ³ /hr	530-430-330	570-460-350	
אר	Operation control type	<u> </u>	111 /111		e control	
õ	operation contact type	Pressure (4)		26-38	26-39	
Z	Noise level(Lo-Hi)	Power	dB(A)	39-50	39-51	
	Condensate drain I.D.		mm(in)			
	Dimensions	W*D*H	16(5/8) 810*190*285			
	Weight					
	Packing dimensions	W*D*H	kg			
	Unit stacking	WDH	units	885*285*360 7		
	Refrigerant control					
	Compressor type			Electronic Exp		
	Compressor Model				Single Rotary DC Inverter	
	Starter type			Panasonic 5RS102XAB		
		Protection device				
	Heat exchanger			Outdoor SW control		
Ę	Fan (drive)* No.			Hydrophilic louver fin		
ž	Motor output		1 144	Propeller * 1		
Ö	Airflow		W m³/h	40		
OUTDOOR UNIT	Defrost method		111 /11		780	
ō	Deli ost metriod	Pressure (4)		Reverse	T	
	Noise level	Power	dB(A)	50	51	
	Dimensions	+	mm	60	61	
	Weight	W*D*H	mm		90*610	
	Packing dimensions	\//*D*II	kg.	38		
	Unit stacking				945*395*655	
	+		units	3		
		Refrigerant Charge(20m connection tube) g			R410A	
		on tube)	g	1100		
	Fresh Air Tube size	liavid		No		
TUBING	O.D.	liquid	mm(in)	6.35		
1	Connection method	suction	mm(in)	9.53		
•		indoor & outdoor	m	Flared		
		between the indoor height difference		Max. 10m		
	and outdoor unit tubing length		m	Max. 20m No need		

- (1) Rating conditions in accordance with ISO 5151 and ISO 13253 (for ducted units) and EN 14511.(2) Airflow in ducted units; at nominal external static pressure.
- (3) Sound power in ducted units is measured at air discharge.
- (4) Sound pressure level measured at 1 meter distance from unit.



2.2 WNG 35 DCI

		R410A WNG/O	NG3 SPLIT DC	INVERTER		
Item			Model	WNG-35 DCI / ONG3-35 DCI		
				Cooling	Heating	
Capacity			Btu/hr	11940 (4780-14670)	14670(5100-19790)	
. ,			Kcal/hr	3010(1200-3700)	3700(1290-4990)	
			W	3500 (1400-4300)	4300 (1500-5800)	
otal Input	(Cooling / Heating)		w	990 (420-1250)	1125 (390-1750)	
	ling) / C.O.P(Heating)		w/w	3.54	3.82	
•	urrent(Cooling/Heating)		A	4.6	5.2	
tarting Cu			A		.50	
	pply (ph, cy, voltage)				50HZ , 220-240V	
ehumidifi			L/h		.5	
onaman	External finish		2/11		Polish	
	lonizer			, and the second	ptional)	
	Electrostatic Filter			·	ptional)	
	Heat exchanger					
	Fan (drive)				louver fin coil flow * 1	
	Fan motor output		T w		20	
INDOOR UNIT	Airflow (Hi-Me-Lo)		m ³ /hr	550-450-350	580-480-370	
Ā D	Operation control type	Δ	1117111			
8	Pressure (4)				e control	
Ĭ	Noise level(Lo-Hi)	Power	dB(A)	26-39	26-40	
	Condensate drain I.D		(i)	39-52	39-52	
	Dimensions	1	mm(in)	16(5/8)		
		W*D*H	kg	810*190*285		
		Weight		11		
	Packing dimensions Unit stacking	W*D*H	units	885*285*360 7		
	+					
	Refrigerant control				xpansion Valve	
	Compressor type				y DC Inverter	
	Compressor Model			Panasonic	5RS102XAB	
	Starter type	•				
	Protection device			Outdoor SW control		
⊨	Heat exchanger			Hydrophilic louver fin		
5	Fan (drive)* No.			Propeller * 1		
, N	Motor output		W		10	
OUTDOOR UNIT	Airflow		m ³ /h		780	
9	Defrost method			Reverse	•	
	Noise level	Pressure (4)	dB(A)	52	52	
	Discount	Power		62	62	
	Dimensions	W*D*H	mm		90*610	
	Weight	T .	kg.	38		
	Packing dimensions	W*D*H	mm.		95*655	
	Unit stacking		units		3	
	Refrigerant				10A	
	Charge(20m connect	ion tube)	g		200	
	Fresh Air	I	<u> </u>		No	
<u>S</u>	Tube size	liquid	mm(in)		.35	
TUBING	O.D.	suction	mm(in)		.53	
_	Connection method	indoor & outdoor			ared	
	between the indoor	height difference	m	Max. 10m		
	and outdoor unit	tubing length	m	Max. 20m		
	additonal charge			No	need	

- (1) Rating conditions in accordance with ISO 5151 and ISO 13253 (for ducted units) and EN 14511.(2) Airflow in ducted units; at nominal external static pressure.
- (3) Sound power in ducted units is measured at air discharge.
- (4) Sound pressure level measured at 1 meter distance from unit.

2.3 LEX 25 DCI

Model Indoor Unit					LEX 25 DCI		
Model Outdoor Unit					DCI 25 R410A		
Inst	allation Method of Pip	е			Flared		
Cha	aracteristics			Units	Cooling	Heating	
Capacity (4)			Btu/hr	8530(4780-12280)	11600(5120-17060)		
Cap	acity (4)			kW	2.5(1.4-3.6)	3.4(1.5-5.0)	
Pov	ver input (4)			kW	0.595(0.42-1.0)	0.81(0.39-1.6)	
EEF	R (Cooling) or COP(He	eating) (4)	W/W	4.20	4.20	
Ene	ergy efficiency class				A	А	
Pov	ver supply			V/Ph/Hz	220-240V/Sin	gle/50Hz	
Rat	ed current			A	2.7	3.8	
	rting current			A	10.5		
Circ	uit breaker rating			A	15		
	Fan type & quantity				Crossflov		
	Fan speeds		H/M/L	RPM	1050/900/800	1100/950/800	
	Air flow (1)		H/M/L	m3/hr	530/430/330	570/460/350	
	External static pressu		Min-Max	Pa	0		
	Sound power level (2		H/M/L	dB(A)	50/39	51/39	
쏬	Sound pressure level	(3)	H/M/L	dB(A)	38/26	39/26	
NDOOR	Moisture removal			l/hr	1		
ĭŏ	Condenstate drain tu	be I.D		mm	16		
=	Dimensions		WxHxD	mm	810*210*285		
1	Weight		kg	11.5			
	Package dimensions WxHxD		mm	870*285*355			
	Packaged weight		kg	14			
	Units per pallet		units	36			
	Stacking height		units	9levels			
	Refrigerant control				Electronical Expa		
	Compressor type,mo	del			Single Rotary DC Inverter,F		
	Fan type & quantity				Propeller		
	Fan speeds		H/L	RPM	830/55		
	Air flow		H/L	m3/hr	1780		
	Sound power level		H/L	dB(A)	60	61	
	Sound pressure level	(3)	H/L	dB(A)	50	51	
2	Dimensions		WxHxD	mm	795*290*	⁶¹⁰	
Q	Weight			kg	38		
18	Package dimensions		WxHxD	mm	945*395*	655	
	Packaged weight			kg	42		
OUTDOOR	Units per pallet			Units	9		
-	Stacking height			units	3 leve		
	Refrigerant type	JP - 4		1	R410/		
	Refrigerant chargless distance		kg/m	1.1kg/7.			
	Additional charge	1 : : :	·	g/m	No nee		
	Connections	Liquid line Connections Suction line		In.(mm)	1/4"(6.3		
	Connections			In.(mm)	3/8"(9.5		
	between units		oing length	m.	Max.20		
0:-	unation control tour	ıvıax.ne	ight difference	m.	Max.1		
	eration control type			1.34/	Remote co	ווווטו	
	ting elements			kW			
Oth	Others						

⁽¹⁾Airflow in ducted units; at nominal external static pressure.

⁽²⁾Sound power in ducted units is measured at air discharge.

⁽³⁾Sound pressure level measured at 1-meter distance from unit.

⁽⁴⁾Rating conditions in accordance to ISO 5151 and ISO 13253 (for ducted units).



2.4 LEX 35 DCI

Model Indoor Unit					LEX 35 DCI		
Model Outdoor Unit					DCI 35 R410A		
Inst	allation Method of Pipe	е			Flared	d	
Cha	racteristics			Units	Cooling	Heating	
Car	acity (4)			Btu/hr	11940(4780-14670)	14670(5100-19790)	
Cap	acity (4)			kW	3.5(1.4-4.3)	4.3(1.5-5.8)	
	ver input (4)			kW	0.99(0.42-1.25)	1.125(0.39-1.75)	
	R (Cooling) or COP(He	eating) (4)	W/W	3.54	3.82	
	rgy efficiency class				Α	Α	
	er supply			V/Ph/Hz	220-240V/Sin		
	ed current			Α	4.6	5.2	
	ting current			A	10.5		
Circ	uit breaker rating			A	15		
	Fan type & quantity				Crossflov		
	Fan speeds		H/M/L	RPM	1100/950/800	1150/1000/850	
	Air flow (1)		H/M/L	m3/hr	550/450/350	580/480/370	
	External static pressu		Min-Max	Pa	0	50/00	
 	Sound power level (2		H/M/L	dB(A)	52/39	52/39	
NDOOR	Sound pressure level	(3)	H/M/L	dB(A)	39/26	40/26	
∥ŏ	Moisture removal			l/hr	1.5		
∥♀	Condenstate drain tul	be I.D		mm	16		
∥≤	Dimensions		WxHxD	mm	810*210*	285	
	Weight		kg	11.5			
	Package dimensions WxHxD		mm	870*285*355			
		Packaged weight		kg	14		
	Units per pallet		units	36			
 	Stacking height			units	9levels Electronical Expansion Valve		
	Refrigerant control	ا م ا					
	Compressor type,mod	aei			Single Rotary DC Inverter,P		
	Fan type & quantity		11/1	DDM	Propeller 830/55		
	Fan speeds Air flow		H/L H/L	RPM m3/hr	1780		
	Sound power level		H/L		62	62	
	Sound pressure level	(3)	H/L	dB(A)	52	52	
	Dimensions	(3)	WxHxD	mm	795*290*		
₩	Weight		VVXIIXD	kg	38.5	010	
∺	Package dimensions		WxHxD	mm	945*395*	:655	
ַוְם	Packaged weight		VVALIAD	kg	42.5	000	
OUTDOOR	Units per pallet			Units	9		
	Stacking height			units	3 level	s	
	Refrigerant type			G.IIIO	R410		
	Refrigerant chargless	distanc	e e	kg/m	1.2kg/7.		
	Additional charge		g/m	No nee			
		Liquid line		In.(mm)	1/4"(6.3		
	Connections			In.(mm)	3/8"(9.53)		
	between units Max.tubing length			m.	Max.2		
			ight difference	m.	Max.10		
Оре	eration control type		-		Remote co		
	ting elements			kW			
Oth							

⁽¹⁾Airflow in ducted units;at nominal external static pressure.

⁽²⁾ Sound power in ducted units is measured at air discharge.

⁽³⁾Sound pressure level measured at 1-meter distance from unit.

⁽⁴⁾Rating conditions in accordance to ISO 5151 and ISO 13253 (for ducted units).



3. RATING CONDITIONS

Rating conditions in accordance with ISO 5151 and ISO 13253 (for ducted units).

Cooling:

Indoor: 27°C DB 19°C WB

Outdoor: 35 °C DB

Heating:

Indoor: 20°C DB

Outdoor: 7°C DB 6°C WB

3.1 Operating Limits


3.1.1 R410A

		Indoor	Outdoor
Cooling	Upper limit	32°C DB 23°C WB	46°C DB
Cooling	Lower limit	21°C DB 15°C WB	-10°C DB
Heating	Upper limit	27°C DB	24°C DB 18°C WB
Heating	Lower limit	10°C DB	-15°C DB -16°C WB
Voltage		198	– 264 V




4. OUTLINE DIMENSIONS

4.1 Indoor Unit: WNG 25, 35 DCI

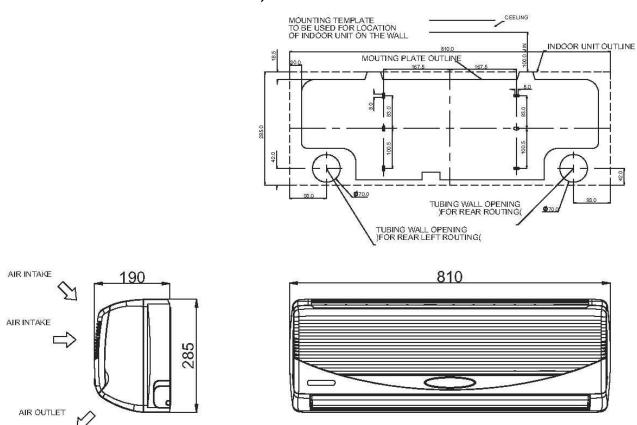



4.2 Indoor Unit: LEX 25, 35 DCI

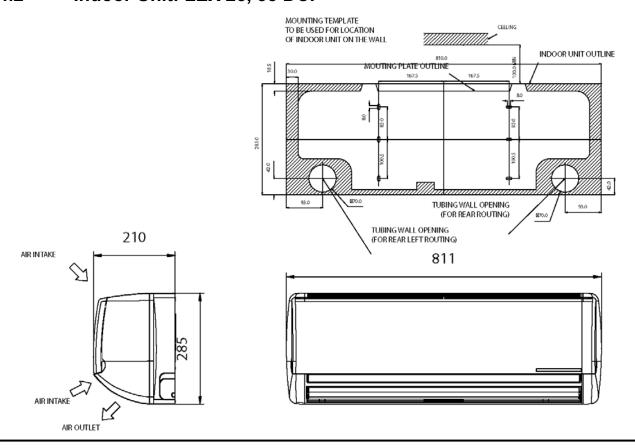




4.3 Outdoor Unit: ONG 25,35 DCI

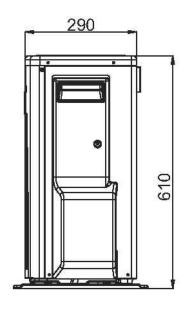

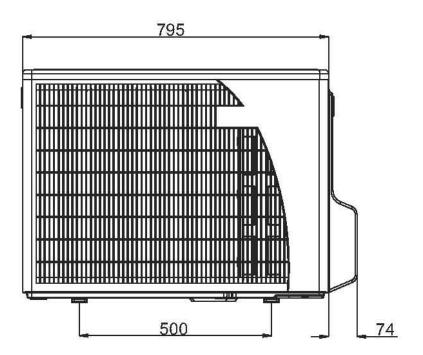

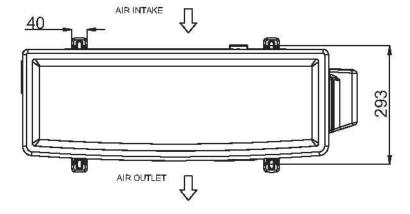



5. PERFORMANCE DATA

5.1 WNG 25/LEX 25 DCI

5.1.1 Cooling Capacity (kW) - Run Mode

		ID COIL ENTERING AIR DB/WB TEMPERATURE [°C]				
OD COIL ENTERING AIR DB TEMPERATURE [C ⁰]	DATA	22/15	24/17	27/19	29/21	32/23
-10 - 20	TC		80 -	110 % of nor	ninal	
(protection range)	SC		- 08	105 % of nor	ninal	
(protestion raings)	PI		25 -	50 % of nom	ninal	
	TC	2.42	2.57	2.73	2.89	3.05
25	SC	1.64	1.67	1.71	1.74	1.77
	PI	0.47	0.48	0.49	0.49	0.50
	TC	2.30	2.46	2.62	2.77	2.93
30	SC	1.60	1.63	1.67	1.70	1.73
	PI	0.52	0.53	0.54	0.55	0.56
	TC	2.18	2.34	2.50	2.66	2.82
35	SC	1.56	1.59	1.63	1.66	1.69
	PI	0.58	0.59	0.60	0.60	0.61
	TC	2.07	2.23	2.38	2.54	2.70
40	SC	1.52	1.55	1.58	1.62	1.65
	PI	0.63	0.64	0.65	0.66	0.67
	TC	1.93	2.09	2.24	2.40	2.56
46	SC	1.47	1.50	1.53	1.57	1.60
	PI	0.70	0.71	0.72	0.72	0.73

LEGEND

TC - Total Cooling Capacity, kW

SC - Sensible Capacity, kW

PI - Power Input, kW


WB - Wet Bulb Temp., (°C)

DB - Dry Bulb Temp., (°C)

ID – Indoor

OU - Outdoor

5.1.2 Capacity Correction Factors

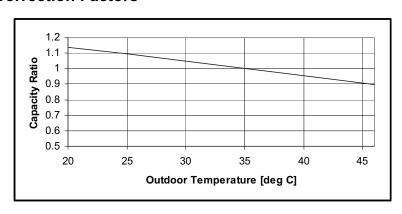



5.1.3 Heating Capacity (kW) - Run Mode)

		ID COIL ENTERING AIR DB TEMPERATURE [°C]		
OD COIL ENTERING AIR DB/WB TEMPERATURE [°C]	DATA	15	20	25
-15/-16	TC	2.16	2.01	1.86
10, 10	Pl	0.49	0.54	0.58
-10/-12	TC	2.41	2.26	2.11
-10/-12	PI	0.59	0.64	0.68
-7/-8	TC	2.59	2.44	2.29
17 0	PI	0.66	0.71	0.76
-1/-2	TC	2.68	2.53	2.38
- 1/-2	PI	0.70	0.75	0.80
2/1	TC	2.75	2.59	2.44
	PI	0.72	0.77	0.82
7/6	TC	3.55	3.40	3.25
.,,	PI	0.76	0.81	0.86
10/9	TC	3.75	3.60	3.44
10/3	PI	0.81	0.86	0.90
15/12	TC	3.94	3.79	3.64
15/12	PI	0.85	0.90	0.95
15-24	TC	85 - 105 % of nominal		
(Protection Range)	PI	80 - 120 % of nominal		

LEGEND

TC - Total Heating Capacity, kW

PI – Power Input, kW


WB – Wet Bulb Temp., (°C)

DB - Dry Bulb Temp., (°C)

ID – Indoor

OU - Outdoor


5.1.4 Capacity Correction Factors

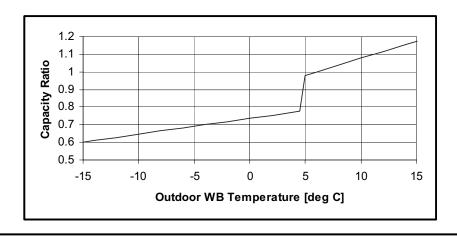




5.2 Capacity Correction Factor Due to Tubing Length

5.2.1 Cooling

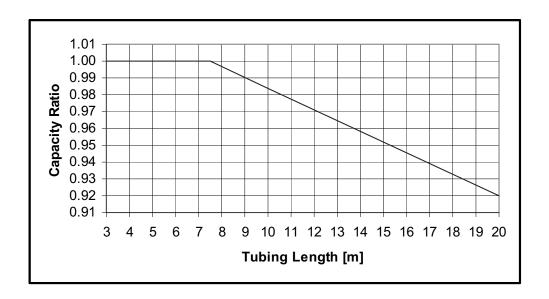

5.2.2 Heating

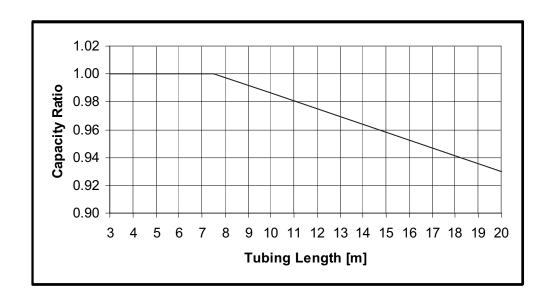



5.3 WNG 35/LEX 35 DCI

5.3.1 Cooling Capacity (kW) - Run Mode

		ID COIL ENTERING AIR DB/WB TEMPERATURE [°C]				
OD COIL ENTERING AIR DB TEMPERATURE [°C]	DATA	22/15	24/17	27/19	29/21	32/23
-10 - 20	TC		80 -	110 % of nor	ninal	
(protection range)	SC		80 -	105 % of nor	ninal	
(PI		25 -	50 % of non	ninal	
	TC	3.38	3.60	3.83	4.05	4.27
25	SC	2.40	2.45	2.50	2.55	2.60
	PI	0.78	0.79	0.81	0.82	0.84
	TC	3.22	3.44	3.66	3.88	4.11
30	SC	2.34	2.39	2.44	2.49	2.54
	PI	0.87	0.88	0.90	0.91	0.93
	TC	3.06	3.28	3.50	3.72	3.94
35	SC	2.28	2.33	2.38	2.43	2.48
	PI	0.96	0.98	0.99	1.00	1.02
	TC	2.89	3.12	3.34	3.56	3.78
40	SC	2.22	2.27	2.32	2.37	2.42
	PI	1.05	1.07	1.08	1.10	1.11
	TC	2.70	2.92	3.14	3.36	3.58
46	SC	2.15	2.20	2.25	2.30	2.34
	PI	1.16	1.18	1.19	1.21	1.22

LEGEND

TC - Total Cooling Capacity, kW

SC - Sensible Capacity, kW

PI - Power Input, kW


WB - Wet Bulb Temp., (°C)

DB - Dry Bulb Temp., (°C)

ID - Indoor

OU - Outdoor

5.3.2 Capacity Correction Factors

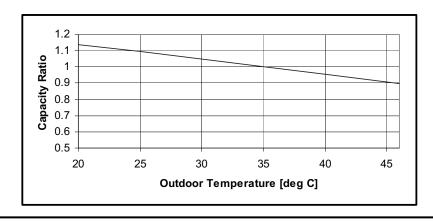



5.3.3 Heating Capacity (kW) - Run Mode

		ID COIL ENTERING AIR DB TEMPERATURE [°C]		
OD COIL ENTERING AIR DB/WB TEMPERATURE [°C]	DATA	15	20	25
-15/-16	TC	2.74	2.55	2.35
-10/-10	PI	0.68	0.74	0.81
-10/-12	TC	3.05	2.86	2.66
-10/-12	PI	0.81	0.88	0.95
-7/-8	TC	3.28	3.09	2.90
-17-0	PI	0.92	0.99	1.06
-1/-2	TC	3.39	3.20	3.01
- 1/-2	PI	0.97	1.04	1.11
2/1	TC	3.47	3.28	3.09
	PI	1.00	1.07	1.14
7/6	TC	4.49	4.30	4.11
.,,	PI	1.06	1.13	1.19
10/9	TC	4.74	4.55	4.36
10/0	PI	1.12	1.19	1.26
15/12	TC	4.99	4.80	4.60
13/12	PI	1.18	1.25	1.32
15-24	TC	85 - 105 % of nominal		
(Protection Range)	PI	80 - 120 % of nominal		

LEGEND

TC - Total Heating Capacity, kW

PI – Power Input, kW


WB - Wet Bulb Temp., (°C)

DB – Dry Bulb Temp., (°C)

ID – Indoor

OU - Outdoor


5.3.4 Capacity Correction Factors

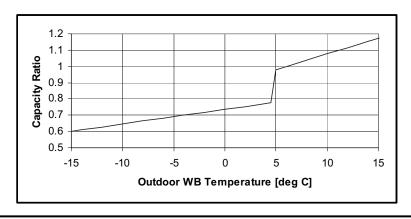




5.4 Capacity Correction Factor Due to TUbing Length

5.4.1 Cooling

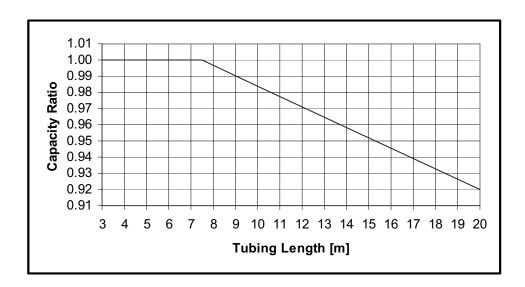

5.4.2 Heating

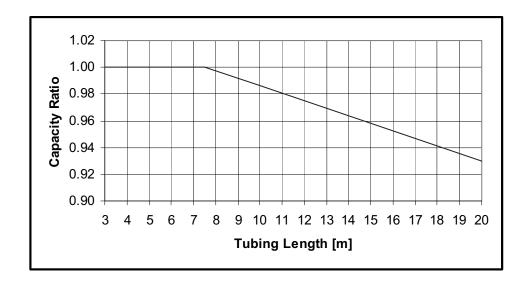





6. PRESSURE CURVES

6.1 Model: WNG 25/LEX 25 DCI


6.1.1 Cooling - Test Mode

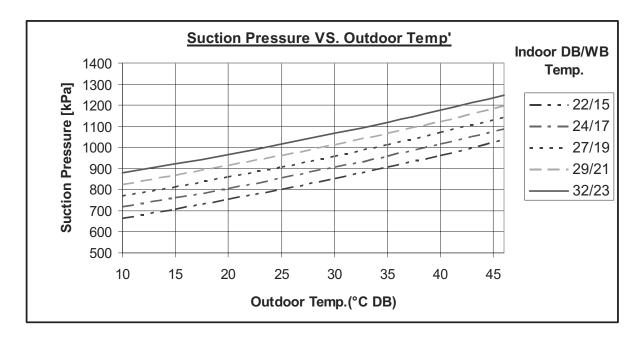


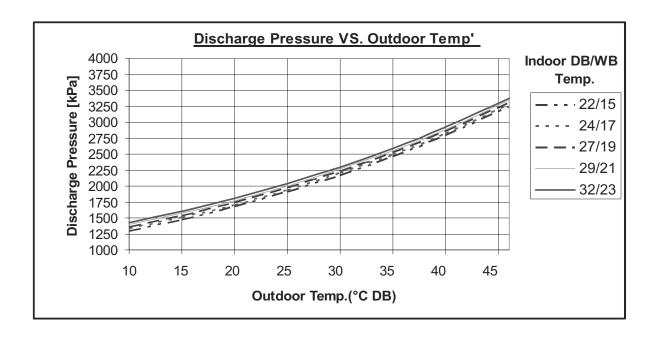



6.1.2 Heating - Test Mode

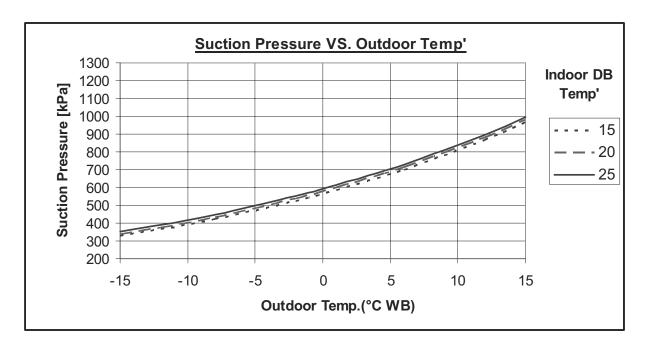


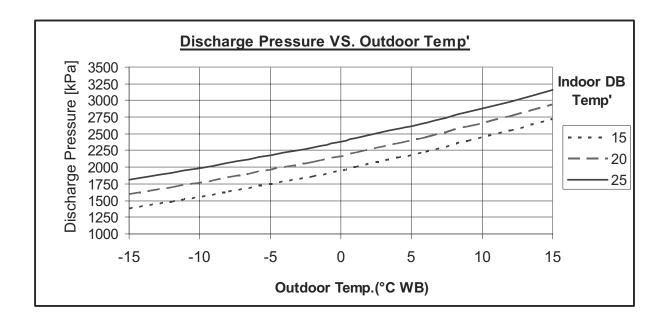




6.2 Model: WNG 35/LEX 35 DCI


6.2.1 Cooling - Test Mode

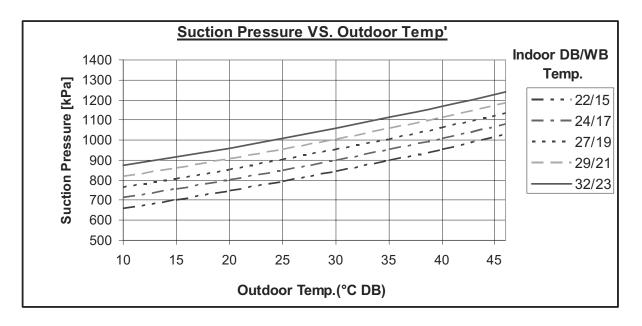


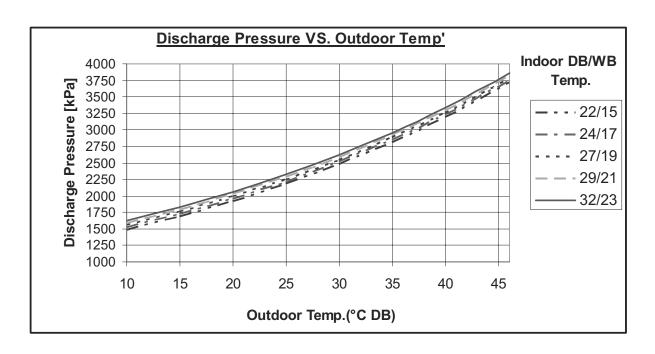



6.2.2 Heating - Test Mode

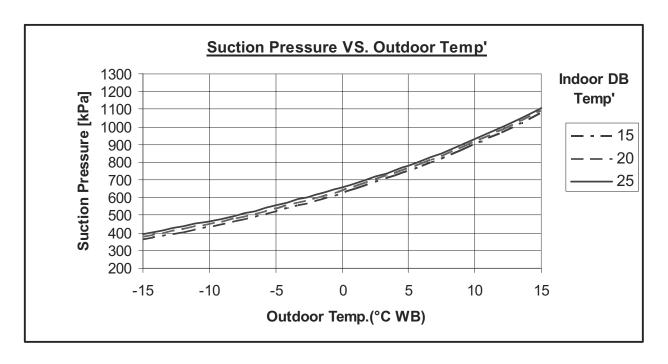

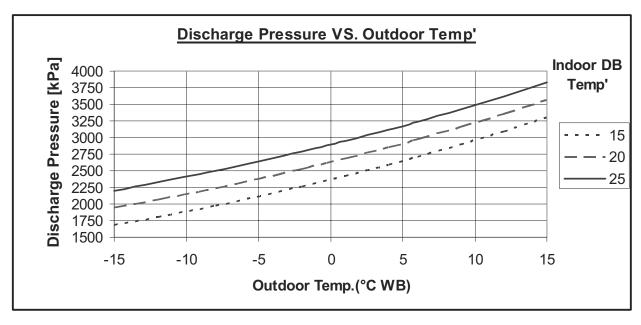



7. ELECTRICAL DATA

7.1 Single Phase Unit

Model	WNG25/LEX25 DCI	WNG35/LEX35 DCI	
Power Supply	1 PH ,220-24	0VAC ,50HZ	
Connected to	Ind	oor	
Maximum Current	10A		
Inrush Current \(^{(a)}	35A		
Starting Current\(^{(b)})	10A		
Circuit Breaker	16A		
Power Supply wiring no. x cross section	3 X 1.5 mm ²		
Interconnecting cable no. x cross section	4 X 1.	5 mm²	

- (a) Inrush current is the current when power is up (charging the DC capacitors at outdoor unit controller).
- (b) Starting current is the current at compressor start up.


NOTE

Power wiring cord should comply with local lows and electrical regulations requirements.



8. WIRING DIAGRAMS

8.1 WNG 25, 35 DCI/LEX 25, 35 DCI

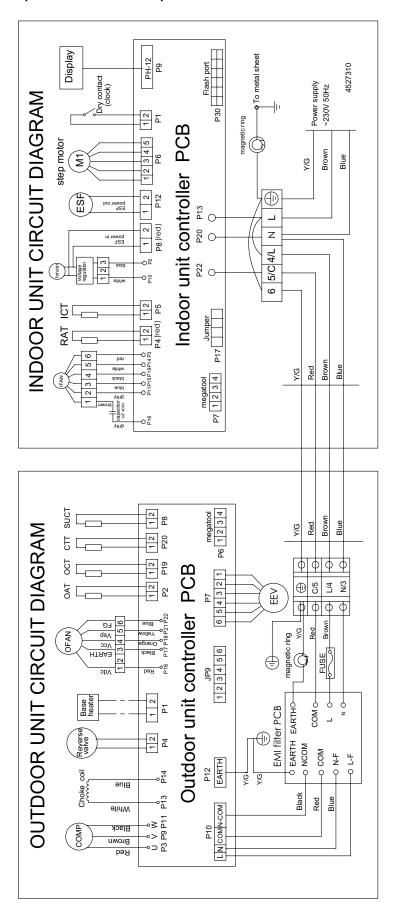





9. REFRIGERATION DIAGRAMS

9.1 Heat Pump Models

9.1.1 WNG 25, 35 DCI /LEX 25, 35 DCI: Cooling Mode

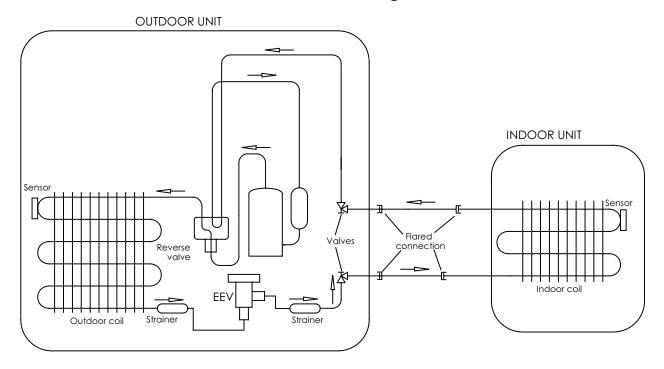



9.1.2 WNG 25, 35 DCI /LEX 25, 35 DCI: Heating Mode

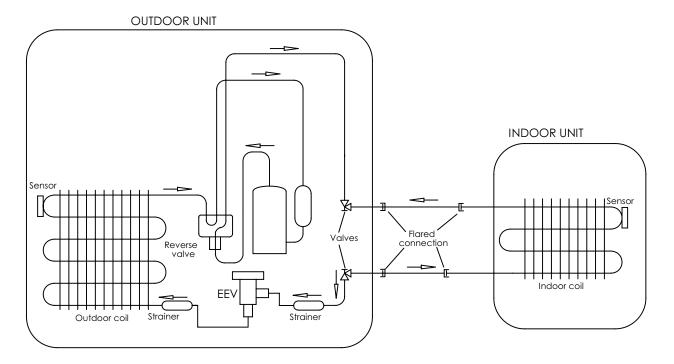



10. TUBING CONNECTIONS

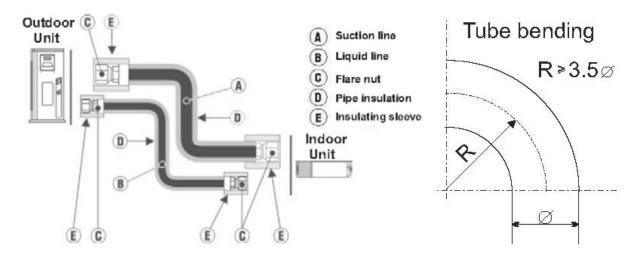


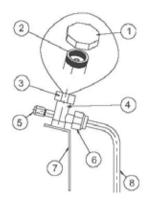

TUBE (Inch) TORQUE (Nm)	1/4''	3/8''
Flare Nuts	11-13	40-45
Valve Cap	13-20	13-20
Service Port Cap	11-13	11-13

- 1. Valve Protection Cap-end
- 2. Refrigerant Valve Port (use Allen wrench to open/close)
- 3. Valve Protection Cap
- 4. Refrigerant Valve
- 5. Service Port Cap
- 6. Flare Nut
- 7. Unit Back Side
- 8. Copper Tube

When the outdoor unit is installed above the indoor unit an oil trap is required every 5m along the suction line at the lowest point of the riser. Incase the indoor unit is installed above the outdoor, no trap is required.

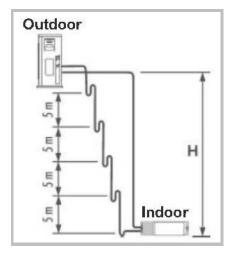

11. CONTROL SYSTEM

11.1 General Functions and Operating Rules

The DCI software is fully parametric.

All the model dependent parameters are shown in Blue color and with Italic style [parameter]. The parameters values are given in the last section of this control logic chapter of the service manual.

11.1.1 System Operation Concept

The control function is divided between indoor and outdoor unit controllers. Indoor unit is the System 'Master', requesting the outdoor unit for cooling/heating capacity supply. The outdoor unit is the system 'Slave' and it must supply the required capacity nless it enters into a protection mode avoiding it from supplying the requested capacity.

The capacity request is transferred via indoor to outdoor communication, and is represented by a parameter called 'NLOAD'. NLOAD is an integer number with values between 0 and 127, and it represents the heat or cool load felt by the indoor unit.

11.1.2 Compressor Frequency Control

11.1.2.1 NLOAD setting

The NLOAD setting is done by the indoor unit controller, based on a PI control scheme. The actual NLOAD to be sent to the outdoor unit controller is based on the preliminary LOAD calculation, the indoor fan speed, and the power shedding function.

NLOAD limits as a function of indoor fan speed:

Indoor Fan Speed	Maximum NLOAD Cooling	Maximum NLOAD Heating		
Low	Max NLOADIF1C	127		
Medium	Max NLOADIF2C	127		
High	Max NLOADIF3C	127		
Turbo	Max NLOADIF4C	127		
Auto	Max NLOADIF5C	127		

NLOAD limits as a function of power shedding:

	<u> </u>	
Mode	Power Shedding OFF	Power Shedding ON
Cool	No limit	Nominal Cooling
Heat	No limit	Nominal Heating

11.1.3 Target Frequency Setting

The compressor target frequency is a function of the NLOAD number sent from the indoor controller and the outdoor air temperature.

Basic Target Frequency Setting:

NLOAD	Target Frequency
127	Maximum frequency
10 < NLOAD < 127	Interpolated value between minimum and maximum frequency
10	Minimum frequency
0	Compressor is stopped




Target frequency limits as a function of outdoor air temperature)OAT(:

OAT Range	Cool mode limits	Heat mode limits
OAT < 6	MaxFreqAsOATC	No limit
6 ≤ OAT < 15		MaxFreqAsOAT1H
15 ≤ OAT < 24		MaxFregAsOAT2H
24 ≤ OAT	No limit	IVIAXI TEQASOA I ZI I

11.1.4 Frequency Changes Control

Frequency change rate is 1 Hz/sec.

11.1.5 Compressor Starting Control

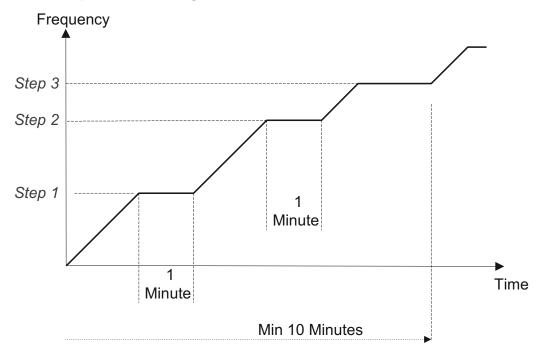

11.1.6 Minimum On and Off Time

3 minutes.

11.1.7 Indoor Fan Control

10 Indoor fan speeds are determined for each model. 5 speeds for cool/dry/fan modes and 5 speeds for heat mode.

When user sets the indoor fan speed to a fixed speed)Low/ Medium/ High(, unit will operate constantly at set speed.

When Auto Fan is selected, indoor unit controller can operate in all speeds. The actual speed is set according to the cool/heat load.

11.1.7.1 Turbo Speed

The Turbo speed is activated during the first 30 minutes of unit operation when auto fan speed is selected and under the following conditions:

Difference between set point and actual room temperature is bigger then 3 degrees.

Room temperature > 22 for cooling, or < 25 for heating.

11.1.8 Heating Element Control

Heating element can be started if LOAD > 0.8* MaximumNLOAD AND Indoor Coil temperature <45.

The heating element will be stopped when LOAD < 0.5* MaximumNLOAD OR if Indoor Coil Temperature > 50.

11.1.9 Outdoor Fan Control

7 outdoor fan speeds are determined for each model. 3 speeds for cool and dry modes, and 3 speeds for heat mode, and a very low speed.

Outdoor fan speed is a function of compressor frequency and outdoor air temperature (OAT). 4 routines for fan control are determined. The control routine selection depends on operation mode, compressor speed, outdoor air temperature (OAT) and heat sink temperature (HST).

Routine	Conditions
Α	Heating with OAT < 15 ^o C
	or
	Cooling with OAT > 20° C, or HST > 50° C
	or
	Faulty OAT
В	Cooling with 20° C > OAT > 50° C
С	Cooling with 7°C > OAT
D	Heating with OAT > 15°C

	Outdoor Fan Speed			
Compressor Frequency (CF)	Routine A	Routine B	Routine C	Routine D
CF= 0	OFF	OFF	OFF	OFF
10 ≤ CF < OFLowFreq	Low	Low	Very Low	Low
10 ≤ CF < OFMedFreq	Medium	Low	Very Low	Low
OFMedFreq ≤ CF	High	Low	Low	Medium

When compressor is switched to OFF and the heat sink temperature is above 55 degrees, the outdoor fan will remain ON in low speed for up to 3 minutes.

11.1.10 EEV (electronic Expansion valve) Control

EEV opening is defined as EEV = EEV_{OL} + EEV_{CV}

EEV_{OL} is the initial EEV opening as a function of the compressor frequency, operation mode, unit model and capacity.

 EEV_{CV} is a correction value for the EEV opening that is based on the compressor temperature. During the first 10 minutes of compressor operation $EEV_{CV} = 0$.

Once the first 10 minutes are over, the correction value is calculated as follow: $EEV_{CV}(n) = EEV_{CV}(N-1) + EEV_{CTT}$

EEV_{CTT} is the correction based on the compressor temperature. A target compressor temperature is set depending on frequency and outdoor air temperature, and the actual compressor temperature is compared to the target temperature to set the required correction to the EEV opening.

11.1.11 Reversing Valve (RV) Control

Reversing valve is on in heat mode.

Switching of RV state is done only after compressor is off for over 3 minutes.

11.1.12 Ioniser Control

Ioniser is on when unit is on AND indoor fan is on AND Ioniser power switch (on Ioniser) is on.



11.1.13 Electro Static Filter)ESF(Control

ESF is on when ESF switch is on, Safety switch is pressed, unit is on, AND indoor fan is on.

11.1.14 Base Heater Control

When OAT is connected, Base Heater will be on when unit is in heating and OAT<2°C. When OAT is disconnected, Base Heater will be on when unit is in heating.

11.2 Fan Mode

In high/ medium/ low indoor fan user setting, unit will operate fan in selected speed. In AutoFan user setting, fan speed will be adjusting automatically according to the difference between actual room temperature and user set point temperature.

11.3 Cool Mode

NLOAD is calculated according to the difference between actual room temperature and user set point temperature by PI control.

In high/ medium/ low indoor fan user setting, unit will operate fan in selected speed.

In AutoFan user setting, fan speed will be ad8usted automatically according to the calculated NLOAD.

11.4 Heat Mode

NLOAD is calculated according to the difference between actual room temperature and user set point temperature by PI control.

In high/ medium/ low indoor fan user setting, unit will operate fan in selected speed.

In AutoFan user setting, fan speed will be adng to the calculated NLOAD.

11.4.1 Temperature Compensation


In wall mounted, ducted, and cassette models, 3 degrees are reduced from room temperature reading (except when in I-Feel mode), to compensate for temperature difference between high and low areas in the heated room, and for coil heat radiation on room thermistor.

The temperature compensation can be enabled/disabled by shortening of J2 on the indoor unit controller.

Model	J2 Shorted	J2 Opened
Wall mounted	Compensation	Compensation Enabled
	Disabled	
Cassette	Compensation Enabled	Compensation Disabled
Ducted	Compensation Enabled	Compensation Disabled
Floor/Ceiling	Compensation	Compensation Enabled
	Disabled	

11.4.2 Indoor Fan Control in Heat Mode

Indoor fan speed depends on the indoor coil temperature:

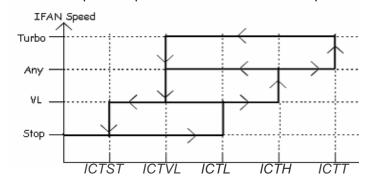

11.5 Auto Cool/Heat Mode

When in auto cool heat mode unit will automatically select between cool and heat mode according to the difference between actual room temperature and user set point temperature) ΔT (. Unit will switch from cool to heat when compressor is off for 3 minutes, and $\Delta T < -3$. Unit will switch from heat to cool when compressor is off for 5 minutes, and $\Delta T < -3$.

11.6 Dry Mode

As long as room temperature is higher then the set point, indoor fan will work in low speed and compressor will work between 0 and *MaxNLOADIF1C* Hz.

When the room temperature is lower than the set point, compressor will be switched OFF and indoor fan will cycle 3 minutes OFF, 1 minute ON.

11.7 Protections

There are 5 protection codes.

Normal (Norm) – unit operate normally.

Stop Rise (SR) – compressor frequency can not be raised but does not have to be decreased.

HzDown1 (D1) – Compressor frequency is reduced by 2 to 5 Hz per minute.

HzDown2 (D2) – Compressor frequency is reduced by 5 to 10 Hz per minute.

Stop Compressor (SC) – Compressor is stopped.

11.7.1 Indoor Coil Defrost Protection

ICT	ICT Trend				
	Fast	Increasing	No change	Decreasing	Fast
	Increasing				Decreasing
ICT < -2	SC	SC	SC	SC	SC
-2 ≤ ICT < 0	D1	D1	D2	D2	D2
0 ≤ ICT < 2	SR	SR	D1	D2	D2
2 ≤ ICT < 4	SR	SR	SR	D1	D2
4 ≤ ICT < 6	Norm	Norm	SR	SR	D1
6 ≤ ICT < 8	Norm	Norm	Norm	SR	SR
8 ≤ ICT	Normal			_	




11.7.2	Indoor Coil	over Heating	Protection
--------	-------------	--------------	-------------------

ICT	ICT Trend				
	Fast	Decreasing	No Change	Increasing	Fast
	Decreasing				Increasing
ICT> 55	SC	SC	SC	SC	SC
53 <ict 55<="" td="" ≤=""><td>D1</td><td>D1</td><td>D2</td><td>D2</td><td>D2</td></ict>	D1	D1	D2	D2	D2
49 < ICT ≤ 53	SR	SR	D1	D2	D2
47 < ICT ≤ 49	SR	SR	SR	D1	D2
45 < ICT ≤ 47	Norm	Norm	SR	SR	D1
43 < ICT ≤ 45	Norm	Norm	Norm	SR	SR
ICT ≤ 43	Normal				


11.7.3 Compressor over Heating Protection

Compressor temperature can be in one of 5 control zones)4 in protection, and 1 normal(, according to the following chart.

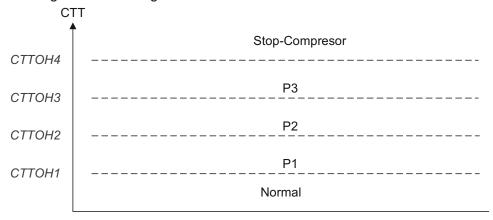

Control Status	Compressor Temperature	Else
	Increases	
P1	Norm	SR
P2	D1	SR
P3	D2	D1
Stop Compressor	SC	

11.7.4 Compressor over Current Protection

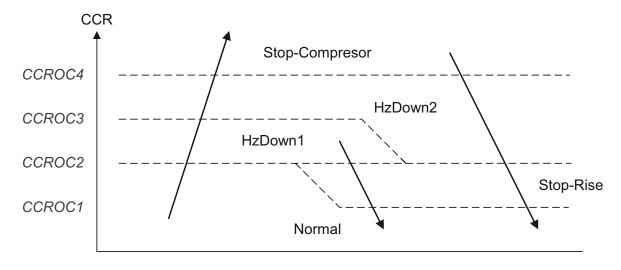

11.7.5 Heat Sink Over Heating Protection (NA for DCI 25 and 35)

HST	HST Trend		
	Decreasing	No Change	Increasing
HST > 90	SC	SC	SC
85 < HST ≤ 90	D1	D2	D2
82 < HST ≤ 85	SR	D1	D2
80 < HST ≤ 82	SR	SR	D1
78 < HST ≤ 80	Norm	Norm	SR
HST ≤ 78	Normal		

11.7.6 Outdoor Coil Deicing Protection

11.7.6.1 Deicing Starting Conditions

Deicing operation will start when either one of the following conditions exist:

Case 1: OCT < OAT - 8 AND TLD > DI

Case 2: OCT < OAT - 12 AND TLD > 30 minutes.

Case 3: OCT is Invalid AND TLD > DI

Case 4: Unit is just switched to STBY AND OCT < OAT - 8

Case 5: NLOAD = 0 AND OCT < OAT -8

OCT - Outdoor Coil Temperature

OAT – Outdoor Air Temperature


TLD – Time from Last Deicing

DI – Deicing Interval (Time Interval Between Two Deicing)

Deicing interval time when compressor is first started in heat mode, is 10 minutes if OCT < -2, and is 40 minutes in other cases.

Deicing interval time is changed (increased/ decreased in 10 minutes steps) as a function of deicing time. If deicing time is shorter then former deicing time, the deicing interval time will be increased. If deicing time is longer then former deicing time, the deicing interval time will be decreased.

11.7.6.2 Deicing Protection Procedure

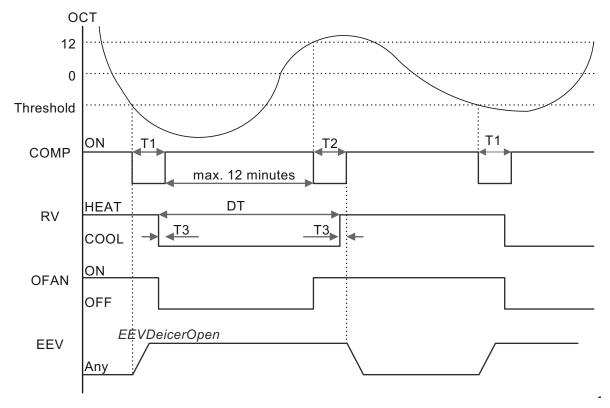

36 seconds, T3 = 6 seconds

11.8 Condensate Water Over Flow Protection




Each of the pins P1, P2, P3 can have two options:

- 1 When it is shorted with P4
- 0 When it is not shorted to P4


11.8.1 3 Levels Logic (used in floor/ceiling models)

P2	P3	Level
0	0	L0
1	0	L1
1	1	L2&3
0	1	L4

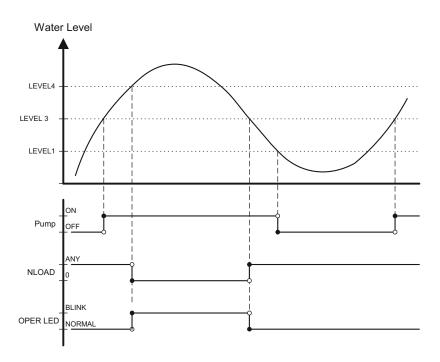

11.8.2 1 Level Logic (used in all models except for floor/ceiling models)

P2	P3	Level
Don`t	1	Normal
care	'	INOIIIIai
Don`t	0	Overflow
care	U	Overnow

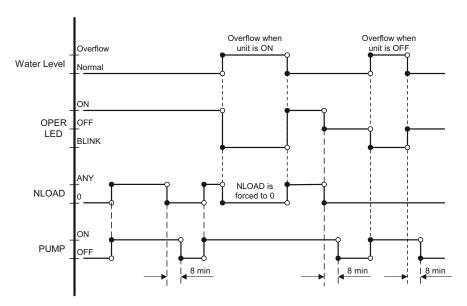

11.9 Indoor Unit Dry Contact

Indoor unit Dry contact has two alternative functions that are selected by J8.

	Function	Contact = Open	Contact = Short
J8 = Open	Presence Detector Connection	No Limit	Forced to STBY
J8 = Open	Power Shedding Function	No Limit	Limit NLOAD



11.10 Operating the Unit from the Mode Button

Forced operation allows to start, stop and operate in Cooling or Heating, in pre-set temperature according to the following table:


Forced operation Mode	Pre-set Temperature
Cooling	20 ^o C
Heating	28 ⁰ C

11.11 On Unit Controls and Indicators

11.11.1 Indoor Unit Controller Controls and Indicators For All Models Except for Floor/Ceiling model

STAND BY INDICATOR	Lights up when the Air Conditioner is connected to power and ready to receive the R/C commands	
OPERATION INDICATOR	Lights up during operation. Blinks for 300 msec., to announce that a R/C infrared signal has been received and stored. Blinks continuously during protections (according to the relevant spec section).	
TIMER INDICATOR	Lights up during Timer and Sleep operation.	
FILTER INDICATOR	Lights up when Air Filter needs to be cleaned.	
COOLING INDICATOR Lights up when system is switched to Cool Mode by using the Mode Switch on the unit.		
HEATING INDICATOR Lights up when system is switched Heat Mode by using the Mode Switch on the unit.		
Mode SWITCH (COOL/HEAT/OFF) Every short pressing, the next operation mode is selected, in the selected in		
RESET / FILTER SWITCH	For short pressing: When Filter LED is on - turn off the FILTER INDICATOR after a clean filter has been reinstalled. When Filter LED is off able/disable the buzzer announcer, if selected.	

11.11.2 Indoor Unit Controls and Indicators for LCD Display

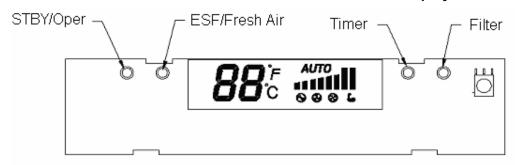

	STBY	Cool	Heat	Auto	Fan	Dry
88	OFF	SPT(1*)	SPT(1*)	SPT(1*)	SPT(1*)	SPT(1*)
С	OFF(2*)	ON(2*)	ON(2*)	ON(2*)	ON(2*)	ON(2*)
F	OFF(2*)	OFF(2*)	OFF(2*)	OFF(2*)	OFF(2*)	OFF(2*)
(Low)	OFF					
■■■ ③ ② (Med)	OFF	User setting	setting setting IFAN IFAN	User setting IFAN speed speed		User setting
■■■■■	OFF	IFAN speed			IFAN speed	
• • • • • • • • • • • • • • • • • • •	OFF					
AUTO ■■■■■■ ■■■■■■■■ ■■■■■■■■■■■■■■■■■■■■	OFF					
Backlight(red)	OFF	OFF	ON(3*)	ON(3*)	ON(3*)	OFF
Backlight(green)	OFF	ON(3*)	OFF	ON(3*)	ON(3*)	ON(3*)



11.11.3 Indoor Unit Controller Controls and Indicators for Floor/Ceiling Model

STANDBY INDICATOR	Lights up when the Air Conditioner is connected to power and is ready for operation
OPERATE INDICATOR ⁽⁴⁾	 Lights up during operation. Blinks for 300 msec., to announce that a R/C infrared signal has been received and stored. Blinks continuously during protections (according to the relevant spec section).
TIMER INDICATOR	Lights up during Timer and Sleep operation.
FILTER INDICATOR	 Lights up when Air Filter needs to be cleaned. Blinks during Water Over Flow in PXD models. (Cf. Sect. 7.3)
COOLING INDICATOR	Lights up when system is switched to Cool Mode by using the Mode Switch on the unit.
HEATING INDICATOR	Lights up when system is switched Heat Mode by using the Mode Switch on the unit.
FAN MODE INDICATOR (4)	Lights up in Fan Mode activated by <u>local switches</u> .
FAN SPEED INDICATORS	 L Lights up when IFAN setting is Low. M Lights up when IFAN setting is Medium. H Lights up when IFAN setting is High. A Lights up when IFAN setting is Auto.
TEMP. SETTING INDICATORS	Each one of the seven indicators indicates the following SPT: 18, 20, 22, 24, 26, 28, 30]°c[. The odd number temperatures are indicated by turning on the two adcent indicators.
FAN SPEED BUTTON	Press this button to change the speed of the IFAN. Each pressing change the speed in the sequence of: $L \to M \to H \to Auto \to L \to$
TEMP. SETTING UP BUTTON	Pressing this button increases the SPT by 1°C. Note: The Max SPT is 30°C.
TEMP. SETTING DOWN BUTTON	Pressing this button decreases the SPT by 1°C. Note: The Min SPT is 18°C.
MODE BUTTON	Every short pressing , the next operation mode is selected, in this order : SB → Cool Mode → Heat Mode → SB → In long pressing system enters diagnostic mode.
POWER BUTTON	Toggle the unit between OPER & STBY modes.
RESET / FILTER BUTTON	For short pressing: When Filter LED is on - turn off the FILTER INDICATOR after a clean filter has been reinstalled. When Filter LED is off able/disable the buzzer announcer, if
	selected. In long pressing system enters set up mode (if in SB).

11.11.4 Outdoor Unit Controller Indicators

Unit has three LED

SB LED is ON when power is ON (230 VAC, even when no communication).

STATUS LED is ON when COMP is ON, and Blinks according to diagnostics mode definitions when either fault or protection occurs.

FAULT LED Blinks according to diagnostics mode definitions when either fault or protection occurs.

11.12 Test Mode

11.12.1 Entering Test Mode

System can enter Test mode in two ways:

Automatically when the following conditions exists for 30 minutes continuously:

Mode = Cool, Set point =16, Room temperature = 27±1, Outdoor temperature = 35±1 Or

Mode = Heat, Set point = 30, Room temperature = 20 ± 1 , Outdoor temperature = 7 ± 1 Manually when entering diagnostics with the following settings:

Mode = Cool, Set point = 16

Mode = Heat, Set point = 30

11.12.2 Unit Operation in Test Mode

In test mode, the unit will operate in fixed settings according to the indoor fan speed setting:

Indoor Fan Speed Setting	Unit Setting
Low	Minimum Capacity Setting
High	Nominal Capacity Setting
Auto	Maximum Capacity Setting

During test mode, protections are disabled, except for stop compressor status.



11.13 **SW Parameters**

11.13.1 **Indoor Units SW Parameters**

<u>General Parameters for All Models:</u> **Parameters defining the indoor fan speed as a function of Indoor Coil temperature in** heat mode (ICT):

ICTST Speed ICT to stop indoor fan		
ICTVLSpeed	ICT to go down to very low speed	28
ICTLSpeed	ICT to start in very low speed	30
ICTHSpeed	ICT to start in increase speed from very low	32
ICTTSpeed	ICT to enable Turbo fan speed	40

Model Depended Parameters:

Davamatar nama	Wall			Μοι	Mounted Models		
Parameter name	DCI 25		5		DC	1 35	
NLOAD limits as a function of selected indoor fan speed					speed		
MaxNLOADIF1C		40				40	
MaxNLOADIF2C		53			53		
MaxNLOADIF3C		120			120		
MaxNLOADIF4C		127				27	
MaxNLOADIF5C		127			1	27	
	<u>Ir</u>	ndoor Fa	n spec	ds			
IFVLOWC		700			7	00	
IFLOWC		800				00	
IFMEDC		900			9	50	
IFHIGHC		1050			1^	100	
IFTURBOC		1150			12	200	
IFVLOWH		700				00	
IFLOWH		800			850		
IFMEDH		950			1000		
IFHIGHH		1100			1150		
IFTURBOH	1200			1250			
	inal	Compre	essor F	requ			
NomLoadC		40			62		
NomLoadH		55				67	
Parameter Name					sette Mode		
		K 25	K 3		K 35S	K 50	
NLOAD limits as	a f						
MaxNLOADIF1C	40		40		40	40	
MaxNLOADIF2C	53		56		56	60	
MaxNLOADIF3C	120		90		90	90	
MaxNLOADIF4C	127		90		90	90	
MaxNLOADIF5C	127				90		
Nominal Compressor Frequency							
NomLoadC		40	60		56	63	
NomLoadH		55	69		73	80	

11.13.2 Outdoor Units SW Parameters

Parameter Name	DCI25	DCI35	DCI 50	DCI50 DUO	
Compressor Parameters					
MinFreqC	30	33	20	20	
MaxFreqC	64	80	85	97	
MinFreqH	30	35	20	26	
MaxFreqH	81	93	99	106	
Step1Freq	60	60	60	60	
Step2Freq	70	70	70	80	
Step3Freq	90	90	90	90	
Frequency	limits as a fur	nction of outd	oor air tempe	rature	
MaxFreqAsOATC	50	50	64	62	
MaxFreqAsOAT1H	65	75	85	85	
MaxFreqAsOAT2H	60	60	60	60	
C	ompressor O	ver Heating P	rotection		
CTTOH1	94	94	94	90	
CTTOH2	98	98	98	95	
СТТОН3	102	102	102	102	
CTTOH4	105	105	105	105	
Co	mpressor Ove	er Current Pro	tection [A]		
CCR01	7.1	7.1	10	10	
CCR02	7.5	7.5	10.5	10.5	
CCR03	7.9	7.9	10.8	10.8	
CCR04	8.3	8.3	11.2	11.2	
	Outdoor	Fan Speed (R	PM)		
VL	200	200	200	200	
OFLOWC	550	550	600	600	
OFMEDC	700	700	760	830	
OFMAXC	830	830	920	920	
OFLOWH	550	550	600	600	
OFMEDH	700	700	830	920	
OFMAXH	830	830	1000	1000	
	Outdoor	Fan Limit Con	trol		
OFLowFreq	45	45	40	40	
OFMedFreq	57	57	70	70	



12. TROUBLESHOOTING WNG25, 35/LEX25, 35 DCI

Warning

When Power Up – the whole outdoor unit controller, including the wiring, is under HIGH VOLTAGE

Never open the Outdoor unit before turning off the PowerHIG
When turned off, the system is still charged (400V)yle
It takes about 4 Min. to discharge the system.
Touching the controller before discharging may cause an electrical shock

For safe handling of the controller please refer to section 12.6 below.

12.1 Single Split system failures and corrective actions

No	SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
1	Power supply indicator (Red LED) does not light up.	No power supply	Check power supply. If power supply is OK, check display and display wiring. if OK, replace controller.
2	Unit does not respond to remote control message	Remote control message not reached the indoor unit	Check remote control batteries, if batteries are OK, check display and display wiring, if OK, replace display PCB. If still not OK replace controller.
3	Unit responds to remote control message but Operate indicator (Green LED) does not light up	Problem with display PCB	Replace display PCB. If still not OK replace controller.
4	Indoor fan does not start (louvers are opened and Green LED does light	Unit in heat mode and coil is still not warm.	Change to cool mode and check.
	up)	Problem with PCB or capacitor	Change to high speed and Check power supply to motor is higher than 130VAC (for triack controlled motor) or higher than 220VAC for fixed speed motors, if OK replace capacitor, if not OK replace controller
5	Indoor fan works when unit is OFF, and indoor fan speed is not changed by remote control command.	PCB problem	Replace controller
6	Compressor does not start	Electronics control problem or protection	Perform diagnostics (See 12.3 below), and follow the actions described.
7	Compressor stops during operation and Green LED remains on	Electronic control or power supply problem	Perform diagnostics (See 12.3 below), and follow the actions described.



No	SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
8	Compressor is on but outdoor fan does not work	Problem with outdoor electronics or outdoor fan	Check outdoor fan motor according to the procedure in section 12.5.3 below, if not OK replace controller
9	Unit works in wrong mode)cool instead of heat or heat instead of cool(Electronics or power connection to RV	Check RV power connections, if OK, Check RV operation with direct 230VAC power supply, if OK, Replace outdoor controller.
10	All components are operating properly but no cooling or no heating	Refrigerant leak	Check refrigeration system.
11	Compressor is over heated and unit does not generate capacity	EEV problem	Check EEV
12	Units goes into protections and compressor is stopped with no clear reason	Control problem or refrigeration system problem	Perform diagnostics)See 12.3 below(, and follow the actions described.
13	Compressor motor is generating noise and no suction occurs	Phase order to compressor is wrong	Check compressor phase order.
14	Water leakage from indoor unit	Indoor unit drainage tube is blocked	Check and open drainage tube.
15	Freezing of outdoor unit in heat mode and outdoor unit base is blocked with ice		Connect base heater.
16	Unit operates with wrong fan speeds or wrong frequency	Wrong jumper settings	Perform diagnostics (See 12.3 below), and check if units is operating by EEPROM parameters.

12.2 Checking the refrigeration system

Checking system pressures and other thermodynamic measures should be done when system is in Test Mode (in Test mode, system operates in fixed settings). The performance curves given in this manual are given for unit performance in test mode when high indoor fan speed is selected.

Entering test mode:

Set unit to Cool/16 degrees/High indoor fan speed, or Heat/30 degrees/High indoor fan speed, and enter diagnostics.



12.3 Judgment by Indoor/Outdoor Unit Diagnostics

Enter diagnostics mode - press for five seconds Mode button in any operation mode. Acknowledgment is by 3 short beeps and lights of COOL and HEAT LEDs. Then, every short pressing of Mode button will scroll between Indoor and Outdoor unit diagnostic modes by the acknowledgment of 3 short beeps and lighting of COOL and HEAT LED's.

During the Outdoor unit diagnostics all four Indoor LED's, (STBY, Operate, Filter and Timer) are blinking. When Indoor diagnostics is displayed, all four LED's (STBY, Operate, Filter and Timer) are ON.

When system enters diagnostics mode, only one fault code is shown. Order of priority is from the lower to the higher number. Diagnostics is continuously ON as long as power is ON. The current system operation mode will not be changed.

If no fault occurred in the system, no fault code will be displayed during normal operation mode. The last fault code will be displayed even if the system has recovered from that fault. The last fault will be deleted from the EEPROM after the system has exit diagnostics mode.

In diagnostics mode, system fault / status will be indicated by blinking of Heat d Cool LEDs. The coding method will be as follows:

Heat LED will blink 5 times in 5 seconds, and then will be shut off for the next 5 seconds. Cool LED will blink during the same 5 seconds according to the following Indoor / Outdoor unit tables:

Note: 0 – OFF, 1-ON

12.3.1 Indoor unit Diagnostics

No	Problem	5	4	3	2	1
1	RT-1 is disconnected	0	0	0	0	1
2	RT-1 is shorted	0	0	0	1	0
3	RT-2 is disconnected	0	0	0	1	1
4	RT-2 is shorted	0	0	1	0	0
5	Reserved	0	0	1	0	1
7	Communication mismatch	0	0	1	1	1
8	No Communication	0	1	0	0	0
9	No Encoder	0	1	0	0	1
10	Reserved	0	1	0	1	0
11	Outdoor Unit Fault	0	1	0	1	1
	Reserved					
17	Defrost protection	1	0	0	0	1
18	Deicing Protection	1	0	0	1	0
19	Outdoor Unit Protection	1	0	0	1	1
20	Indoor Coil HP Protection	1	0	1	0	0
21	Overflow Protection	1	0	1	0	1
22	Reserved					
24	EEPROM Not Updated	1	1	0	0	0
25	Bad EEPROM	1	1	0	0	1
26	Bad Communication	1	1	0	1	0
27	Using EEPROM data	1	1	0	1	1
28	Model A	1	1	1	0	0
29	Model B	1	1	1	0	1
30	Model C	1	1	1	1	0
31	Model D	1	1	1	1	1



12.3.2 Indoor unit diagnosis and corrective actions

No.	Fault	Probable Cause	Corrective Action
1	Sensor failures of all types		Check sensor connections or replace sensor.
2	Communication mismatch	Indoor and Outdoor controllers are with different Versions.	Replace Indoor controller.
3	No Communication	Communication or grounding wiring is not good.	Check Indoor to Outdoor wiring and grounding.
4	No Encoder	Indoor electronics or motor.	Checkmotorwiring,ifok, replace motor, if still not ok, replace Indoor controller.
5	Outdoor Unit Fault	Outdoor controller problem.	Switch to Outdoor diagnostics.
6	EEPROM Not Updated	System is using ROM parameters and not EEPROM parameters.	No action, unless special parameters are required for unit operation.
7	Bad EEPROM		No action, unless special parameters are required for unit operation.
8	Bad Communication	Communication quality is low Reliability.	Check Indoor to Outdoor wiring and grounding.
9	Using EEPROM data	No problem. System is using EEPROM parameters.	



12.3.3 Outdoor unit Diagnostics

No	Problem	5	4	3	2	1
1	OCT is disconnected	0	0	0	0	1
2	OCT is shorted	0	0	0	1	0
3	CTT is disconnected	0	0	0	1	1
4	CTT is shorted	0	0	1	0	0
5	HST is disconnected (when enabled)	0	0	1	0	1
6	HST is shorted (when enabled)	0	0	1	1	0
7	OAT is disconnected (when enabled)	0	0	1	1	1
8	OAT is shorted (when enabled)	0	1	0	0	0
9	TSUC is disconnected (when enabled)	0	1	0	0	1
10	TSUC is shorted (when enabled)	0	1	0	1	0
11	IPM Fault	0	1	0	1	1
12	Bad EEPROM	0	1	1	0	0
13	DC under voltage	0	1	1	0	1
14	DC over voltage	0	1	1	1	0
15	AC under voltage	0	1	1	1	1
16	IDU/ODU Communication mismatch	1	0	0	0	0
17	No Communication	1	0	0	0	1
18	Reserved	1	0	0	1	0
20	Heat sink Over Heating	1	0	1	0	0
21	Deicing	1	0	1	0	1
22	Compressor Over Heating	1	0	1	1	0
23	Compressor Over Current	1	0	1	1	1
24	No OFAN Feedback	1	1	0	0	0
25	OFAN locked	1	1	0	0	1
26	Compressor Lock	1	1	0	1	0
27	Bad Communication	1	1	0	1	1

$$1 - ON$$
, $0 - OFF$

Only one code is shown. Order of priority is 1-24. Diagnostics is continuously ON as long power is on.



12.3.4 Outdoor unit diagnosis and corrective actions

Ο.	Fault	Probable Cause	Corrective Action
	Sensors failures of all types		Check sensors connections or replace sensors.
	IPM Fault	Electronics HW problem	Check all wiring and umper settings, if OK, replace electronics.
	Bad EEPROM		No action, unless special parameters are required for unit operation.
	DC under/over Voltage	Electronics HW problem	Check outdoor unit power supply voltage
	AC under Voltage		Check outdoor unit power supply voltage
	Indoor / Outdoor unit Communication mismatch	Indoor and Outdoor controllers are with different versions	Replace Indoor controller
	No Communication	Communication or grounding wiring is not good.	Check Indoor to Outdoor wiring and grounding
	Compressor Lock		Switch unit to STBY and restart
	Bad Communication	Communication quality is low reliability	Check Indoor to Outdoor wiring and grounding



12.4 Judgment by MegaTool

MegaTool is a special tool to monitor the system states.

Using MegaTool requires:

- A computer with RS232C port.
- A connection wire for MegaTool.
- A special MegaTool software.
 Use MegaTool according to following procedure:
- Setup MegaTool software: copy the software to the computer.
- Connect RS232C port in computer with MegaTool port in Indoor/Outdoor unit controller by the connection wire.
- Run the software and choose the COM port, you can monitor the A/C system state in monitor tab.

12.5 Simple procedures for checking the Main Parts

12.5.1 Checking Mains Voltage.

Confirm that the Mains voltage is between 198 and 264 VAC. If Mains voltage is out of this range, abnormal operation of the system is *expected*. If in range check the Power (Circuit) Breaker and look for broken or loosed cable lugs or wiring mistake(s).

12.5.2 Checking Power Input.

If Indoor unit power LED is unlighted, power down the system and check the fuse of the Indoor unit. If the fuse is OK replace the Indoor unit controller. If the fuse has blown, replace the fuse and power up again.

Checking Power Input procedure for the Outdoor unit is the same as with the Indoor unit.

12.5.3 Checking the Outdoor Fan Motor.

Enter Test Mode (where the OFAN speed is high)

Check the voltage between lead wires according to the normal value as following:

- Between red wire and black wire: 310VDC +/- 20V
- Between orange wire and black wire: 15VDC +/- 1V
- · Between yellow wire and black wire: 2-6VDC

12.5.4 Checking the Compressor.

The compressor is brushless permanence magnetic DC motor. Three coil resistance is same. Check the resistance between three poles. The normal value should be below 0.5 ohm (TBD).

12.5.5 Checking the Reverse Valve (RV).

Running in heating mode, check the voltage between two pins of reverse valve connector, normal voltage is 220VAC.

12.5.6 Checking the electrical expansion valve (EEV).

The EEV has two parts, drive part and valve. The drive part is a step motor the valve. Check the drive voltage (12VDC). When Outdoor unit is power on, EEV shall run and have click and vibration.



12.6 Precaution, Advise and Notice Items

12.6.1 High voltage in Outdoor unit controller.

Whole controller, including the wires that are connected to the Outdoor unit controller may have the potential hazard voltage when power is on. Touching the Outdoor unit controller may cause an electrical shock.

Advise: Don't touch the naked lead wire and don't insert finger, conductor or anything else into the controller when power is on.

12.6.2 Charged Capacitors

Three large-capacity electrolytic capacitors are used in the Outdoor unit controller. Therefore, charging voltage (380VDC) remains after power down. Discharging takes about four minutes after power is off. Touching the Outdoor unit controller before discharging may cause an electrical shock.


12.6.3 Additional advises

- When disassemble the controller or the front panel, turn off the power supply.
- When connecting or disconnecting the connectors on the PCB, hold the whole housing, dont pull the wire.
- There are sharp fringes and sting on shell. Use gloves when disassemble the A/C units.



13. EXPLODED VIEWS AND SPARE PARTS LISTS

13.1 Outdoor Unit: ONG 25/35 DCI

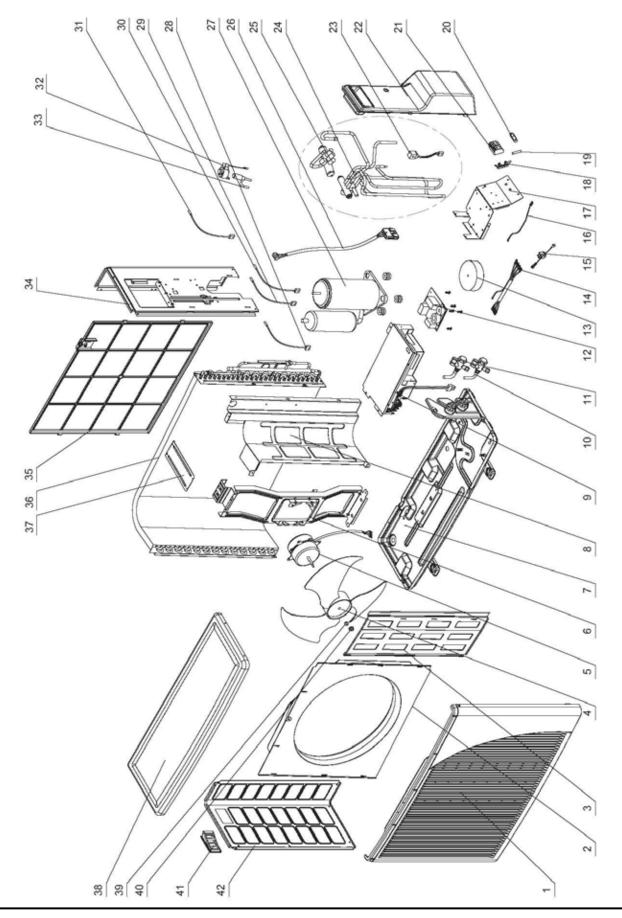




13.2 Outdoor Unit: ONG 25/35 DCI

No.	Part No.	Description	Unit
1	433218	Front panel A	1
2	4526340	Air inlet ring-420	1
3	433223	Painting insulation plate	1
4	4526476	Axial fan OD=401	1
5	4527092	DC motor for DCI25/35	1
6	433215	Motor support	1
7	4523060	Base painting Assy.	1
8	4526299	Partition	1
9	4526403	Outdoor DC inverter controller (English)	1
10	4524177	Gas valve (R410A)	1
11	4524176	Liquid valve(R410A)	1
12	4526224	EMI fliter board 901-098-00	1
13	4526396	Chock Assy. 167-021-01	1
14	4526223	AC-IN connected wire	1
15	4526968	Earthing wire for DCI	1
16	4526222	Fuse connecting wire	1
17	4526300	Therminal sheet	1
18	4526220	Fuse stand JEF-511B(EHK P/N:150-038-00)	1
19	4526219	Fuse 65TS(15A,230)150-031-00	1
20	204107	Cable clip nylon	1
21	4519188	4 poles terminal block	1
22	433229	Value cover	1
23	4522509	4-Way valve coil	1
24	4526367	4-way valve welding Assy. (DCl25)	1
	4526393	4-way valve welding Assy. (DCl35)	1
25	4518952	4-way valve (DCI25)	1
	4518951	4-way valve (DCl35)	1
26	4526221	Compressor wire	1
27	4526204	DC Inverter compressor Assy. 5RS102XAB	1
28	4526775	Compressor top thermistor(CTT)	1
29	4526774	Outside air thermistor(OAT)	1
30	4526776	Outside coil thermistor(OCT)	1
31	4526969	Suction coil thermistor(SUCT)	1
32	4526828	EEV Coil (CAN-MD 12FKS-1 White)	1
33	4526827	Electronic expansion value (CAMB20YGFKS-1)	1
34	4519606	Right side panel	1
35	433228	Back side net	1
36	4526368	Condenser soldering assy	1
37	4526298	Bridge	1
38	4519614	Painting top cover	1
39	4526480	Gasket for axial fan	1
40	4519300	Nut M5 L	1
41	433225	Handle	1
42	4519607	Left side panel painting plate	1



13.3 Indoor Unit: N-WNG 25/32 LCD DCI

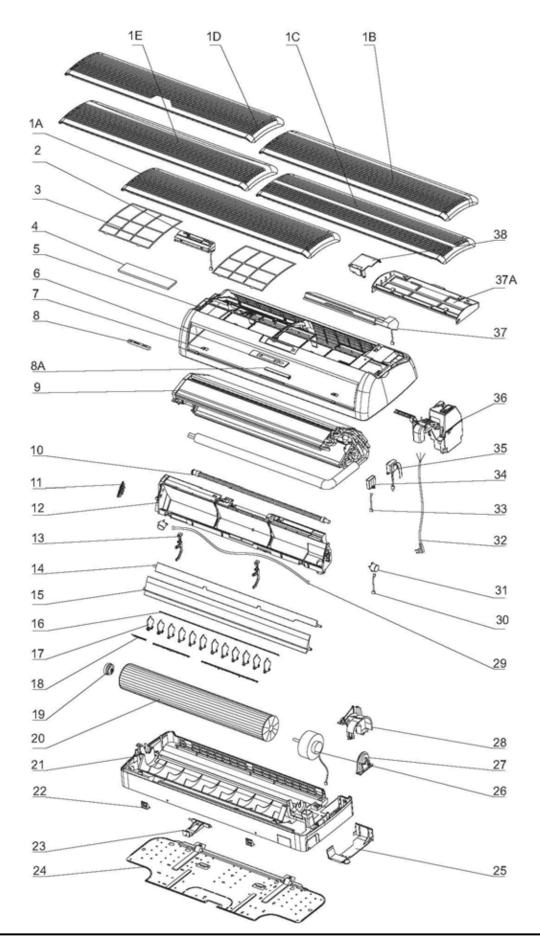




13.4 Indoor Unit: N-WNG 25/35 LCD DCI

No.	Part No.	Name	Total Quan.	Version
1A	4526940	Grille A	1	1
1B	4526941	Grille B	1	1
1C	4526942	Grille C	1	1
1D	4526943	Grille D	1	1
1E	4526944	Grille E	1	1
2	452811300	LCD Display	1	1
3	4518655	Air Filter	2	2
4	4519132	Active Carrbon Filter	1	1
	4519744	Cold Catalyst Filter	1	1
5	4527029	Frame Assy	1	1
6	4526946	LCD Display Lens Assy	1	1
7	4526952	Screw Cover	2	1
8	433133	Ionizer Unit(Optional)	1	3
8A	4526951	Ionizer Cover(Optional)	1	1
9	4526389	R410Aevaporator Assy HPI DC WNG9/12	1	1
10	4518664	Draining Hose	1	1
11	4518682	Gear BoxAssy	1	1
12	4527434	Air Outlet Assy	1	1
13	4518646	Louver Support	2	1
14	4518638	Upper Flap	1	1
15	4526953	Lower Flap	1	1
16	4518642	Vert. Louver Link	1	1
17	4518640	Vert. Louver A	2	1
	4518641	Vert. Louver B	10	1
18	4518643	Vert. Louver Lock 1	1	1
	4518644	Vert. Louver Lock 2	1	1
	4518645	Vert. Louver Lock 3	1	1
19	4518662	Bearing Assy	1	1
20	4518661	Cross Flow Fan	1	1
21	4518730	Base Assy	1	1
22	4518656	Mounting Hook	2	1
23	4518657	Tube Lock	1	1
24	4518670	Installation Plate	1	1
25	4518654	Tube Bracket	1	1
26	4519864	Motor	1	4
27	4518651	Motor Side Cover	1	1
28	4518650	Motor Cover	1	1
29	4519365	Step Motor Wire B	1	1
30	4518737	Step Motor Wire A	1	1
31	4518679	Step Motor	2	1
32	4520061	Power Wire (Elco)	1	1
		Power Wire (Electra)	1	1
		Power Wire (Airwell)	1	1
33	4519900	Ionizer Cable A(Optional)	1	1
34	433134	Ionizer Power(Optional)	1	1
35	452867800	Transformer (Optional)	1	2
36	4526180	Indoor DC inverter controller 916-512-00	1	1
37	452872800	Electrostatic Filter (Optional)	1	1
37A	4519338	Filter Frame (Optional)	1	1
38	4526950	Terminal Cover	1	1



13.5 Indoor Unit: WNG 25/35 LED DCI

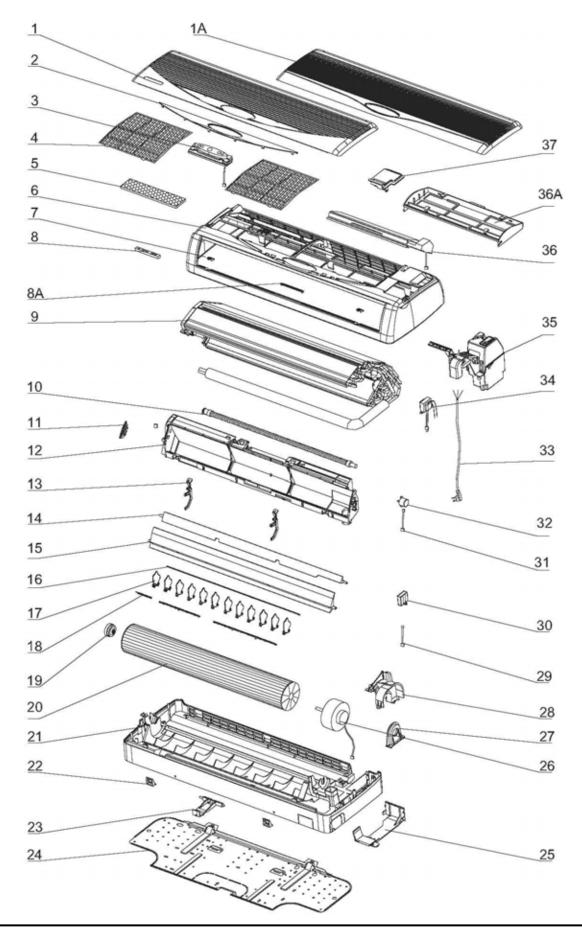




13.6 Indoor Unit: WNG 25/35 LED DCI

No.	Part No.	Name	Total Quan.	Version
1	4518647	Grill A	1	1
1A	4519364	Grill B	1	1
2	4518648	Display panel (Only for grille A)	1	1
3	4523611	Display	1	1
4	4518655	Air filter	2	1
5	4519132	Active carrbon filter	1	1
	4519744	Cold catalyst filter	1	1
6	4518734	Frame Assy	1	1
7	4518653	Screw cover	2	1
8	433133	Ionizer unit(optional)	1	3
8A	4519337	Ionizer cover(optional)	1	1
9	4526389	R410A evaporator Assy HPI DC WNG9/12	1	1
10	4518664	Draining hose	1	1
	4522754	Draining hose (for Australia market)		
11	4518682	Gear box Assy	1	1
12	4518637	Air outlet	1	1
	4518733	Air outlet Assy (It is including from No.13 to No.19)		
13	4518646	Louver support	2	1
14	4518638	Upper flap	1	1
15	4518639	Lower flap	1	1
16	4518642	Vert. louver link	1	1
17	4518640	Vert. louver A	2	1
	4518641	Vert. louver B	10	1
18	4518643	Vert. louver lock 1	1	1
	4518644	Vert. louver lock 2	1	1
	4518645	Vert. louver lock 3	1	1
19	4518662	Bearing Assy	1	1
20	4518661	Cross flow fan	1	1
21	4518730	Base Assy	1	1
22	4518656	Mounting hook	2	1
23	4518657	Tube lock	1	1
24	4518670	Installation plate	1	1
25	4518654	Tube bracket	1	1
26	4519864	Motor	1	3
27	4518651	Motor side cover	1	1
28	4518650	Motor cover	1	1
29	4519900	Ionizer cable A (optional)	1	1
30	433134	Ionizer power (optional)	1	<u> </u>
31	4518737	Step motor wire	1	1
32	4518679	Step motor	1	1
33	4521158	Power wire (European plug)	1	1
34	452867800	Transformer (optional)	1	2
35	4526180	Inddor DC inverter controller 916-512-00	1	1
36	452872800	Electrostatic filter (optional)	1	1
37	4518792	Terminal cover	1	1



13.7 Indoor Unit: WNG 25/35 LED DCI

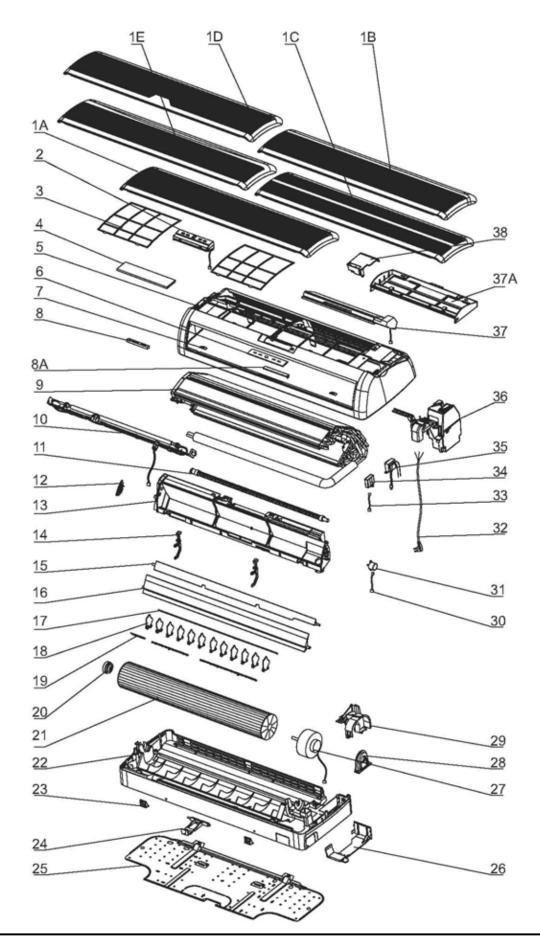




13.8 Indoor Unit: N-WNG 25/35 LED DCI

No.	Part No.	Name	Total Quan.	Version
1A	4526940	Grille A	1	1
1B	4526941	Grille B	1	1
1C	4526942	Grille C	1	1
1D	4526943	Grille D	1	1
1E	4526944	Grille E	1	1
2	4527557	LED Display	1	1
3	4518655	Air Filter	2	2
4	4519132	Active Carrbon Filter	1	1
	4519744	Cold Catalyst Filter	1	1
5	4527029	Frame Asy	1	1
6	452818600	Display Cover Assy.	1	1
7	4526952	Screw Cover	2	1
8	433133	Ionizer Unit(Optional)	1	3
8A	4526951	Ionizer Cover(Optional)	1	1
9	4526389	R410A evaporator Assy HPI DC WNG9/12	1	1
10	4518664	Draining Hose	1	1
11	4518682	Gear BoxAssy	1	1
12	4527434	Air Outlet Assy	1	1
13	4518646	Louver Support	2	1
14	4518638	Upper Flap	1	1
15	4526953	Lower Flap	1	1
16	4518642	Vert. Louver Link	1	1
17	4518640	Vert. Louver A	2	1
	4518641	Vert. Louver B	10	1
18	4518643	Vert. Louver Lock 1	1	1
	4518644	Vert. Louver Lock 2	1	1
	4518645	Vert. Louver Lock 3	1	1
19	4518662	Bearing Assy	1	1
20	4518661	Cross Flow Fan	1	1
21	4518730	Base Assy	1	1
22	4518656	Mounting Hook	2	1
23	4518657	Tube Lock	1	1
24	4518670	Installation Plate	1	1
25	4518654	Tube Bracket	1	1
26	4519864	Motor	1	1
27		Motor Side Cover	1	1
28		Motor Cover	1	1
29	4518737	Step Motor Wire A	1	1
30	4518679	Step Motor	1	1
31	4520061	Power Wire (Elco)	1	1
		Power Wire (Electra without plug)	1	1
	4521158	Power Wire (European plug)	1	1
	4522565	Power Wire (Airwell for Australia)	1	1
		Power Wire (Gorenje)	1	1
33	4519900	Ionizer Cable A(Optional)	1	1
34	433134	Ionizer Power(Optional)	1	1
35		Transformer (Optional)	1	1
36		Indoor DC inverter controller 916-512-00	1	1
37		Electrostatic Filter (Optional)	1	1
37A	4519338	Filter Frame (Optional)	1	1
38	4526950	Terminal Cover	1	1



13.9 Outdoor Unit: ONG 25/35 DCI (new)

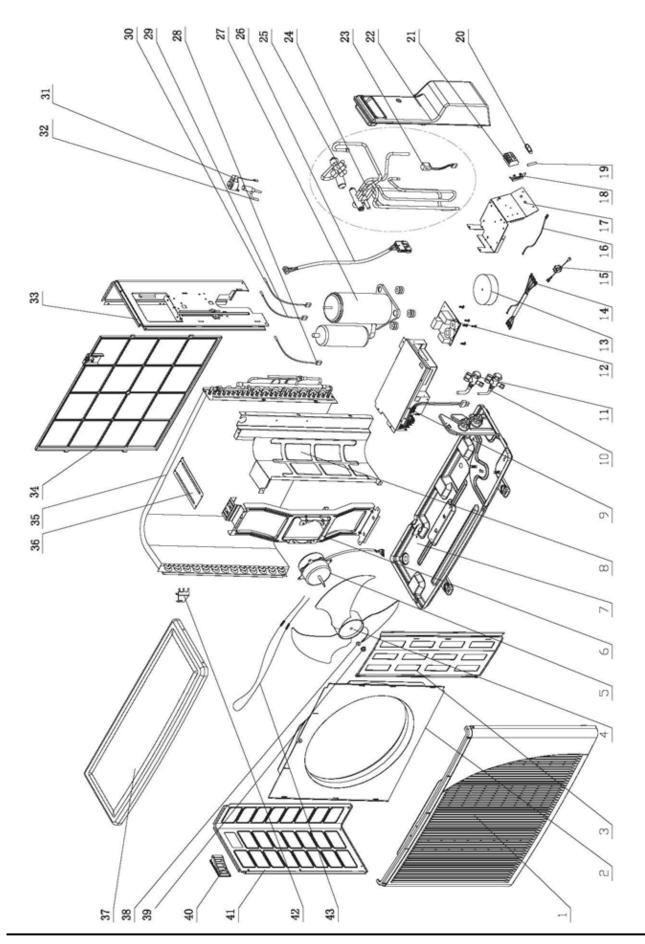




13.10 Outdoor Unit: ONG 25/35 DCI (new)

No.	Part No.	Description	Unit
1	433218	Front panel A	1
2	4526340	Air inlet ring-420	1
3	433223	Painting insulation plate	1
4	4526476	Axial fan OD=401	1
5	452889600	DC motor for DCI25/35	1
6	433215	Motor support	1
7	4523060	Base painting Assy.	1
	464600016	Base plate painting Assy.(for Nordic market)	1
8	4526299	Partition	1
9	4526403	Outdoor DC inverter controller (English)	1
10	4524177	Gas valve (R410A)	1
11	4524176	Liquid valve(R410A)	1
12	4526224	EMI fliter board 901-098-00	1
13	4526396	Chock Assy. 167-021-01	1
14	4526223	AC-IN connected wire	1
15	4526968	Earthing wire for DCI	1
16	4526222	Fuse connecting wire	1
17	4526300	Therminal sheet	1
18	4526220	Fuse stand JEF-511B(EHK P/N:150-038-00)	1
19	4526219	Fuse 65TS(15A,230)150-031-00	1
20	204107	Cable clip nylon	1
21	4519188	4 poles terminal block	1
22	433229	Value cover	1
23	4522509	4-Way valve coil	1
24	4526367	4-way valve welding Assy. (DCI25)	1
	4526393	4-way valve welding Assy. (DCl35)	1
25	4518951	4-way valve (DCl25)	1
	4518952	4-way valve (DCl35)	1
26	4526221	Compressor wire	1
27	4526204	DC Inverter compressor Assy. 5RS102XAB	1
28	4526775	Compressor top thermistor(CTT)	1
29	4526774	Outside air thermistor(OAT)	1
	453238900	Sensor /OAT (for Nordic market)	1
30	4526776	Outside coil thermistor(OCT)	1
31	4526828	EEV Coil (CAN-MD 12FKS-1 White)	1
32	4526827	Electronic expansion value (CAMB20YGFKS-1)	1
33	4519606	Right side panel	1
34	433228	Back side net	1
	464800002	Guard net painting assy. (for Nordic market)	1
35	4526368	Condenser soldering assy	1
36	4526298	Bridge	1
37	4519614	Painting top cover	1
38	4526480	Gasket for axial fan	1
39	4519300	Nut M5 L	1
40	433225	Handle	1
41	4519607	Left side panel painting plate	1
42	453225500	Support/ OAT Φ7 (for Nordic market)	1
43	467100004	Heater/Base plate (for Nordic market)	1



13.11 Indoor Unit: LEX 25/35 DCI

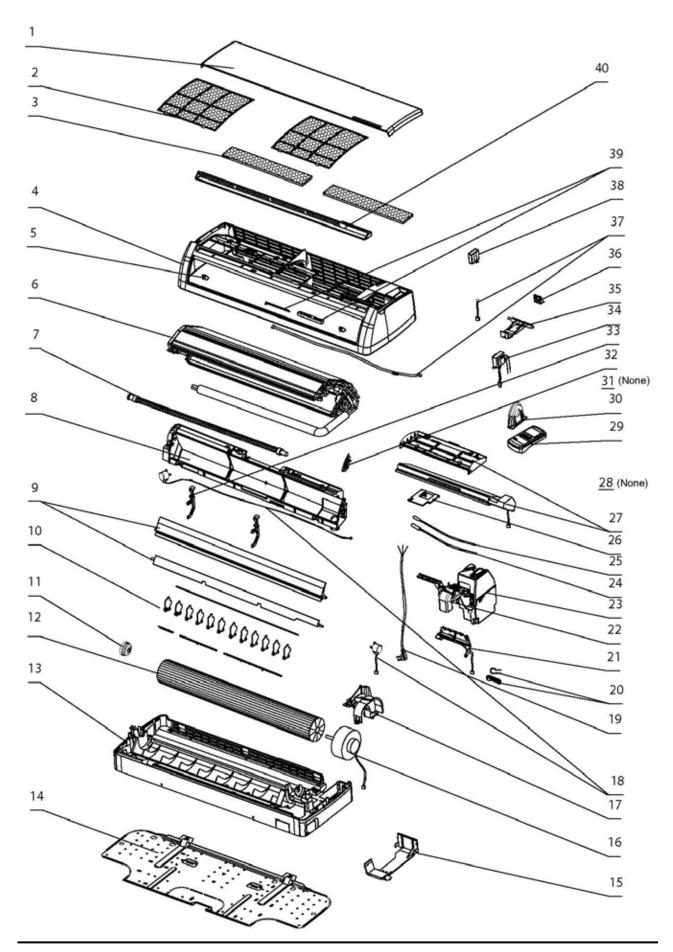



13.12 Indoor Unit: LEX 25/35 DCI

No.	PN	Description	Qty
1	465800009	Grill A Assy./ LEX7/9/12/14 for Airwell	1
	465800016	Grill A Assy./ LEX7/9/12/14 for Electra	1
2	4518655	Air Filter	2
3	4519132	Active Carbon Static Fiber filter	1
	4519744	Low Temperature Catalyst Fiber Filter	1
4	465720059	Front Frame Assy./ LEX7/9/12/14	1
5	4526952	Screw Cover	2
6	4526389	R410A EVAPORATOR ASSY HPI DC WNG9/12	1
7	4518664	Draining Hose(ordinary)	1
	4522754	Draining Hose(For Aust.)	1
8	4527434	Air Outlet Assy	1
9	4518638	Upper Louver	1
9	4526953	Lower Louver	1
10	4518640	Vert. Louver A	2
	4518641	Vert. Louver B	10
11	4518662	Bearing assy fan	1
12	4518661	Fan assy plastic D91	1
13	465700000	Rear panel assy	1
14	4518670	WNG INSTALLATION PLATE	1
15	4518654	Tube Bracket	1
16	4519864R	Motor (LEX DCI25/35 and LEX7/9/12/14 with new function)	1
17	4518650	Motor Cover	1
18	452969400	Step Motor A	1
	452969500	Step Motor B	1
19	4521158R	Power cord cable (Euro.)	1
	4520061R	Power cord cable(Israel)	1
	4520278R	Power cord cable(Without plug)	1
20	4519147	Power Cord Clip	1
	465320006	Wire Fixing Block	1
21	467300079R	Display Board Assy./ LEX25/35DCI With new function	1
22	4518666	Sensor Braket	1
23	467300067R	LEX DCI Indoor Controller With Vertical Louver EHK: 916A512-03	1
24	438082	Thermistor Indoor coil BLACK	1
25	4519813	Thermistor room	1
26	465340012	Terminal Cover	1
27	4518663	ELECTROSTATIC FLITER WNG-1	1
	4519338	FILTER FRAME(Optional)	1
28	none	none	0
29	453042500	Remote controller/RC4-I-1 EHK P/N 974-710-00	1
30	4518651	Cover Side Motor	1
31	none	none	0
32	4518682	Gear BOX ASSY	1
33	4518646	Louver Support	1
34	452867800R	Transformer For LEX DCI25/35 (Optional)	1
35	4518657	Tube Lock	1
36	4518656	Mounting Hook	2
37	4519900	IONIZER CABLE A (Optional)	1
38	467430000	Power Supply Unit /Ionizer(Optional)	1
39	467480001	Ionizer/WNG NWNG SERIES(Optional)	1
	4526951	Ionizer Cover (Optional)	1
40	465800018	Air Inlet Frame A Assy.	1



APPENDIX A

INSTALLATION AND OPERATION MANUAL

- **▶ INSTALLATION MANUAL LEX 25/35 DCI**
- ► OPERATING MANUAL LEX 25/35 DCI
- ► INSTALLATION MANUAL WNG 25/35 DCI
- **▶ OPERATING MANUAL WNG 25/35 DCI**