

OPERATING MANUAL

MURC4 G - 399420



RC4 remote control






RESET FUNCTION:

- 1) Remove one battery
- 2) Simultaneously press these 4 keys until the symbols are no longer displayed
- 3) Reinstall the battery

The four keys to be pressed are:

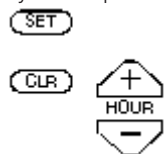

NOTE :

Open the cover / flap to access the control keys.

- 1 ON / OFF key
- 2 Operating mode selection key for COOLING (**except Water chiller wall unit**) HEATING (**except Water chiller wall unit**) AUTOMATIC COOLING / HEATING REGULATION, VENTILATION, DEHUMIDIFICATION (**except Water chiller wall unit**)
- 3 I FEEL key: local detection of temperature
- 4 VENTILATION SPEED or AUTOMATIC VENTILATION selection key
- 5 Ambient temperature increase key
- 6 Ambient temperature decrease key
- 7 SLEEP key
- 8 Directional vane sweeping (**only wall unit and water chiller wall unit**)
- 9 Directional vane sweeping (**only wall unit and water chiller wall unit**)
- 10 PROGRAMMING selection key
- 11 "+" key: increases the operating time datum
- 12 "-" key: decreases the operating time datum
- 13 Liquid crystal diode display (BACK LIGHT OPTIONAL)
- 14 I FEEL sensor
- 15 Infrared signal transmitter
- 16 ROOM key: display of the ambient temperature
- 17 SET key: sets the switch-on and/or switch-off times of the PROGRAMMING FUNCTION
- 18 CLEAR key: cancels the preset parameters of the clock
- 19 LOCK key Touche SET

OPERATION OF THE PROGRAMMING FUNCTIONS

Four different types of programming function can be selected with the remote control. Two daily programming functions (called T1 & T2) and two optional week-end programming functions (called WKT1 & WKT2). Each of these programming functions can be selected by pressing the TIMER key (10). To adjust the programs, use the HOUR + key (11) and HOUR - key (12). The SET key (17) activates the programming function, and the CLEAR key (18) cancels it.

A. DAILY PROGRAMMING

Daily programming functions T1 and T2 enable the switch-on and switch-off times to be programmed separately over two different periods. Once it has been set, the programming function will run every day.

B. WEEK-END PROGRAMMING (OPTIONAL)

Week-end programming functions WKT1 and WKT2 enable the switch-on and switch-off to be programmed separately over two different periods, for two days only.

These programs will operate on the specified day and following day, for two days only.

At midnight on the second day, the WK programming function stops and the daily programming function resumes its normal operation.

- * WKT1 - Active on the specified day
- * WKT2 - Active on the day after the specified day

REMARK:

1. During the operation of the week-end programming functions, the daily programming functions are deactivated.
2. The WK programming functions must be reactivated before each week-end.

C. CHOICE OF A PROGRAMMING FUNCTION

Press the TIMER key (10) to select a programming function. Each time the TIMER key (10) is pressed, one of the four programming icons shown below appears on the LCD display.



- 1 Press the TIMER key to select daily programming function T2.
Icon 2 of Programming function T2 flashes.



- 2 Press the TIMER key to select daily programming function T2.
Icon 2 of Programming function T2 flashes.



- 3 Press the TIMER key to select week-end programming function WKT1.
Icons 1 and WK flash.



- 4 Press the TIMER key to select week-end programming function WKT2.
Icons 2 and WK flash.

ADJUSTMENT OF THE SWITCH-ON TIME

After selecting a programming function (T1, T2 or WKT1, WKT2), proceed as follows to adjust the programmed switch-on time.
EXAMPLE: Air conditioner switch-on at 10:30 (a.m.)



- 1 Press the SET key
The ON (switch-on) icon and the switch-on time flash.

- 2 Adjust the hour and minutes.
 1. Set the switch-on time to 10:30
 2. Press the HOUR + key to increase the time or the HOUR - key to decrease it.




- 3 Press the SET key.
 1. The switch-on time is programmed for 10:30 (a.m.) (the "ON" [Switch-on] icon comes on steadily).
 2. The "OFF" [Switch-off] icon and the switch-off time flash.

- 4 Press the CLEAR key.
The programmed switch-off is no longer displayed.



REMARKS:

1. The implicit settings of the programming functions are 7:00 and 18:00 (7 a.m. and 6 p.m.) for the switch-on and switch-off times.
2. The programming mode will always display the last switch-on and switch-off (ON and OFF) settings on the LCD display.

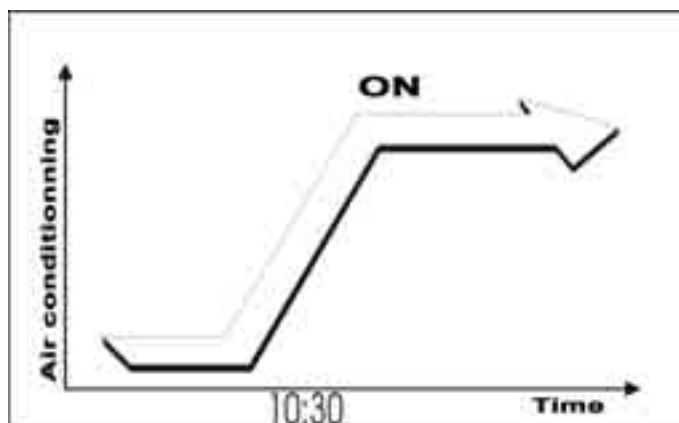

ADJUSTMENT OF THE SWITCH-OFF TIME

After selecting a programming function (T1, T2 or WKT1, WKT2), proceed as follows to adjust the programmed switch-off time.
EXAMPLE: Air conditioner switch-off at 18:30 (6:30 p.m.)



- 1 Press the SET key
The ON (switch-on) icon and the switch-on time flash.



- 2 Press the CLEAR key.
 1. The programmed switch-on is no longer displayed.
 2. The "OFF" (Switch-off) icon and the switch-off time flash.




- 3 Adjust the hour and minutes.
 1. Set the switch-off time to 18:30 (6:30 p.m.)
 2. Press the HOUR + key to increase the time or the HOUR - key to decrease it.



- 4 Press the SET key.
 1. The switch-off time is programmed for 18:30 (6:30 p.m.) (the "OFF" icon of the programming function comes on steadily).

REMARKS:

1. The implicit settings of the programming functions are 7:00 and 18:00 (7 a.m. and 6 p.m.) for the switch-on and switch-off times.
2. The programming mode will always display the last switch-on and switch-off settings on the LCD display.

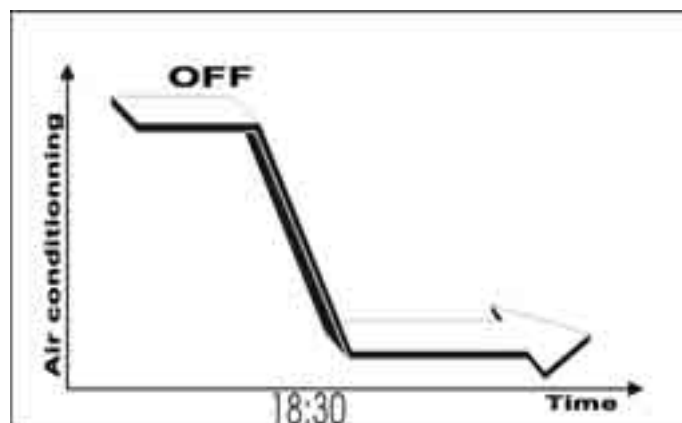

ADJUSTMENT OF THE SWITCH-ON AND SWITCH-OFF TIMES

After selecting a programming function (T1, T2 or WKT1, WKT2), proceed as follows to adjust the programmed switch-on and switch-off times.


EXAMPLE: Air conditioner switch-on at 10:30 (*a.m.*) and switch-off at 18:30 (*6:30 p.m.*)



- 1 Press the SET key
The ON (switch-on) icon and the switch-on time flash.




- 2 Adjust the hour and minutes.
 1. Set the switch-on time (ON) to 10:30
 2. Press the HOUR + key to increase the time or the HOUR - key to decrease it.

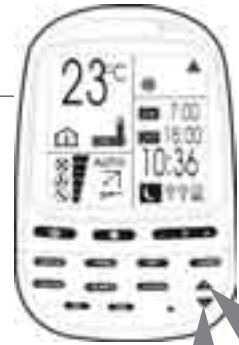

- 3 Press the SET key.
 1. The switch-on time is programmed for 10:30 (*a.m.*) (the ON icon flashes²).
 2. The "OFF" (Switch-off) icon and the switch-off time flash.




- 4 Adjust the hour and minutes.
 1. Set the switch-off time (OFF) to 18:30 (*6:30 p.m.*)
 2. Press the HOUR + key to increase the time or the HOUR - key to decrease it.

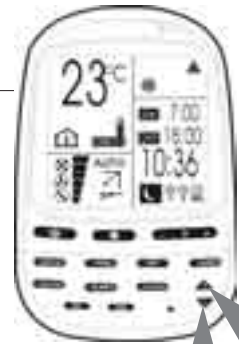

- 5 Press the SET key.
The switch-off time is programmed for 18:30 (*6:30 p.m.*) (the "OFF" icon of the programming function comes on steadily).

REMARKS:

1. The implicit settings of the programming functions are 7:00 and 18:00 (*7 a.m. and 6 p.m.*) for the switch-on and switch-off times.
2. The programming mode will always display the last switch-on and switch-off settings on the LCD display.
3. Pressing the CLEAR key (18) for 5 seconds cancels all the programming function settings and erases the display of the programming.

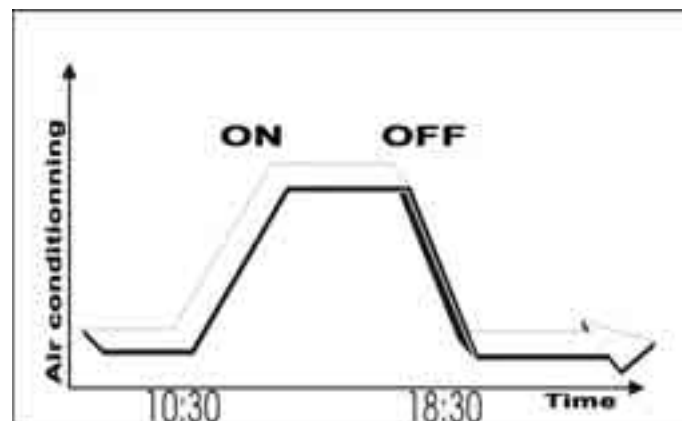

TO CHANGE THE PRESET TIMES

Example: To change the switch-on time from 10:30 (a.m.) to 9:20 (a.m.) (without changing the switch-off time).



- 1 Press the TIMER key until the icon of the selected programming function flashes.
REMARK: the times already programmed into the corresponding programming function are displayed without flashing.

- 2 Press the SET key to enter the edit mode.
The ON (Switch-on) icon and the switch-on time flash.



- 3 Change the time to 9:20 (a.m.) by pressing the HOUR - key.
The ON icon and the switch-on time flash.



- 4 Press the SET key to save the new setting.
The ON icon and the switch-on time come on steadily, and the "OFF" (Switch-off) icon and the switch-off time flash.



- 5 Press the SET key to confirm the previous setting of the switch-off time.
The ON and OFF icons and the corresponding programmed times come on steadily.



TO CANCEL THE TIME SETTING OF A SPECIFIC PROGRAMMING FUNCTION

To cancel the switch-on time whilst retaining the previously set switch-off time.



- 1 Press the TIMER key to select the required programming function. The selected programming function icon flashes and the corresponding previously programmed switch-on and switch-off times come on steadily.

- 2 Press the SET key to enter the edit mode. The ON (Switch-on) icon and the switch-on time flash.



- 3 Press the CLEAR key. The switch-on time is cleared. The OFF (Switch-off) icon and the switch-off time flash.

- 4 Press the SET key. This confirms the new setting.




TO CANCEL THE SWITCH-OFF TIME WHILST RETAINING THE PREVIOUSLY SET SWITCH-ON TIME.




- 1 Press the TIMER key to select the required programming function. The selected programming function flashes and the corresponding previously programmed switch-on and switch-off times come on steadily.

- 2 Press the SET key. The ON icon and the switch-on time flash.

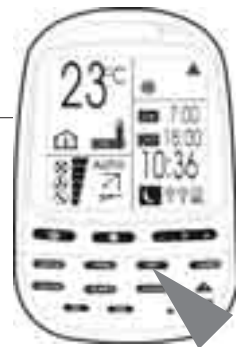

- 3 Press the SET key. The ON icon and the switch-on time come on steadily. The OFF icon and the switch-off time flash.

- 4 Press the CLEAR key. The switch-off time is cleared.

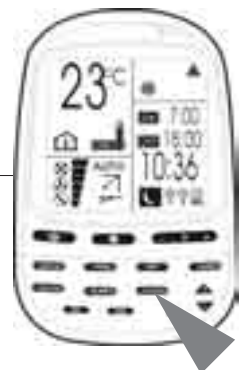

TO CANCEL THE SWITCH-ON AND SWITCH-OFF SETTINGS.



1 Press the TIMER key to select the required programming function. The selected programming function icon flashes and the corresponding previously programmed switch-on and switch-off times come on steadily.

2 Press the CLEAR key
All the settings in the selected programming function are cleared.

NIGHT SLOW (SLEEP) FUNCTION

Press the SLEEP key (7) to select the night slow function. The night slow icon and the implicit night slow termination time icon (7 hours after the current time) flash.
The implicit setting can be set to any value between 3 hours and 12 hours, by pressing the HOUR + key (11) or the HOUR - key (12). (The initial value displayed by the SLEEP clock is either the implicit value or the selected value, plus the current time).
Example: It is currently 23:00 (11 p.m.) and the sleep mode is selected. The sleep mode termination time will implicitly be 6:00 (6 a.m.) If the sleep mode value is set to 10 hours, the sleep mode termination time will be 9:00 (9 a.m.).

